



RICOH UNIVERSITY

Learning • Knowledge • Performance



D158/D159/D160/D161/D170
SERVICE MANUAL

LANIER RICOH SYSTEM

It is the reader's responsibility when discussing the information contained within this document to maintain a level of confidentiality that is in the best interest of Ricoh Americas Corporation and its member companies.

NO PART OF THIS DOCUMENT MAY BE REPRODUCED IN ANY FASHION AND DISTRIBUTED WITHOUT THE PRIOR PERMISSION OF RICOH AMERICAS CORPORATION.

All product names, domain names or product illustrations, including desktop images, used in this document are trademarks, registered trademarks or the property of their respective companies.

They are used throughout this book in an informational or editorial fashion only and for the benefit of such companies. No such use, or the use of any trade name, or web site is intended to convey endorsement or other affiliation with Ricoh products.

WARNING

The Service Manual contains information regarding service techniques, procedures, processes and spare parts of office equipment distributed by Ricoh Americas Corporation. Users of this manual should be either service trained or certified by successfully completing a Ricoh Technical Training Program.

Untrained and uncertified users utilizing information contained in this service manual to repair or modify Ricoh equipment risk personal injury, damage to property or loss of warranty protection.

Ricoh Americas Corporation

LEGEND

PRODUCT CODE	COMPANY		
	LANIER	RICOH	SAVIN
D158	MP 2001SP	MP 2001SP	MP 2001SP
D159	MP 2501SP	MP 2501SP	MP 2501SP
D160	MP 2001L	MP 2001L	MP 2001L
D161	MP 2501L	MP 2501L	MP 2501L
D170	MP 2001	MP 2001	MP 2001

DOCUMENTATION HISTORY

REV. NO.	DATE	COMMENTS
*	02/2013	Original Printing

D158/D159/D160/D161/D170

TABLE OF CONTENTS

1. PRODUCT INFORMATION	1-1
1.1 SPECIFICATIONS.....	1-1
1.2 MACHINE CONFIGURATION	1-2
1.3 PRODUCT OVERVIEW.....	1-4
1.3.1 COMPONENT LAYOUT	1-4
D160/D161/D170: CIS scanner Component Layout.....	1-6
D158/D159: CCD scanner Component Layout	1-6
1.3.2 PAPER PATH.....	1-7
1.3.3 DRIVE LAYOUT	1-8
2. INSTALLATION	2-1
2.1 INSTALLATION REQUIREMENTS.....	2-1
2.1.1 ENVIRONMENT	2-1
2.1.2 MACHINE LEVEL	2-2
2.1.3 MINIMUM SPACE REQUIREMENTS.....	2-2
2.1.4 POWER REQUIREMENTS	2-3
2.2 INSTALLATION FLOW CHART.....	2-4
2.3 COPIER INSTALLATION.....	2-5
2.3.1 ACCESSORY CHECK.....	2-5
2.3.2 INSTALLATION PROCEDURE	2-8
Selecting the Panel Display Language (for D158/D159)	2-12
2.3.3 SHUTDOWN/FORCED SHUTDOWN FUNCTIONS.....	2-13
Shutdown Function	2-13
Forced Shutdown Function	2-14
2.3.4 INSTRUCTIONS FOR THE CUSTOMERS	2-14
2.4 PLATEN COVER INSTALLATION.....	2-15
2.4.1 ACCESSORY CHECK.....	2-15
2.4.2 INSTALLATION PROCEDURE	2-16
2.5 ARDF INSTALLATION (FOR D158/D159).....	2-18
2.5.1 ACCESSORY CHECK.....	2-18
2.5.2 INSTALLATION PROCEDURE	2-19
When feeding thin paper	2-23

2.6 ARDF INSTALLATION (FOR D160/D161/D170)	2-24
2.6.1 ACCESSORY CHECK.....	2-24
2.6.2 INSTALLATION PROCEDURE	2-25
2.7 TWO-TRAY PAPER TRAY UNIT INSTALLATION	2-29
2.7.1 ACCESSORY CHECK.....	2-29
2.7.2 INSTALLATION PROCEDURE	2-30
2.8 ONE-TRAY PAPER TRAY UNIT INSTALLATION	2-34
2.8.1 COMPONENT CHECK.....	2-34
2.8.2 INSTALLATION PROCEDURE	2-34
2.9 ONE-BIN TRAY INSTALLATION	2-38
2.9.1 COMPONENT CHECK.....	2-38
2.9.2 INSTALLATION PROCEDURE	2-39
2.10 ANTI-CONDENSATION HEATER INSTALLATION	2-44
2.10.1 COMPONENT CHECK.....	2-44
2.10.2 INSTALLATION PROCEDURE	2-44
2.11 TRAY HEATERS.....	2-47
2.11.1 MAINFRAME UPPER TRAY HEATER.....	2-47
Component Check	2-47
Installation Procedure.....	2-48
2.11.2 MAINFRAME LOWER TRAY HEATER (TWO-TRAY MODEL ONLY)	
.....	2-51
Component Check	2-51
Installation Procedure.....	2-52
2.11.3 HEATER FOR THE OPTIONAL ONE-TRAY PAPER FEED UNIT	2-54
Component Check	2-54
Installation Procedure.....	2-55
2.11.4 HEATER FOR THE OPTIONAL TWO-TRAY PAPER FEED UNIT	2-58
Component Check	2-58
Installation Procedure.....	2-58
2.11.5 INSTALLING THE HARNESS OF THE HEATER.....	2-61
2.12 COUNTER INTERFACE UNIT	2-64
2.12.1 COMPONENT CHECK.....	2-64
2.12.2 INSTALLATION PROCEDURE	2-64
2.13 GDI EXPANSION (D160/D161 ONLY).....	2-68
2.13.1 COMPONENT CHECK.....	2-68
2.13.2 INSTALLING THE EXPANSION COMPONENT.....	2-68
2.14 HARD DISK DRIVE OPTION (D158/D159 ONLY).....	2-71
2.14.1 COMPONENT CHECK.....	2-71

2.14.2	INSTALLATION PROCEDURE	2-72
2.14.3	DATA OVERWRITE SECURITY	2-75
2.14.4	HDD ENCRYPTION	2-76
2.15	CONTROLLER OPTIONS.....	2-77
2.15.1	OVERVIEW	2-77
	I/F Card Slot	2-77
	SD Card Slots	2-77
2.15.2	SD CARD APPLI MOVE.....	2-78
	Overview	2-78
	Move Exec	2-78
	Undo Exec.....	2-79
2.15.3	VM CARD (D158/D159).....	2-80
	Installation Procedure.....	2-80
	Firmware Update Procedure	2-80
2.15.4	COPY DATA SECURITY UNIT (D158/D159)	2-82
	Component Check	2-82
	Installation Procedure.....	2-83
	User Tool Setting	2-85
2.15.5	FILE FORMAT CONVERTER (D158/D159)	2-85
	Installation Procedure.....	2-85
2.15.6	BROWSER UNIT (D158/D159)	2-86
	Installation Procedure.....	2-86
	Ricoh JavaScript	2-89
	EXJS Firmware Update.....	2-90
	Updating the Extended JavaScript.....	2-91
	Un-installing EXJS Firmware.....	2-92
2.15.7	FAX CONNECTION UNIT (D158/D159).....	2-92
	Installation Procedure.....	2-92
2.15.8	SD CARD FOR NETWARE PRINTING (D158/D159).....	2-93
	Installation Procedure.....	2-93
2.15.9	BLUETOOTH INTERFACE UNIT (D158/D159).....	2-94
	Installation Procedure.....	2-94
2.15.10	WIRELESS LAN INTERFACE UNIT (D158/D159)	2-95
	Component Check	2-95
	Installation Procedure.....	2-95
	UP Mode Settings for Wireless LAN	2-97
	SP Mode and UP Mode Settings for IEEE 802.11 a/b/g, Wireless LAN.....	2-98
2.15.11	IEEE 1284 INTERFACE BOARD (D158/D159)	2-99

Installation Procedure.....	2-99
2.15.12 FAX UNIT (D158/D159).....	2-100
Component Check	2-100
Installation Procedure.....	2-101
Fax Settings	2-106
2.15.13 MEMORY UNIT (D158/D159).....	2-106
Installation Procedure.....	2-106
2.15.14 HANDSET (D158/D159)	2-107
Component Check	2-107
Installation Procedure.....	2-108
2.15.15 IC CARD (D158/D159)	2-110
Installation Procedure.....	2-110
2.15.16 CHECK ALL CONNECTIONS	2-112
3. PREVENTIVE MAINTENANCE.....	3-1
3.1 PM TABLES.....	3-1
3.2 HOW TO RESET THE PM COUNTER.....	3-2
3.2.1 D160/D161/D170 MODELS.....	3-2
3.2.2 D158/D159 MODELS.....	3-2
4. REPLACEMENT AND ADJUSTMENT.....	4-1
4.1 GENERAL CAUTIONS	4-1
4.1.1 MAIN POWER SWITCH (PUSH SW)	4-1
4.1.2 PCU (PHOTOCONDUCTOR UNIT).....	4-1
4.1.3 TRANSFER ROLLER	4-1
4.1.4 SCANNER UNIT	4-2
4.1.5 LASER UNIT.....	4-2
4.1.6 FUSING UNIT.....	4-2
4.1.7 PAPER FEED.....	4-2
4.2 SPECIAL TOOLS AND LUBRICANTS	4-3
4.3 EXTERIOR COVERS & OPERATION PANEL	4-4
4.3.1 REAR COVER	4-4
4.3.2 OUTPUT TRAY, EXIT COVER, EXIT REAR COVER	4-4
4.3.3 UPPER COVERS (D158/D159).....	4-6
4.3.4 OPERATION PANEL (D158/D159).....	4-8
4.3.5 UPPER COVERS (D160/D161/D170)	4-9
4.3.6 OPERATION PANEL (D160/D161/D170)	4-10
4.3.7 LEFT COVER	4-11
4.3.8 FRONT COVER.....	4-11

4.3.9	FRONT COVER SWITCH (INTERLOCK SWITCH).....	4-12
4.3.10	FRONT RIGHT COVER	4-12
4.3.11	RIGHT REAR COVER.....	4-13
4.3.12	DUPLEX UNIT (D158/D159/D160/D161) / RIGHT DOOR (D170).....	4-14
4.3.13	BY-PASS TRAY.....	4-16
4.3.14	RIGHT LOWER COVER (TWO-TRAY MODELS ONLY)	4-17
4.3.15	RIGHT LOWER COVER SWITCH (TWO-TRAY MODELS ONLY).....	4-17
4.3.16	PLATEN COVER SENSOR.....	4-18
4.4	SCANNER UNIT (D158/D159).....	4-19
4.4.1	EXPOSURE GLASS/DF EXPOSURE GLASS (CCD)	4-20
4.4.2	LENS BLOCK.....	4-22
4.4.3	SIO BOARD.....	4-23
4.4.4	EXPOSURE LAMP	4-23
4.4.5	APS SENSOR (LENGTH).....	4-24
4.4.6	SCANNER MOTOR.....	4-25
4.4.7	SCANNER HOME POSITION SENSOR	4-26
4.4.8	FRONT SCANNER WIRE.....	4-27
	Reassembling the Front Scanner Wire.....	4-29
4.4.9	REAR SCANNER WIRE	4-33
	Reassembling the Rear Scanner Wire	4-35
4.4.10	ADJUSTING THE SCANNER POSITIONS	4-37
4.5	SCANNER UNIT (D160/D161/D170).....	4-39
4.5.1	SCANNER UNIT.....	4-40
4.5.2	APS SENSORS (WIDTH/LENGTH).....	4-42
4.5.3	CIS UNIT AND SCANNER DRIVE BELT.....	4-44
4.5.4	EXPOSURE GLASS/DF EXPOSURE GLASS (CIS)	4-46
4.6	LASER UNIT.....	4-47
4.6.1	LOCATION OF CAUTION DECAL.....	4-47
4.6.2	TONER SHIELD GLASS	4-48
4.6.3	LASER UNIT.....	4-48
4.6.4	POLYGONAL MIRROR MOTOR.....	4-49
4.7	PCU SECTION	4-50
4.7.1	PCU	4-50
4.7.2	PICK-OFF PAWLS AND TONER DENSITY SENSOR.....	4-51
4.7.3	OPC DRUM	4-52
4.7.4	CHARGE ROLLER AND CLEANING BRUSH.....	4-53
4.7.5	CLEANING BLADE.....	4-54
4.7.6	DEVELOPER.....	4-55

4.7.7 AFTER REPLACEMENT OR ADJUSTMENT	4-56
4.8 TONER SUPPLY MOTOR	4-57
4.9 PAPER FEED SECTION	4-58
4.9.1 PAPER FEED ROLLER.....	4-58
4.9.2 FRICTION PAD	4-59
4.9.3 EXIT SENSOR.....	4-60
4.9.4 REGISTRATION ROLLER.....	4-62
4.9.5 REGISTRATION CLUTCH	4-64
4.9.6 REGISTRATION SENSOR.....	4-65
4.9.7 UPPER PAPER FEED CLUTCH	4-66
4.9.8 RELAY CLUTCH.....	4-67
4.9.9 RELAY SENSOR.....	4-67
4.9.10 LOWER PAPER FEED CLUTCH (TWO-TRAY MODELS ONLY).....	4-68
4.9.11 VERTICAL TRANSPORT SENSOR (TWO-TRAY MODELS ONLY) ..	4-68
.....	
4.9.12 PAPER SIZE SWITCH	4-69
4.9.13 PAPER END SENSOR.....	4-69
Paper End Sensor: T1.....	4-69
Paper End Sensor: T2 (Two-tray Models Only).....	4-70
4.9.14 TRAY LIFT MOTOR	4-70
4.9.15 TRAY LIFT SENSOR.....	4-72
4.9.16 BY-PASS PAPER LENGTH SENSOR	4-73
4.9.17 BY-PASS PAPER WIDTH SENSOR.....	4-74
When replacing the by-pass paper width sensor.....	4-74
4.9.18 BY-PASS FEED ROLLER AND BY-PASS PAPER END SENSOR....	4-75
.....	
4.9.19 BY-PASS FEED CLUTCH AND BY-PASS TRAY LIFT CLUTCH.....	4-76
4.9.20 BY-PASS TRAY LIFT SENSOR.....	4-77
4.10 IMAGE TRANSFER	4-78
4.10.1 IMAGE TRANSFER ROLLER.....	4-78
4.10.2 IMAGE DENSITY SENSOR.....	4-79
4.11 FUSING.....	4-80
4.11.1 FUSING UNIT.....	4-80
4.11.2 THERMISTOR.....	4-80
4.11.3 FUSING LAMPS.....	4-81
4.11.4 HOT ROLLER STRIPPER PAWLS	4-82
4.11.5 HOT ROLLER.....	4-82
4.11.6 THERMOSTAT	4-83

4.11.7	PRESSURE ROLLER AND BUSHINGS	4-83
4.11.8	NIP BAND WIDTH ADJUSTMENT	4-84
4.12	DUPLEX UNIT (DUPLEX MODELS ONLY)	4-85
4.12.1	DUPLEX EXIT SENSOR	4-85
4.12.2	DUPLEX ENTRANCE SENSOR.....	4-86
4.12.3	DUPLEX INVERTER SENSOR	4-86
4.12.4	DUPLEX TRANSPORT MOTOR.....	4-87
4.12.5	DUPLEX INVERTER MOTOR.....	4-88
4.13	ELECTRICAL COMPONENTS	4-89
4.13.1	CONTROLLER BOARD (GW+/GDI).....	4-89
Types of Controller board.....	4-89	
Replacement Procedure (GW+ Controller)	4-89	
When Replacing the New Controller Board (GW+ Controller).....	4-92	
After Installing the Controller Board (GW+ Controller)	4-92	
Replacement Procedure (GDI Controller)	4-93	
When Replacing the New Controller Board (GDI)	4-94	
4.13.2	HDD UNIT (FOR D158/D159).....	4-95
Replacement Procedure.....	4-95	
4.13.3	QUENCHING LAMP	4-96
4.13.4	HIGH-VOLTAGE POWER SUPPLY BOARD	4-97
4.13.5	BICU (BASE-ENGINE IMAGE CONTROL UNIT)	4-97
Replacing the NVRAM on the BICU.....	4-98	
4.13.6	MAIN MOTOR	4-99
4.13.7	REAR EXHAUST FAN (DUPLEX MODELS ONLY)	4-99
4.13.8	LEFT EXHAUST FAN.....	4-100
4.13.9	PSU (POWER SUPPLY UNIT).....	4-101
4.13.10	GEARBOX.....	4-102
Replacement Procedure.....	4-102	
Gear Arrangement in the Gearbox	4-104	
4.14	COPY ADJUSTMENTS PRINTING/SCANNING.....	4-105
4.14.1	PRINTING.....	4-105
4.14.2	SCANNING.....	4-109
4.14.3	ARDF IMAGE ADJUSTMENT	4-111
5.	TROUBLESHOOTING	5-1
5.1	TROUBLESHOOTING IMAGE QUALITY PROBLEMS	5-1
5.1.1	MARKS (VERTICAL STREAKS) ON PRINTS AND COPIES DUE TO SCANNING PROBLEMS	5-1
Converting the ARDF DF2020 (D684) to Contact Scanning	5-3	

5.2 SERVICE CALL CONDITIONS.....	5-6
5.2.1 SUMMARY	5-6
5.2.2 SC CODE DESCRIPTIONS.....	5-7
SC1xx: Scanning.....	5-7
SC2xx: Exposure (D158/D159).....	5-10
SC3xx: Image Processing	5-12
SC4xx: Image Processing	5-16
SC5xx: Paper Feed and Fusing	5-17
SC6xx: Device Communication.....	5-25
SC7xx: Peripherals	5-29
SC9xx: Miscellaneous.....	5-30
5.3 ELECTRICAL COMPONENT DEFECTS.....	5-32
5.3.1 SENSORS	5-32
5.3.2 SWITCHES.....	5-37
5.4 BLOWN FUSE CONDITIONS.....	5-38
6. SERVICE TABLES.....	6-1
6.1 SERVICE PROGRAM MODE	6-1
6.1.1 SP TABLES	6-1
6.2 FIRMWARE UPDATE.....	6-2
6.2.1 FIRMWARE UPDATE PROCEDURE (D158/D159).....	6-2
Before You Begin	6-2
Preparation.....	6-2
Updating Procedure	6-3
Firmware Update Error.....	6-4
6.2.2 FIRMWARE UPDATE PROCEDURE (D160/D161/D170).....	6-5
Engine (BICU).....	6-5
GDI (Printer/Scanner).....	6-7
6.3 NVRAM DATA UPLOAD/DOWNLOAD.....	6-10
6.3.1 UPLOADING CONTENT OF NVRAM TO AN SD CARD (D158/D159) ..	6-10
.....	6-10
6.3.2 DOWNLOADING AN SD CARD TO NVRAM (D158/D159).....	6-11
6.3.3 NVRAM DATA UPLOAD/DOWNLOAD (D160/D161/D170).....	6-12
Engine.....	6-12
Controller.....	6-12
6.4 USING SP MODES.....	6-13
6.4.1 ADJUSTING REGISTRATION AND MAGNIFICATION.....	6-13
6.4.2 DISPLAY APS DATA (SP 4301 1).....	6-14
D170/D160/D161 Models.....	6-14

D158/D159 Models	6-15
6.4.3 MEMORY CLEAR.....	6-16
6.4.4 INPUT CHECK	6-18
Input Check Table for Copier (D160/D161/D170)	6-18
Input Check Table for Copier (D158/D159)	6-23
6.4.5 OUTPUT CHECK.....	6-27
6.4.6 SERIAL NUMBER INPUT (SP 5811) (D158/D159)	6-31
6.4.7 TEST PATTERN PRINT	6-32
D160/D161/D170 models.....	6-32
D158/D159 models	6-33
6.4.8 PAPER JAM COUNTERS (SP 7504)	6-35
6.4.9 SMC PRINT (SP 5990).....	6-37
6.4.10 SMC PRINT TO SD CARD (SP 5992).....	6-38
Overview	6-38
Procedure.....	6-38
File Names of the Saved SMC Lists.....	6-40
6.4.11 ORIGINAL JAM HISTORY DISPLAY (SP 7508)	6-41
Jam History Codes.....	6-41
6.4.12 SC HISTORY DISPLAY (SP 7403).....	6-42
SC History Codes.....	6-42

READ THIS FIRST

Safety Notices

△Important Safety Notices

Prevention of Physical Injury

1. Before disassembling or assembling parts of the copier and peripherals, make sure that the power cord is unplugged.
2. The wall outlet should be near the copier and easily accessible.
3. Note that some components of the copier and the paper tray unit are supplied with electrical voltage even if the main power switch is turned off.
4. If a job has started before the copier completes the warm-up or initializing period, keep hands away from the mechanical and electrical components because the starts making copies as soon as the warm-up period is completed.
5. The inside and the metal parts of the fusing unit become extremely hot while the copier is operating. Be careful to avoid touching those components with your bare hands.

Health Safety Conditions

Toner and developer are non-toxic, but if you get either of them in your eyes by accident, it may cause temporary eye discomfort. Try to remove with eye drops or flush with water as first aid. If unsuccessful, get medical attention.

Observance of Electrical Safety Standards

The copier and its peripherals must be installed and maintained by a customer service representative who has completed the training course on those models.

Safety and Ecological Notes for Disposal

1. Do not incinerate toner bottles or used toner. Toner dust may ignite suddenly when exposed to an open flame.
2. Dispose of used toner, developer, and organic photoconductors in accordance with local regulations. (These are non-toxic supplies.)
3. Dispose of replaced parts in accordance with local regulations.

Laser Safety

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical units in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.


WARNING

- **Use of controls, or adjustment, or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.**

WARNING FOR LASER UNIT

WARNING: Turn off the main switch before attempting any of the procedures in the Laser Unit section. Laser beams can seriously damage your eyes.



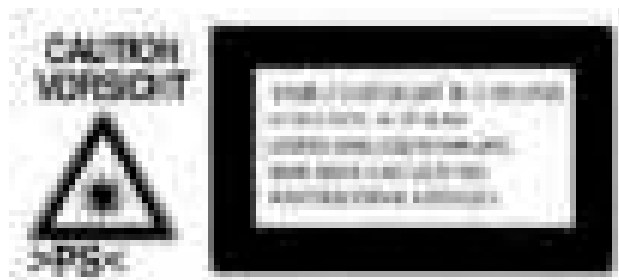



CAUTION MARKING:



Conventions in this Manual

Symbols and Abbreviations

This manual uses several symbols and abbreviations. The meaning of those symbols and abbreviations are as follows:

	See or Refer to
	Clip ring
	Screw
	Connector
	Clamp
	E-ring
SEF	Short Edge Feed
LEF	Long Edge Feed



[A] Short Edge Feed (SEF)

[B] Long Edge Feed (LEF)

Cautions, Notes, etc.

The following headings provide special information:

WARNING

- FAILURE TO OBEY WARNING INFORMATION COULD RESULT IN SERIOUS INJURY OR DEATH.

CAUTION

- Obey these guidelines to ensure safe operation and prevent minor injuries.

Note

- This information provides tips and advice about how to best service the machine.

PRODUCT INFORMATION

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

1. PRODUCT INFORMATION

1.1 SPECIFICATIONS

See "Appendices" for the following information:


- General Specifications
- Supported Paper Size
- Optional Equipment

1.2 MACHINE CONFIGURATION

Note


- The D158, D160 and D170 come with one standard paper tray. The D159 and D161 come with two standard paper trays.

D158/D159 (SP Models)

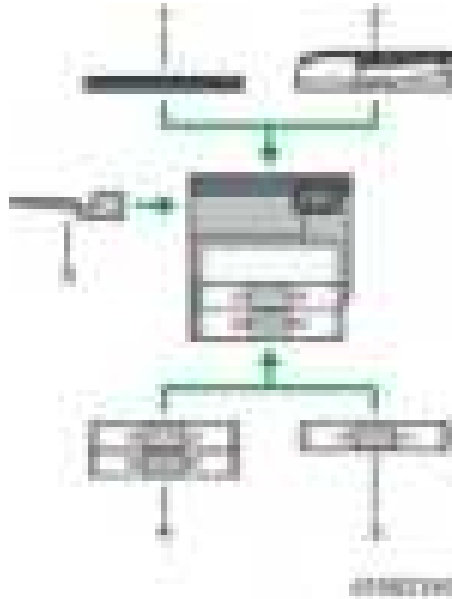

Item	Machine Code	Call out
Platen cover	D700	[1]
ARDF	D684	[2]
Paper tray unit (1-tray type)	D698	[3]
Paper tray unit (2-tray type)	D699	[4]
1 bin tray	D697	[5]


D160/D161/D170

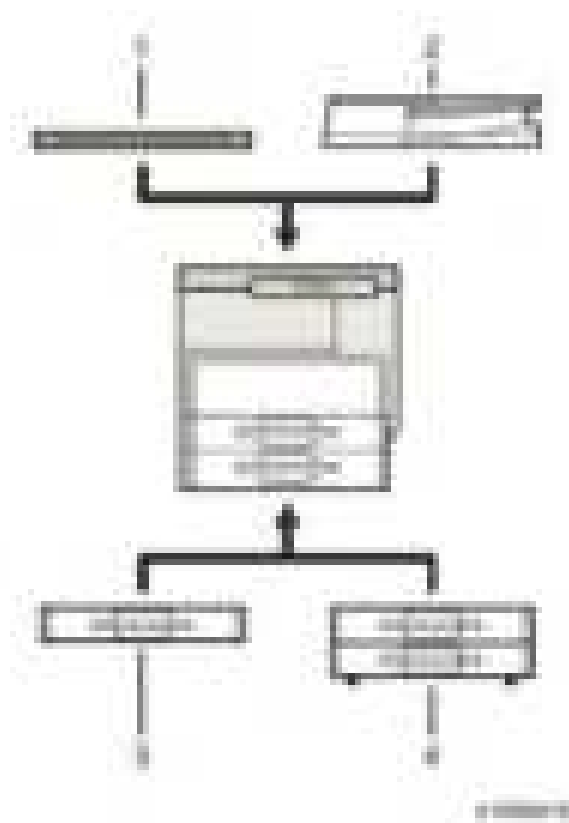

Item	Machine Code	Call out
Platen cover	D700	[1]
ARDF	D724	[2]
Paper tray unit (1-tray type)	D698	[3]
Paper tray unit (2-tray type)	D699	[4]

1.3 PRODUCT OVERVIEW

1.3.1 COMPONENT LAYOUT

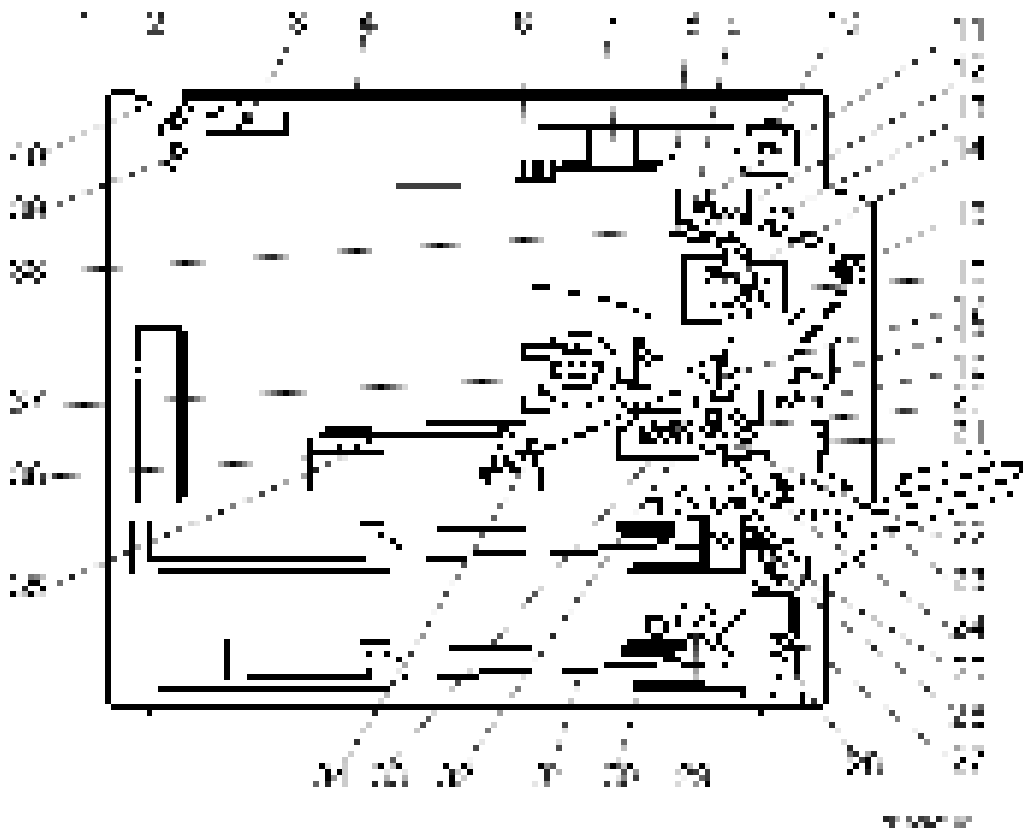


Note

- The above illustration is the D158/D159 model.
- D170: No duplex unit
- D158/D159: CCD scanner
- D160/D161/D170: CIS scanner


1. 2nd Mirror	21. Registration Roller
2. Exposure Lamp	22. Registration Sensor
3. 1st Mirror	23. By-pass Tray
4. Exposure Glass	24. Lower Transport Roller
6. APS Sensor (Length)	25. Upper Relay Roller
7. Lens Block	26. Relay Sensor
8. SBU	27. Lower Relay Roller
9. Exit Sensor	28. Vertical Transport Sensor
10. Scanner Motor	29. Paper Feed Roller
11. Inverter Roller	30. Paper End Sensor
12. Duplex Inverter Sensor	31. Bottom Plate
13. Duplex Entrance Sensor	32. PCU
14. Hot Roller	33. Development Roller
15. Upper Transport Roller	34. F-theta Lens
16. Pressure Roller	35. Polygon Mirror Motor
17. OPC Drum	36. Laser Unit
18. Middle Transport Roller	37. Toner Supply Bottle Holder
19. Duplex Exit Sensor	38. Exit Roller
20. Image Density Sensor	39. 3rd Mirror
	40. Scanner HP Sensor

D160/D161/D170: CIS scanner Component Layout

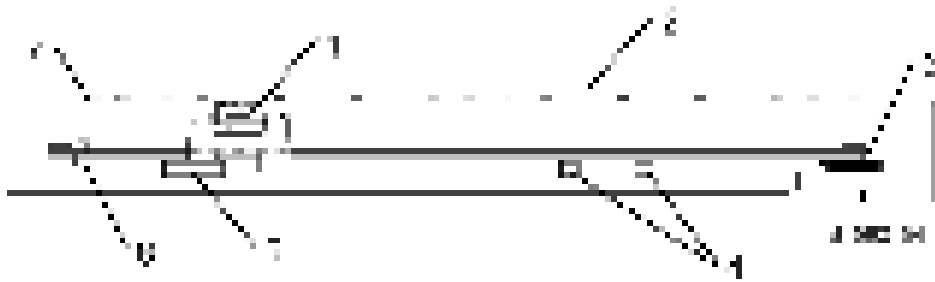

<ol style="list-style-type: none"> 1. CIS Unit 2. Exposure Glass 3. Scanner Motor 4. APS Sensor (Length) 	<ol style="list-style-type: none"> 5. APS Sensor (Width) 6. Scanner HP Sensor 7. DF Exposure Glass
--	---

D158/D159: CCD scanner Component Layout

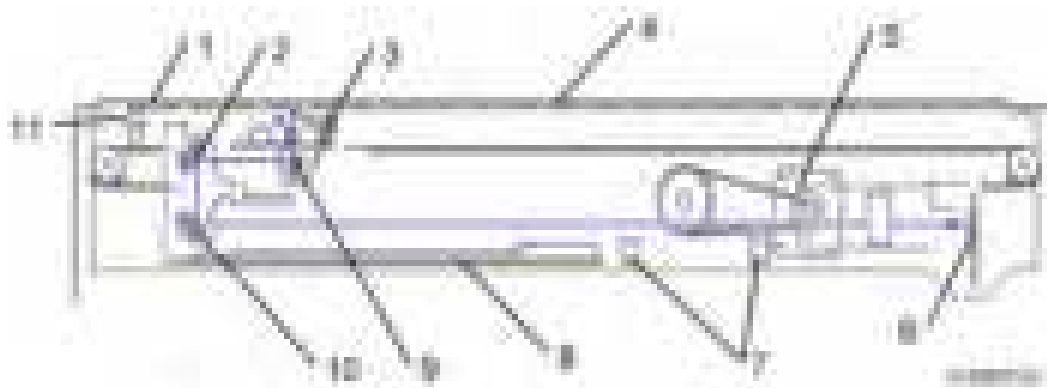

<ol style="list-style-type: none"> 1. DF Exposure Glass 2. 2nd Mirror 3. Exposure Lamp 4. Exposure Glass 5. Scanner Motor 6. SBU 	<ol style="list-style-type: none"> 7. APS Sensors 8. Scanner Heater 9. 1st Mirror 10. 3rd Mirror 11. Scanner HP Sensor
--	---


1.3.2 PAPER PATH



The D158, D159, D160, and D161 models have a duplex unit mounted on the right side of the machine.

All models have a by-pass tray.

1.3.3 DRIVE LAYOUT

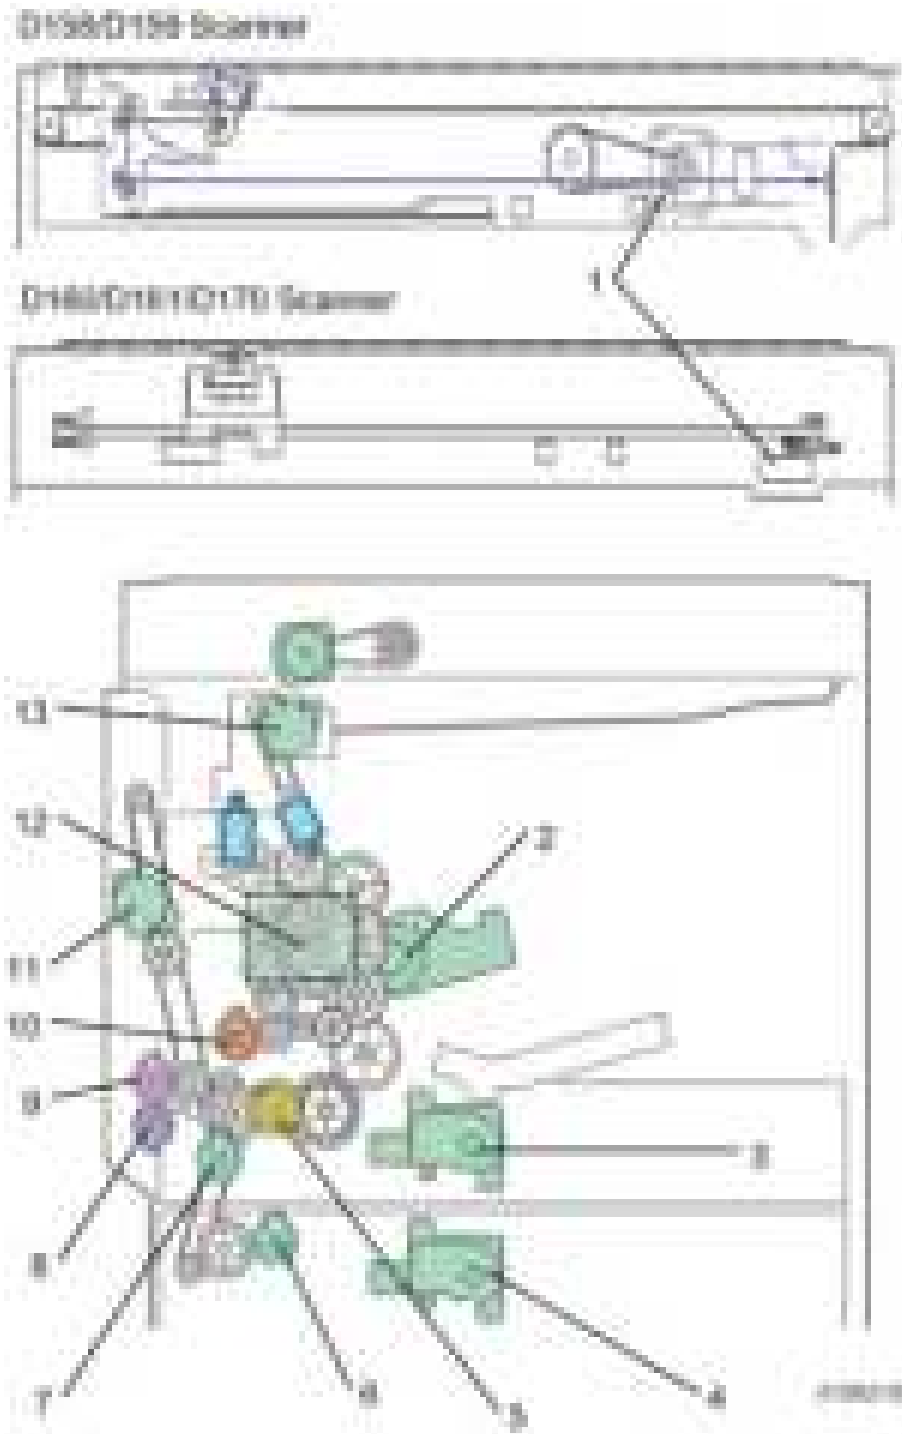

1. Scanner Motor	8. By-pass Paper Feed Clutch
2. Toner Supply Motor	9. By-pass Tray Lift Clutch
3. Tray 1 Lift Motor	10. Registration Clutch
4. Tray 2Lift Motor	11. Duplex Motor
5. Upper Paper Feed Clutch	12. Main Motor
6. Lower Paper Feed Clutch	13. Inverter Motor
7. Relay Clutch	



INSTALLATION

REVISION HISTORY		
Page	Date	Added/Updated/New
39	3/31/2014	See TSB-001 before one bin tray installation.
44	03/10/2014	Added Tray Heater part number information.
48	03/10/2014	Added Tray Heater part number information.

2. INSTALLATION


2.1 INSTALLATION REQUIREMENTS

⚠ CAUTION

- Before installing options, please do the following:
 - If there is a printer option in the machine, print out all data in the printer buffer.
 - Turn off the main switch and disconnect the power cord, the telephone line, and the network cable.

2.1.1 ENVIRONMENT

–Temperature and Humidity Chart–

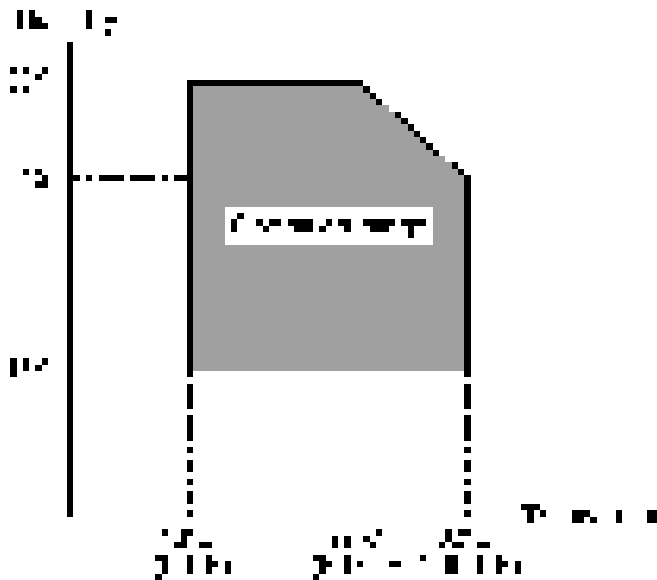

▪ Temperature Range:	10 - 32°C (50 - 89.6°F)
▪ Humidity Range:	15% to 80% RH
▪ Ambient Illumination:	Less than 1,500 lux (do not expose to direct sunlight)
▪ Ventilation:	3 times/hr/person or more
▪ Ambient Dust:	Less than 0.075 mg/m ³ (2.0 x 10 ⁻⁶ oz/yd ³)
▪ Avoid areas exposed to sudden temperature changes: <ol style="list-style-type: none"> 1) Areas directly exposed to cool air from an air conditioner. 2) Areas directly exposed to heat from a heater. 	

Installation Requirements


- | |
|--|
| ▪ Do not place the machine in areas where it can get exposed to corrosive gases. |
| ▪ Do not install the machine at any location over 2,000 m (6,500 ft.) above sea level. |
| ▪ Place the machine on a strong and level base. (Inclination on any side should be no more than 5 mm.) |
| ▪ Do not place the machine where it is subjected to strong vibrations. |

2.1.2 MACHINE LEVEL

Front to back:	Within 5 mm (0.2") of level
Right to left:	Within 5 mm (0.2") of level

2.1.3 MINIMUM SPACE REQUIREMENTS

Place the copier near the power source, providing clearance as shown:

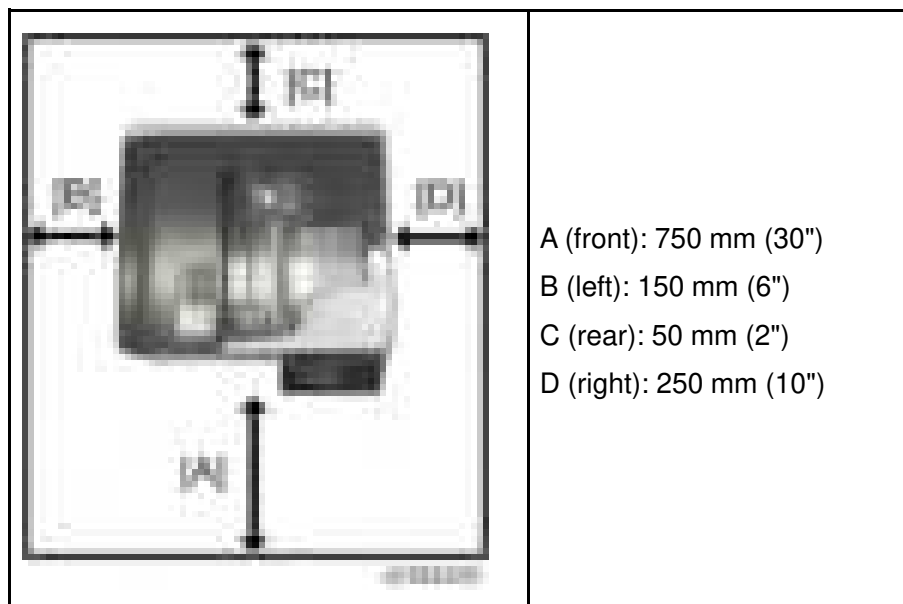

The recommended 750 mm (30") front space is sufficient to allow the paper tray to be pulled out. Additional front space is required to allow operators to stand at the front of the machine.

2.1.4 POWER REQUIREMENTS

CAUTION


- Make sure that the wall outlet is near the machine and easily accessible. After completing installation, make sure the plug fits firmly into the outlet.
- Avoid multi-wiring.
- Be sure to ground the machine.

Input voltage:

North America	120 - 127V 60Hz 12A
Europe, Asia, China	220V - 240V 50/60Hz 8A
Taiwan	110V 60Hz 13A

2.2 INSTALLATION FLOW CHART

This flow chart shows the best procedure for installation.

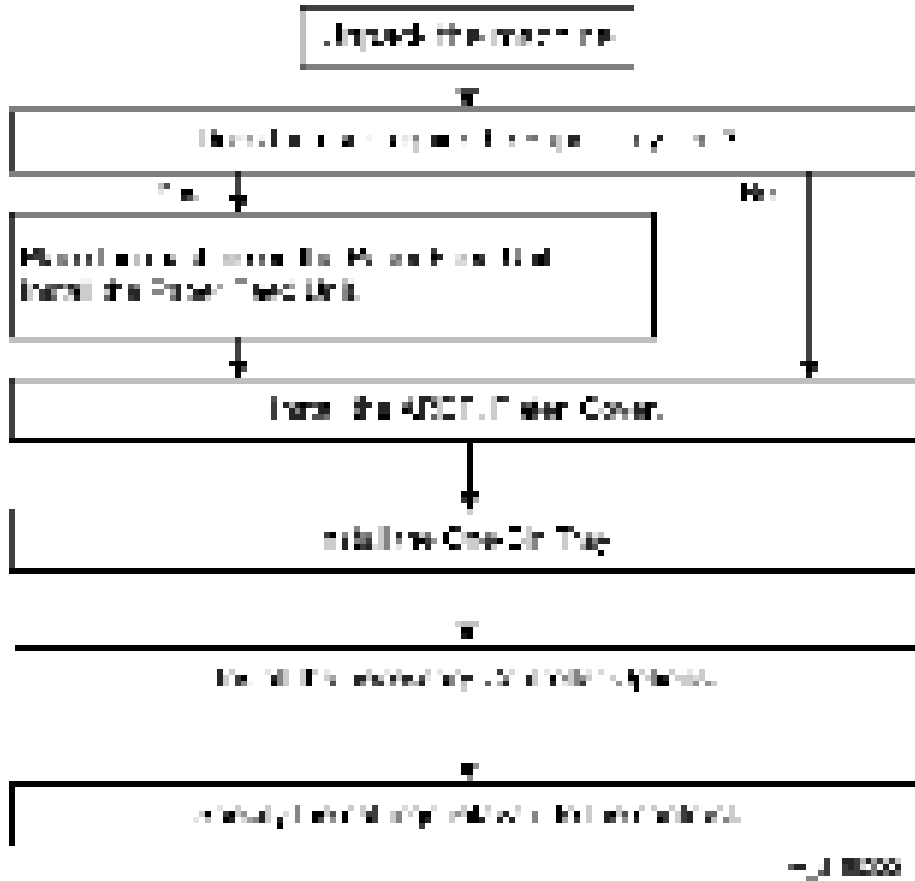

2.3 COPIER INSTALLATION

2.3.1 ACCESSORY CHECK

Check that you have the accessories in this list.

SP Models (D158/D159)

No.	Description	-17	-27	-29	-21	-25	-19	Q'ty
1	Operating Instructions (paper)	Y	Y	Y	Y	Y	Y	-
2	Operating Instructions (CD-ROM)	Y	Y	Y	Y	Y	Y	-
3	CD-ROM – Printer	Y	Y	Y	Y	Y	Y	1
4	CD-ROM – Scanner	Y	Y	Y	Y	Y	Y	1
5	CD-ROM – Printer/Scanner manual	Y	Y	Y	Y	Y	Y	1
6	Operating Instructions – Printer/Scanner (CD-ROM)	Y	-	Y	Y	Y	Y	1
7	Precautions for Printing Decal	Y	Y	Y	Y	Y	Y	1
8	EULA (Software license agreement sheet)	Y	Y	Y	Y	Y	Y	1
9	Brand plate	Y	Y	Y	-	-	Y	1
10	Exposure glass cleaning cloth	Y	Y	Y	Y	Y	Y	1
11	Pocket for exposure glass cleaning cloth	Y	Y	Y	Y	Y	Y	1
12	EU Safety Data Sheet	-	Y	-	-	-	-	1
13	Warranty (China)	-	-	-	Y	-	-	1
14	Power Cord	Y	Y	Y	Y	Y	Y	1
15	Model name decal	Y	Y	Y	-	-	Y	1
16	Sheet: TEL name (China)	-	-	-	Y	-	-	1

Copier Installation

No.	Description	-17	-27	-29	-21	-25	-19	Q'ty
17	Function decal	Y	Y	Y	Y	Y	Y	1
18	Function decal (blank)	Y	Y	Y	Y	Y	Y	1
19	Toner cartridge	-	-	-	Y	-	-	1

Basic Models (D170)

No.	Description	-17	-27	-29	-21 -25	Q'ty
1	SMC repot	Y	Y	Y	Y	1
2	EU Safety Data Sheet	-	Y	-	-	1
3	Sheet - EMC - Traceability	-	Y	-	-	1
4	Warranty (China)	-	-	-	Y	1
5	Warranty (China): Decal	-	-	-	Y	1
6	Caution Decals for ARDF	Y	Y	Y	Y	1
7	Function decal	Y	Y	Y	Y	1
8	Function decal (blank)	Y	Y	Y	Y	1
9	Model name plate	Y	Y	Y	-	1
10	CD-ROM: Driver	Y	Y	Y	Y	1
11	EULA (Software license agreement sheet)	Y	Y	Y	Y	1
12	Decal: CAUTION	Y	Y	Y	Y	1
13	Package: Developer	-	-	-	Y	1
14	Toner cartridge	-	-	-	Y	1
15	Power cord	Y	Y	Y	Y	1
16	Cover for transport lever	Y	Y	Y	Y	2
17	Decal: Environment symbol mark	-	-	-	Y	1

No.	Description	-17	-27	-29	-21 -25	Q'ty
18	Energy saving mark (China)	-	-	-	Y	1

GDI Models (D160/D161)

No.	Description	-27	-29	-21 -25	Q'ty
1	SMC report	Y	Y	Y	1
2	EU Safety Data Sheet	Y	-	-	1
3	Sheet – EMC – Traceability	Y	-	-	1
4	Warranty (China)	-	-	Y	1
5	Warranty (China): Decal	-	-	Y	1
6	Caution Decals for ARDF	Y	Y	Y	1
7	Function decal	Y	Y	Y	1
8	Function decal (blank)	Y	Y	Y	1
9	Brand plate	Y	Y	-	1
10	CD-ROM: Driver	Y	Y	Y	1
11	EULA (Software license agreement sheet)	Y	Y	Y	1
12	Decal: CAUTION	Y	Y	Y	1
13	Package: Developer	-	-	Y	1
14	Toner cartridge	-	-	Y	1
15	Power Cord	Y	Y	Y	1
16	Decal: Environment symbol mark	-	-	Y	1
17	Energy saving mark (China)	-	-	Y	1

2.3.2 INSTALLATION PROCEDURE

⚠ CAUTION

- Unplug the machine power cord before starting the following procedure.

1. Remove filament tape and other padding.



2. Install the covers [A], [B].



3. Open the front door and remove the toner bottle holder [A].




4. Open the right door [B], and remove the PCU (photoconductor unit) [A].



5. Separate the PCU into the upper part and the lower part (x 5).
6. Put a sheet of paper on a level surface and place the upper part on it.

Note


- This prevents foreign material from getting on the sleeve rollers.

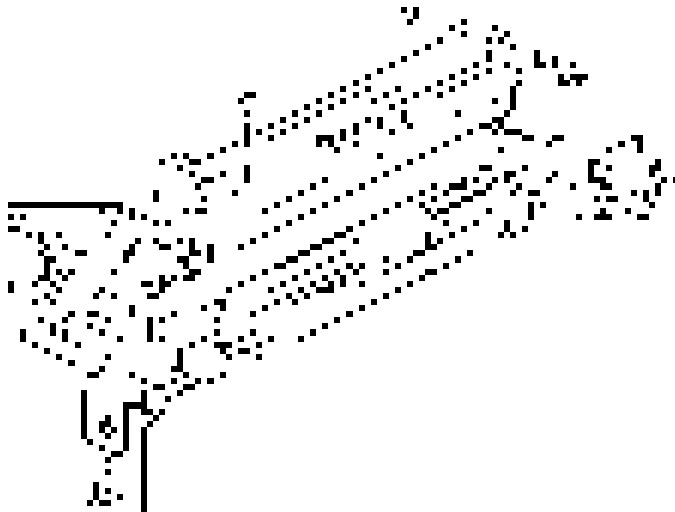

7. Distribute a pack of developer [D] to all openings equally.


Note


- Do not spill the developer on the gears [E]. If you have spilled it, remove the developer by using a magnet or magnetized screwdriver.
- Do not turn the gear [E] too much. The developer may spill.

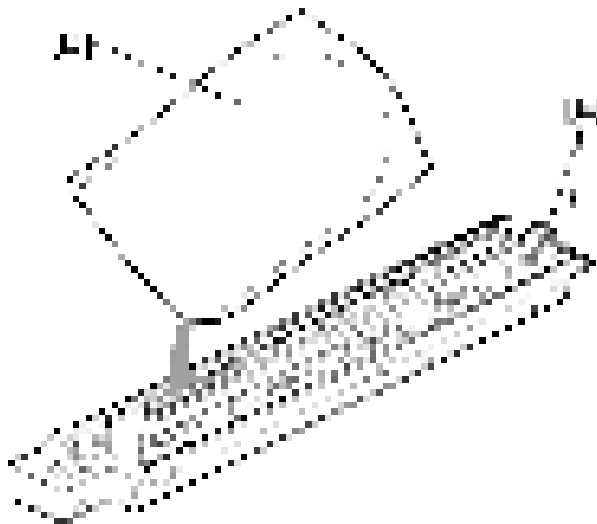

8. Reassemble the PCU and install it.
9. Shake the toner bottle [F] several times. (Do not remove the bottle cap [G] before you shake the bottle.)
10. Remove the bottle cap [G] and install the bottle on the holder. (Do not touch the inner cap [H].)



11. Set the holder (with the toner bottle) in the machine.
12. Pull out the paper tray [A], and then adjust the positions of the end and side guides ( x 1).

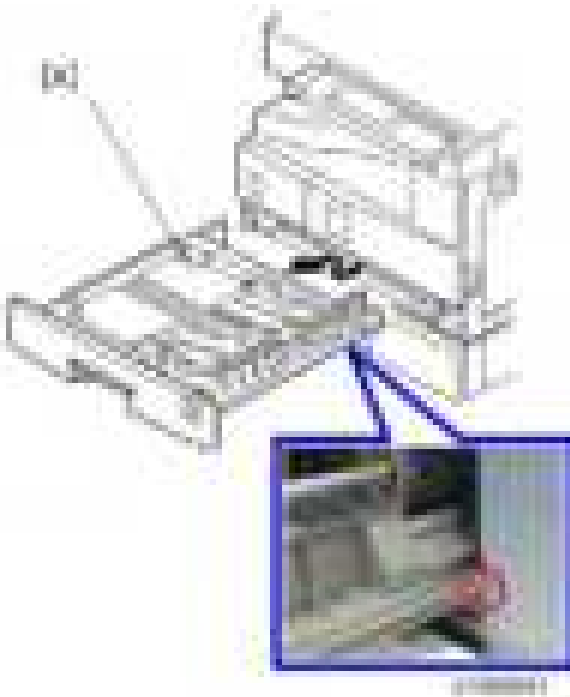

Note

- To move the side guides, release the green lock on the rear side guide.

13. Install the optional ARDF, or platen cover.
14. Plug in the main power cord and turn on the main switch.
15. Activate the SP mode and execute "Developer Initialization" (SP2-801-001).
16. Wait until the message "Completed" shows (about 20 seconds).
17. Activate the User Tools and select the "Language" menu.

18. Specify a language. This language is used for the operation panel.
19. Load the paper in the paper tray and make a full size copy, and make sure the side-to-side and leading edge registrations are correct.

Selecting the Panel Display Language (for D158/D159)

To change the panel display language, it is necessary to register available languages in the User Tools. Specify the settings according to the following procedure.

Note

- You can select one of these languages (the default is English): Japanese, English, German, French, Italian, Dutch, Swedish, Norwegian, Danish, Spanish, Finnish, Portuguese, Czech, Polish, Hungarian, Simplified Chinese, Russian, Greek, Catalan, Turkish, or Brazilian Portuguese.
 - You do not have to do this procedure if you use English. Do this procedure if you want to use a different language.
1. Turn on the power switch of the machine.
 2. Press the "User Tools/Counter" key.
 3. Press "Administrator Tools" in "System Settings".
 4. Press "Select Switchable Languages".
 5. Using the language button displayed on the User Tools screen, select the required language (this will then be selectable at any time with a toggle setting), and then press "OK".

Note

- Only languages available for the machine are displayed.
 - At least one language must be selected.
6. Return to the User Tools menu, and then keep pressing the language button until the language you want to select appears.

Note

- The language selected in "Select Switchable Languages" becomes available for selection by a toggle setting.

2.3.3 SHUTDOWN/FORCED SHUTDOWN FUNCTIONS

Shutdown Function

To protect the hard drive from damage if the power fails while the drive is being written to, the machine has a shutdown function. If the main power switch is turned off, the machine shuts down safely by ensuring the following:

- Corruption of files on the system hard drive, in the NAND flash memory, and on an SD card or USB flash drive is prevented.
- Loss of main power while paper (except jammed paper) is still in the machine is prevented.
- All job and access logs are saved.

Shutdown message

The following message appears during shutdown:



The shutdown message does not appear in the following cases:

- If the main power goes off suddenly
- If the main power switch is turned off when the controller is off
- If the main power switch is turned off during a special operation such as deleting all data on the hard disk, updating firmware, encrypting data on the hard disk, or detecting changes to the device configuration
- If the main power switch is turned off during a reboot

Do not turn the main power switch on just after turning it to Standby. If the message "Turn main Power Switch off" appears, turn the main power switch to standby, wait for at least ten seconds, and then turn it back on.

Forced Shutdown Function

You can forcibly turn the main power off by holding down the main power switch for more than 6 seconds.

★ Important

- Pressing the main power switch starts the shutdown process, during which the shutdown message appears. Be careful not to forcibly turn the main power off before shutdown is complete. Doing so may cause loss of data.
- The Forced Shutdown function is a fail-safe that lets you turn the main power off without unplugging the power cord if the machine has not shut down despite having had enough time to do so. Do not use Forced Shutdown excessively. Also, be careful not to hold the main power switch down by mistake.

2.3.4 INSTRUCTIONS FOR THE CUSTOMERS

The following items should be advised when the machine is installed. These items are explained in more detail in the operating instructions.

How to add paper to the paper feed unit and the by-pass feed unit.

How to install a toner bottle

How to handle paper jams


How to feed thin paper using the ARDF (for D158/D159) (■ p.2-18 "ARDF Installation (for D158/D159)")

2.4 PLATEN COVER INSTALLATION

2.4.1 ACCESSORY CHECK

Check that you have the accessories indicated below.

No.	Description	Q'ty
1	Platen Cover	1
2	Platen Sheet	1
3	Feeler Guide	1
4	Stepped Screw	2

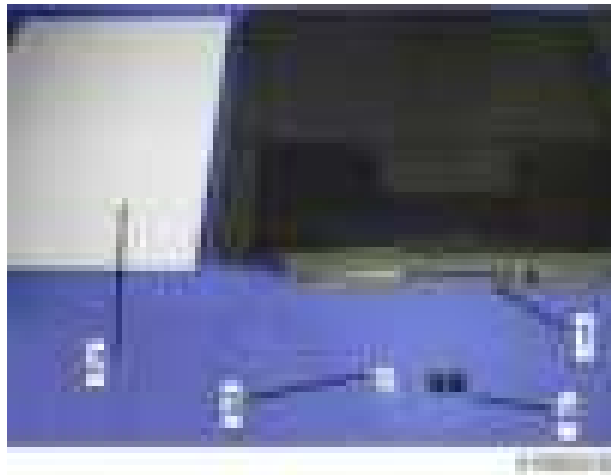


2.4.2 INSTALLATION PROCEDURE

⚠ CAUTION

- Unplug the machine power cord before starting the following procedure.

1. Install the stepped screws (A x 2).

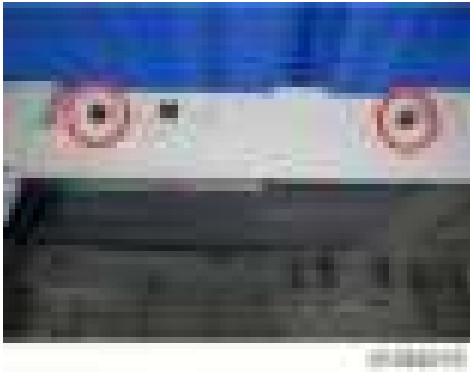


2. Install the feeler guide [A].



3. Install the platen cover [A].



4. Place the platen sheet [A] on the exposure glass.
5. Line up the rear left corner of the platen sheet flush against corner [B] on the exposure glass.

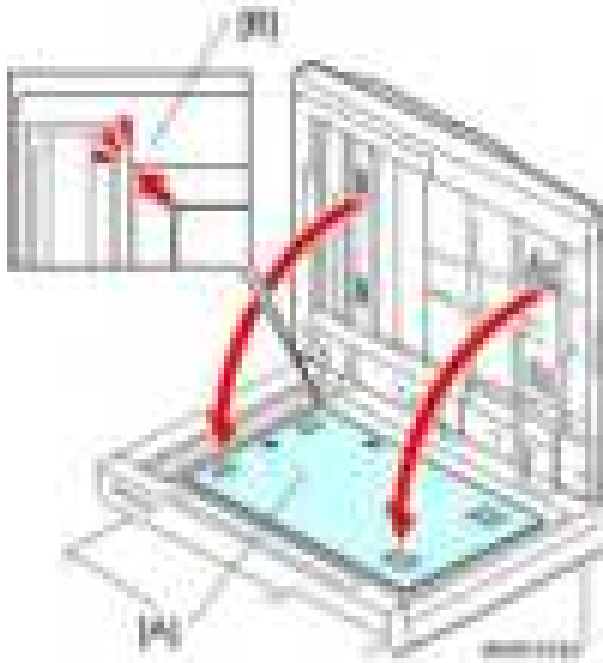

Installation

6. Close the platen cover.
7. Open the platen cover.
8. Press the surface of the platen sheet gently to fix it on the platen cover securely.

2.5 ARDF INSTALLATION (FOR D158/D159)

2.5.1 ACCESSORY CHECK

Check the quantity and condition of the accessories against the following list.

No.	Description	Q'ty
1	ARDF	1
2	Screw	2
3	Knob Screw	2
4	Stud Screw (Small)	1
5	Stud Screw (Large)	1
6	Attention Decal – Top Cover	1
-	Installation Procedure	1



2.5.2 INSTALLATION PROCEDURE

⚠ CAUTION

- Unplug the copier power cord before starting the following procedure.
1. All tapes and shipping retainers.
 2. Insert the two stud screws ([A] is the larger stud, [B] is the smaller stud).



3. Mount the ARDF [A] by aligning the screw keyholes [B] of the ARDF support plate over the stud screws.
4. Slide the ARDF toward the front of the machine.
5. Secure the ARDF with the two knob screws [C].



6. Align the rear left corner of the platen sheet [A] with the corner [B] on the exposure glass.
7. Close the ARDF.
8. Open the ARDF and check that the platen sheet is correctly attached.

ARDF Installation (for D158/D159)




9. Lift the ARDF original tray.
10. Slide the stamp holder [A] out and install the stamp cartridge in it, if necessary.




⬇ Note

- After the stamp installation, be sure to slide the holder in correctly. If not, jam detection (J001) will occur.

11. Attach the decal [A] to the top cover as shown. Choose the language that you want.

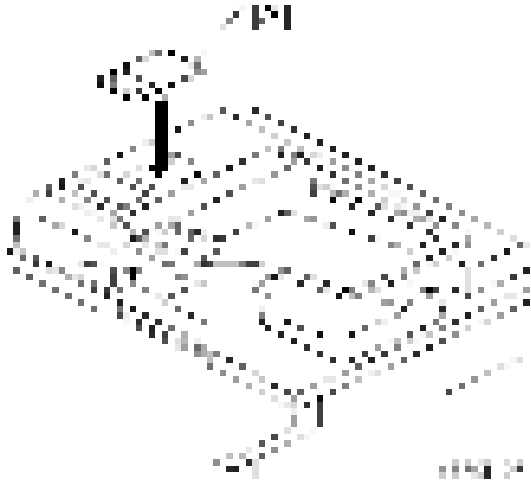

12. Rear Cover [A] (x9)

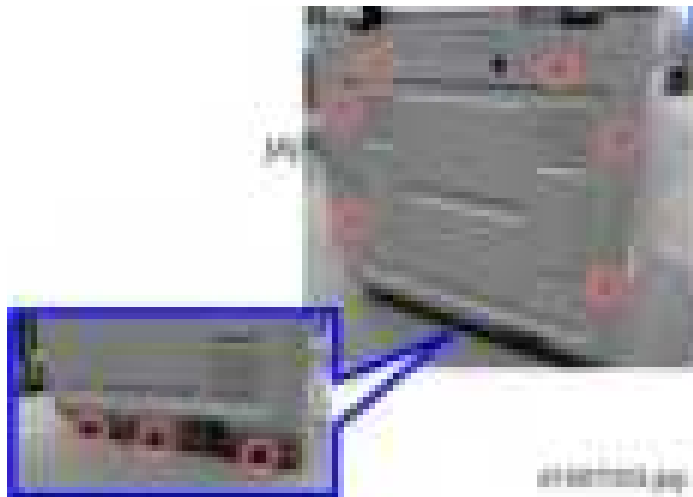


13. Cut away the knockout [A].



14. Attach the harness bracket as shown [A]. (x1)

15. Connect the end of the cable [B].

ARDF Installation (for D158/D159)

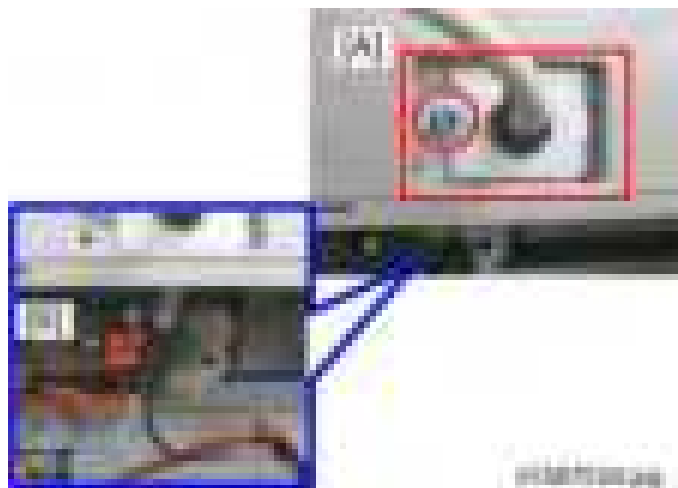

16. Fasten the grounding wire [A] as shown. (x1)



17. Plug in and turn on the main power switch of the machine, and then check the ARDF operation.
18. Make a full size copy. Check that the registrations (side-to-side and leading edge) and image skew are correct. If they are not, adjust the registrations and image skew (see p.4-111 "ARDF Image Adjustment" in the "Replacements and Adjustments" chapter).


When feeding thin paper

When feeding thin paper, adjust the sliding tray to the point shown below [A].

When feeding normal paper, adjust the sliding tray to the point shown below [B].

If not, it may cause problems as follows;

- Original jam
- Original curl
- Originals cannot be stacked neatly

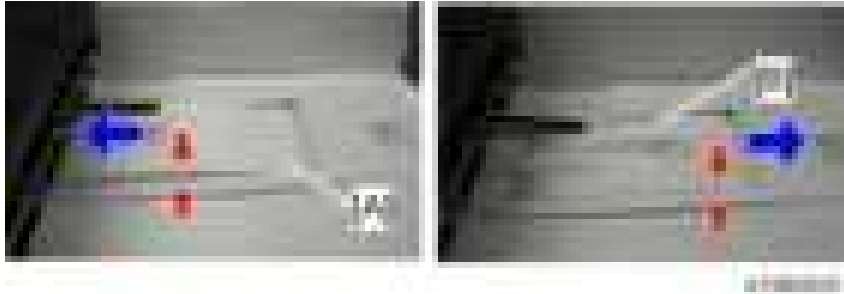

2.6 ARDF INSTALLATION (FOR D160/D161/D170)

2.6.1 ACCESSORY CHECK

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	ARDF	1
2	Screw	2
3	Knob Screw	2
4	Stud Screw	2
5	Attention Decal – Top Cover	1
6	Clamp	3
-	Installation Procedure	1



2.6.2 INSTALLATION PROCEDURE

⚠ CAUTION

- Unplug the copier power cord before starting the following procedure.
1. All tapes and shipping retainers.
 2. Insert the two stud screws [A] [B].



3. Mount the ARDF [A] by aligning the screw keyholes [B] of the ARDF support plate over the stud screws.
4. Slide the ARDF toward the front of the machine.
5. Secure the ARDF with the two knob screws [C].




6. Align the rear left corner of the platen sheet [A] with the corner [B] on the exposure glass.
7. Close the ARDF.
8. Open the ARDF and check that the platen sheet is correctly attached.

ARDF Installation (for D160/D161/D170)



9. Attach the decal [A] to the top cover as shown. Choose the language that you want.

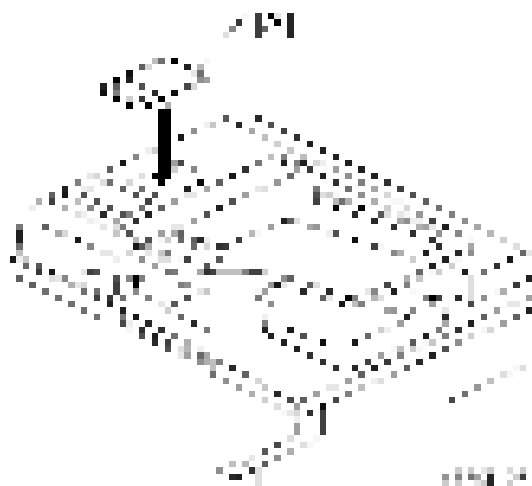

10. Rear Cover [A] ( x9)



11. Cut away the knockout [A].




12. Attach the harness bracket [A]. (⚙️ x1)
13. Set the cable and fix it with clamps as shown [B].
14. Connect the end of the cable to the engine board [C].



15. Fasten the grounding wire [A] as shown. (⚙️ x1)

ARDF Installation (for D160/D161/D170)

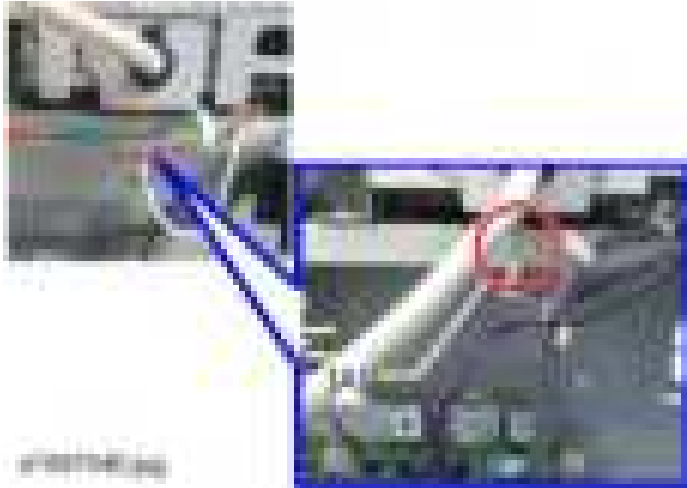

16. Plug in and turn on the main power switch of the machine, and then check the ARDF operation.
17. Make a full size copy. Check that the registrations (side-to-side and leading edge) and image skew are correct. If they are not, adjust the registrations and image skew (see p.4-111 "ARDF Image Adjustment" in the "Replacements and Adjustments" chapter).

2.7 TWO-TRAY PAPER TRAY UNIT INSTALLATION

2.7.1 ACCESSORY CHECK

Check the quantity and condition of the accessories against the following list.


No.	Description	Q'ty
1	Paper Feed Unit	1
2	Paper Tray Number Decal	1
3	Securing Bracket	2
4	Screw	4
-	Installation Procedure	1



2.7.2 INSTALLATION PROCEDURE

⚠ CAUTION


- Unplug the machine power cord before starting the following procedure.
 - The handles of the main machine for lifting must be inserted inside the machine and locked, unless these handles are used for the installation or relocation of the main machine.
 - You need two or more persons to lift the copier. The copier is highly unstable when lifted by one person, and may cause human injury or property damage.
 - Do not remove the anti-tip components at the bottom of the unit
1. All strips of tape and accessories on the paper feed unit
 2. Rear Cover [A] (x 9)

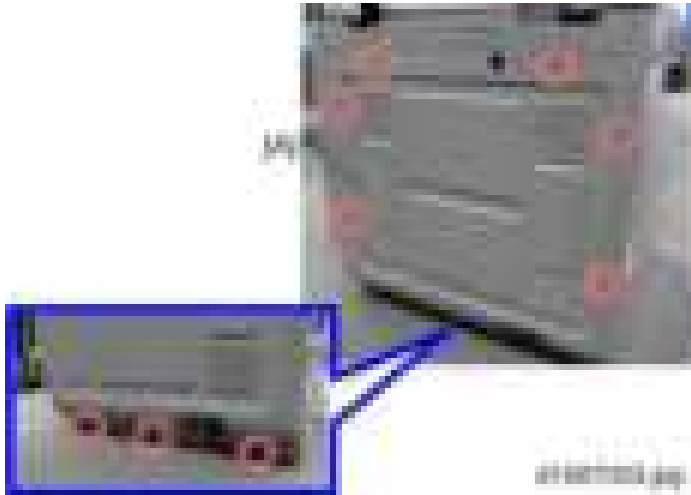

3. Set the copier [A] on the paper feed unit [B].

ⓘ Note

- When installing the copier, be careful not to pinch the cable [C].
- Be sure to insert the basing pins [D] into the basing holes at the bottom of the main machine.
- Lead the cable out [C] as shown below.

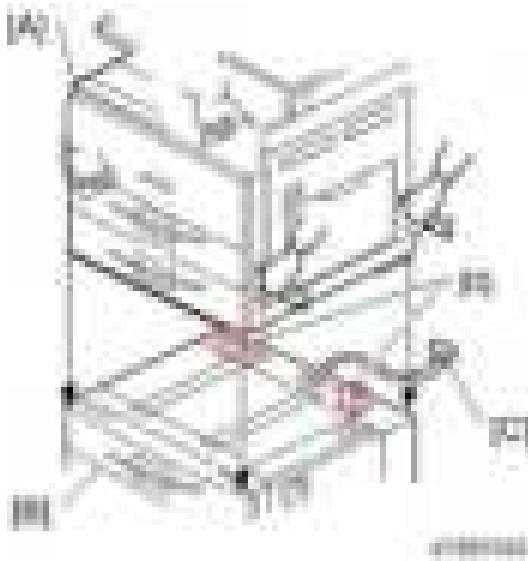

- 4. Connect the paper feed unit cable [A] to the engine board [B], as shown.



- 5. Attach the securing brackets [A] to both sides, as shown (x 1 each).

Two-tray Paper Tray Unit Installation



6. Remove the 1st and 2nd paper trays
7. Secure the paper feed unit with two screws [A] (2 x 2).
8. Reinstall all the paper trays.
9. Attach the appropriate paper tray number decal and paper size decal to each handle of the trays.



10. Rotate the adjuster [A] until the machine cannot be pushed across the floor.




11. Load paper into the paper trays and select the proper paper size.
12. Turn on the main switch.
13. Adjust the registration for each tray (■ p.4-105 "Copy Adjustments Printing/Scanning").
 - For tray 3, use SP1-002-004
 - For tray 4, use SP1-002-005
14. Check the machine's operation and copy quality.

2.8 ONE-TRAY PAPER TRAY UNIT INSTALLATION

2.8.1 COMPONENT CHECK

Check the quantity and condition of the accessories against the following list.

No.	Description	Q'ty
1	Paper Feed Unit	1
2	Paper Tray Number Decal	1
3	Securing bracket	2
4	Screw	4
-	Installation Procedure	1

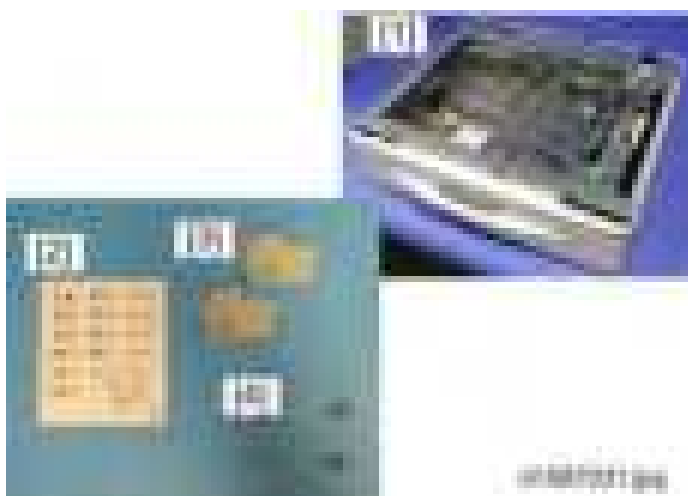


2.8.2 INSTALLATION PROCEDURE

⚠ CAUTION

- Turn off the main switch of the copier and unplug the power cord before you start the installation procedure.
- You need two or more persons to lift the copier. The copier is highly unstable when lifted by one person, and may cause human injury or property damage.
- Do not lift the copier with the paper feed unit installed. The handle and grips may be damaged.


1. All tape on the paper feed unit.
2. Rear Cover [A] (☐ x 9)

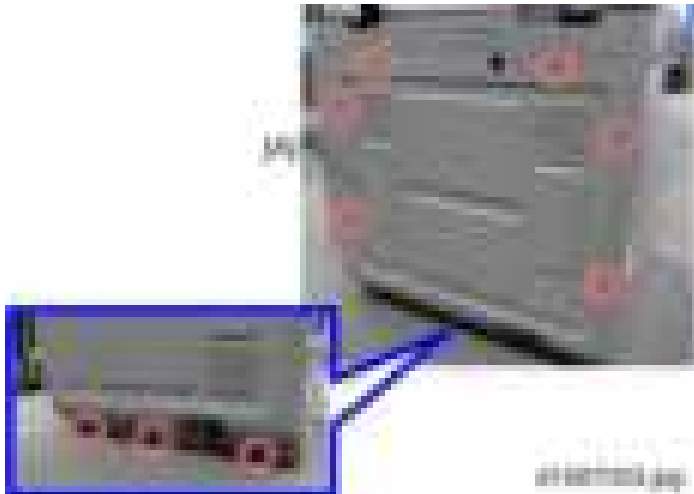

3. Lift the copier [A] and install it on the paper feed unit [B].

Note

- When installing the copier, be careful not to pinch the cable [C].
- Be sure to insert the basing pins [D] into the basing holes at the bottom of the main machine.
- Lead the cable out [C] as shown below.

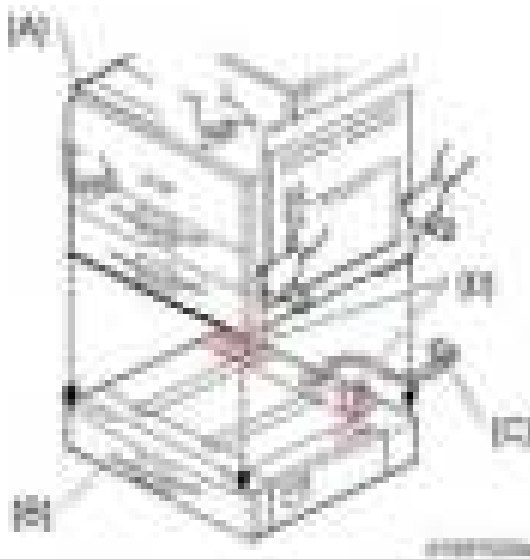

One-tray Paper Tray Unit Installation



4. Connect the paper feed unit cable [A] to the engine board [B], as shown.



5. Attach the securing brackets [A] to both sides, as shown (1 x 1 each).



6. Remove tray 1 and 2 of the machine.
7. Secure the paper tray unit with two screws [A] (2 x 2).



8. Reinstall all trays.
9. Load paper into the paper feed unit.
10. Turn on the main power switch of the machine.
11. Adjust the registration for each tray (■ p.4-105).
 - Use SP1-002-004
12. Check the paper feed unit operation and copy quality.

2.9 ONE-BIN TRAY INSTALLATION

2.9.1 COMPONENT CHECK

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	1-Bin Tray Unit	1
2	Accessory Inner Tray	1
3	Tray	1
4	I/F Harness	1
5	LED Relay Harness	1
6	Screw	1
7	Clamp	1
8	Bracket	1
-	Installation Procedure	1



2.9.2 INSTALLATION PROCEDURE


⚠ CAUTION

- Unplug the copier power cord before starting the following procedure.

⇒ Important

- Before installation, see Technical Service Bulletin D158/D159/D160/D161/D170 – 001 REROUTE HARNESS BEFORE INSTALLING THE 1-BIN TRAY (BN2010).

1. Strip all tapes on the 1-bin tray unit off.
2. Rear cover [A] (☞ x 9)

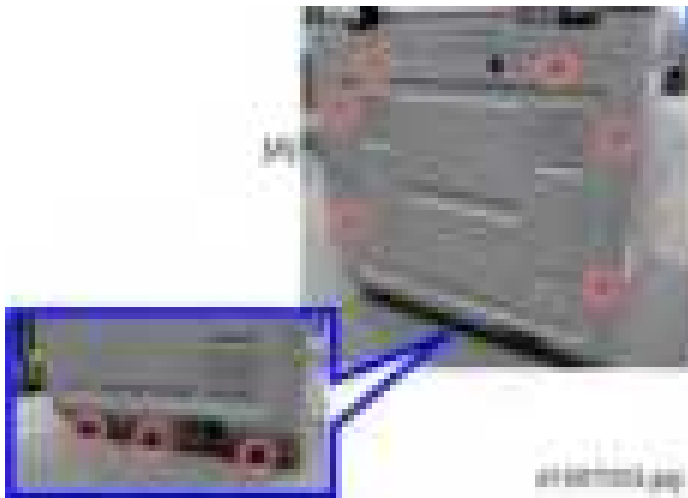

3. Inverter tray [A] (hook).



4. Inner cover [A] (☞ x 2)

↓ Note

- Keep the two screws that you removed in this step. Use them to attach the accessory inner cover (step 9).

One-Bin Tray Installation



5. Open the right door [A] of the machine.
6. Front right cover [B] (☞ x 1, hook).



7. Cut away the knockout from the front right cover.



8. Install the 1-bin tray unit [A] (☞ x 1).



Note

- Be sure to insert the two points on the back of the unit into the frame holes [B].

9. Install the accessory inner cover [A] (2 x 2).



Note

- To attach the accessory inner cover [A], use the two screws removed in step.4.

One-Bin Tray Installation


10. Install the tray [A] in the machine as shown.



11. Be sure to pass the tray harness [B] through the inner cover opening [C] to the rear.



12. Attach the bracket [A] to fix the tray (1 x 1).

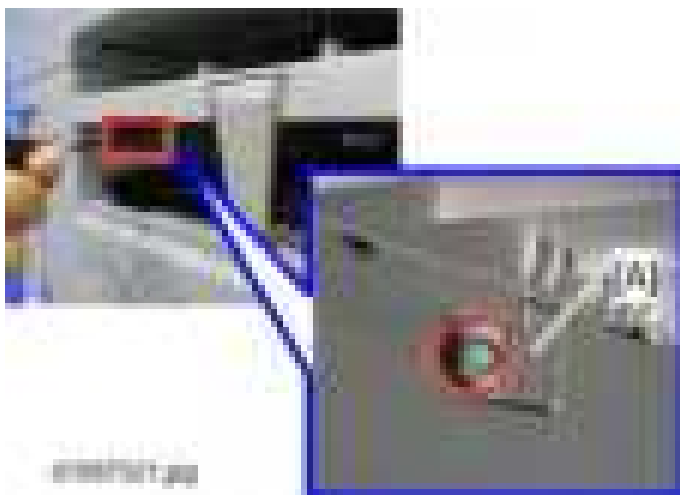


↓ Note

- Facing the left side of the machine, the screw is fastened at an angle.

13. With the accessory harness, connect the 1-bin tray unit board [A] and the tray harness [B] on the rear side.
14. Attach the clamp [C] and secure the harness as shown.



15. Connect the 1-bin tray unit board [A] and the engine board [B] with the cable harness.

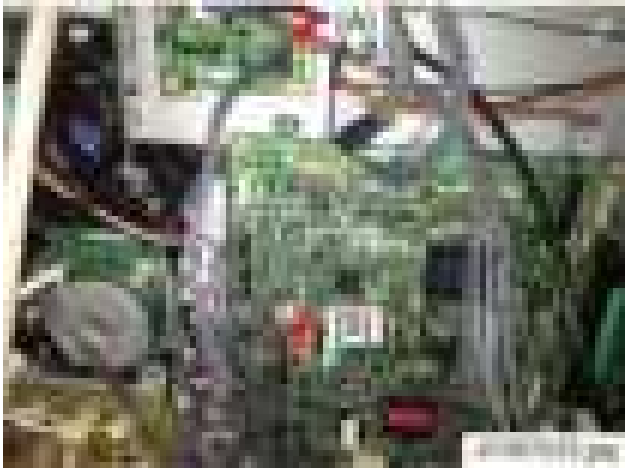

16. Reassemble the machine.
17. Turn on the main power switch of the machine, and check the 1-bin tray unit operation.
18. Make sure the LED as shown below [A] is ON.



2.10 ANTI-CONDENSATION HEATER INSTALLATION

2.10.1 COMPONENT CHECK

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	Anti-condensation Heater (P/N – B2291688 for EU and AA)	1
1	Anti-condensation Heater (P/N – B2291687 for NA)	1
2	Relay Harness (P/N – D1595227)	1
3	Bracket (P/N – D1491835)	1
4	Screw (P/N – 03530030)	2




2.10.2 INSTALLATION PROCEDURE

⚠ CAUTION


- Unplug the machine power cord before starting the following procedure.
1. Rear cover (■ p.4-4)
 2. Platen cover, or ARDF (if installed)
 3. Exposure glass/DF exposure glass (■ p.4-20)
 4. Install the bracket [A].



5. Install the anti-condensation heater [A] (x 2).

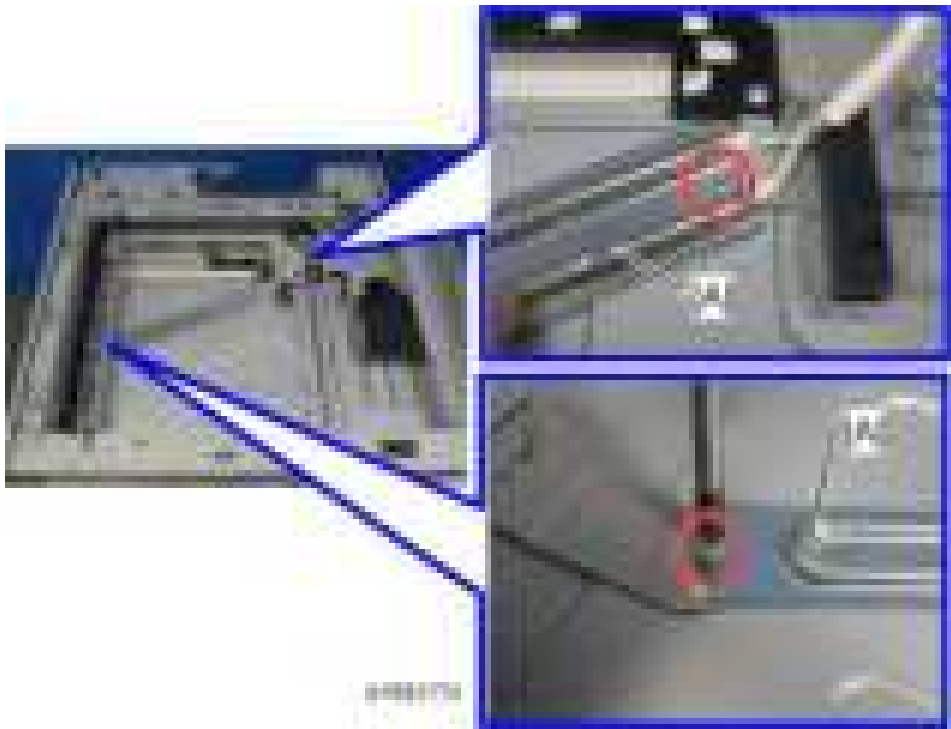


6. Pass the connector [A] as shown below.

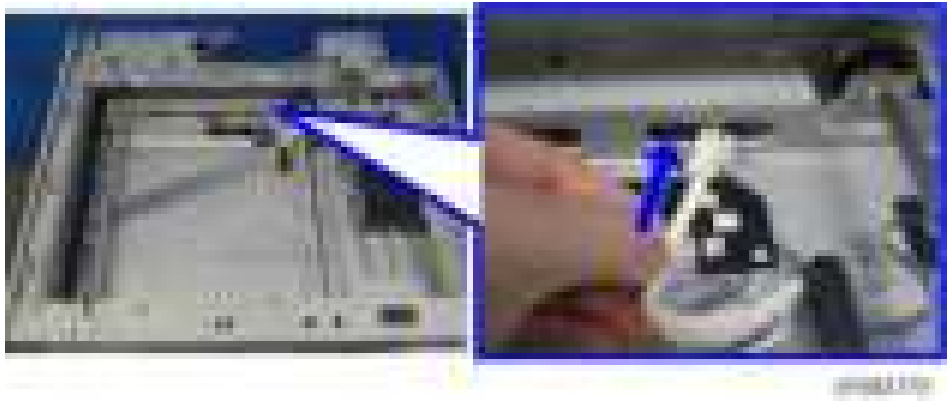

Anti-condensation Heater Installation



7. Connect the harness [B] to [C].
8. Join the connectors [A] [B] (🔌 x 2).

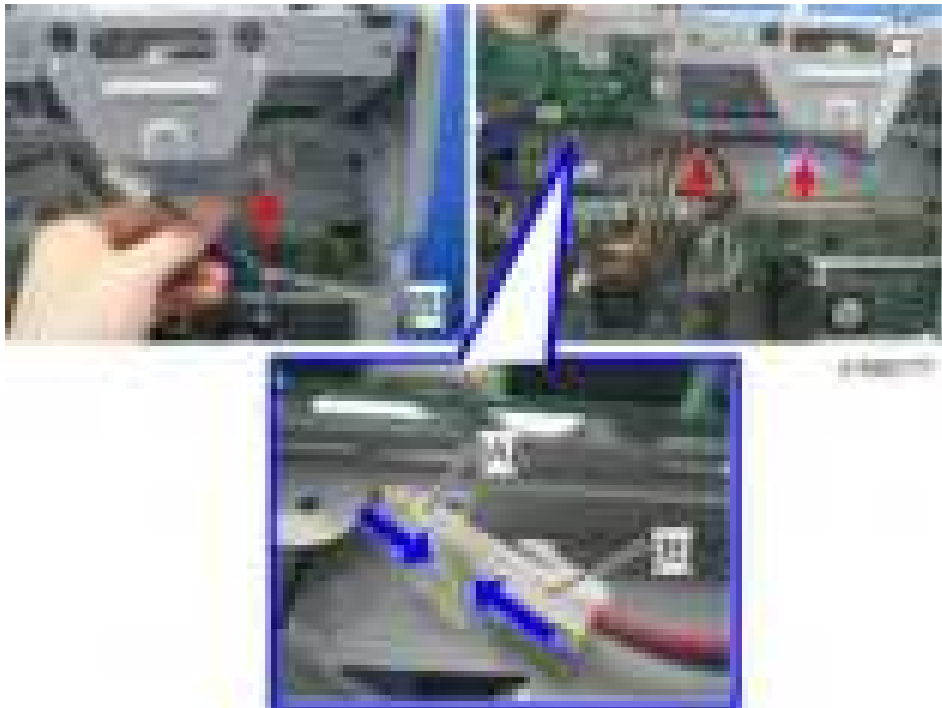

9. Install the harness of the heater and connect it to the PSU. (📖 p.2-61 "Installing the Harness of the Heater")

2.11 TRAY HEATERS

⚠ CAUTION

- Unplug the machine power cord before starting the following procedures.

2.11.1 MAINFRAME UPPER TRAY HEATER

★ Important

- Unplug the machine power cord before starting the following procedure.

Component Check

Check the quantity and condition of the components against the following list.


No.	Description	Q'ty
1	Heater (P/N – B0392783 for EU and AA)	1
1	Heater (P/N – B0392782 for NA)	1
2	Screw (P/N 09503006)	1




Installation

Installation Procedure


1. 1st Tray Cassette [A] (🔩 x 1)

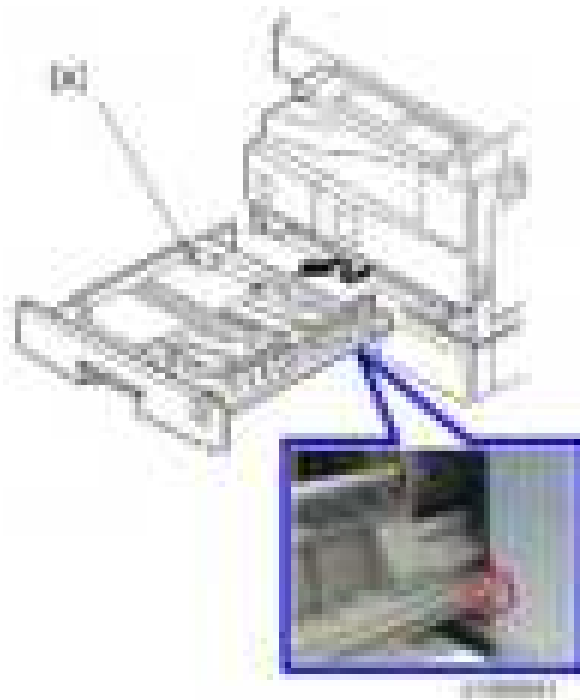


2. Rear Cover [A] (🔩 x 9)

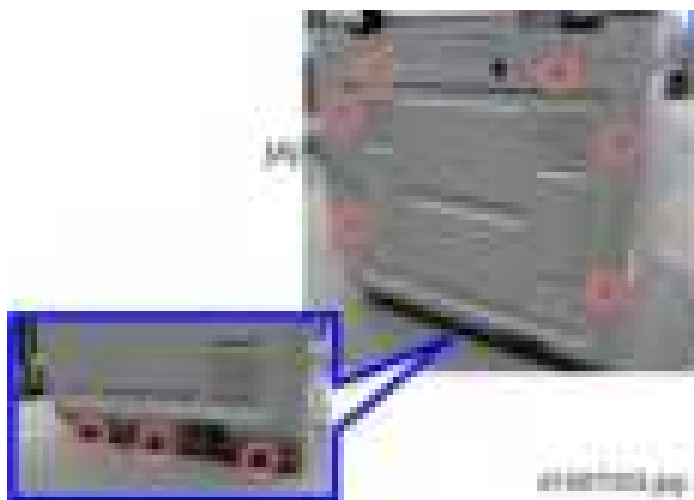


3. Engine Board with the bracket [A] (🔩 x 5, 📏 x all on the board)

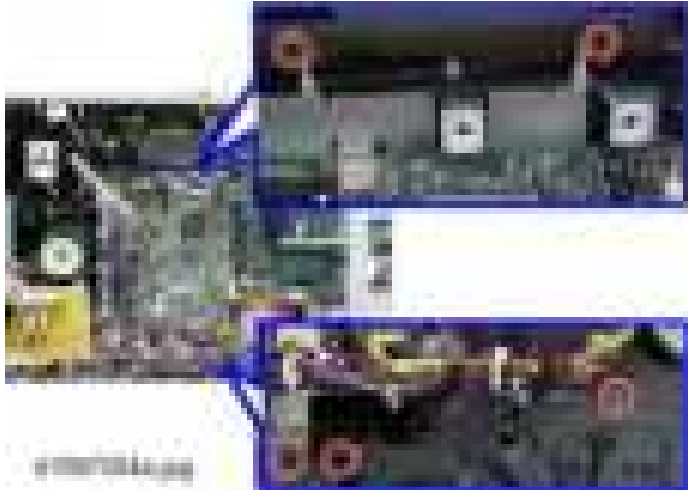

4. Bottom Plate Lift Motor [A] (☐ x 3)

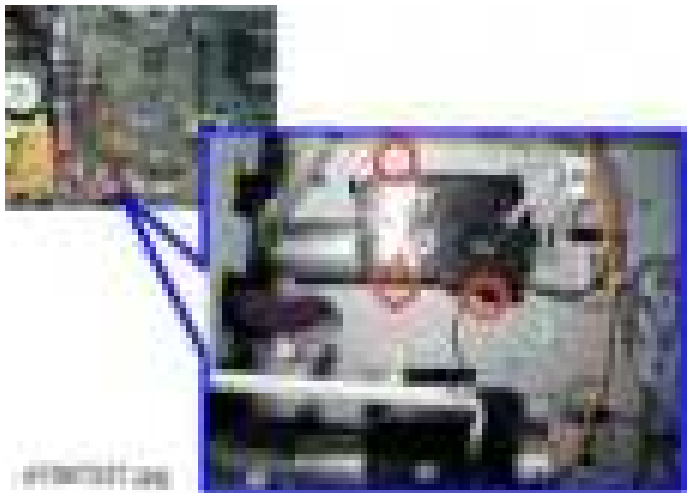

5. Pass the connector [A] through the opening [B] and install the tray heater [C] (☐ x 1).

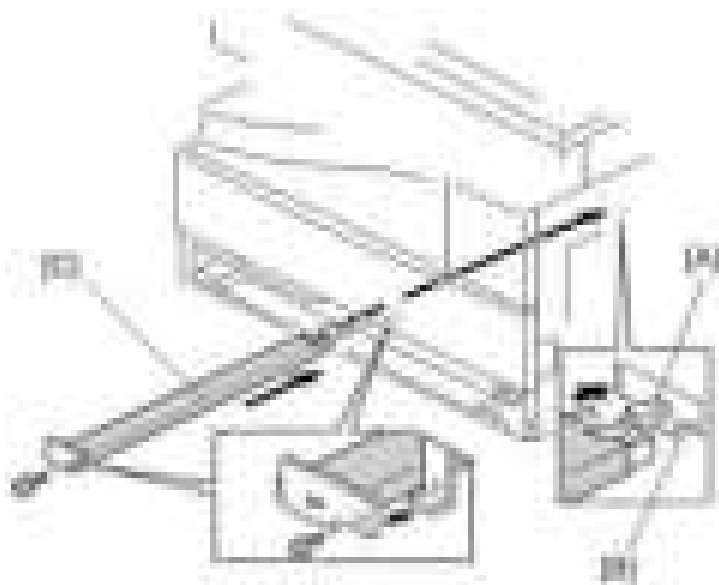

6. Attach the heater harness [A] to the relay connector [B].

Tray Heaters



7. Install the harness of the heater and connect it to the PSU. (☐ p.2-61 "Installing the Harness of the Heater")

2.11.2 MAINFRAME LOWER TRAY HEATER (TWO-TRAY MODEL ONLY)


★ Important

- Unplug the machine power cord before starting the following procedure.

Component Check


Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	Heater	1
2	Screw	2
3	Bracket	1

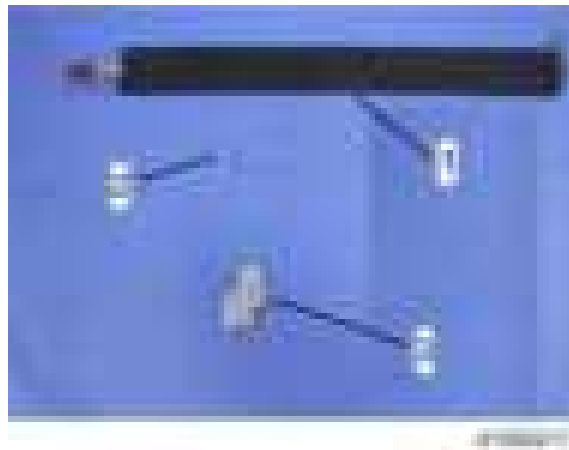


Installation Procedure


1. 2nd Tray Cassette [A] (☐ x 1)

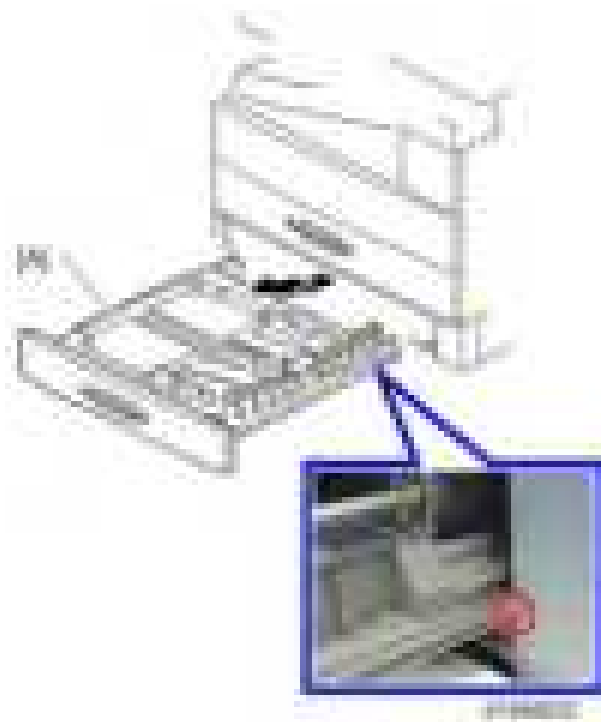

2. Rear Cover [A] (☐ x 9)

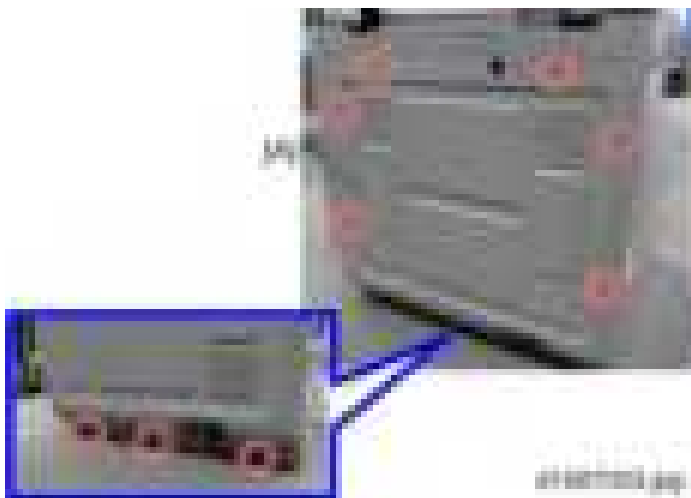

3. Install the bracket [A] (☐ x 1).

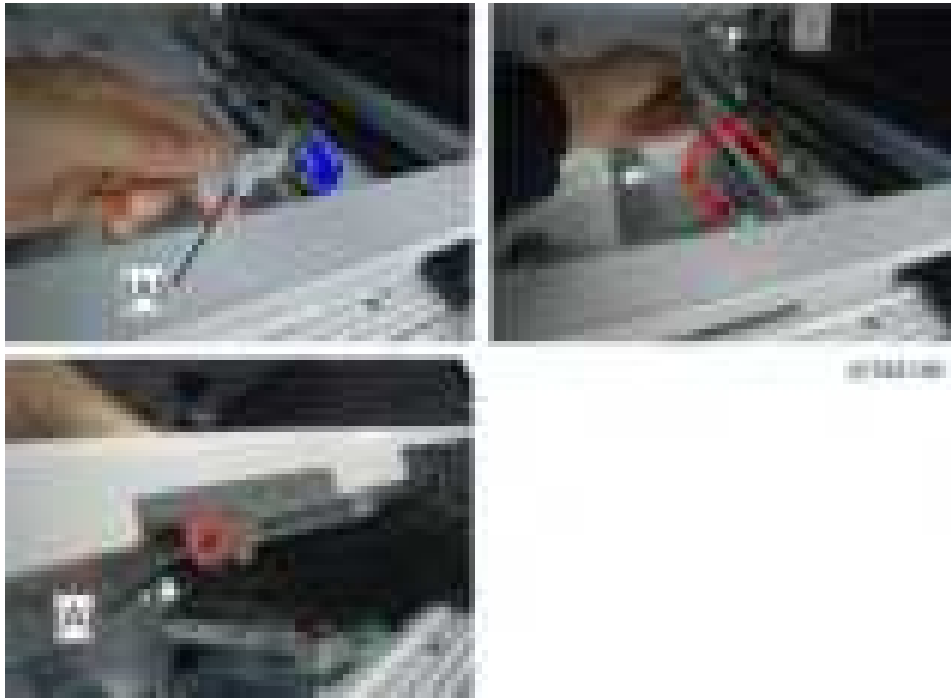

4. Pass the connector [A] through the opening [B] and install the tray heater [C] (x 1).



5. Join the connectors [A].



Tray Heaters

6. Install the harness of the heater and connect it to the PSU. (p.2-61 "Installing the Harness of the Heater")

2.11.3 HEATER FOR THE OPTIONAL ONE-TRAY PAPER FEED UNIT

★ Important

- Unplug the machine power cord before starting the following procedure.

Component Check

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	Heater	1
2	Relay Harness	1
3	Clamp	2
4	Hexagonal-Head Screw	4
5	Round-Head Screw	1
6	Lock Washer Screw	2




Installation Procedure

1. All of the trays in the paper feed unit.
2. Paper Feed Unit Rear cover [A] (4 x 4)



3. Install the clamps [A].

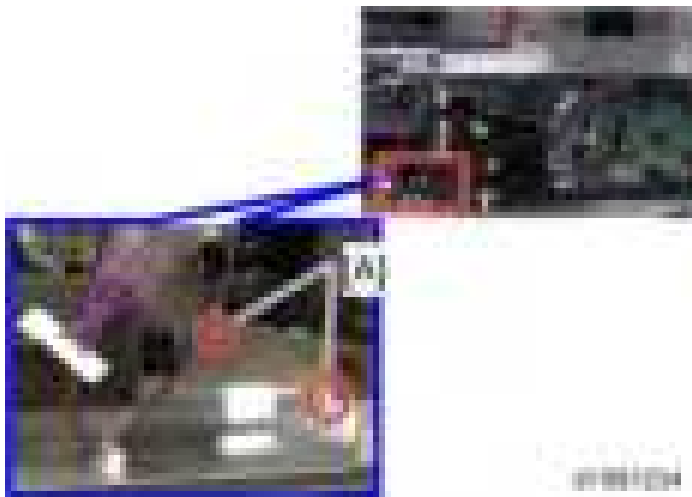


4. Pass the connector [A] through the opening [B].



Installation

Tray Heaters

5. Install the tray heater [A] ( x 5)



 **Note**

- Two types of accessory screws are used to install the heater. Use the round-head screw to fix the front part that is arrowed. Use the hexagonal-head screws to secure the other parts.
6. Lead the heater connector as shown, and fix it with the clamps [A].



7. Connect the end of the heater harness to the relay harness [A].



Note

- Be sure to join the connectors between the clamps (arrowed in the picture above).

8. Lead the heater connector and fix it with the clamps [A] as shown.



9. Connect the end of the relay harness to the main machine's harness.
10. Replace the screws [A] with screws that have a lock washer.



11. Install the harness of the heater and connect it to the PSU. (See p.2-61 "Installing the Harness of the Heater")

2.11.4 HEATER FOR THE OPTIONAL TWO-TRAY PAPER FEED UNIT

★ Important

- Unplug the machine power cord before starting the following procedure.

Component Check

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	Heater	1
2	Relay Harness	1
3	Hexagonal-Head Screw	4
4	Round-Head Screw	1
5	Lock Washer Screw	2



Installation Procedure

1. All of the trays in the paper feed unit.
2. Paper Feed Unit Rear Cover [A] (x 5)



3. Pass the connector [A] through the opening [B].



4. Install the tray heater [A] (5 x 5).



Note

- Two types of accessory screws are used to install the heater. Use the round-head screw to fix the front part that is arrowed. Use the hexagonal-head screws to secure the other parts.

5. Lead the heater harness and fix it with the clamps (circled) as shown.

Tray Heaters



6. Join the harness connector to the relay harness connector.



⬇ Note

- Be sure to join the connectors between the clamps as shown above.

7. Lead the heater harness and fix it with the clamps [A] as shown.



8. Connect the end of the relay harness to the main machine's harness.

9. Replace the screws [A] with screws that have a lock washer.




10. Install the harness of the heater and connect it to the PSU. (☞ p.2-61 "Installing the Harness of the Heater")

2.11.5 INSTALLING THE HARNESS OF THE HEATER

★ Important

- **Unplug the machine power cord before starting the following procedure.**

No.	Description	Q'ty
1	Harness for One-Tray Model	1
2	Relay Harness	1
3	Clamp	2
4	Harness for Two-Tray Model	1

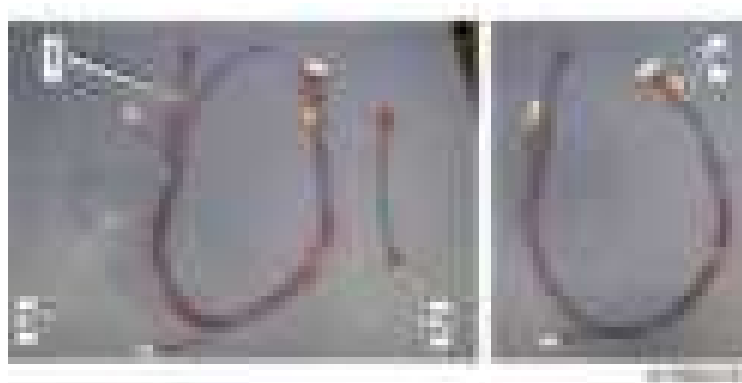

1. Connect the harness [A] to the PSU (☞ x 1, ☞ x 4).


Tray Heaters



2. Connect the connector [A] for the scanner.



3. Route the connectors [A] for the standard paper tray and the optional paper feed unit through cut out [B].

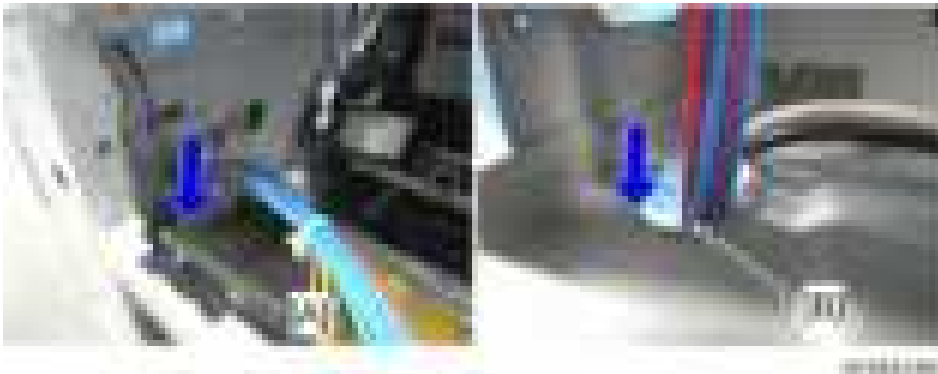

4. Connect the relay harness [D] to the connector [A] for the 1st tray cassette.

Note

- The connector [B] is for the 2nd tray cassette, the connector [C] is for the optional paper feed unit.



5. Clamp the harness [A] with the clamp.



6. Reinstall the removed parts.

2.12 COUNTER INTERFACE UNIT

2.12.1 COMPONENT CHECK



Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	Key Counter Interface Board	1
2	Stud Stay	4
3	Wire Harness (For parallel)	1
4	Wire Harness (For serial)	1

2.12.2 INSTALLATION PROCEDURE

⚠ CAUTION


- Unplug the machine power cord before starting the following procedure.
1. Rear cover (📄 p.4-4)
 2. Right rear cover (📄 p.4-13)
 3. Cut off the part [A] of the right rear cover for the device cable.

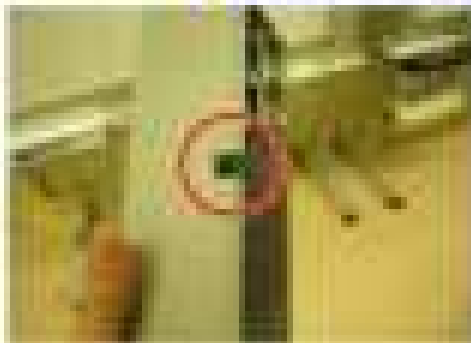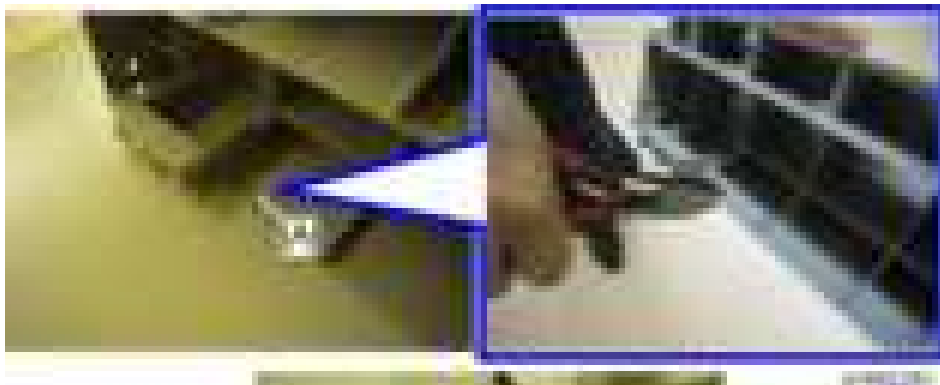

4. Connect the accessory harness to the counter interface board (📄 x 1).

Note

- The parallel harness and the serial harness are included in the component.
- If you use the parallel harness, connect the harness to connector [A] and the device side to [B].
- If you use the serial harness, connect the harness to connector [C] and the device side to [D].

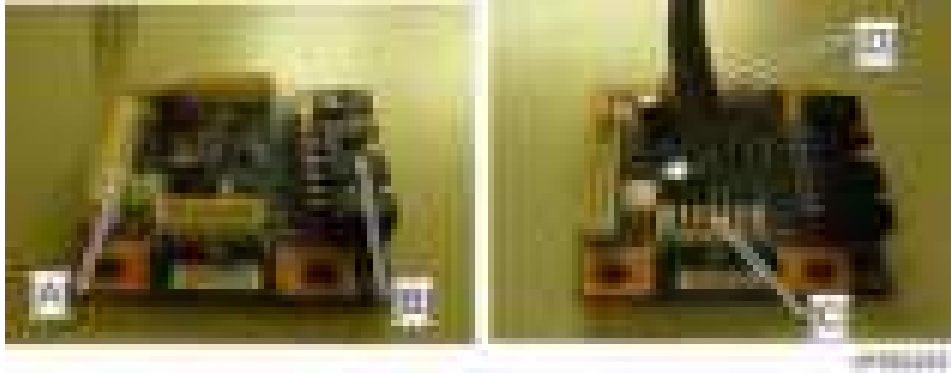

5. Attach the plastic holder [B] to the counter interface board [A].



6. Install the counter interface board [A] in the right rear cover.





7. Install the right rear cover [A] on the main machine. The counter interface board is located as shown below [B].



Counter Interface Unit




8. Route the harness above the fan and connect the harness to the CTL board.

- For the serial harness [A]: ( x2,  (CN206) x1)



- For the parallel harness [B]: ( x4,  x1)



9. Connect the device cable [A] ( (CN140) x 1). The picture below shows how to connect the device using the parallel harness.



10. Route the device cable through the cutout [A].



11. If there is a ground cable, secure it to the location [A] (1 x 1).



12. Reassemble the machine.

2.13 GDI EXPANSION (D160/D161 ONLY)

2.13.1 COMPONENT CHECK

No.	Description	Q'ty
1	GDI CTL with NIC	1
2	Installation Procedure (-27 only)	1
3	Decal: China RoHS: 10 Circle (-28 only)	1
4	Decal: China RoHS: Date (-28 only)	1

2.13.2 INSTALLING THE EXPANSION COMPONENT

CAUTION

- Unplug the machine power cord before starting the following procedure.

- Rear cover [A] ( x 9)



- Interface cover [A] ( x 1)



- Slide the BICU [A] (x 5)



- Install the GDI Expansion [A] (x 5).



Note

- Make sure that the GDI Expansion is connected securely. If not, SC672 occurs.

GDI Expansion (D160/D161 only)



5. Reinstall the BICU (x 5).
6. Reinstall the interface cover (x 1).
7. Reinstall the rear cover (x 9).

2.14 HARD DISK DRIVE OPTION (D158/D159 ONLY)

2.14.1 COMPONENT CHECK

No.	Description	Q'ty
1	HDD Unit	1
2	Connecting rubber	4
3	Tapping screw	4
4	Harness 1	1
5	Harness 2	1
-	EMC traceability sheet	1
-	D-BOX key Decal	1
-	RoHS Decal (China only)	1
-	RoHS Date Decal (China only)	1



2.14.2 INSTALLATION PROCEDURE


★ Important


- Unplug the machine power cord before starting the following procedure.

1. Rear cover [A] (📎 x 9)



2. Separate the BICU [A] from the CTL Board [B] (📎 x 5, 📎 x 2).

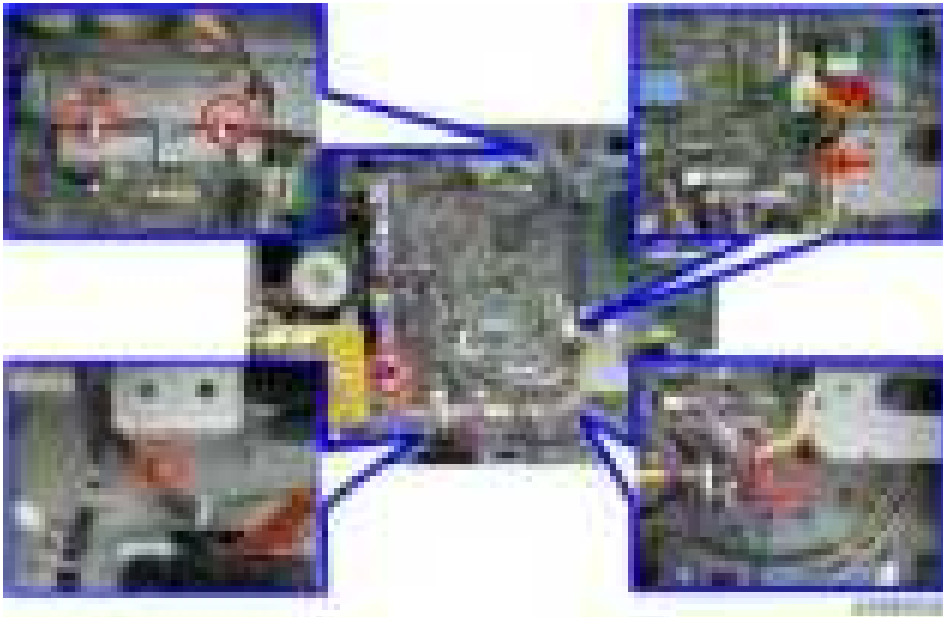


3. Nine screws ( x 9)




4. Slide the CTL board [A] to the left and pull down as shown below.



5. Install the connecting rubber [A] on the CTL board bracket.

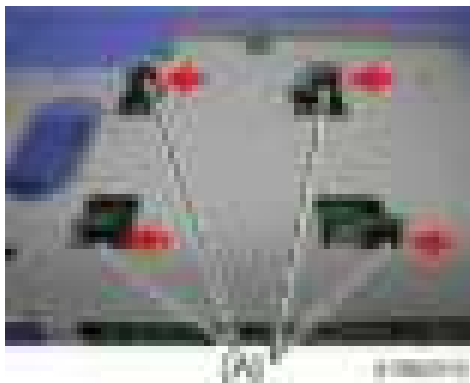

6. Install the HDD unit [A] ( x 4).

Hard Disk Drive Option (D158/D159 only)



7. Connect the two harnesses to the HDD unit (x 2).



8. Reinstall the CTL board unit in the machine.
9. When you turn the main power switch on after installing the hard disk, initialization of the disk starts automatically.
10. Once a completion message appears, turn the power off.

Note


- When installing the BICU, or CTL board, make the connection [A] securely. If not, an SC occurs.



2.14.3 DATA OVERWRITE SECURITY

Do the following procedure if a customer wants to use this function.

1. Do SP5-878-1 (Option Setup - Data Overwrite Security) and touch [EXECUTE].
2. Go out of the SP mode, turn off the operation switch, then turn off the main power switch.
3. Turn the machine power on.
4. Press [User Tools] and select System Setting > Administrator Tools > Auto Erase Memory Setting > On
5. Exit from User Tools mode.

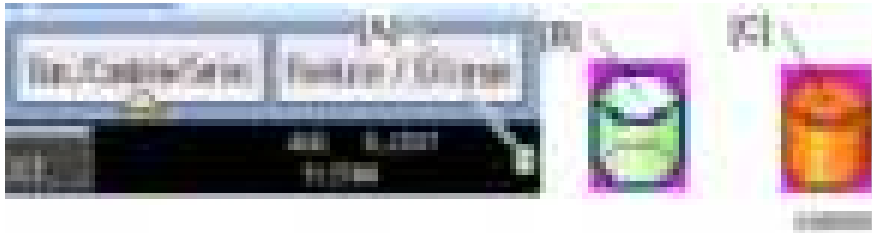


6. Check the display and make sure that the overwrite erase icon [A] is displayed.
7. Make a Sample Copy.
8. Check the overwrite erase icon.
 - The icon [B] changes to [C] when job data is stored in the hard disk.
 - The icon goes back to its usual shape [B] after this function has completed a data overwrite operation to the hard disk.
9. Do SP5990-005 (SP print mode - Diagnostic Report).
10. Look at the report:
 - Under "[ROM No./Firmware Version]" check the number and version number listed for "HDD Format Option".
 - Under "[Loading Program]" check the option number and version number listed for "GW_zoffy".
 - These two version numbers should be identical.
11. Exit SP mode.


2.14.4 HDD ENCRYPTION

Do the following procedure if a customer wants to use this function.

1. Do SP5-878-2 (Option Setup - Encryption Option) and touch [EXECUTE]
2. Go out of the SP mode, turn off the operation switch, then turn off the main power switch.
3. Turn the machine power on.
4. Push [User Tools] and select System Setting > Administrator Tools > Machine Data Encryption Setting.

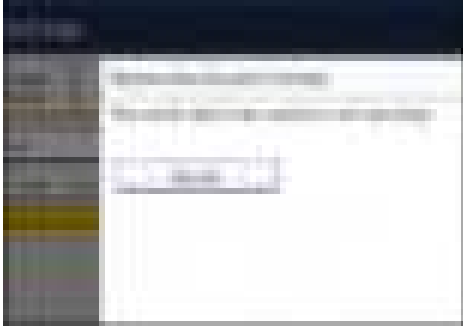

5. Press [Encrypt].

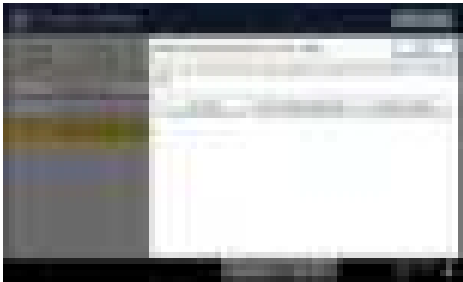

6. Select the data to be carried over to the hard disk and not to be reset
To carry all of the data over to the hard disk, select [All data]. To carry over only the machine setting data, select [File System Data Only]. To reset all of the data, select [Format All Data].



7. Press the [Start] Key.
The encryption key for backup data is printed.


2.15 CONTROLLER OPTIONS

2.15.1 OVERVIEW

★ Important

- Always touch a grounded surface to discharge static electricity from your hands before you handle SD cards, printed circuit boards, or memory boards.

This machine has I/F card slots for optional I/F connections and SD card slots applications. After you install an option, check that the machine can recognize it (see p.2-112 "Check All Connections").

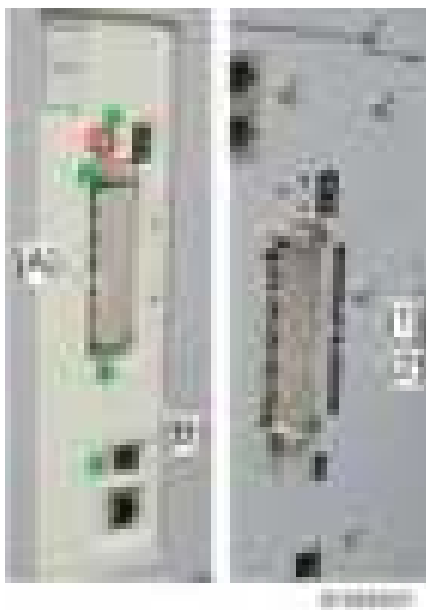

Remove the card slot cover [B] to use the SD card slots (see p.2-112 x 1).

I/F Card Slot

- Slot [A] is used for one of the optional I/F connections (only one can be installed): IEEE1284, or IEEE802.11a/b/g (Wireless LAN).

SD Card Slots

- Slot 1 (upper) [1] is used for optional applications (e.g.: Netware, Postscript3, Browser Unit, Fax Connection Unit, etc).
- Slot 2 (lower) [2] is used for installing applications, or for service only (for example, updating the firmware).

2.15.2 SD CARD APPLI MOVE

Overview

The service program "SD Card Appli Move" (SP5-873) lets you move application programs from one SD card to another SD card.

If more than one application is required, the applications must be moved to one SD card with SP5-873-001 (Security Application, PictBridge, etc.).

Be very careful when you do the SD Card Appli Move procedure:

- The data necessary for authentication is transferred with the application program from an SD card to another SD card. Authentication fails if you try to use the SD card after you move the application program from one card to another card.
- Do not use the SD card if it has been used before for other purposes. Normal operation is not guaranteed when such an SD card is used.
- Keep the SD card in the place after you copy the application program from one card to another card. This is done for the following reasons:
 - The SD card can be the only proof that the user is licensed to use the application program.
 - You may need to check the SD card and its data to solve a problem in the future.

Move Exec

The menu "Move Exec" (SP5-873-001) lets you move application programs from the original SD card to another SD card.

★ Important

- **Do not turn ON the write protect switch of the system SD card or application SD card on the machine. If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a firmware upgrade or application merge.**
1. Turn the main switch off.
 2. Make sure that a target SD card is in SD Card Slot 1 (upper). The application program is moved to this SD card.
 3. Insert the source SD card with the application program in SD Card Slot 2 (lower). The application program is copied from this source SD card.
 4. Turn the main switch on.
 5. Start the SP mode.
 6. Select SP5-873-001 "Move Exec".
 7. Follow the messages shown on the operation panel.
 8. Turn the main switch off.
 9. Remove the source SD card from SD Card Slot 2 (lower).
 10. Turn the main switch on.

11. Check that the application programs run normally.

Undo Exec

"Undo Exec" (SP5-873-002) lets you move back application programs from an SD card in SD Card Slot 1 (upper) to the original SD card in SD Card Slot 2 (lower). You can use this program when, for example, you have mistakenly copied some programs by using Move Exec (SP5-873-001).

★ Important


- Do not turn ON the write protect switch of the system SD card or application SD card on the machine. If the write protect switch is ON, a download error (e.g. Error Code 44) occurs during a firmware upgrade or application merge.
1. Turn the main switch off.
 2. Insert the original SD card in SD Card Slot 2 (lower). The application program is copied back into this card.
 3. Insert the SD card with the application program in SD Card Slot 1 (upper). The application program is copied back from this SD card.
 4. Turn the main switch on.
 5. Start the SP mode.
 6. Select SP5-873-002 "Undo Exec."
 7. Follow the messages shown on the operation panel.
 8. Turn the main switch off.
 9. Remove the SD card from SD Card Slot 2 (lower).
 10. Turn the main switch on.
 11. Check that the application programs run normally.
 12. Make sure that the machine can recognize the option (■ p.2-112 "Check All Connections").

2.15.3 VM CARD (D158/D159)

Installation Procedure

⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.
1. Remove the card slot cover [A] (x 1).
 2. Insert the SD card into slot 2 [B].

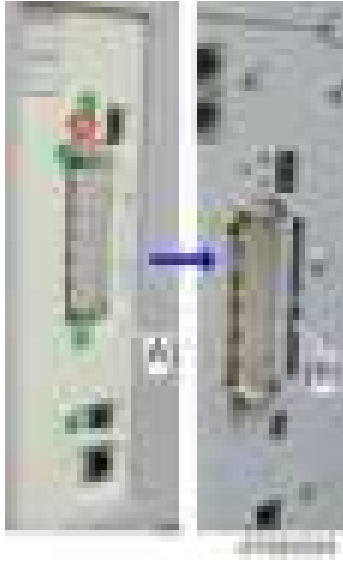

3. Reattach the card slot cover.
4. Turn the main switch on.
5. On the operation panel, remove the bottom blank keytop and replace it with the keytop provided.
6. Attach the decal to the machine.

Firmware Update Procedure

Application halt

1. Press the “User Tools/Counter” key, then touch “Extended Feature Settings” twice on the LCD. If required, log in as a machine administrator.
2. Press “Administrator Tools”, then press “Heap/Stack Size Settings”. Take note of the heap size and stack size. (After updating, the heap and stack size settings are cleared.)

3. Press “Startup”, then stop all applications.

★ Important

- The following problems can occur if the VM firmware is updated without the application halt.
The VM firmware update fails.
- All settings for the application are cleared.

4. Turn the main switch off, then remove the card slot cover.
5. Remove the VM SD card from the SD card slot.

Updating the VM SD card

1. Insert the SD card into the SD card writer that is connected to a PC.
2. Make sure which drive is assigned for the SD card.
3. Decompress the downloaded update file, then there are two files (one file has an “.exe” file extension and the other has a “.bat” file extension).
4. Double click the “.bat” file, then the command prompt screen appears.
5. The first command line is shown as
“Please input drive letter of SD card [a – x]:”
Then enter the SD card drive name, and press the “Enter” key.
6. “Press any key to continue...” appears, then press the “Enter” key again. The update to the SD card starts.
7. “Press any key to continue...” appears again, then press “Enter” key. The command prompt screen disappears automatically if the update is successful.
8. Remove the SD card from the SD card writer after the access lamp going off on the SD card writer.
9. Insert the SD card in the SD card slot 2 of the machine and turn the main switch on.

Starting the application

1. Press the “User Tools/Counter” key, then touch “Extended Feature Settings” twice on the LCD.
If required, log in as a machine administrator.
2. Press “Startup Setting”, then change the status to “Starting up” for each application.
3. Press “Exit”.
4. Press “Administrator Tools”, then press “Heap/Stack Size Settings”. Program the heap size and stack size as the settings as before.
5. Turn the main switch off and on.
6. Enter the “Extended Feature Settings” menu again, and check the version of the VM card firmware on the “Extended Feature Info” screen.

↓ Note

- The version of the VM card firmware is also shown on the Self Diagnostic Report (a part of the SMC report). But the version on the Self Diagnostic Report is not changed after updating.

2.15.4 COPY DATA SECURITY UNIT (D158/D159)

Component Check


No.	Description	Q'ty	For this model
1	Bracket 1	1	Yes
2	Screws: M3 x 4	2	Yes
3	Screws: M3 x 6	4	Yes
4	ICIB-3	1	Yes



Installation Procedure

⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.
1. Rear cover (📄 p.4-4)
 2. Attach bracket [A] to the ICIB-3 [B] (📄 x 2).

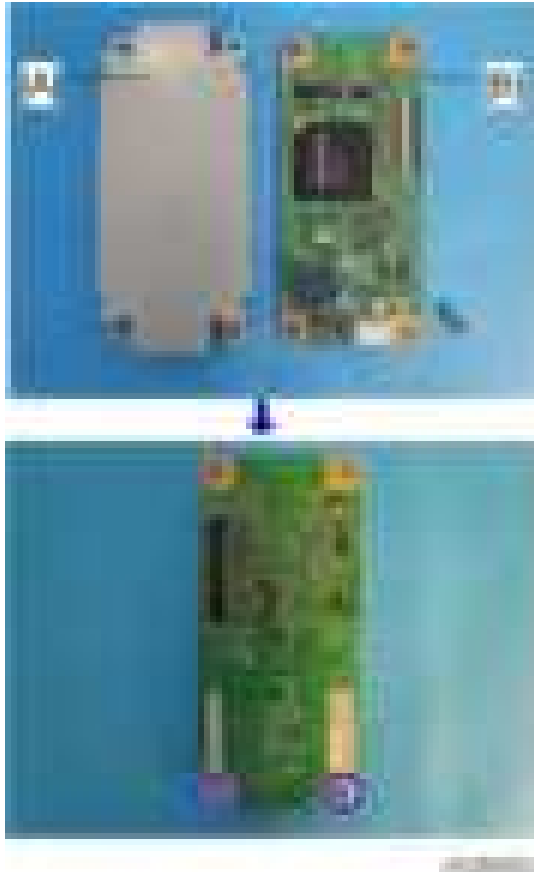

3. Align the dent [B] with the connector [C] and connect the ICIB-3 with bracket 1 [A] on the BICU (📄 x 2).

Controller Options



4. Plug in, and turn the main switch on. The LED as shown below is blinking when the copy data security unit is correctly installed.



5. Reassemble the machine.

User Tool Setting

1. Plug in, and turn the main switch on.
2. Go into the User Tools mode, and select System Settings > Administrator Tools > Detect Data Security for Copying > "On".
3. Exit the User Tools.
4. Check the operation.

Note

- The machine will issue an SC165 error if the machine is powered on with the ICIB-1 removed and the "Detect Data Security for Copying" feature is set to "ON".
- When you remove this option from the machine, first set the setting to "OFF" with the user tool before removing this board. If you forget to do this, "Detect Data Security for Copying" feature cannot appear in the user tool settings. And then SC165 will appear every time the machine is switched on, and the machine cannot be used.

2.15.5 FILE FORMAT CONVERTER (D158/D159)

Installation Procedure

⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.
1. Remove the card slot cover [A] (x 1).
 2. Install the file format converter [B] into the board slot and then fasten it with screws.



3. Plug in, and turn the main switch on.
4. Check or set the following SP codes with the values shown below.

SP No.	Title	Setting
SP5-836-001	Capture Function (0:Off 1:On)	"1"
SP5-836-002	Panel Setting	"0"

5. Check the operation.
6. Make sure that the machine can recognize the option (☐ p.2-112 "Check All Connections").

2.15.6 BROWSER UNIT (D158/D159)

Installation Procedure

This option requires a HDD unit.


1. Turn the main switch ON.
2. Push the [User Tools/Counter] key.
3. On the touch panel, press "System Settings".
4. Make sure that the "Increase Scanner Memory by Disabling Browser" setting in the General Features tab is OFF.
5. Turn the main switch OFF.
6. Remove the card slot cover [A] for SD cards (☐ x 1).
7. Insert the Browser Option SD card in SD slot 2 [B].



8. Turn the main switch on.
9. Push the [User Tools/Counter] key.
10. Touch "Extended Feature Settings" twice on the LCD.



11. Make sure that "Extended JS" application was automatically installed in the Startup Settings tab.
12. Turn the main switch OFF/ON.
13. Push the [User Tools/Counter] key.
14. Touch "Edit Home".

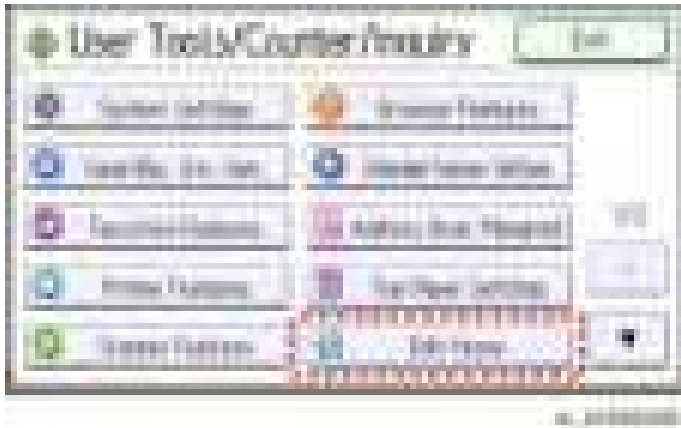


15. Touch "Add Icon".




16. Touch "Select Icon to Add".

Controller Options

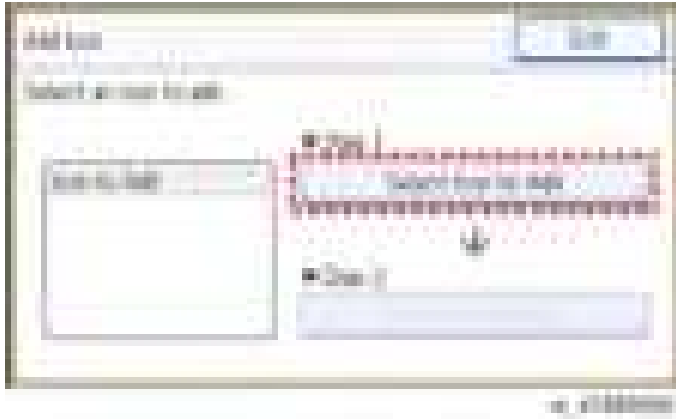


17. Touch "Application".

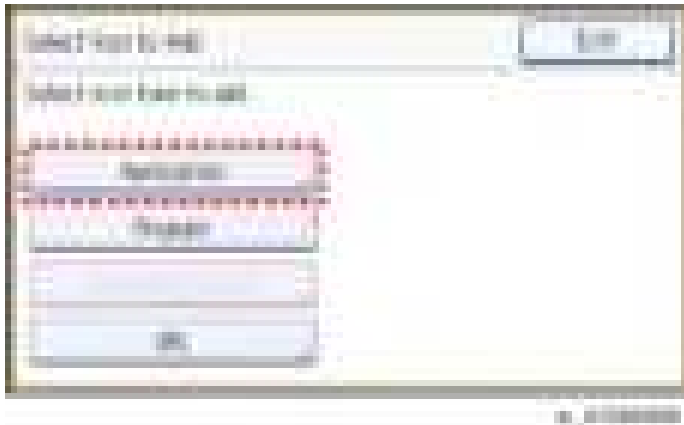


18. Touch "Browser"



19. Touch "Select Destination".

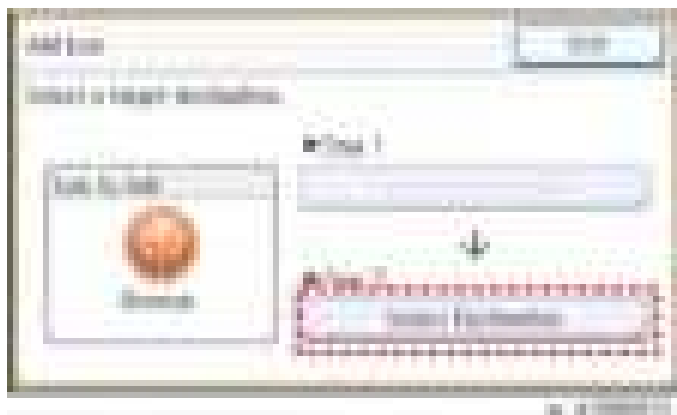


20. Touch a "Blank" to set a location for the browser icon.
21. Touch "Exit" to end the fax browser icon addition.

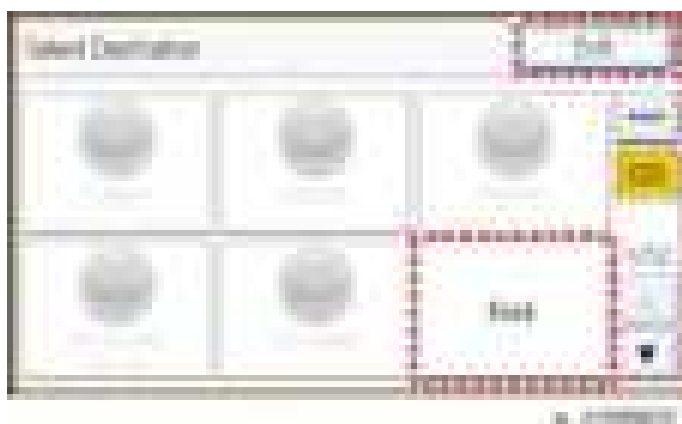

Ricoh JavaScript

Do the following steps if the customer is using the Ricoh JavaScript connected to a Web application developed by Operius/RiDP.

1. Turn the main switch ON.
2. Push the [User Tools/Counter] key.
3. Touch "Browser Features".

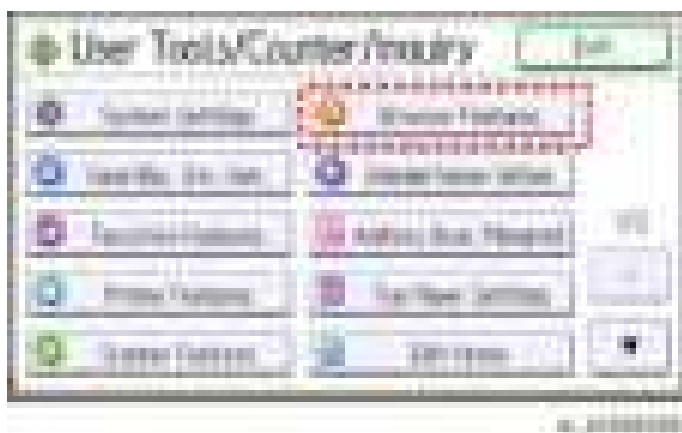

4. Touch "Java Script".
5. Change the Extended JavaScript setting to "Activate".

EXJS Firmware Update

↓ Note

- The Browser Unit consists of the Browser firmware and EXJS firmware. The EXJS firmware is equivalent to the existing browser firmware. Therefore, it is possible to update the EXJS firmware using the same procedure as that of SDK application firmware.

-Preparation-

1. Extract the exe file (XXXX. exe), after which the following two files are generated:
XXXX_machine.exe/ XXXX_stock.exe.

↓ Note

- Note: The file (XXXX_machine) is for updating the EXJS firmware in the field.
2. Extract the file (XXXX_machine), after which the “SDK” folder is created.

↓ Note

- Note: XXXX = part number.
3. Copy the “SDK” folder to an SD card.

-Main procedure-

1. Remove the card slot cover [A] for SD cards (x 1).
2. Insert the SD card included for firmware update into SD slot 2 [B].




3. Turn the main switch on.
4. After the Update screen is displayed, select the “Browser”.
5. Touch "Update (#)".
6. After the "Update Done" message appears on the screen, turn the main power switch OFF.
7. Remove the SD card from the lower slot.

Updating the Extended JavaScript

Do the following steps if you are updating the Extended JavaScript.

1. Turn the main switch on.
2. Push the [User Tools/Counter] key.
3. Touch "Extended Feature Settings" twice on the LCD.

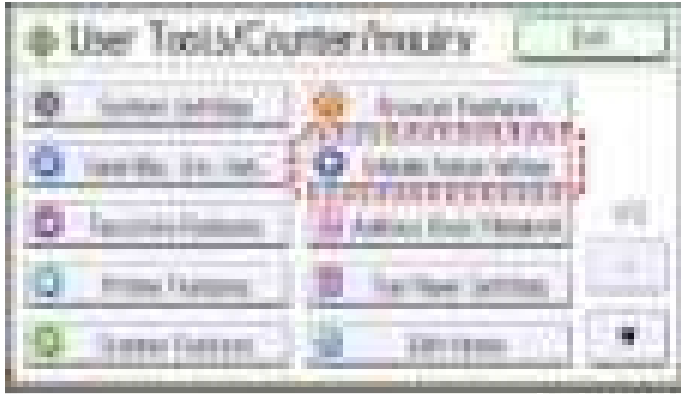

4. Change the status of "Extended JS" to "Ending" in the Startup Settings tab.
5. Turn the main switch OFF.
6. Insert the SD card containing the Extended JS firmware into SD slot 2 (lower).
7. Turn the main switch on.
8. Push the [User Tools/Counter] key.
9. Touch "Extended Feature Settings" twice on the LCD.
10. Touch the "Install" tab.
11. Touch "SD card", then select "Extended JS" from the list of Extended Features.
12. Select "Machine HDD" as the "Install to" destination, then touch "Next".
13. Check the Extended Features information on the "Ready to Install" screen, then press "OK".
14. After "The following extended feature has already been installed. Are you sure you want to overwrite it?" is displayed, press "Yes".
15. Change the status of Extended JS to "waiting" in the Startup Settings tab.
16. Turn the main switch OFF.
17. Remove the SD card from slot 2 (lower slot).
18. Turn the main switch ON.
19. Press the "User Tools/Counter" key.
20. On the touch panel, touch "Extended Feature settings".
21. Touch "Extended Feature settings" in the Extended Feature settings Menu.
22. Make sure that the "Extended JS" has been updated to the latest version in the Startup Settings tab.

Un-installing EXJS Firmware

1. Turn the main switch ON.
2. Push the [User Tools/Counter] key.
3. Login with an administrator user name and password.
4. Touch "Extended Feature Settings" twice on the LCD.
5. Touch "Uninstall".
6. Touch "Browser", and then touch "Yes" after "Are you sure you want to uninstall the following extended feature?" is displayed.

Note

- "Uninstalling the extended feature... Please wait" is then displayed on the touch screen.

7. After "Completed" is displayed, turn the main power switch OFF

Note

- The Browser firmware is un-installed from the machine when the Browser SD card is removed.

2.15.7 FAX CONNECTION UNIT (D158/D159)

Installation Procedure

⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.
1. Remove the card slot cover [A] (x 1).
 2. Insert the SD card into slot 1 [B].

Note

- If slot 1 [B] is in use, move the application program to another SD card with SP5-873-001.



3. Plug in and turn on the main power switch.
4. Turn the main switch off.
5. Attach the card slot cover, and then turn on the machine (☞ x 1).
6. Make sure that the machine can recognize the option (☞ p.2-112 "Check All Connections").

2.15.8 SD CARD FOR NETWARE PRINTING (D158/D159)


Installation Procedure

⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.
1. Remove the card slot cover [A] (☞ x 1).
 2. Insert the SD card (Netware Printing) in SD slot 1 [B].

↓ Note

- If slot 1 [B] is in use, move the application program to another SD card with SP5-873-001.

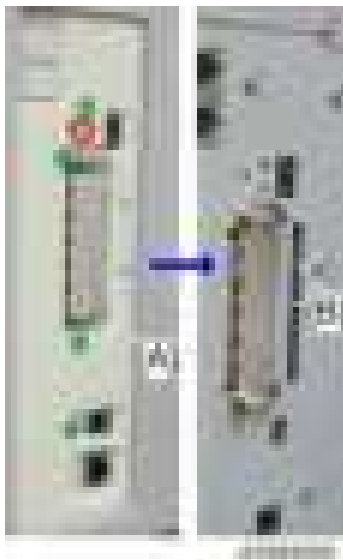

3. Plug in, and turn the main switch on.
4. Turn the main switch off.
5. Attach the card slot cover, and then turn the main switch on (☞ x 1).
6. Make sure that the machine can recognize the option (☞ p.2-112 "Check All Connections").

2.15.9 BLUETOOTH INTERFACE UNIT (D158/D159)


Installation Procedure

⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.
- Do not remove the Bluetooth unit while the power of the machine is on.

You can only install one of the following network interfaces at a time: (IEEE a/b/g (Wireless LAN), Bluetooth).

1. Insert the Bluetooth Interface adapter into the USB connector [A].

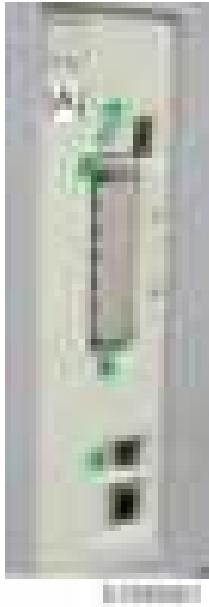

2. Plug in, and turn the main switch on.
3. Make sure that the machine can recognize the option (☐ p.2-112 "Check All Connections").

↓ Note


- The Bluetooth interface unit and the IC card can not be used simultaneously.

2.15.10 WIRELESS LAN INTERFACE UNIT (D158/D159)

Component Check

No.	Description	Q'ty	For this model
1	Wireless LAN Board	1	Yes
2	Velcro fasteners	2	Yes
3	Clamp	8	Yes

Installation

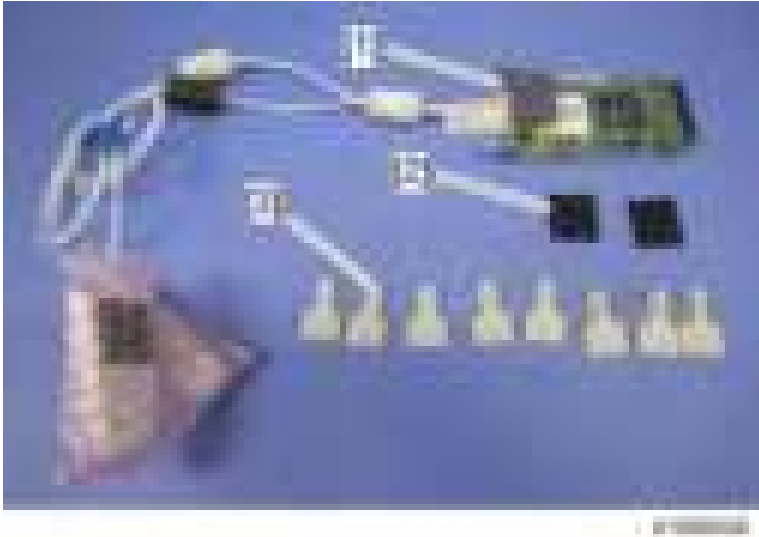

Installation Procedure

⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.
1. Remove the slot cover [A] (2 x 2).
 2. Install the Wireless LAN board [B] (2 knob screws).

Controller Options



3. Make sure that the machine can recognize the option (see p.2-112 "Check All Connections").
4. Peel off the double-sided tapes on the Velcro fasteners [A], and then attach "ANT1" (having a black ferrite core) [B] to the front left of the machine.




5. Peel off the double-sided tapes on the Velcro fasteners [A], and then attach "ANT2" (having a white ferrite core) [B] to the rear right of the machine.



↓ Note

- "ANT1" is a transmission/reception antenna and "ANT2" is a reception antenna. Do not attach them at the wrong places.
6. Attach the clamps as shown above and then wire the cables and clamp them (see image x 6).

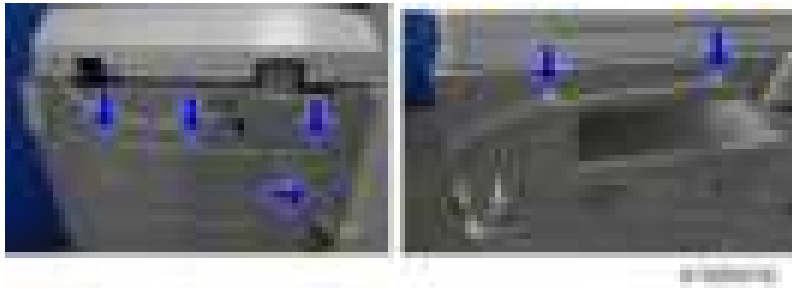

↓ **Note**

- Make sure that the cables are not loose. Keep them wired tightly along the covers.
- You may have to move the machine if the reception is not clear.
- Make sure that the machine is not located near an appliance or any type of equipment that generates strong magnetic fields.
- Install the machine as close as possible to the access point.

UP Mode Settings for Wireless LAN

Enter the UP mode. Then do the procedure below to perform the initial interface settings for IEEE 802.11 a/b/g. These settings take effect every time the machine is powered on.

↓ **Note**

- You cannot use the wireless LAN if you use Ethernet.
1. Press the [User Tools/Counter] key.
 2. On the touch panel, press [System Settings].

↓ **Note**

- The Network I/F (default: Ethernet) must be set for either Ethernet or wireless LAN.
3. Select [Interface Settings].
 4. Press "Wireless LAN". Only the wireless LAN options show.
 5. Press "Communication Mode". Select either "802.11 Ad-Hoc Mode", or "Infrastructure Mode".
 6. Press "SSID Setting". Enter the SSID setting. (The setting is case sensitive.)
 7. Press "Ad-HocChannel". You need this setting when Ad Hoc Mode is selected.

Region A (mainly Europe and Asia)

Range: 1-13, 36, 40, 44 and 48 channels (default: 11)

In some countries, only the following channels are available:

Range: 1-11 channels (default: 11)

Region B (mainly North America)

Range: 1-11, 36, 40, 44 and 48 channels (default: 11)

8. Press "Security Method".
9. Enter the "WEP (Encryption) Key".
10. Press "Ethernet Speed." Press the Next button to show more settings. Then select the transmission speed.
11. Press "Return to Default" to initialize the wireless LAN settings.

12. Press "Yes" to initialize the following settings:

- Transmission mode
- Channel
- Transmission Speed
- WEP
- SSID
- WEP Key

SP Mode and UP Mode Settings for IEEE 802.11 a/b/g, Wireless LAN

The following SP commands and UP modes can be set for IEEE 802.11 a/b/g.

SP No.	Name	Function
5840-006	Channel MAX	Sets the maximum range of the channel settings for the country.
5840-007	Channel MIN	Sets the minimum range of the channels settings allowed for your country.
5840-011	WEP Key Select	Used to select the WEP key (Default: 00).
UP mode	Name	Function
	SSID	Used to confirm the current SSID setting.
	WEP Key	Used to confirm the current WEP key setting.
	WEP Mode	Used to show the maximum length of the string that can be used for the WEP Key entry.

2.15.11 IEEE 1284 INTERFACE BOARD (D158/D159)

Installation Procedure

⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.

You can only install one of the following network interfaces at a time: (IEEE 802.11 a/b/g (Wireless LAN), IEEE1284)

1. Remove the slot cover [A] (📎 x 2).
2. Install the IEEE 1284 I/F board [B] into the board slot and then fasten it with screws.



3. Make sure that the machine can recognize the option (📄 p.2-112 "Check All Connections").

2.15.12 FAX UNIT (D158/D159)

Component Check

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	FCU	1
2	Telephone Cable (NA only)	1
3	Screw	6
4	Fax Decal for Operation Panel	1
5	Board Cover	1
6	Grounding Plate (2-tip)	1
7	Grounding Plate (3-tip)	1
8	EMC Address (EU only)	1
9	Serial Number Decal	1
10	FCC Decal (NA only)	1
-	Installation Procedure (NA only)	1
-	RoHS Decal (China only)	1
-	RoHS Date Decal (China only)	1




Installation Procedure

⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.

1. Rear cover [A] (Ⓜ x 9)

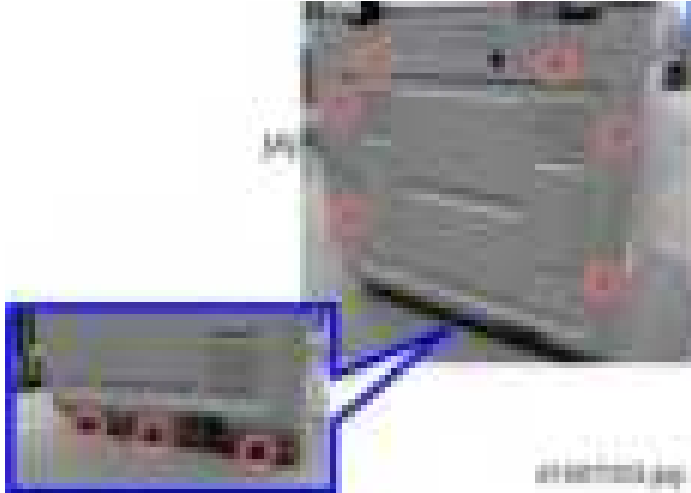

2. Five screws




3. Slide the engine board [A] to the left as shown, to detach it from the controller board [B].



Controller Options

4. Controller slot cover [A] (🔩 x1)
5. Four screws [B]

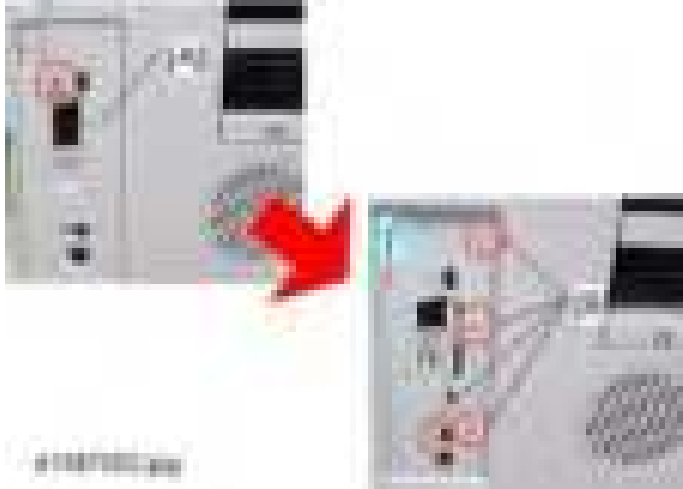

6. Three screws



7. Slide the controller board [A] to the left and pull as shown.



8. Detach the FCU from the speaker bracket (🔩 x 3)

9. Insert the grounding plate (3-tip) [A] between the bracket and the FCU.
10. Reattach the FCU.



11. Attach the grounding plate (2-tip) [A] on the back of the FCU (1 x1).



12. Attach the FCU to the controller board as shown.




Controller Options

↓ Note

- Make sure that the **FCU** is seated correctly. If not, SC672 occurs.


13. Remove the jumper [A] (set to OFF) and set it to ON.

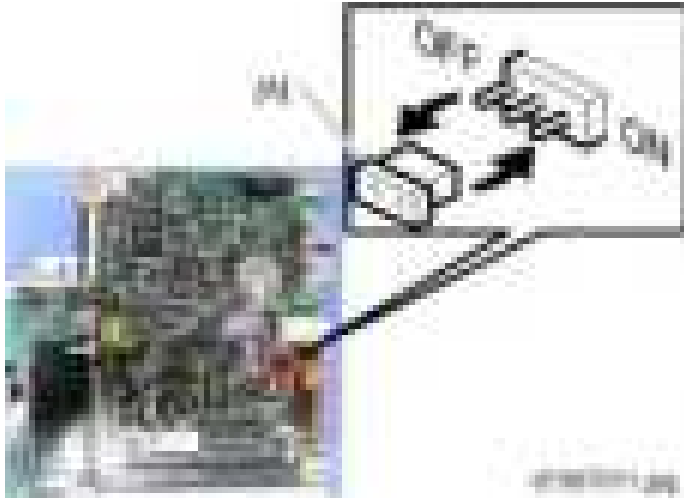

↓ Note

- The machine may issue SC819 or SC820 if the jumper is not set to "ON" correctly.
- For installation in Brazil, move the jumper switch (CN613) from "3" to "1"

14. Cut the knockouts for LINE and TEL from the controller slot cover.

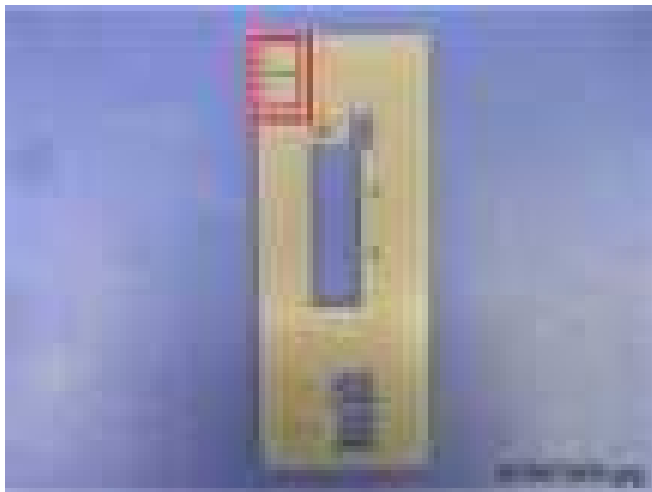

15. Install the controller board in the machine

16. Fasten the five circled screws.

**Note**

- The arrow in the picture above indicates the screw to fasten the FCU.

17. Attach the board cover [A] as shown below. (A x 4)



18. Connect the telephone cord to the LINE jack.

19. Attach the Fax decal on the operation panel.

Fax Settings

Initializing the Fax unit

When you press the Fax key for the first time after installation, the error "SRAM problem occurred / SRAM was formatted" will show on the LCD for initializing the program of the fax unit. Turn the main power switch off/on to clear the error display.

Note


- If another error occurs after initialization, this can be a functional problem.
1. Select fax SP1-101-016 and specify the country code.
 2. Select fax SP3-101-001 and specify the service station if necessary.

2.15.13 MEMORY UNIT (D158/D159)

Installation Procedure

⚠ CAUTION

- Unplug the main machine power cord before you do the following procedure.
1. Rear cover (☐ p.4-4)
 2. Replace the 1 GB memory unit in the slot [A] on the controller board with the optional 1.5 GB memory unit.

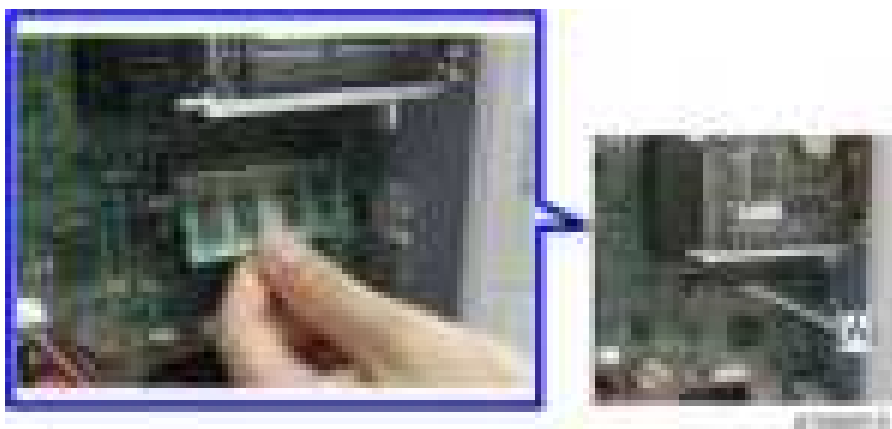

3. Reassemble the machine.


2.15.14 HANDSET (D158/D159)

Component Check

Check the quantity and condition of the components against the following list.


No.	Description	Q'ty
1	Bracket	1
2	Cradle	1
3	Handset	1
4	Round Screw (for cradle)	2
5	Tapping Screw (for upper left cover)	2

Installation

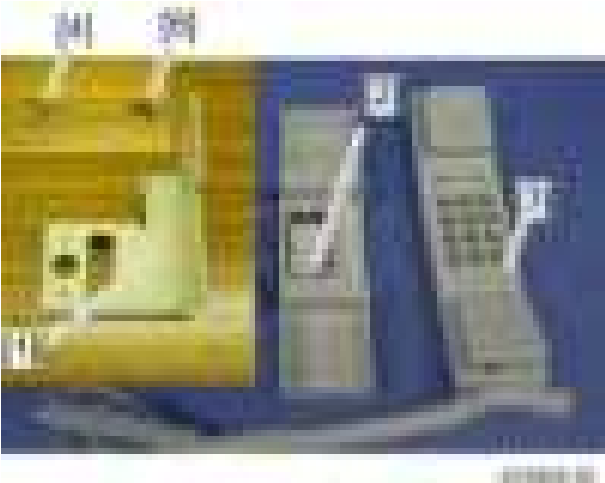


Installation Procedure

1. Make two screw holes in the upper left cover.

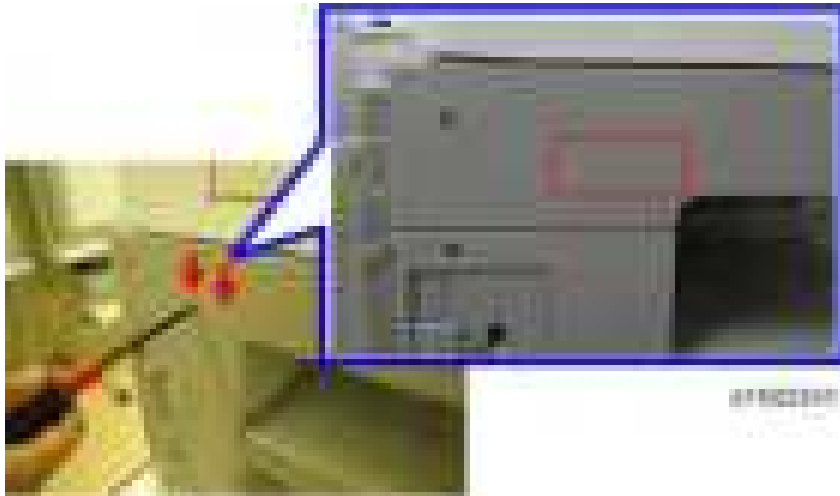


2. Attach the cradle [A] to the bracket [B] (Round screw x 2).

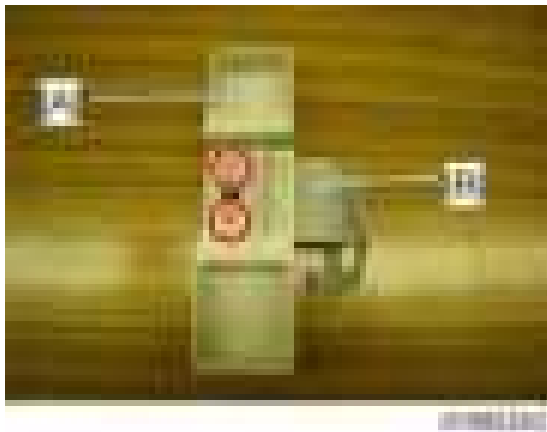


3. Attach the cradle to the upper left cover (Tapping screw x 2).



4. Cut the knockouts for TEL and LINE.

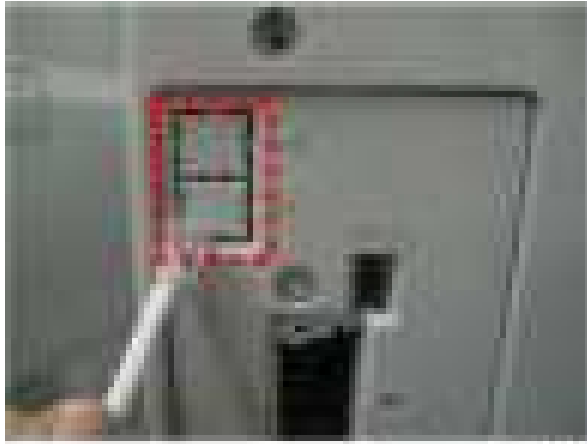


- 5. Install the hand set [A] and TEL cable.

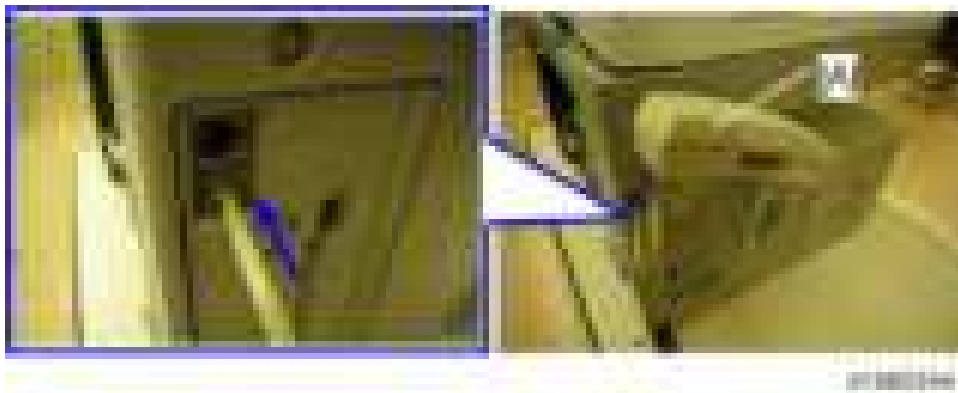


2.15.15 IC CARD (D158/D159)

Installation Procedure


1. Exit rear cover, Output tray (■ p.4-4)
2. Front cover (■ p.4-11)
3. Remove the card slot cover [A] (■ x 1).

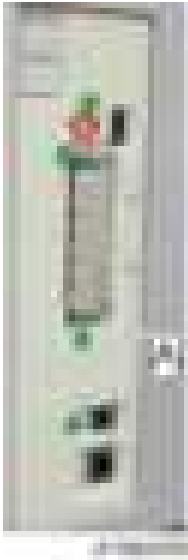


4. Cut the knockout [A] from the card slot cover for USB cable.

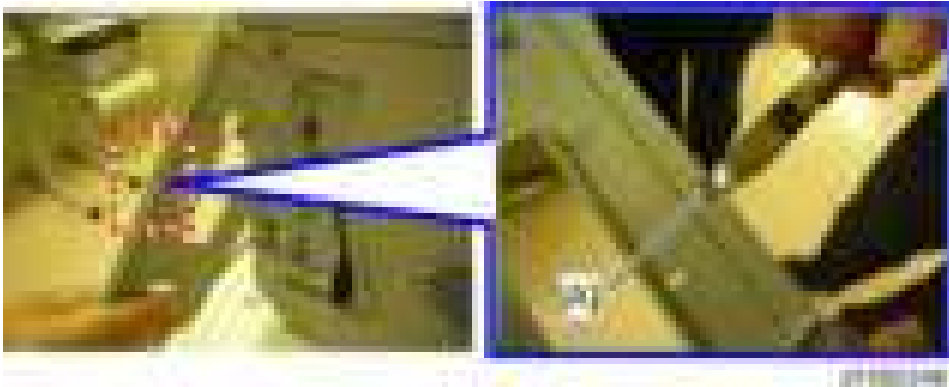


5. Attach the IC card [A] to the IC card holder with the bracket [C] at the rear side of the output tray (■ x 1).

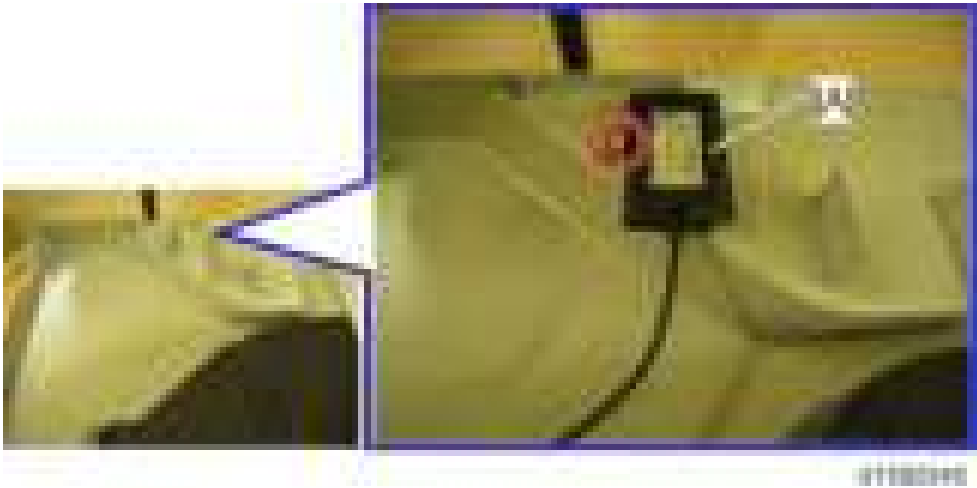

6. Route the USB cable [A] through the cutout [B] on the interface frame from as shown below.

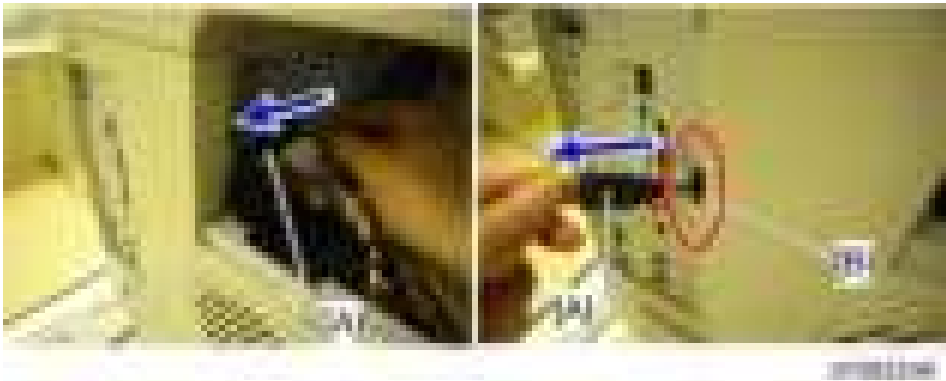


7. Attach the card slot cover and connect the USB cable.

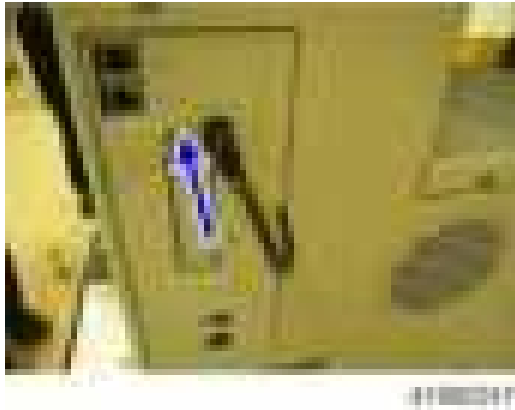




8. Adjust and store the USB cable at the left side of the laser unit.

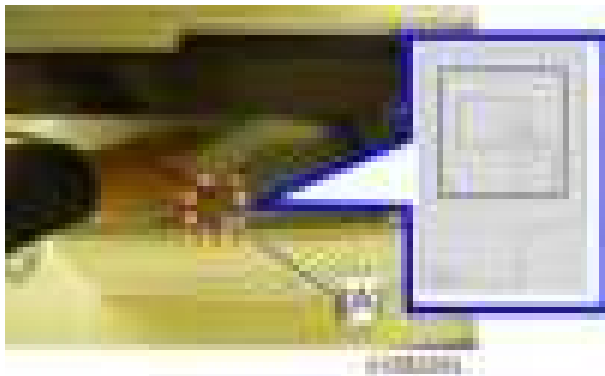

9. Reassemble the machine.
10. Attach the IC card decal to the position [A] on the output tray.



2.15.16 CHECK ALL CONNECTIONS

1. Plug in, and turn the main switch on.
 2. Enter the printer user mode. Then print the configuration page.
User Tools  Printer Features  List Test Print  Configuration Page
- All installed options are shown in the "System Reference" column.

PREVENTIVE MAINTENANCE

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

3. PREVENTIVE MAINTENANCE

3.1 PM TABLES

See "Appendices" for the following information:

- Appendix: PM Tables

3.2 HOW TO RESET THE PM COUNTER

After preventive maintenance work, reset the PM counter (SP7-804) as follows.

3.2.1 D160/D161/D170 MODELS

1. Activate the SP mode (■ p.6-1 "Service Program Mode").
2. Select SP7-804 (PM Counter Reset).
3. Select SP7-804-002 (60k) or SP7-804-003 (120k).
4. Press the OK key. The message "Execute" shows.
5. Press the button below the message "Execute."
6. The messages "Execute?" followed by "Cancel" and "Execute" show.
7. To reset the PM counter, press the button below the message "Execute."
8. Wait until the message "Completed" shows.
9. Quit the SP mode.

3.2.2 D158/D159 MODELS

1. Activate the SP mode (■ p.6-1 "Service Program Mode").
2. Select SP7-804 (PM Counter Reset).
3. Select SP7-804-002 (60k) or SP7-804-003 (120k).
4. Press the "Execute" button.
5. Wait until the message "Completed" shows.
6. Quit the SP mode.

REPLACEMENT AND ADJUSTMENT

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

4. REPLACEMENT AND ADJUSTMENT

4.1 GENERAL CAUTIONS

Do not turn off the main switch while any of the electrical components are active. Doing so may result in damage to units (such as the PCU) as they are pulled out or replaced.

4.1.1 MAIN POWER SWITCH (PUSH SW)

If the AC power cord is connected, power is supplied to the controller, control panel, and the circuit that detects the main power switch status even if the main power is turned off.

Therefore, even if the machine has shut down, the power is still supplied to the interior components. If you attempt to replace the controller or control panel in such a state, the related components may become damaged.

Be sure to pull off the AC power cord before replacing components (such as a circuit board).

4.1.2 PCU (PHOTOCONDUCTOR UNIT)

The PCU consists of the OPC drum, charge roller, development unit, and cleaning components.

Observe the following precautions when handling the PCU.

1. Never touch the drum surface with bare hands. If the drum surface is dirty or if you have accidentally touched it, wipe it with a dry cloth, or clean it with wet cotton and then wipe it dry with a cloth.
2. Never use alcohol to clean the drum. Alcohol will dissolve the drum surface.
3. Store the PCU in a cool dry place.
4. Do not expose the drum to corrosive gases (ammonia, etc.).
5. Do not shake a used PCU, as this may cause toner and developer to spill out.
6. Dispose of used PCU components in accordance with local regulations.

4.1.3 TRANSFER ROLLER

1. Never touch the surface of the transfer roller with bare hands.
2. Be careful not to scratch the transfer roller, as the surface is easily damaged.

4.1.4 SCANNER UNIT

1. Use alcohol or glass cleaner to clean the exposure and scanning glass. This will reduce the static charge on the glass.
2. Use a blower brush or a water-moistened cotton pad to clean the mirrors and lenses.
3. Make sure to not bend or crease the exposure lamp's ribbon cable.
4. Do not disassemble the lens unit. This will cause the lens and copy image to get out of focus.
5. Do not turn any of the CCD positioning screws. This will put the CCD out of position.

4.1.5 LASER UNIT

1. Do not loosen or adjust the screws securing the LD drive board on the LD unit. This will put the LD unit out of adjustment.
2. The polygonal mirror and F-theta lens are very sensitive to dust.
3. Do not touch the toner shield glass or the surface of the polygonal mirror with bare hands.

4.1.6 FUSING UNIT

1. After installing the fusing thermistor, make sure that it is in contact with the hot roller and that the roller can rotate freely.
2. Be careful to avoid damage to the hot roller stripper pawls and their tension springs.
3. Do not touch the fusing lamp and rollers with bare hands.
4. Make sure that the fusing lamp is positioned correctly and that it does not touch the inner surface of the hot roller.

4.1.7 PAPER FEED

1. Do not touch the surface of the paper feed rollers.
2. To avoid misfeeds, the side and end fences in each paper tray must be positioned correctly so as to align with the actual paper size.

Important

- You must run SP2-801-001(Developer Initialization) to initialize the TD sensor after you install a new PCU. After starting initialization, be sure to wait for it to reach completion (wait for the motor to stop) before you re-open the front cover or turn off the main switch.
- If the optional tray heater or optics anti-condensation heater is installed, keep the machine's power cord plugged in even while the main switch is off, to keep the heater(s) energized.

4.2 SPECIAL TOOLS AND LUBRICANTS

Item	Part Number	Description	Q'ty	Unique or Common
1	B6455010	SD Card	1	C (General)
2	52039502	Silicone Grease G-501	1	C (General)
3	B6795100	Plug - IEEE1284 Type C	1	C (General)
4	A2929500	Test Chart-S5S (10pc./set)	1	C (General)
5	A0069104	Scanner Positioning Pin (4pc./set)	1	C (General)
6	G0219350	Loop-back Connector – Parallel ^{*1}	1	C (General)

*1 : Loop-back Connector – Parallel (item 6) requires Plug - IEEE1284 Type C (item 3).

4.3 EXTERIOR COVERS & OPERATION PANEL

★ Important

- Unplug the machine power cord before starting the following procedures.

4.3.1 REAR COVER

1. Rear cover [A] (☐ x 9)



4.3.2 OUTPUT TRAY, EXIT COVER, EXIT REAR COVER

1. Front right cover (☐ p.4-12)
2. Exit rear cover [A] (☐ x 2)



3. Output tray [A] (☐ x 2)



4. Exit cover [A] (x 1)




Replacement
and
Adjustment

4.3.3 UPPER COVERS (D158/D159)

1. Platen cover, or ARDF (if installed)
2. Rear cover (■ p.4-4)
3. Left upper cover [A] (■ x 2)



4. Right upper cover [A] (■ x 2)

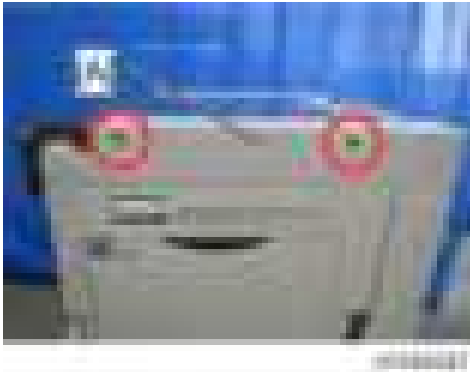

5. Front top cover [A] (■ x 2)






6. Top rear cover [A] (■ x 2)




Replacement
and
Adjustment




4.3.4 OPERATION PANEL (D158/D159)

1. Rear cover ( p.4-4)
2. Front right cover ( p.4-12)
3. Front top cover, right upper cover ( p.4-6 "Upper Covers (D158/D159)")
4. Operation panel upper cover [A]



5. Operation panel lower cover [A] ( x 1)






6. Operation panel [A] ( x 5,  x 1, USB x 1,  x all)



4.3.5 UPPER COVERS (D160/D161/D170)

1. Platen cover, or ARDF (if installed)
2. Inverter tray [A]



3. Right upper cover [A] ( x 2)
4. Left upper cover [B] ( x 2)
5. Top rear cover [C] ( x 2)



6. Front top cover [A] (Hook x1)

Replacement
and
Adjustment



4.3.6 OPERATION PANEL (D160/D161/D170)

1. Platen cover, or ARDF (if installed)
2. Rear cover (p.4-4)
3. Right upper cover (p.4-9 "Upper Covers (D160/D161/D170)")
4. Left upper cover (p.4-9 "Upper Covers (D160/D161/D170)")
5. Front top cover (p.4-9 "Upper Covers (D160/D161/D170)")
6. Operation panel [A] (x 2, x 1)




7. OPU board (x 10, FFC x2, Hook x 2)




4.3.7 LEFT COVER

1. Front right cover (■ p.4-12)
2. Output tray (■ p.4-4)
3. Left cover [A] (■ x 5)

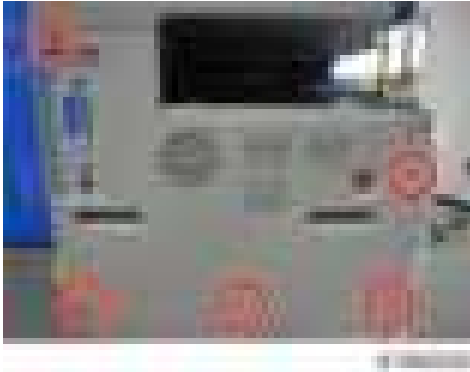


4.3.8 FRONT COVER

1. Front door [A] (Hook x 2)

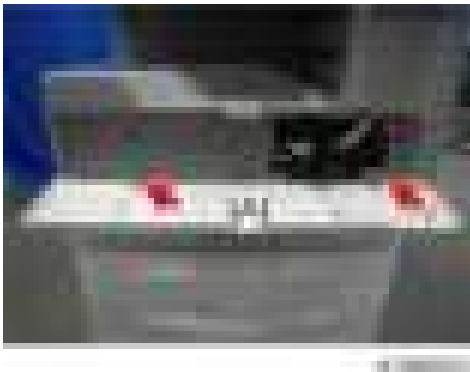

2. Open the duplex unit and tray 1.
3. Front cover [A] (■ x 3)

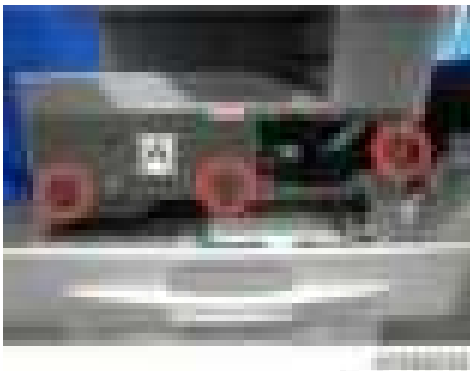

Replacement
and
Adjustment

4.3.9 FRONT COVER SWITCH (INTERLOCK SWITCH)

1. Front door, front cover (p.4-11)
2. Metal plate [A] (x 1)
3. Front cover switch [B] (x 2)



4.3.10 FRONT RIGHT COVER

1. Open the front door and duplex unit.
2. Front right cover [A] (x 1)






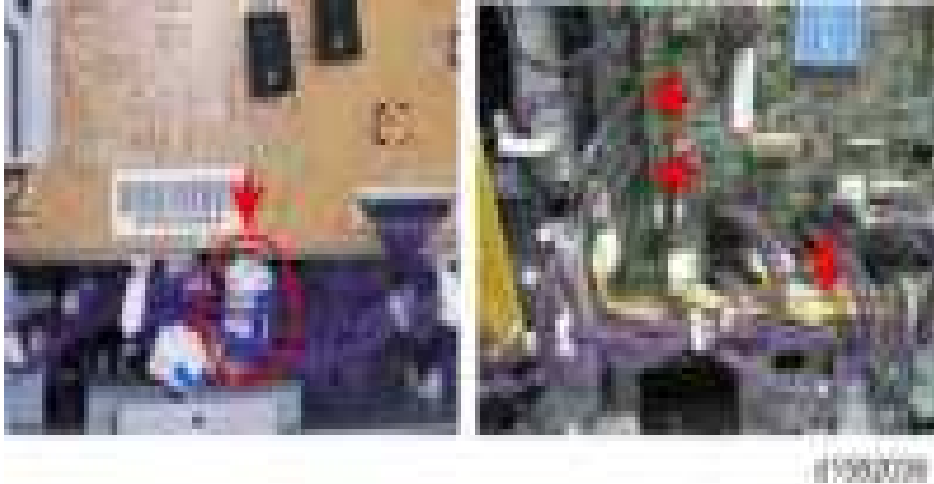
4.3.11 RIGHT REAR COVER

1. Open the duplex unit.
2. Right Rear Cover [A] (Ⓜ x 2) If you have difficulty to remove the lower screw, close the duplex unit and remove the cover [B] to unscrew.



4.3.12 DUPLEX UNIT (D158/D159/D160/D161) / RIGHT DOOR (D170)

1. Rear cover ( p.4-4)
2. Right rear cover ( p.4-13)
3. Open the duplex unit.
4. Four connectors ( x 4)



5. Five clamps ( x 5)



6. One clip ring ( x 1)





7. Duplex unit [A]




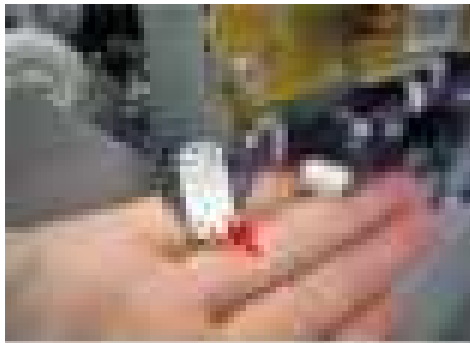
Replacement
and
Adjustment

4.3.13 BY-PASS TRAY


1. Right rear cover ( p.4-13)
2. Open the duplex unit.
3. Two clip rings ( x 2)



4. One connector ( x 1)




5. Push the lock [A] and release the shaft to remove the by-pass tray [B].

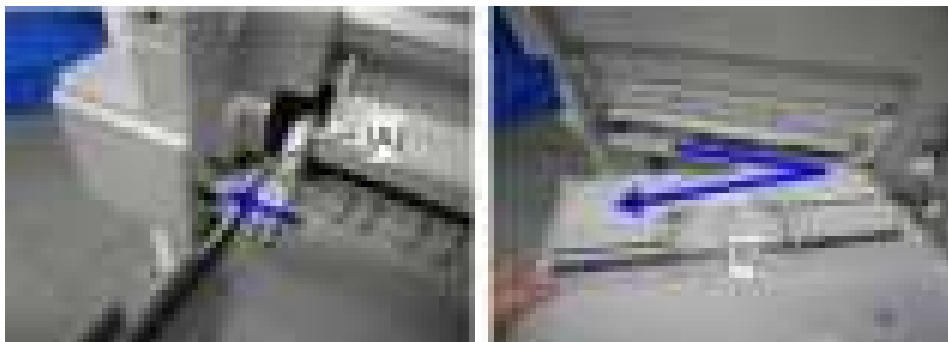


4.3.14 RIGHT LOWER COVER (TWO-TRAY MODELS ONLY)

1. Right lower cover [A] with inner cover [C] (Ⓞ[B] x 1).

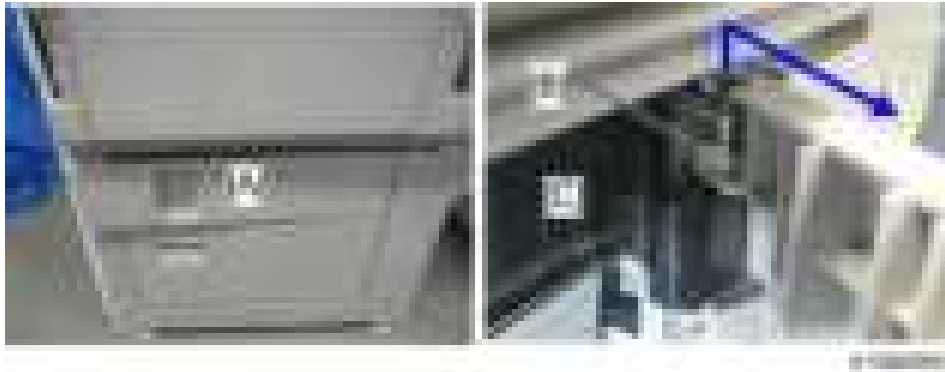

4.3.15 RIGHT LOWER COVER SWITCH (TWO-TRAY MODELS ONLY)

1. Remove the paper tray 1, and 2.
2. Open the right lower cover [A].
3. Right door switch [B] (Hook x 2)

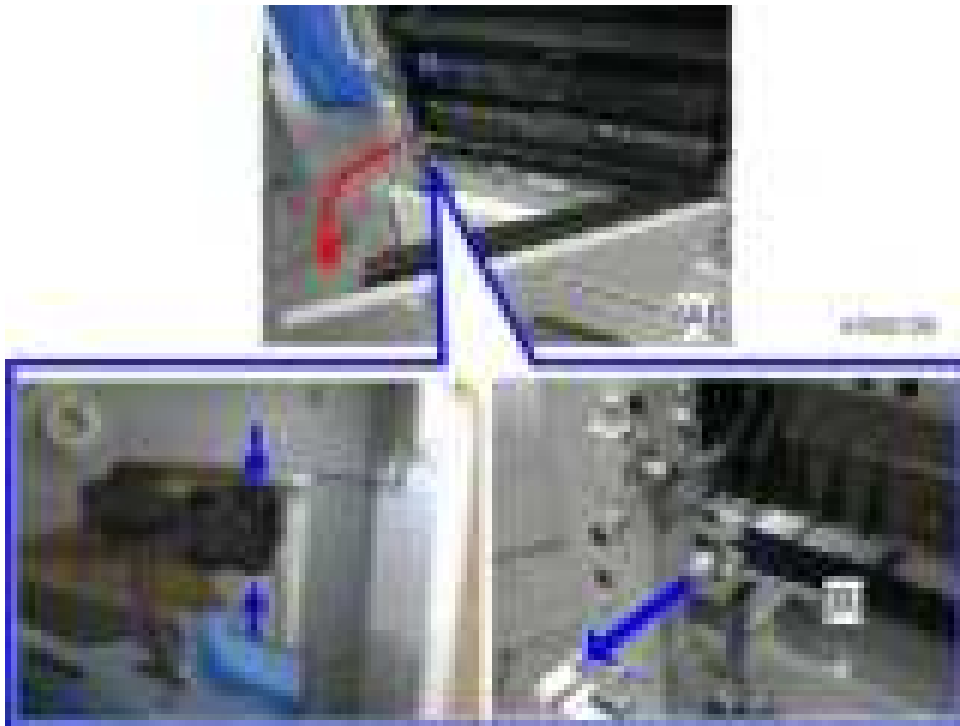


Replacement
and
Adjustment

4.3.16 PLATEN COVER SENSOR

1. Platen cover, or ARDF (if installed)
2. Top rear cover [A] (📄 x 2)



3. Platen cover sensor [A] (📄 x 1, 📷 x 1)

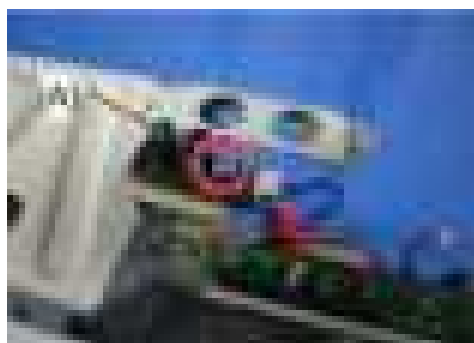

4.4 SCANNER UNIT (D158/D159)

★ Important

- Unplug the machine power cord before starting the following procedures.




↓ Note

- CCD Scanner - D158/D159
- CIS Scanner - D160/D161/D170

When reassembling

- Adjust the following SP modes after you replace the scanner unit or each part of the scanner unit:
- SP4-008-001 (Sub Scan Magnification Adj): (p.4-105 "Copy Adjustments Printing/Scanning")
- SP4-010-001 (Sub Scan Registration Adj): (p.4-105 "Copy Adjustments Printing/Scanning")
- SP4-011-001 (Main Scan Reg): (p.4-105 "Copy Adjustments Printing/Scanning")
- SP4-688-001 (DF: Density Adjustment): Use this to adjust the density level if the image density of outputs made in the DF and Platen mode is different.

4.4.1 EXPOSURE GLASS/DF EXPOSURE GLASS (CCD)

1. Front top cover, Right upper cover ( p.4-6 "Upper Covers (D158/D159)")
2. Rear scale [A] ( x 3)
3. DF exposure glass guide [B] ( x 3)



4. DF exposure glass [A]




5. Exposure glass [A]





Note

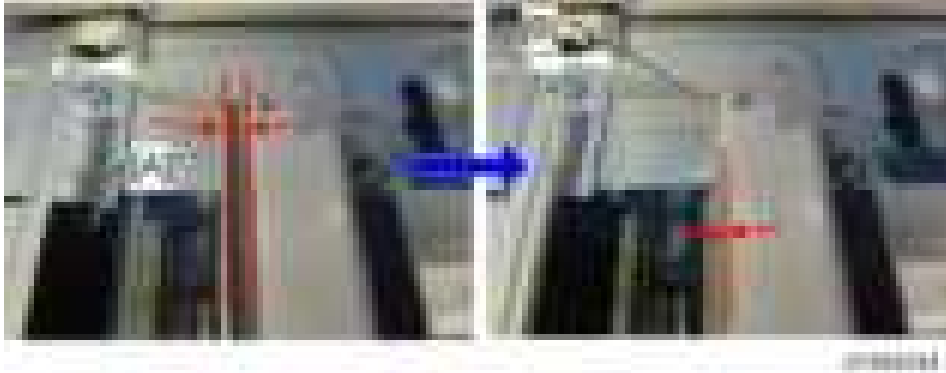- **When reassembling**
- The D158/D159 models with ARDF (D684) use a non-contact method to read originals from the ARDF. To avoid direct contact between originals and the DF exposure glass, the mylar [A] is attached to the DF exposure glass.
- Position the marking [B] as shown below when you install the DF exposure glass.



4.4.2 LENS BLOCK

⚠ CAUTION

- Do not touch the paint-locked screws on the lens block. The position of the lens assembly (black part) is adjusted before shipment.
 - Do not grasp the PCB or the lens assembly when you handle the lens block. The lens assembly may slide out of position.
1. Exposure glass ( p.4-20 "Exposure Glass/DF Exposure Glass (CCD)")
 2. Lens cover [A] ( x 2)



3. Lens block [A] ( x 4,  x 2)



ⓘ Note

- Do not remove the other screws on the lens block unit.


4.4.3 SIO BOARD

1. Rear cover (p.4-4)
2. SIO board with bracket [A] (x 1, x 6)



4.4.4 EXPOSURE LAMP

1. Exposure glass (p.4-20 "Exposure Glass/DF Exposure Glass (CCD)")
2. Move the exposure lamp [A] to the point shown below.

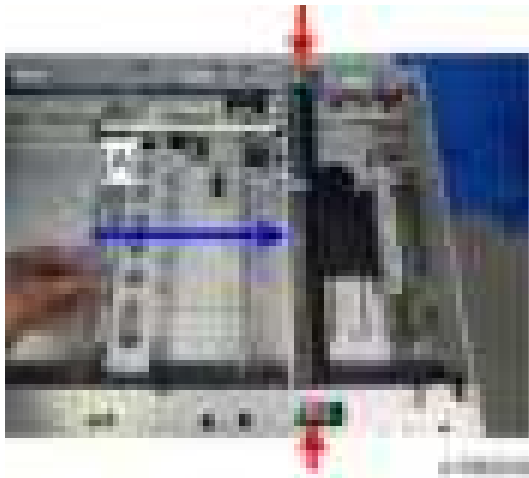

3. Exposure lamp [A] (x 2, FFC x 1)









4.4.5 APS SENSOR (LENGTH)

1. Exposure glass (☐ p.4-20 "Exposure Glass/DF Exposure Glass (CCD)")
2. APS Sensor (length) [A] (☐ x 1, Hook x 2)



4.4.6 SCANNER MOTOR

1. Rear cover ( p.4-4)
2. DF exposure glass ( p.4-20 "Exposure Glass/DF Exposure Glass (CCD)")
3. Top covers ( p.4-6 "Upper Covers (D158/D159)")
4. SIO board (with bracket [A]), and scanner motor harness [B] ( x 1,  x 1) ( p.4-23).



5. Rear bracket [A] ( x 5)




6. Motor bracket [A] ( x 2,  x 1, Spring x 1)

 **Note**

- When you reassemble, install the belt [B] first, and then set the spring. Fasten screw [C], then fasten screw [D].







7. Scanner motor [A] ( x 2, Belt x 1)



 **Note**

- Adjust the image quality after you install the motor.


4.4.7 SCANNER HOME POSITION SENSOR

1. DF exposure glass ( p.4-20 "Exposure Glass/DF Exposure Glass (CCD)")
2. Top rear cover ( p.4-6 "Upper Covers (D158/D159)")
3. DF exposure glass guide ( p.4-20)
4. Sensor tape [A].
5. Scanner home position sensor [B] ( x 1, Hook x 3).



4.4.8 FRONT SCANNER WIRE


1. Exposure glass/DF exposure glass (p.4-20 "Exposure Glass/DF Exposure Glass (CCD)")
2. Scanner left stay [A] (x 12)

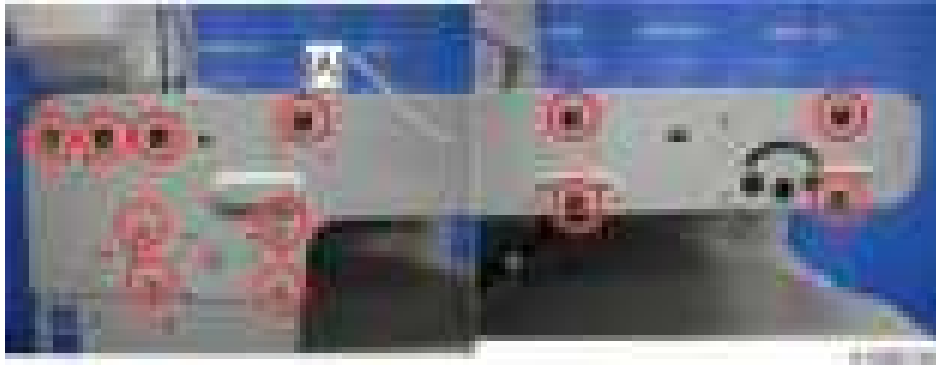

3. Scanner left rail frame [A] (x 3)



4. Scanner front stay [A] (x 5)

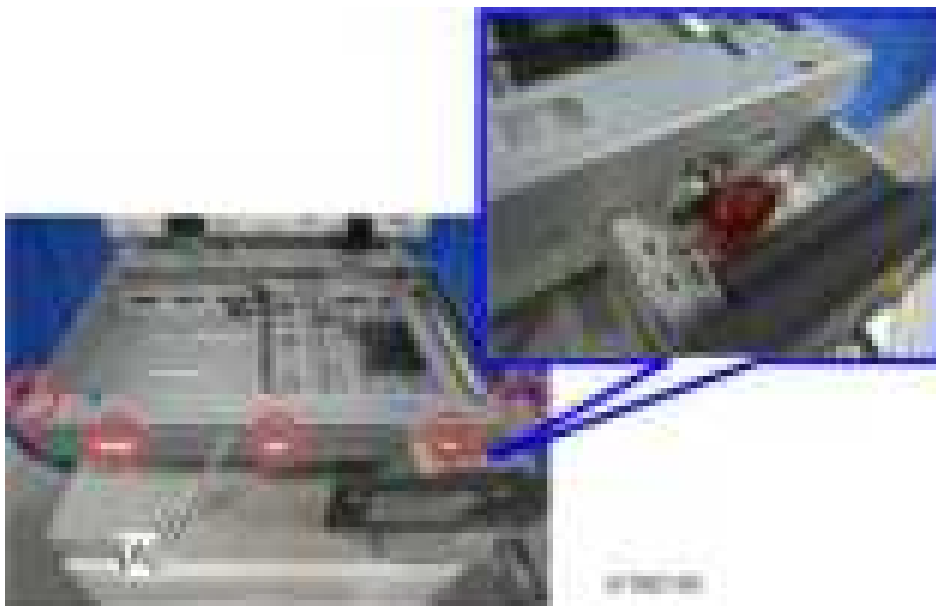

Replacement
and
Adjustment


Scanner Unit (D158/D159)

↓ Note

- If you have difficulty to remove the scanner front stay, remove the operation panel using a short 'stubby' screwdriver.
5. To make reassembly easy, slide the 1st scanner carriage to the right.
 6. Front scanner wire brackets [A] , [B] (x 2)



7. Front scanner wire and scanner drive pulley [A] (x 2, Scanner Clamp x1)

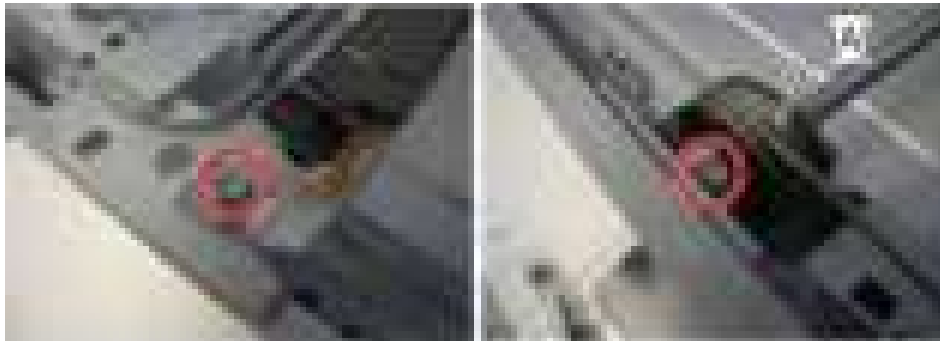

Reassembling the Front Scanner Wire

1. Pass the wire with a ball [A] through the scanner drive pulley as shown below.




2. Position the center ball [A] in the middle of the forked holder.



3. Wind the right end counterclockwise (shown from the machine's front) five times. Wind the left end clockwise twice.

Note


- The two blue marks [A] come together when you have done this. Stick the wire to the pulley with tape. This lets you easily handle the assembly at the time of installation.

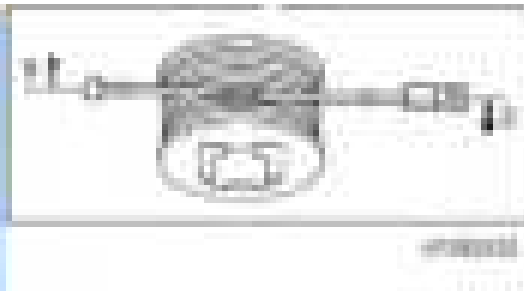


4. Stick the wire to the pulley with tape, so you can easily handle the pulley and wire during installation.
5. Attach the scanner drive pulley [A] to the shaft and hook the wire onto the left pulley.

Note

- Do not attach the pulley to the shaft with the screw at this time.

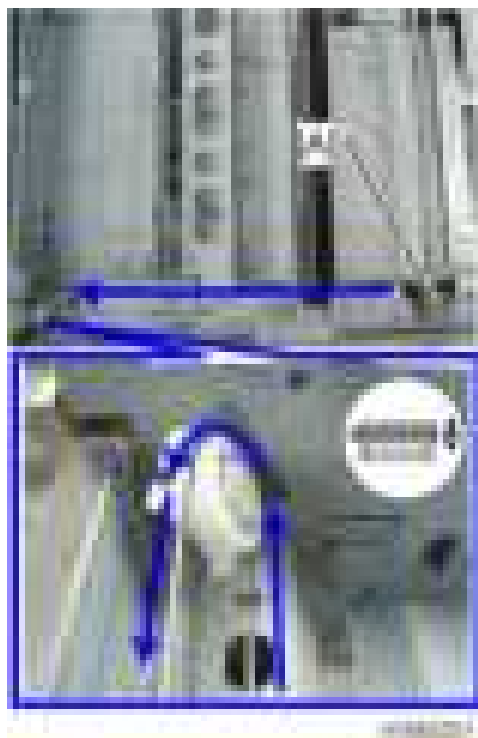


6. Hook the wire [A] onto the 2nd scanner unit as shown below.

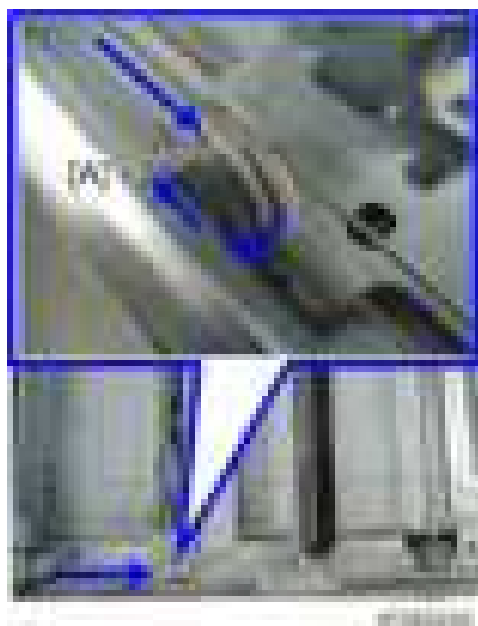


7. Insert the left end [A] into the slit.



- 8. Hook the wire onto the right pulley [A].

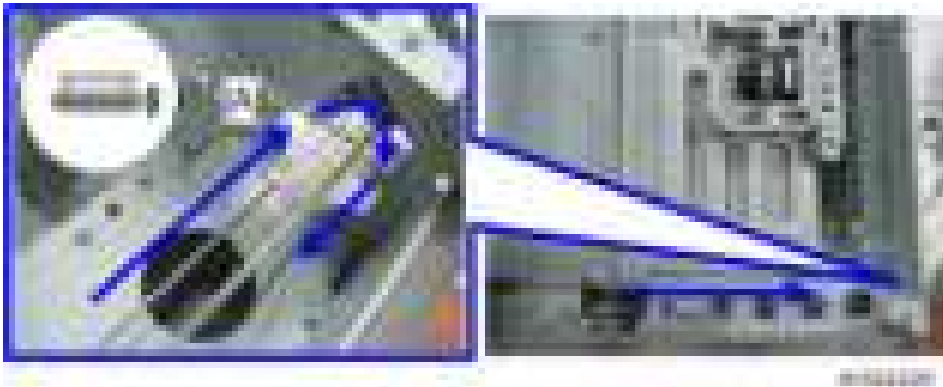

- 9. Hook the wire [A] onto the 2nd scanner unit as shown below.

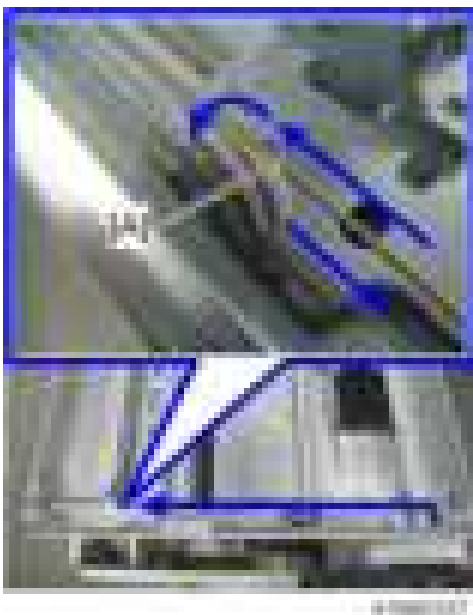

- 10. Hook the right end onto the front scanner wire bracket [A].

Replacement
and
Adjustment

Note

- Do not secure the scanner wire bracket with the screw at this time (before step 12).



11. Remove the tape from the drive pulley.
12. Adjust the scanner positions (■ p.4-37).

Note

- After replacing the scanner wire, do the image adjustments in the following section of the manual (■ p.4-105 "Copy Adjustments Printing/Scanning").

4.4.9 REAR SCANNER WIRE

1. Exposure glass/DF exposure glass (■ p.4-20 "Exposure Glass/DF Exposure Glass (CCD)")
2. Scanner left stay (■ p.4-27 "Front Scanner Wire")
3. Scanner left rail frame (■ p.4-27 "Front Scanner Wire")
4. SIO with bracket (■ p.4-23)
5. Left rear bracket [A] (■ x 4, □ x 1)



6. Right rear bracket [B] (■ x 4)



7. Rear rail frame [A] (■ x 5)



8. To make reassembly easy, slide the first scanner [A] to the position shown below.

Scanner Unit (D158/D159)



9. Rear scanner wire brackets [A], [B] (x 2)



10. Scanner motor gear [A] (x 1)



11. Rear scanner wire and scanner drive pulley [A] (x 2)



Reassembling the Rear Scanner Wire

1. Pass the wire end with a ball (A) through the scanner drive pulley as shown below.




2. Position the center ball [A] in the middle of the forked holder.



3. Wind the end with the ring clockwise (shown from the machine's front) three times; wind the ball end clockwise (shown from the machine's front) five times.

Note


- The two blue marks [A] should meet when you have done this.

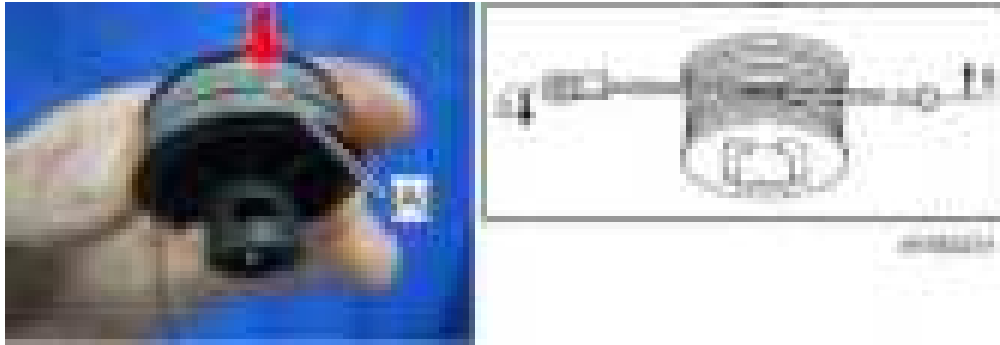

4. Stick the wire to the pulley with tape, so you can easily handle the pulley and wire during installation.
5. Install the drive pulley on the shaft.
Note
 - Do not secure the scanner wire bracket with the screw at this time (before step 7).
6. Install the wire.
Note
 - The winding of the wire on the three pulleys at the rear of the scanner should be the same as the winding on the three pulleys at the front. This must show as a mirror image. Example: At the front of the machine, the side of the drive pulley with the three windings must face the front of the machine. At the rear of the machine, it must face the rear.
7. Adjust the scanner position (■ p.4-37).
Note
 - After replacing the scanner wire, do the image adjustments in the following section of the manual (■ p.4-105 "Copy Adjustments Printing/Scanning").

4.4.10 ADJUSTING THE SCANNER POSITIONS

1. Insert a scanner-positioning pin through the 2nd carriage holes [A] and [D].
2. Insert another scanner positioning pin through the 1st carriage hole [B] and [C].

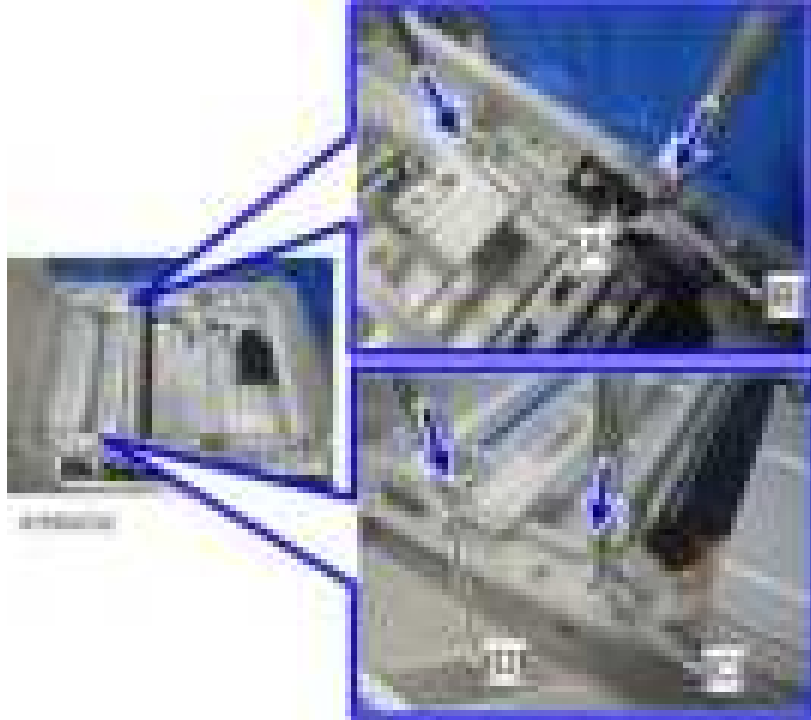

3. Screw the drive pulley to the shaft [A].
4. Screw the scanner wire bracket to the front rail [B].
5. Install the scanner wire clamp [C].



Scanner Unit (D158/D159)

6. Fasten the rear scanner wire using screws in the same manner as you have done for the front scanner wire.
7. Pull out the positioning pins.
8. Reassemble the machine and check the operation.


Note

- Make sure the 1st and 2nd carriages move smoothly after you remove the positioning pins.
- After replacing the scanner wire, do the image adjustments in the following section of the manual (p.4-105 "Copy Adjustments Printing/Scanning").

4.5 SCANNER UNIT (D160/D161/D170)

★ Important

- Unplug the machine power cord before starting the following procedures.
- Do not touch the guide rods [A], because they are greased.

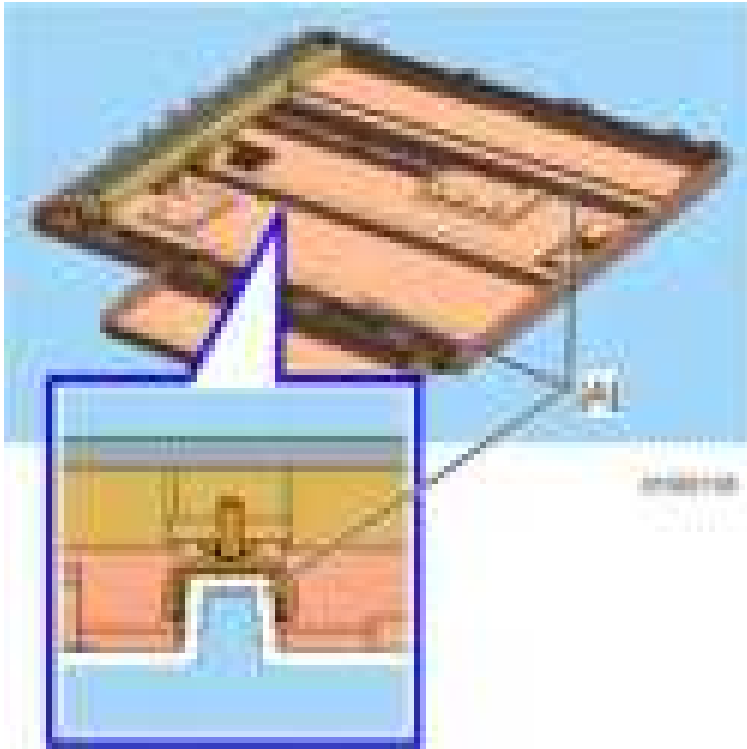

↓ Note

- CCD Scanner – D158/D159
- CIS Scanner – D160/D161/D170

When reassembling

- Adjust the following SP modes after you replace the scanner unit or each part of the scanner unit:
- SP4-008-001 (Sub Scan Magnification Adj): (p.4-105 "Copy Adjustments Printing/Scanning")
- SP4-009-001 (Main Scan Magnification Adj): (p.4-105 "Copy Adjustments Printing/Scanning")
- SP4-010-001 (Sub Scan Registration Adj): (p.4-105 "Copy Adjustments Printing/Scanning")
- SP4-011-001 (Main Scan Reg): (p.4-105 "Copy Adjustments Printing/Scanning")
- SP4-688-001 (DF: Density Adjustment): Use this to adjust the density level if the image density of outputs made in the DF and Platen mode is different.


4.5.1 SCANNER UNIT

1. Operation panel and top covers (■ p.4-9 "Upper Covers (D160/D161/D170)", ■ p.4-10 "Operation Panel (D160/D161/D170)")

2. Four brackets [A]
 - Left side (■ x 4)




- Right side (■ x 4)

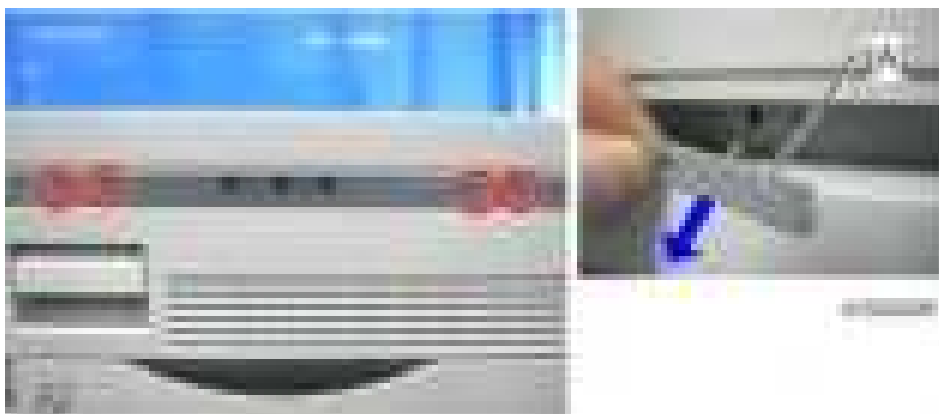

3. Scanner unit

- ■ x 1

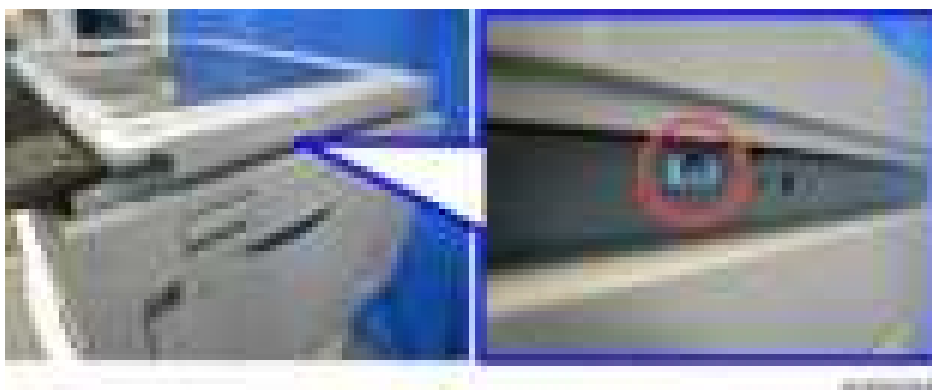

- FFC [A] x 1, ■ x 3



-  x 8



- Scanner unit [A]



Replacement
and
Adjustment

4.5.2 APS SENSORS (WIDTH/LENGTH)


1. Rear cover (■ p.4-4)
2. Platen cover, or ARDF (if installed)
3. Top covers (■ p.4-9 "Upper Covers (D160/D161/D170)")
4. Exposure glass/DF exposure glass (■ p.4-46 "Exposure Glass/DF Exposure Glass (CIS)")
5. Sensor cover [A] for length (Hook x 4)



6. Sensor cover [A] for width (Hook x 3)




7. APS sensor (width) [A] (■ x 2)
8. APS sensor (length) [B] (■ x 2)

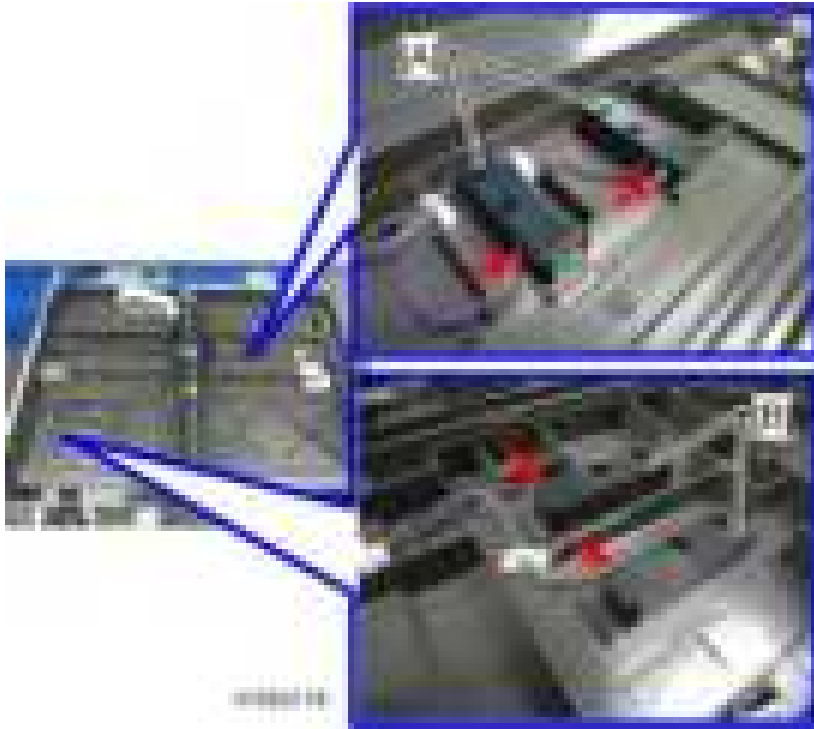

Note

- The sensor location depends on the country of use.

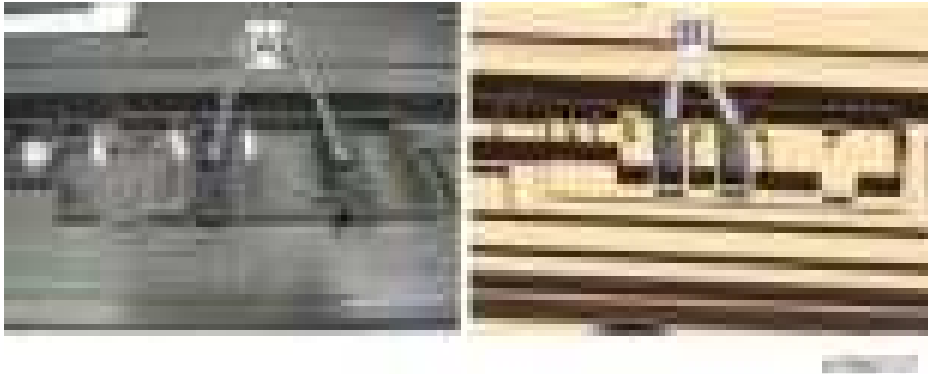

- [A]: All areas except China
- [B]: China only


Replacement
and
Adjustment

4.5.3 CIS UNIT AND SCANNER DRIVE BELT

★ Important

- When replacing the CIS unit or scanner drive belt, be careful not to touch the grease that is applied to the base of the scanner under the timing belt.


1. Rear cover (■ p.4-4)
2. Platen cover, or ARDF (if installed)
3. Top covers (■ p.4-9 "Upper Covers (D160/D161/D170)")
4. Exposure glass/DF exposure glass (■ p.4-46 "Exposure Glass/DF Exposure Glass (CIS)")
5. CIS unit [A] (FFC x1, Hook x 1)

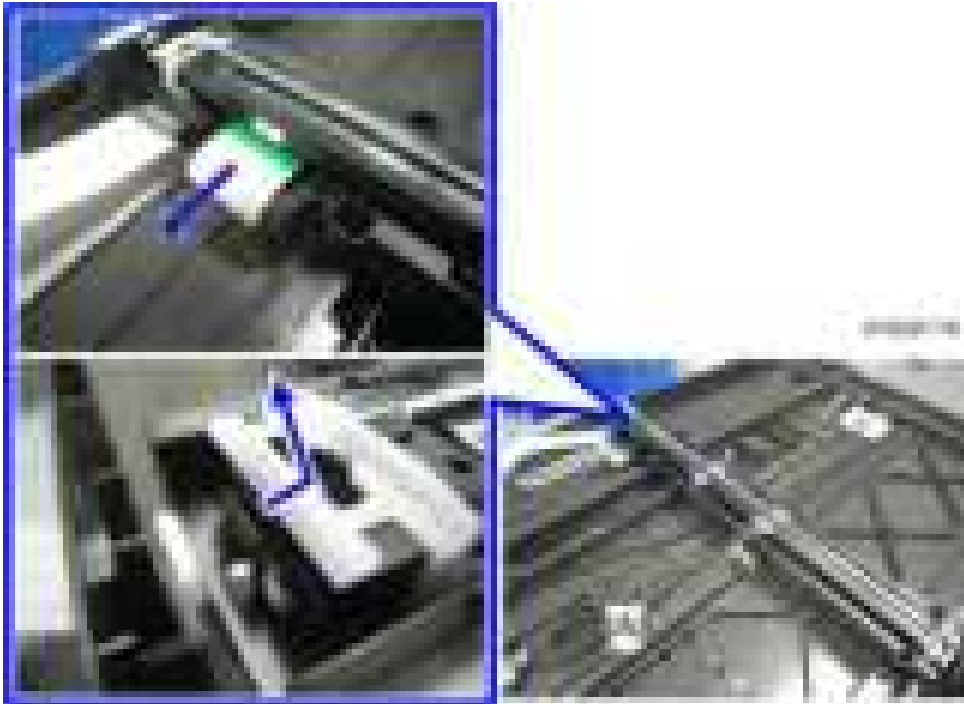

6. Left bracket [A] (■ x 1)



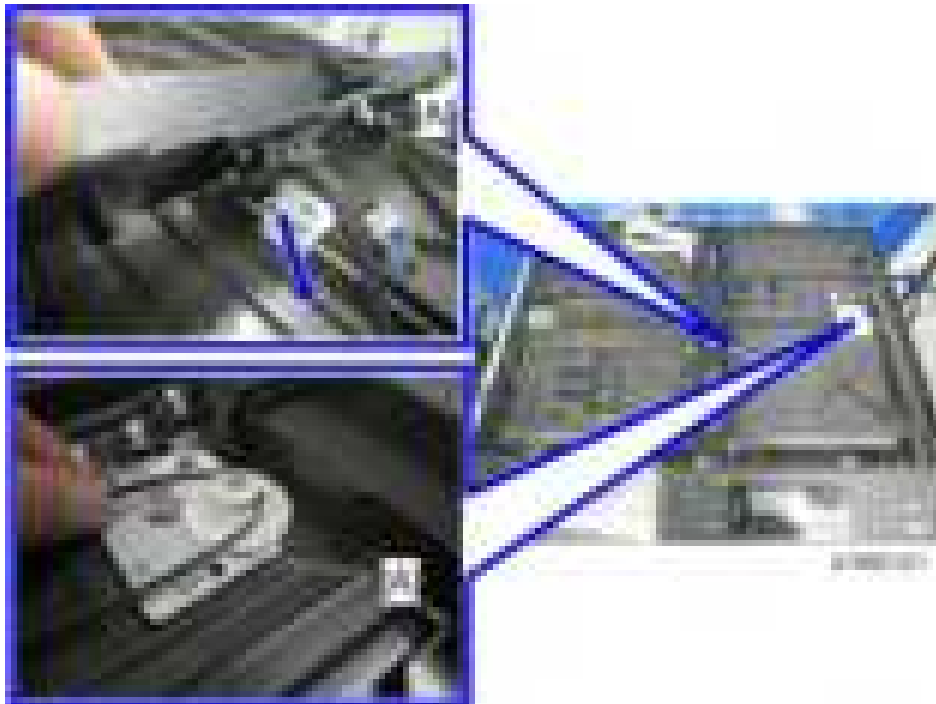


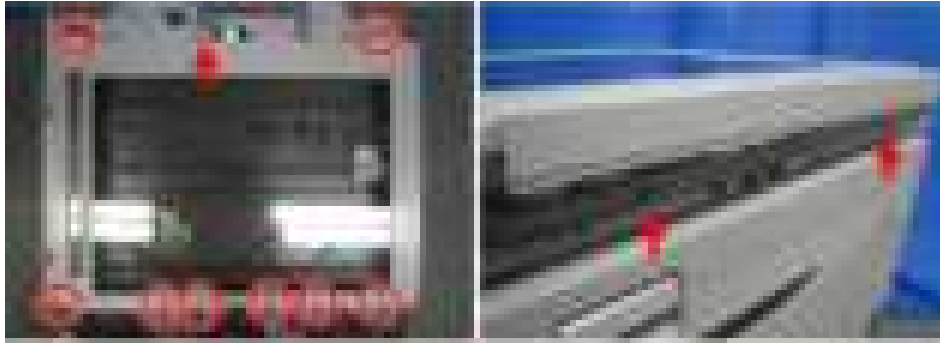
7. Scanner drive belt [A]



Replacement
and
Adjustment

4.5.4 EXPOSURE GLASS/DF EXPOSURE GLASS (CIS)

1. Rear cover ( p.4-4)
2. Platen cover, or ARDF (if installed)
3. Top covers ( p.4-9 "Upper Covers (D160/D161/D170)")
4. Exposure glass/DF exposure glass [A] ( x 8, Hook x 3)



 **Note**

- Exposure glass [A], DF exposure glass [B] and cover [C] are all in one unit. Do not disassemble into the individual parts.



4.6 LASER UNIT


WARNING

- The laser beam can seriously damage your eyes. Be absolutely sure that the main power switch is off and that the machine is unplugged before you access the laser unit.

Important

- Unplug the machine power cord before starting the following procedures.

4.6.1 LOCATION OF CAUTION DECAL

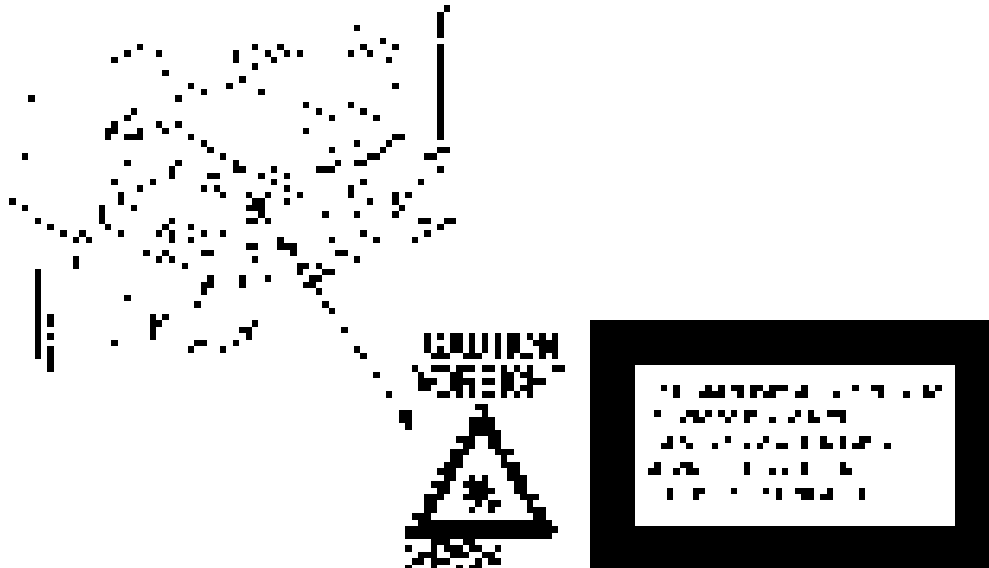

Replacement
and
Adjustment


4.6.2 TONER SHIELD GLASS

1. Remove the toner bottle.
2. Output tray, exit cover, exit rear cover (■ p.4-4)
3. Front cover (■ p.4-11)
4. Toner shield glass [A]



4.6.3 LASER UNIT

1. Toner shield glass (■ p.4-48)
2. Laser unit [A] (■ x 3, ■ x 2)

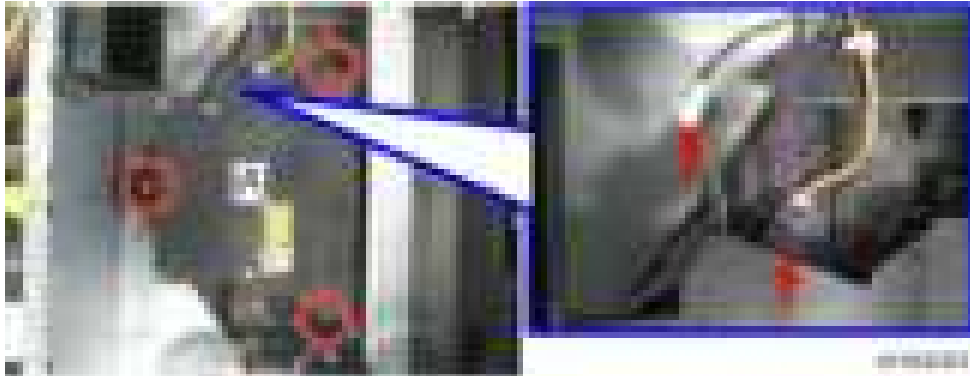

4.6.4 POLYGONAL MIRROR MOTOR

1. Laser unit (■ p.4-48)
2. Laser unit cover [A] (■ x 4)



3. Polygonal mirror motor [A] (■ x 4, ■ x 1)



4. After reassembling, adjust the image quality (■ p.4-105).


4.7 PCU SECTION

★ Important

- Unplug the machine power cord before starting the following procedures.

4.7.1 PCU

1. Toner bottle with the holder [A]

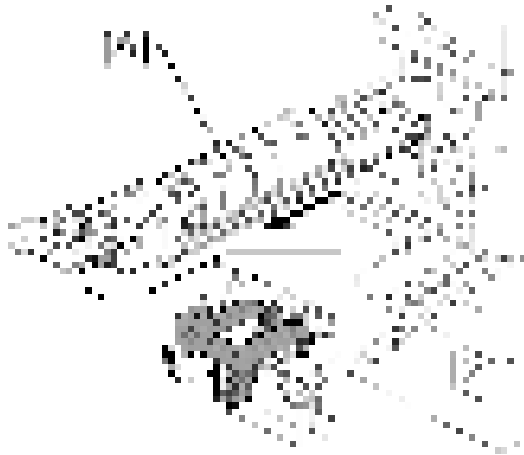

2. Open the right door.
3. Press the latch [B] and pull out the PCU [C].



↓ Note

- Do not touch the OPC drum surface with bare hands.
4. Load new developer (■ p.4-55).
 5. Do SP2-801-001 (Developer Initialization) to reinitialize the TD sensor when you reassemble.

4.7.2 PICK-OFF PAWLS AND TONER DENSITY SENSOR

⚠ CAUTION


- Do not turn the PCU upside down. This causes toner and developer to spill out.

- PCU (p.4-50)
- Pawl [A]

↓ Note

- Pull down the pawl and release the bottom end.

- Toner density sensor [B] (x 1)

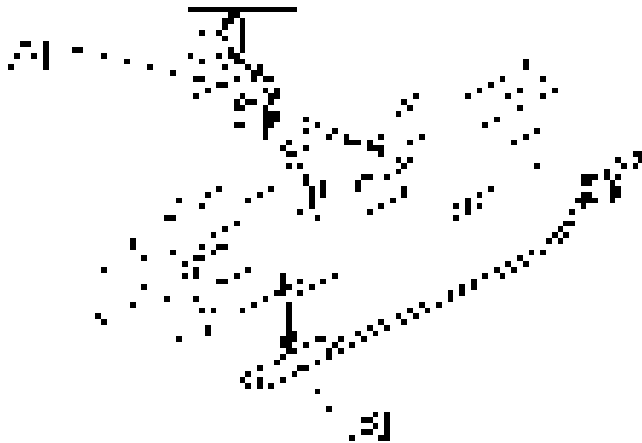

↓ Note

- The toner density sensor is taped to the bottom of the PCU. Pry it off with a regular screwdriver

- After reinstalling the pick-off pawls or toner density sensor, adjust the image quality (p.4-56 "After Replacement or Adjustment").

4.7.3 OPC DRUM

1. PCU (■ p.4-50)
2. Front side piece [A] (■ x 1)
3. Rear side piece [B] (■ x 2, 1 coupling)
4. Separate the drum section [C] from the developer section [D].

Note


- To ensure that the left-side gears line up, keep the drum cover [E] closed when reinserting the front side piece.

5. Pry out the drum retaining clip [F].

Note

- Install the clip in the same orientation (with the lip facing away from the drum shaft) when you reassemble.

6. OPC drum [G]

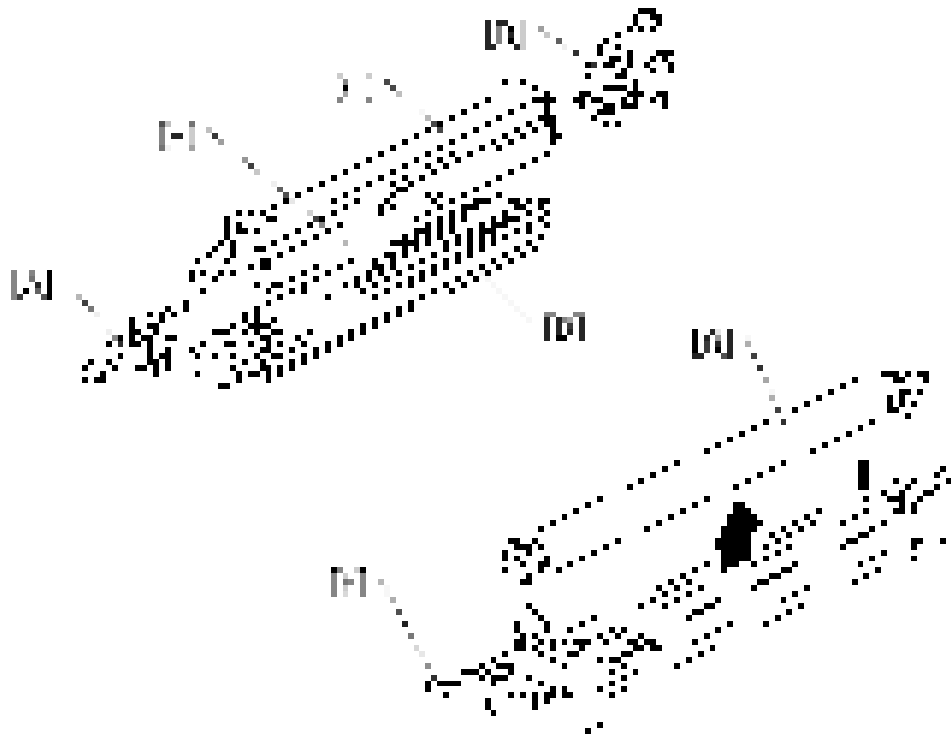


7. When reassembling, adjust the image quality (■ p.4-56 "After Replacement or Adjustment").

4.7.4 CHARGE ROLLER AND CLEANING BRUSH

1. OPC Drum (■ p.4-52)
2. Holding pin [A]
3. Stepped screw [B]
4. Charge roller [C] and cleaning brush [D] (with the holders and springs)

Note

- Turn the gear [E] (as necessary) so that the rear holder [F] comes out.

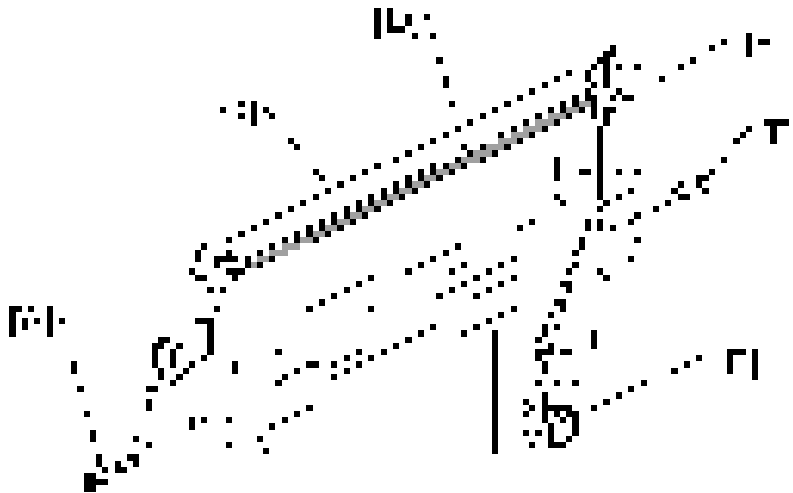

5. When reassembling, adjust the image quality (■ p.4-56 "After Replacement or Adjustment").

4.7.5 CLEANING BLADE

1. Drum charge roller (■ p.4-53 "Charge Roller and Cleaning Brush")
2. Cleaning blade [B] (■ x 2)
3. When reassembling, adjust the image quality (■ p.4-56 "After Replacement or Adjustment").



★ Important

- **Reassembling**
- Apply toner to the edge of the new cleaning blade when you replace the cleaning blade. This prevents possible damage to the OPC drum and blade.
 1. After installing the cleaning blade, remove some of the toner from the old blade with your finger.
 2. Apply the toner to the edge [A] of the new cleaning blade. Make sure to apply the toner evenly along full length of the new cleaning blade.

4.7.6 DEVELOPER

1. PCU (■ p.4-50)
2. To let the toner fall to the development section, gently tap about eight different spots on the top of the PCU with a screwdriver. Each spot must be approximately at an equal distance from the next spot.
3. Reinstall the PCU in the copier.
4. Turn the main switch on.
5. Open and close the front door and wait for the machine to rotate the development roller for about 10 seconds.
6. Repeat the previous step two more times.
7. PCU (■ p.4-50)
8. Separate the developer section from the OPC drum section (■ p.4-52).
9. Top part [A] of the development unit (■ x 5)

Note

- Release the hook [B].

10. Set the coupling [C] back to the shaft.
11. Turn the coupling in the direction of the arrow [D] to remove developer from the roller.
12. Turn the bottom part [E] over and rotate the gears to remove the developer.



13. Load new developer.
14. When reassembling, execute SP2-801-001 (Developer Initialization) to reinitialize the TD sensor.

Note

- Make sure no toner or developer stays on the gear. Clean the gears as necessary with a blower brush, etc.
- Be sure to replace the Mylar at the rear side in the correct position. (The Mylar protects the gears at the rear side from falling toner).

4.7.7 AFTER REPLACEMENT OR ADJUSTMENT

Important

- **Do the following procedure after replace or adjust any of the PCU components. This procedure is not necessary when you replaced the whole PCU with a new one.**
1. Take 5 sample copies.
 2. If black dots (dropped toner) show on any of the copies, continue as follows. (If all copies are clean, you don't need to do the following steps.)
 3. Remove the PCU from the mainframe.
 4. Tap the top of the PCU with a screwdriver at eight evenly spaced locations (two or three taps at each spot), to knock the recycled toner down into the development section.
 5. Put the PCU back into the mainframe.
 6. Turn the main power on. Then open and close the door and wait for the machine to rotate the development roller for 10 seconds. Then open and close the door two more times, so that total rotation time is 30 seconds.
 7. Make some sky-shot copies (or solid black prints).
 - If using A4 or 8¹/₂" x 11" paper, make 4 copies/prints.
 - If using A3 or 11" x 17" paper, make 2 copies/prints.
 - To make solid black prints, use SP5-902-001 pattern 8 (for D160/D161/D170) or SP2-109-001 pattern 20 (for D158/D159).

Note

- Step 7 is required only after parts replacement or adjustment. You do not need to make sky-shot (or solid black) copies after you replace the developer.

4.8 TONER SUPPLY MOTOR

★ Important

- **Unplug the machine power cord before starting the following procedure.**
1. Output tray (■ p.4-4 "Output Tray, Exit Cover, Exit Rear Cover")
 2. Open the front door.
 3. Toner bottle holder (■ p.4-50 "PCU")
 4. Toner supply motor [A] (□ x 1)



4.9 PAPER FEED SECTION

★ Important


- Unplug the machine power cord before starting the following procedures.

4.9.1 PAPER FEED ROLLER

1. Paper cassette
2. Clip [A]
3. Push the shaft back through the opening, and tilt it up.

↓ Note

- If the black plastic bushing [B] comes off, make sure you remount it when reinstall the shaft.
4. Paper feed roller [C]

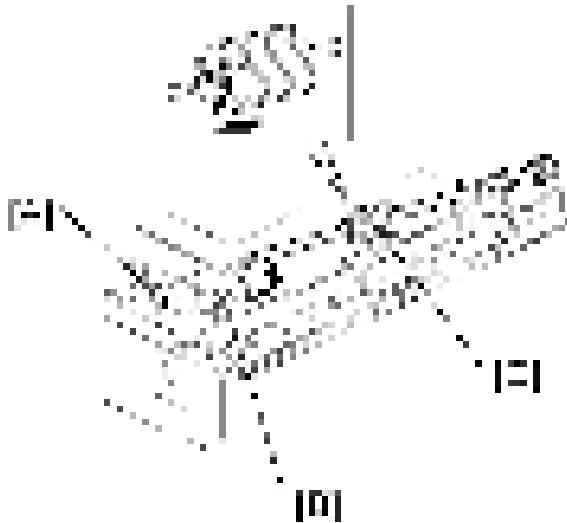

4.9.2 FRICTION PAD

1. Paper cassette
2. Clip [A]
3. Push the shaft back through the opening, so that the roller moves clear of the friction pad.
4. Friction pad [B]



Note

- When replacing the friction pad
- Make sure that the mylar [A] does not go under the friction pad when reinstalling the friction pad.
- Do not touch the friction pad with your bare hands when replacing it. If you do, clean the friction pad with a damp cloth or alcohol.



4.9.3 EXIT SENSOR

1. Output tray, exit cover, exit rear cover (■ p.4-4)
2. Front right cover (■ p.4-12)
3. Operation panel lower cover (D158/D159 only) (■ p.4-8)
4. Open the duplex unit.
5. Fusing unit connector bracket [A] (■ x 1, ■ x 2)






6. Upper guide [A] (■ x 2, ■ x 1, ■ x 3)



7. Guide [A] (■ x 2, ■ x 1)




- 8. Exit sensor bracket ( x 1)
- 9. Exit sensor [A] ( x 1)

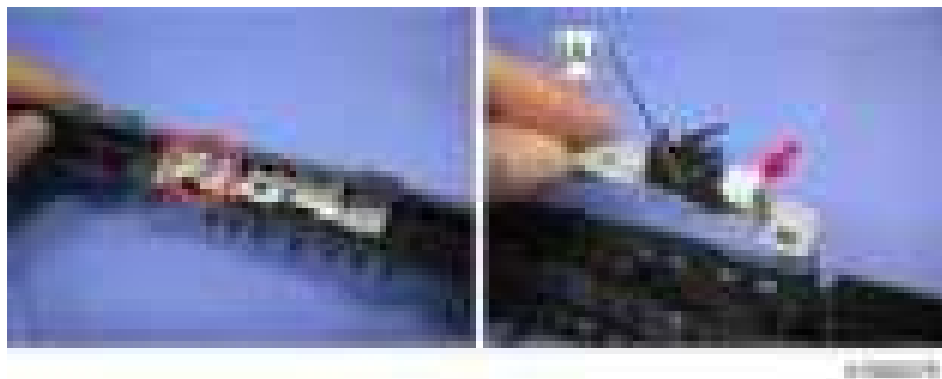


Replacement
and
Adjustment

4.9.4 REGISTRATION ROLLER

1. PCU (■ p.4-50)
2. Front cover (■ p.4-11)
3. Right door (■ p.4-11)
4. Plastic cover [A]
5. Image transfer roller (■ p.4-78)
6. Push down on the notch [B] to free the sensor.
7. Image density sensor [C] (■ x 1, ■ x 1)

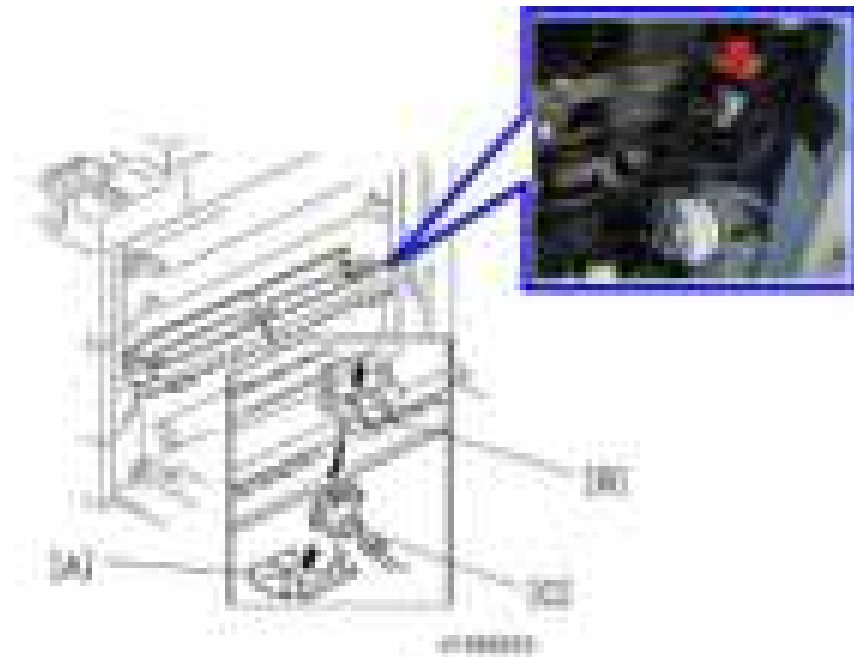

8. Rear cover (■ p.4-4)
9. High-voltage power supply
10. Registration clutch
11. Unhook the springs [A] and [B] at the rear and front sides.
12. Cover [K] and registration sensor [L] (■ x 1)
13. Guide support [C] and guide [D] (■ x 1)
14. Bushing [E] (■ x 1)
15. Gear [F] and bushing [G] (■ x 1)
16. Registration roller [H] with the image transfer unit [I]
17. Paper jam release lever [J]

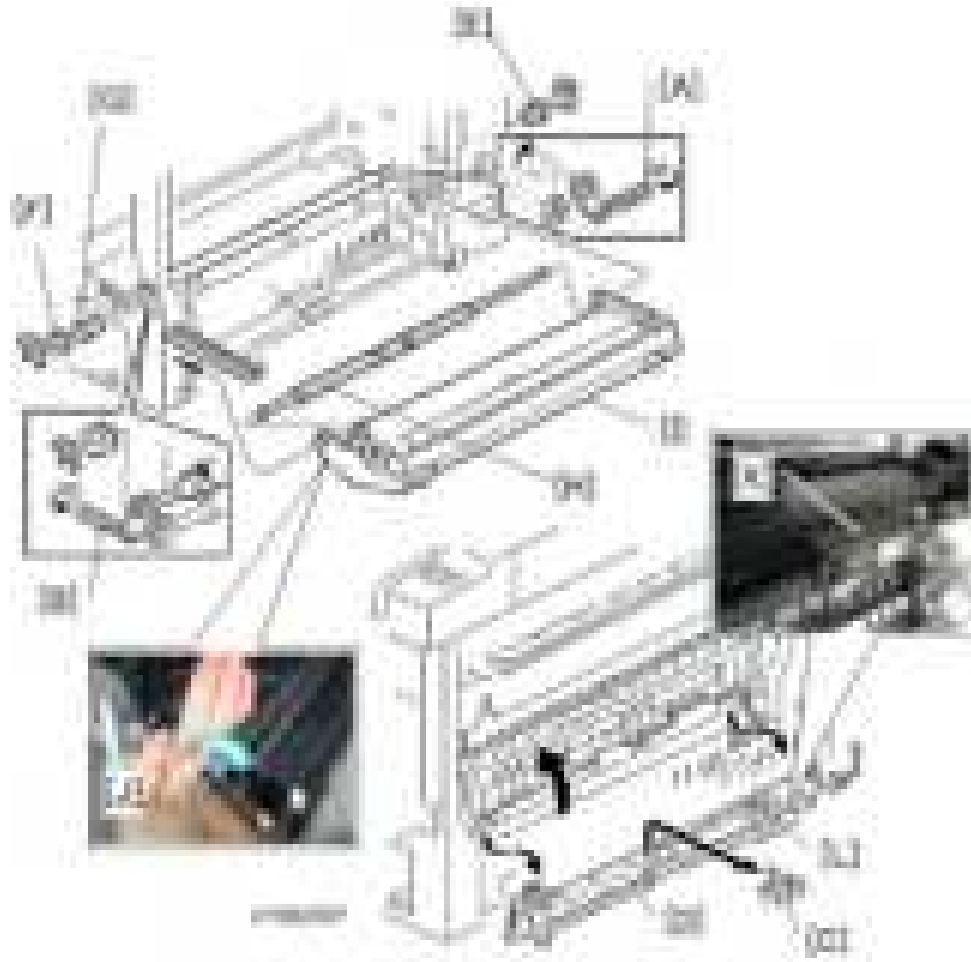


Replacement
and
Adjustment

4.9.5 REGISTRATION CLUTCH

1. Rear cover (p.4-4)
2. High-voltage power supply board (with the bracket) [B] (x 3, all connectors)




3. Registration clutch [A] (x 2, x 1, Clip ring x 1)

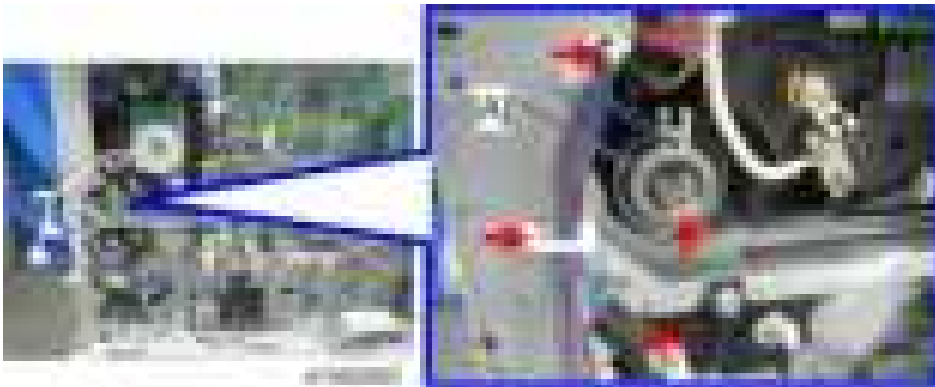

4.9.6 REGISTRATION SENSOR

1. Open the right door.
2. Sensor cover [A] (Hook x 2)
3. Registration sensor [B] (x 1)

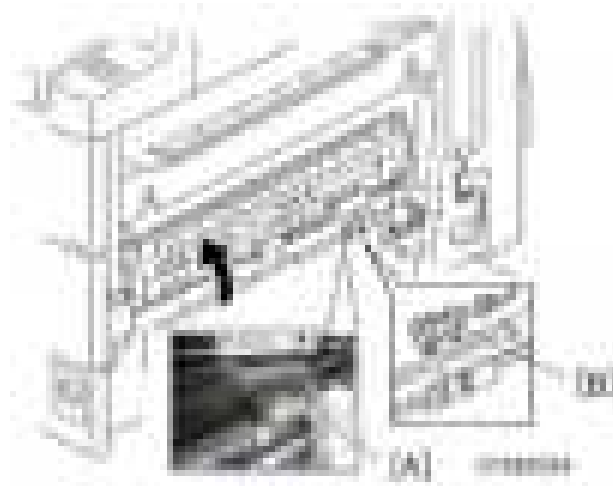


4.9.7 UPPER PAPER FEED CLUTCH

1. Rear cover (p.4-4)
2. Right rear cover (p.4-13 "Right Rear Cover")
3. High-voltage power supply board (with the bracket) [B] (x 3, x 4, x 2)



4. Clutch cover [A] (x 2, 2 bushings, x 2)
5. Paper feed clutch [B] (x 1)

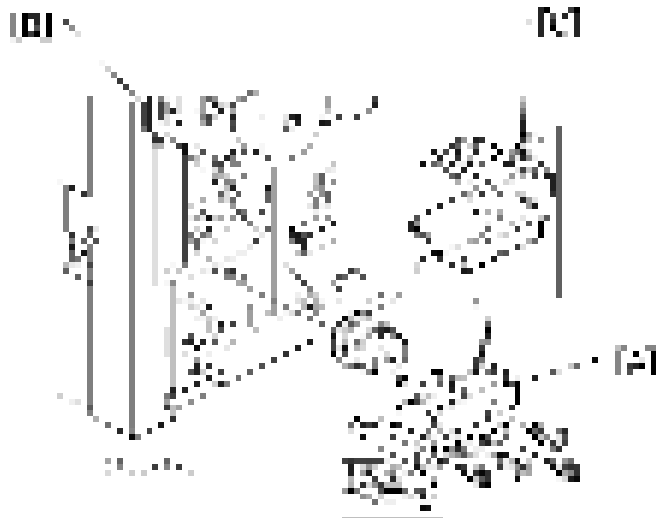

Note

- Make sure that the rotation-prevention tabs [C] on the clutches fit correctly into the corresponding openings on the clutch cover when you reinstall.

4.9.8 RELAY CLUTCH

1. Rear cover (■ p.4-4)
2. Relay clutch [A] (■ x 1)



4.9.9 RELAY SENSOR

1. Relay clutch (■ p.4-67)
2. Sensor bracket [A] (■ x 1)
3. Relay sensor [B] (■ x 1)




4.9.10 LOWER PAPER FEED CLUTCH (TWO-TRAY MODELS ONLY)

1. Rear cover (p.4-4)
2. Clutch Cover [A] (x 1, Clip ring [B] x 1, Stay [C] x1)



3. Lower paper feed clutch [A] (Clip ring [B] x 1, x 1)

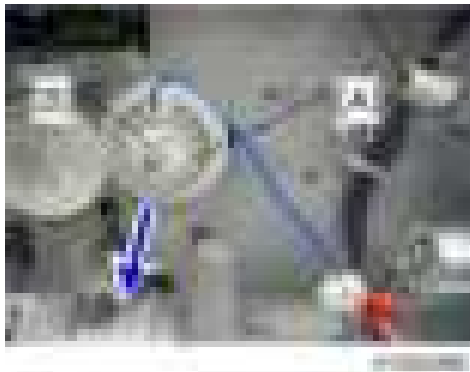

4.9.11 VERTICAL TRANSPORT SENSOR (TWO-TRAY MODELS ONLY)

1. Right lower cover (p.4-17)
2. Metal plate [A] (x 3)
3. Vertical transport sensor [B] (x 1)



4.9.12 PAPER SIZE SWITCH

1. Paper tray 1 and 2
 - Paper size switch: T1 [A]
 - Paper size switch: T2 [B] (Two-tray Models Only)




2. Paper size switch [A] (hooks,  x 1)



Replacement
and
Adjustment


4.9.13 PAPER END SENSOR

Paper End Sensor: T1

1. Paper tray 1 and 2
2. Paper end sensor: T1 [A] (hooks,  x 1)




Paper End Sensor: T2 (Two-tray Models Only)


1. Paper tray 1 and 2
2. Paper end sensor: T2 [A] (hooks,  x 1)






4.9.14 TRAY LIFT MOTOR

1. Rear cover ( p.4-4)
 - Tray 1 lift motor [A]
 - Tray 2 lift motor [B] (Two-tray Models Only)

Note

- When replacing the tray 1 lift motor [A], it is necessary to remove the BICU ( p.4-97).



2. Motor bracket [A] (with gear unit)( x 3,  x 1)
3. Gear cover [B] ( x 2)




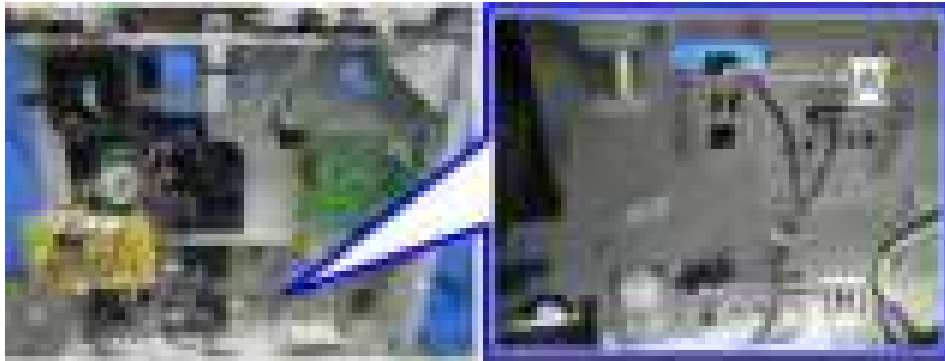
- 4. Tray lift motor [A] (x 2)




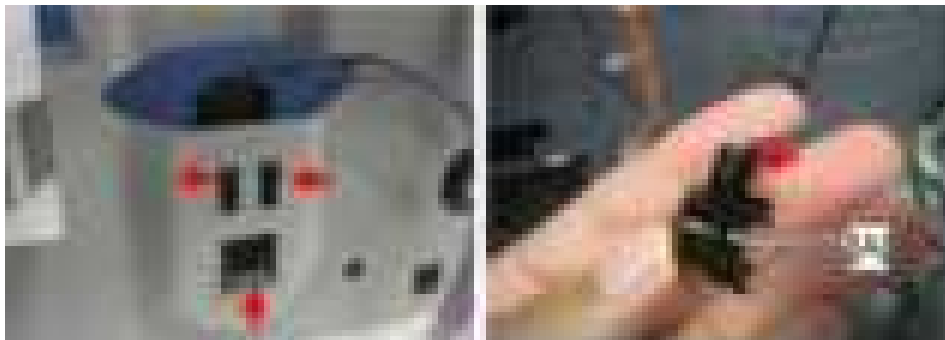
Replacement
and
Adjustment

4.9.15 TRAY LIFT SENSOR

1. Rear cover ( p.4-4)
Tray 1 lift sensor [A]
Tray 2 lift sensor [B] (Two-tray Models Only)



2. Tray lift sensor ( x 1, Hook x3)




4.9.16 BY-PASS PAPER LENGTH SENSOR

1. Open the by-pass tray unit.
2. By-pass tray right cover [A] (x 2)




3. By-pass paper length sensor [A] (x 1)

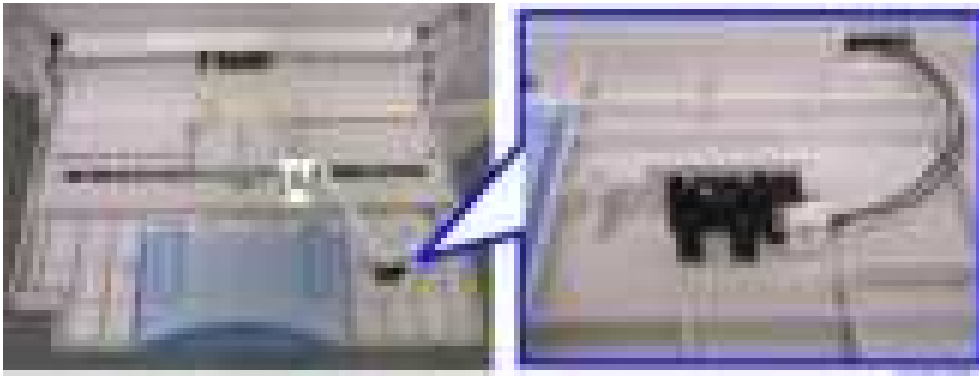

4.9.17 BY-PASS PAPER WIDTH SENSOR

1. By-pass tray unit (■ p.4-16)
2. By-pass left tray cover [A] (hook x 1)

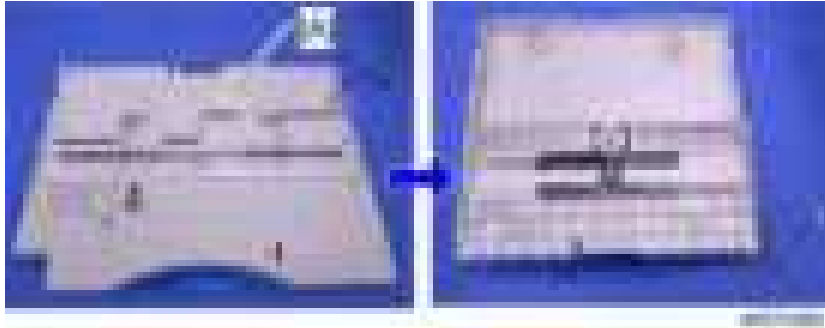

3. Replace the by-pass paper width sensor [A] (□ x 1).



When replacing the by-pass paper width sensor

1. Align the holes [A], [B] and [C].
2. Install the by-pass paper width sensor [D].



3. Reassemble the copier.
4. Plug in and turn on the main power switch.
5. Check the switch operation with SP5-803-046 (By-Pass Size Detection SW < Input Check).

- Display on the LCD -

Paper Size	Display	Paper Size	Display
A3 SEF	00001001	A5 SEF	00001110
B4 SEF	00001011	B6 SEF	00001100
A4 SEF	00000011	A6 SEF	00001101
B5 SEF	00000111	Smaller A6 SEF	00001101

4.9.18 BY-PASS FEED ROLLER AND BY-PASS PAPER END SENSOR

1. By-pass tray unit (p.4-16)

Note


- If you have a support to keep the by-pass tray within the reach of the connector cable, you do not need to disconnect the connector. When you do so, use caution not to place too much load on the cable.

2. Sensor holder [A]
3. By-pass paper end sensor [B] (x 1)
4. By-pass feed roller [C]



4.9.19 BY-PASS FEED CLUTCH AND BY-PASS TRAY LIFT CLUTCH

1. Duplex unit (or right door) (p.4-14)
2. Clutch cover [A] (x 2, x2, x 1)

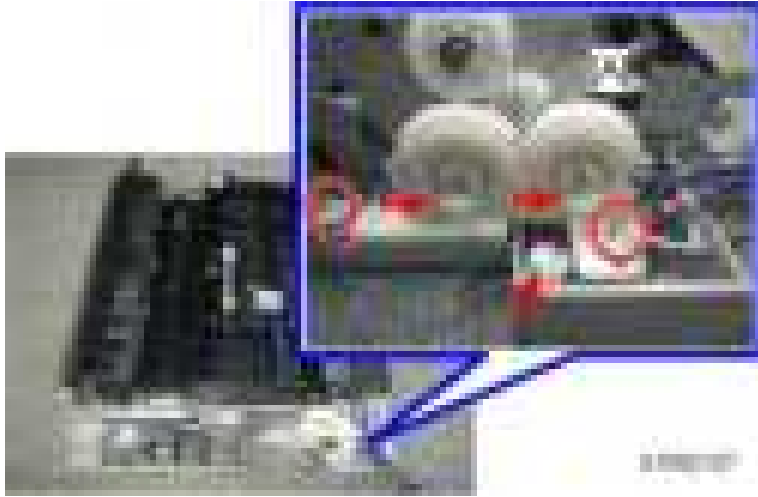

3. By-pass tray lift clutch [A]
4. By-pass feed clutch [B]



4.9.20 BY-PASS TRAY LIFT SENSOR

1. Duplex unit (or right door) (☞ p.4-14)
2. Sensor cover [A] (☞ x 1)



3. By-pass tray lift sensor [A] (☞ x 1, Hook x 3)



4.10 IMAGE TRANSFER

★ Important

- Unplug the machine power cord before starting the following procedures.

4.10.1 IMAGE TRANSFER ROLLER

⚠ CAUTION

- Do not touch the transfer roller surface with bare hands
1. Open the right door.
 2. Lift the plastic holders [D] with the image transfer roller [B].


↓ Note

- Leave the springs under the holders. Make sure that the pegs [C] on the holders [A] engage with the springs when you reassemble.



4.10.2 IMAGE DENSITY SENSOR

1. Open the right door.
2. Plastic cover [A]
3. Image transfer roller (p.4-78)
4. Push down on the notch [B] to free the sensor.
5. Image density sensor [C] (x 1)

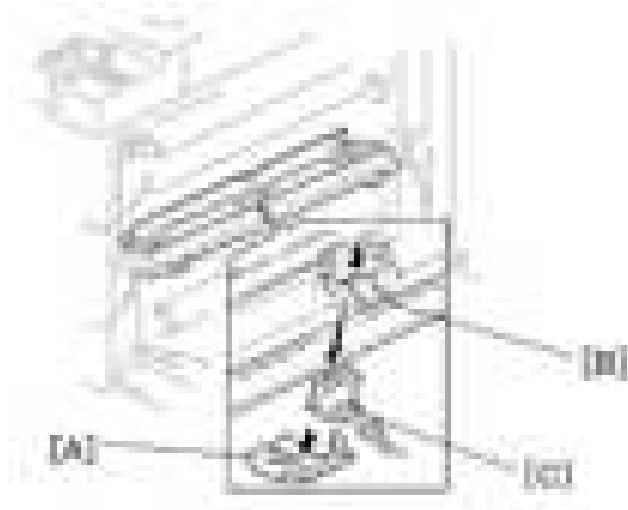

4.11 FUSING


★ Important

- Unplug the machine power cord before starting the following procedures.

4.11.1 FUSING UNIT


⚠ CAUTION

- The fusing unit can become very hot. Make sure that it has cooled down sufficiently before you handle it.
1. Turn off the main switch, and unplug the machine.
 2. Front right cover (■ p.4-12)
 3. Open the right door.
 4. Fusing unit [A] (■ x 2, □ x 4)

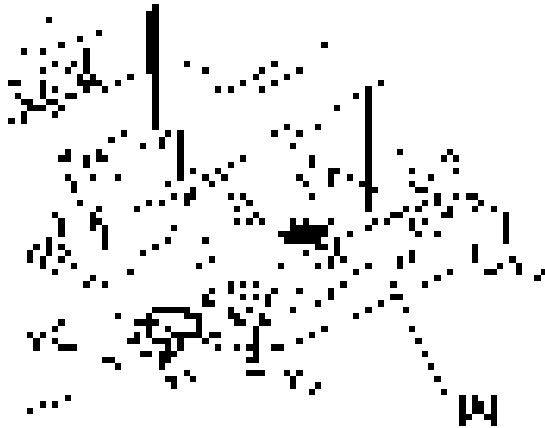


4.11.2 THERMISTOR

1. Fusing unit (■ p.4-80)
2. Thermistors [A] (■ x 2, □ x 2)

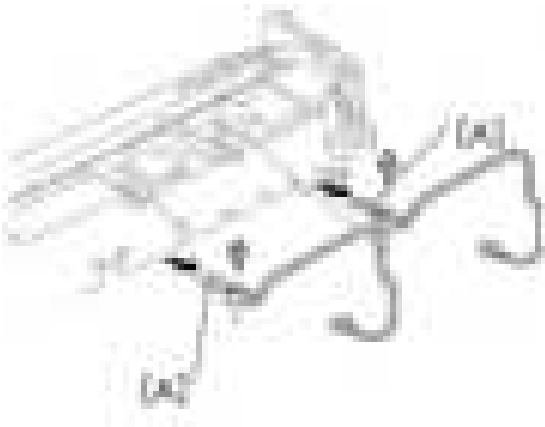

4.11.3 FUSING LAMPS

1. Fusing unit (■ p.4-80)
2. Separate the hot roller section [A] from the pressure roller section [B] (■ x 4).
3. Front holding plate [C] (■ x 1)
4. Rear holding plate [D] (■ x 1)

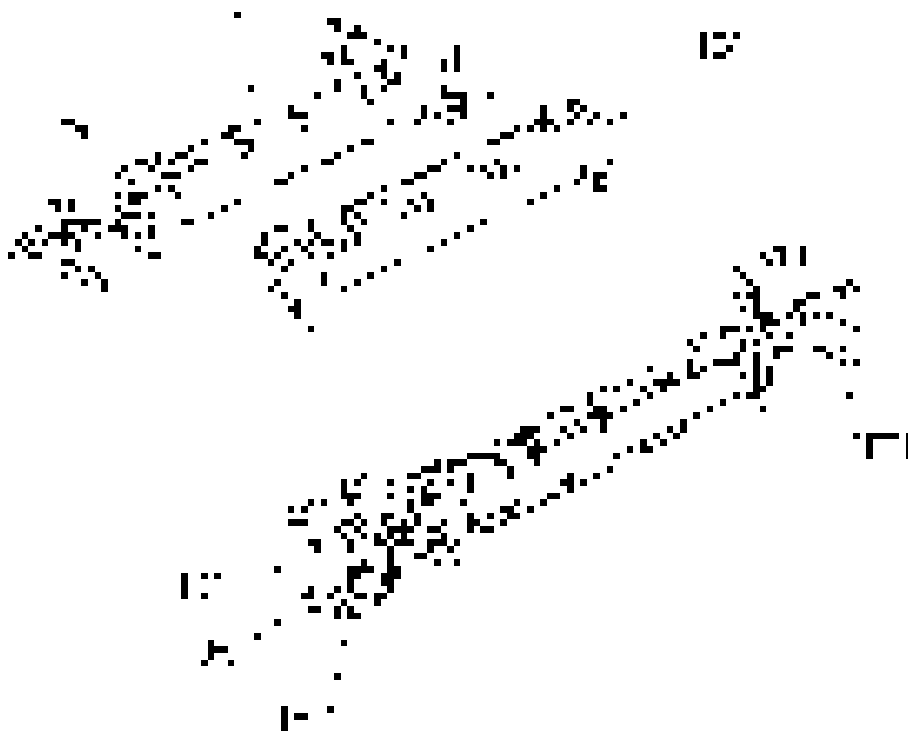

5. Fusing lamp with the connector (600W) [E] (■ x 2)
6. Fusing lamp with the connector (550W) [F] (■ x 2)

Note

- Check that the front ends of the two lamps fit in the front holding plate when you reassemble. They do not fit in there if you arrange the two lamps incorrectly.


4.11.4 HOT ROLLER STRIPPER PAWLS

1. Hot roller section (■ p.4-81 "Fusing Lamps")
2. Roller guard [A] (■ x 3)
3. Metal holders [B] (1 holder for each)
4. Hot roller stripper pawls [C] (1 spring for each)



4.11.5 HOT ROLLER

1. Hot roller stripper pawls (■ p.4-82)
2. Hot roller [A] (2 C-rings, 1 gear, 2 bearings)

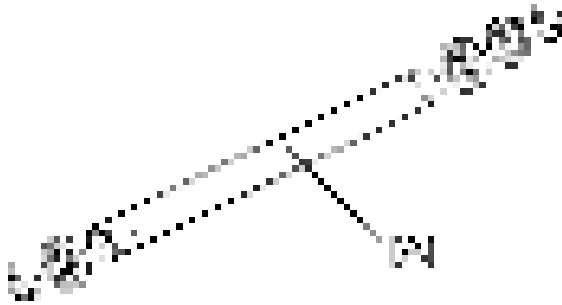


4.11.6 THERMOSTAT

1. Hot roller (■ p.4-82)
2. Thermostat [A] (■ x 2 for each)




4.11.7 PRESSURE ROLLER AND BUSHINGS

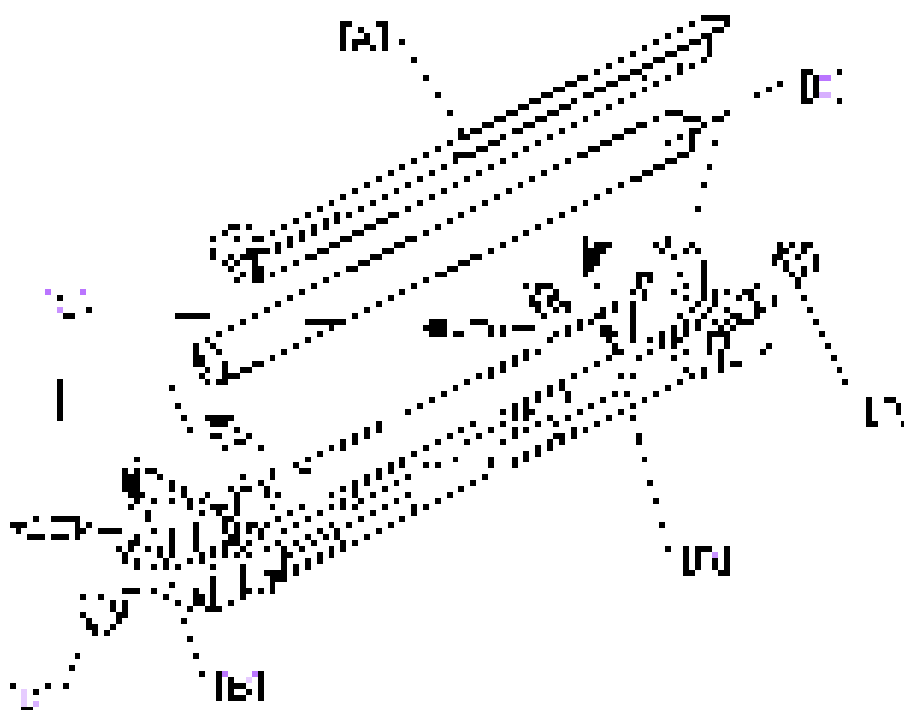

1. Separate the hot roller section from the pressure roller section (■ p.4-81 "Fusing Lamps").
2. Fusing entrance guide [A] (■ x 2)
3. 2 springs [B]
4. 2 pressure arms [C]
5. 2 Bushings [D]
6. Pressure roller [E]




4.11.8 NIP BAND WIDTH ADJUSTMENT

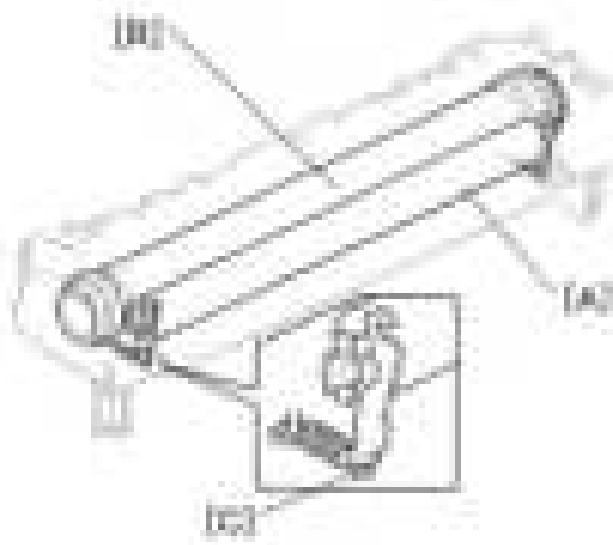Do this adjustment when the fusing unit is at its operating temperature. The size of the OHP sheet must be A4/LT LEF. Any other sizes may cause a paper jam.




- [A] Pressure roller
 - [B] Hot roller
 - [C] Spring hook
1. Place an OHP sheet on the by-pass feed table.
 2. Enter SP mode, and run SP 1-152-001 (Fusing Nip Band Check).
 3. Press '1' (Yes), or "Execute".
 4. Press  twice. The machine feeds the OHP sheet into the by-pass feed, stops it at the registration roller for 300 seconds, then 20 seconds in the fusing unit.
 5. Check that the OHP sheet is ejected to the copy tray.
 6. Press the  key.
 7. Quit the SP mode.
 8. Check that the nip band (the opaque stripe) across the ejected OHP sheet is symmetrical, with both ends slightly thicker than the center.

 **Note**

- There is no standard value for the nip band on this machine. Make the adjustment based on the band's appearance.

9. If the band is not as described above, change the position of the spring hooks [C] (one on each side), and then check the band again.

 **Note**

- The higher hook position produces greater tension.

4.12 DUPLEX UNIT (DUPLEX MODELS ONLY)

★ Important

- Unplug the machine power cord before starting the following procedures.

↓ Note

- Duplex models - D158, D159, D160, D161
- Non-duplex model - D170

4.12.1 DUPLEX EXIT SENSOR

1. Open the right door.
2. Sensor bracket [A] (📎 x 1)

↓ Note

- Another bracket [B] comes off with the sensor bracket.
3. Duplex exit sensor [C] (📎 x 1)




4.12.2 DUPLEX ENTRANCE SENSOR

1. Open the right door.
2. Lift the duplex guide [A].
3. Entrance sensor bracket [B] and bracket cover [C] (x 2)
4. Duplex entrance sensor [D]




4.12.3 DUPLEX INVERTER SENSOR

1. Copy tray [A] (x 2)
2. Exit cover [B] (x 1)
3. Sensor bracket [C] (x 1, x 1)
4. Duplex inverter sensor [D] (x 1)

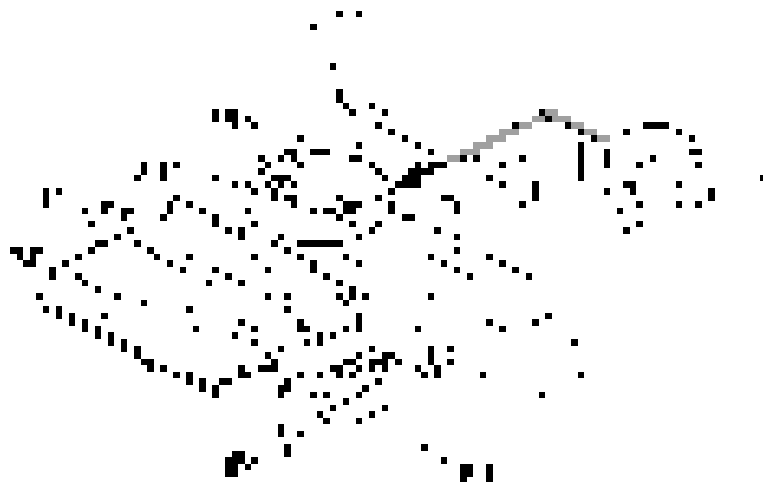

4.12.4 DUPLEX TRANSPORT MOTOR


1. Open the right door.
2. Detach the chain and spring from the frame, and lower the right door.
3. Cover [A] (🔧 x 1)
4. Motor bracket [B] (🔧 x 4, 🛠️ x 1).
5. Duplex transport motor [C] (🔧 x 2)

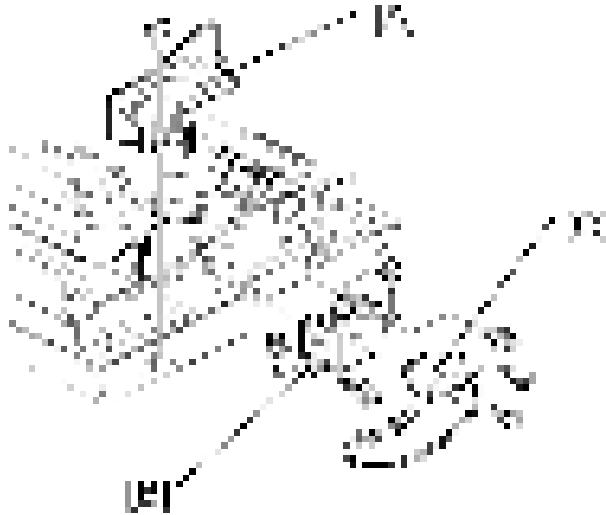


Replacement
and
Adjustment

4.12.5 DUPLEX INVERTER MOTOR

1. Platen cover, or ARDF (if installed)
2. Rear cover (■ p.4-4)
3. Top rear cover (■ p.4-6)
4. Bracket [A] (■ x 4)

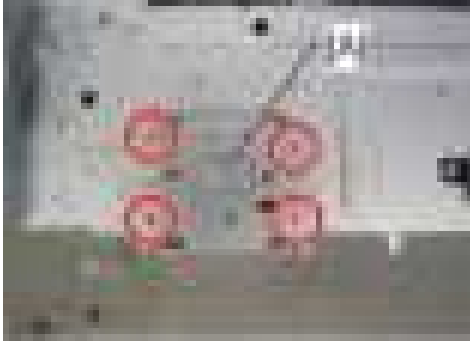

5. Rear exhaust fan [A] (■ x 3)

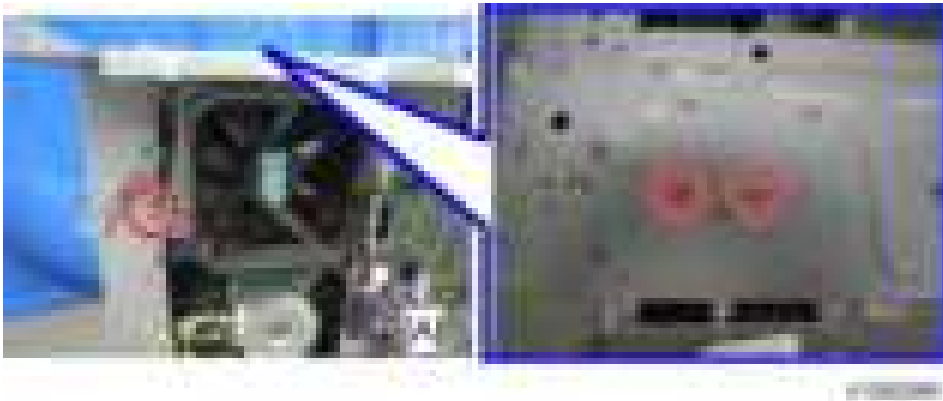

6. Duplex inverter motor [A] (■ x 2, ■ x 1)



4.13 ELECTRICAL COMPONENTS

★ Important

- Unplug the machine power cord before starting the following procedures.


4.13.1 CONTROLLER BOARD (GW+/GDI)

⚠ CAUTION

- The battery on the control board can explode if replaced incorrectly.
- Dispose of the old battery in accordance with the instructions.

Types of Controller board

There are two types of controller, depending on the machine.

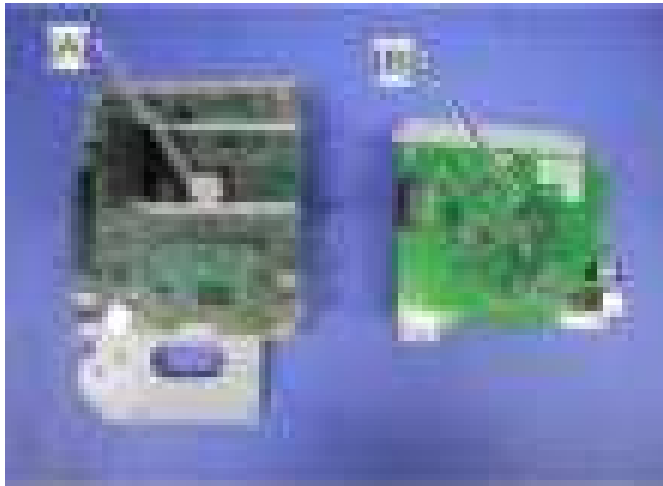

- GW+ controller board [A]: D158/D159
- GDI controller board [B]: D160/D161
- No controller board : D170


Replacement Procedure (GW+ Controller)

Before Replacing the GW+ Controller Board in the Model without HDD

When you replace the controller board in a model without a HDD, address book data can be copied from an old controller board to a new controller board using an SD card.

Copy the address book data to an SD card from the flash ROM on the controller board with SP5846-051 if possible.

1. Rear cover (p.4-4)
2. Separate the BICU [A] from the CTL board [B] (x 5, x 2).

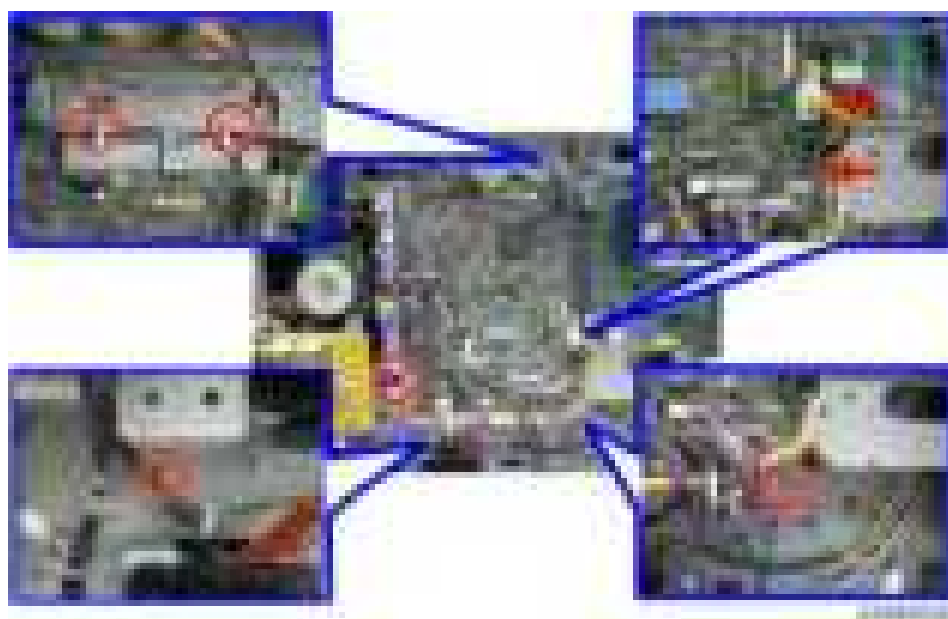


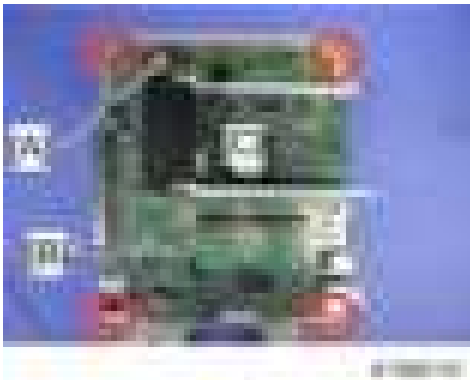
3. CTL board [A] (with bracket) (x 3)



4. Slide the CTL board [A] to the left and pull down as shown below.



5. NVRAM [A]
6. DIMM-RAM [B]
7. CTL board ( x 4) [C]



8. Install the new CTL board.

Replacement
and
Adjustment

When Replacing the New Controller Board (GW+ Controller)

1. Remove the NVRAM [A] from the old controller board.



2. Install the old NVRAM [A] on the new controller board after you replace the controller board.
3. Replace the NVRAM if the NVRAM on the old controller board is defective.

Note

- Make sure you print out the SMC reports ("SP Mode Data" and "Logging Data") before you replace the NVRAM.

CAUTION

- Keep NVRAM away from any objects that can cause static electricity. Static electricity can damage NVRAM data.
- Make sure the NVRAM are correctly installed on the controller board.
- Make sure that the DIP-switch [B] settings on the old controller board are the same for the new controller board. Do not change the DIP switches on the controller board in the field.

After Installing the Controller Board (GW+ Controller)

1. For a model without a HDD, do SP5-846-052 to copy back the address book to the flash ROM on the controller board from the SD card to which you have already copied the address book data if possible.
2. For a model with a HDD, if the customer is using the data encryption feature, the encryption key must be restored.
3. Turn the main power switch off/on.

Replacement Procedure (GDI Controller)

1. Rear cover (■ p.4-4)
2. Interface cover [A]



3. Separate the BICU [A] from the CTL board (■ x 5).




4. CTL board [A] (with bracket) (■ x 5)

Replacement and Adjustment



5. CTL board [A] (x 4)

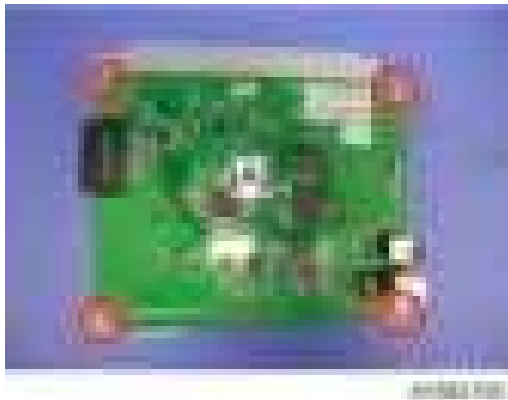

6. Install the new CTL board.

When Replacing the New Controller Board (GDI)

There is no removable NV-RAM on the CTL board. When the controller board is replaced, it is necessary to re-enter the information manually.

1. Do SP5-990-002 (SP) and SP5-990-003 (User Program) before you replace the controller board.
2. After replacing the controller board, enter all the SP/UP data manually.

Note

- If you cannot print the SMC data lists, refer to the factory SMC lists, and enter the values.

4.13.2 HDD UNIT (FOR D158/D159)

★ Important

- **Unplug the machine power cord before starting the following procedure.**

Before Replacing the HDD Unit:

- Copy the address book data to an SD card from the HDD with SP5-846-051 if possible.

Disposal of HDD Units:

- Never remove an HDD unit from the work site without the consent of the client.
- If the customer has any concerns about the security of any information on the HDD, the HDD must remain with the customer for disposal or safe keeping.
- The HDD may contain proprietary or classified (Confidential, Secret) information. Specifically, the HDD contains document server documents and data stored in temporary files created automatically during copy job sorting and jam recovery. Such data is stored on the HDD in a special format so it cannot normally be read but can be recovered with illegal methods.

Replacement:

- Explain to the customer that the following information stored on the HDD is lost when the HDD is replaced: document server documents, fixed stamps, document server address book
- The address book and document server documents (if needed) must be input again.

Replacement
and
Adjustment

Replacement Procedure

1. The HDD [A] is attached behind the controller board.




2. Rear cover (■ p.4-4)
3. Controller board (with bracket) (■ p.4-89)
4. Replace the HDD [A] (■ x 4, ■ x 2)



5. When you turn the main power switch on after installing the hard disk, initialization of the disk starts automatically.
6. Once a completion message appears, turn the power off.
7. Download the address book data to an SD card.

4.13.3 QUENCHING LAMP

1. PCU (■ p.4-50)
2. Quenching lamp [A] (□ x 1)

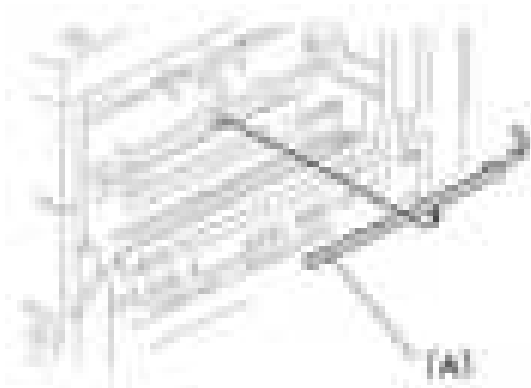


4.13.4 HIGH-VOLTAGE POWER SUPPLY BOARD

1. Rear cover (■ p.4-4)
2. Right rear cover (■ p.4-13)
3. High-voltage power supply board [A] (■ x 3, ■ x 4)



4.13.5 BICU (BASE-ENGINE IMAGE CONTROL UNIT)

1. Rear cover (■ p.4-4)
2. Separate the BICU [A] from the CTL board [B] (■ x 5, ■ x 2).

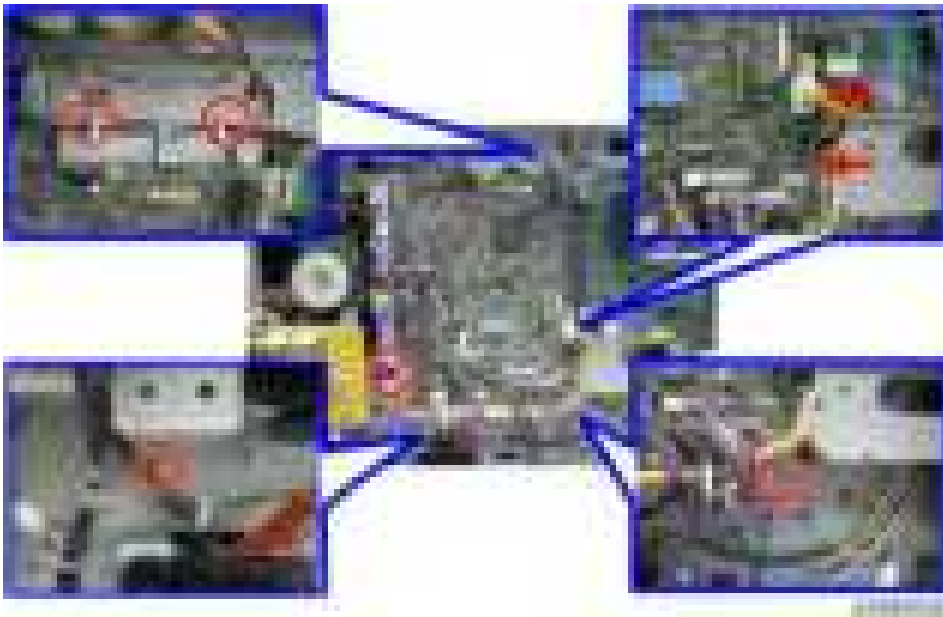



3. BICU [A] ( x 8,  All).



Note

- Remove the NVRAM [B] from the old BICU and install it on the new BICU when you replace the BICU. The NVRAM keeps machine-specific data.

Replacing the NVRAM on the BICU

1. Replace the NVRAM if the NVRAM on the old BICU board is defective.
2. After replacing the NVRAM, clear the engine NVRAM with SP5801-002. Then input the following values from the most recent SMC list:
 - SP4-609-001, 002
 - SP4-610-001, 002, 003, 004
 - SP4-611-001, 002


4.13.6 MAIN MOTOR

1. Rear cover (■ p.4-4)
2. Main motor [A] (■ x 3, ■ x 1)



4.13.7 REAR EXHAUST FAN (DUPLEX MODELS ONLY)

1. Platen cover, or ARDF (if installed)
2. Rear cover (■ p.4-4)
3. Top rear cover (■ p.4-6)
4. Bracket [A] (■ x 4)

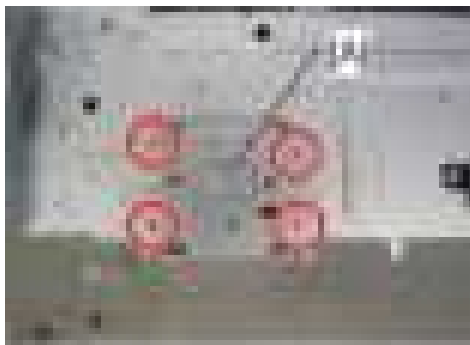

5. Rear exhaust fan [A] (■ x 3)



Replacement
and
Adjustment

★ Important

- Make sure that the arrow on the fan [A] points to the outside of the copier when you reassemble. The arrow indicates the direction of the air current.




4.13.8 LEFT EXHAUST FAN

1. Rear cover (p.4-4)
2. Left cover (p.4-11)
3. Fan cover [A] (x 2)



4. Fan [A] (x 1, x 1)

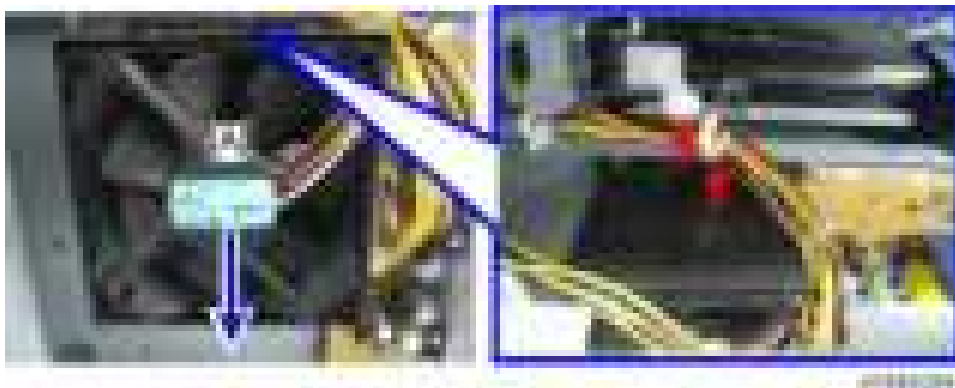


★ Important

- Make sure that the arrow on the fan [A] points to the outside of the copier when you reassemble. The arrow indicates the direction of the air current.

**4.13.9 PSU (POWER SUPPLY UNIT)**


1. Left cover (p.4-11)
2. PSU [A] (All connectors, x 6)

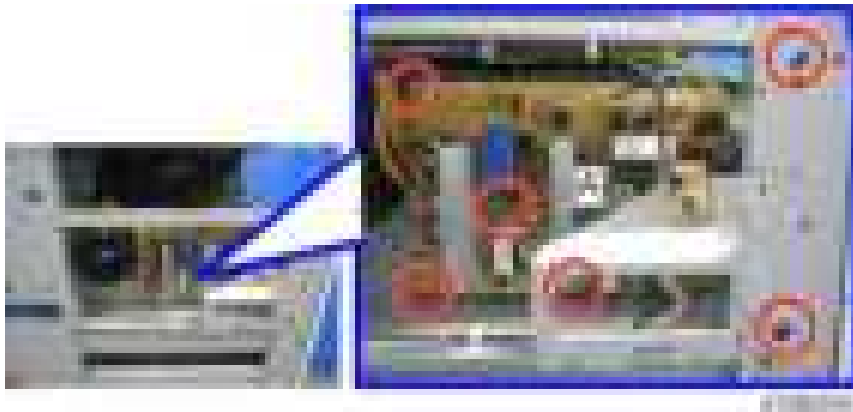**Replacement
and
Adjustment**

4.13.10 GEARBOX

Replacement Procedure

1. Inverter tray [A]
2. Exit rear cover (p.4-4 "Output Tray, Exit Cover, Exit Rear Cover")

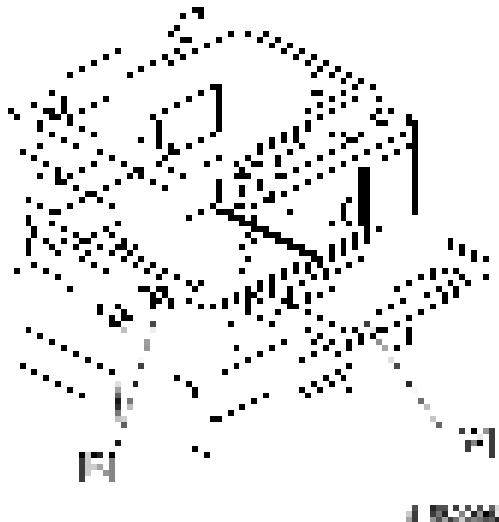

Note


- This step releases the topmost part of the BICU bracket.

3. High-voltage power supply board (with the bracket) (p.4-97)
4. BICU (with the bracket) (p.4-97)
5. Main motor (p.4-99)
6. Rear exhaust fan (Duplex Models Only) (p.4-99)
7. Registration clutch (p.4-64)
8. PCU (p.4-50)

Note

- This step releases the gear (on the gearbox) that drives the PCU.

9. Ground plate [E] (x 2)
10. Gearbox [F] (x 5, 1 belt)

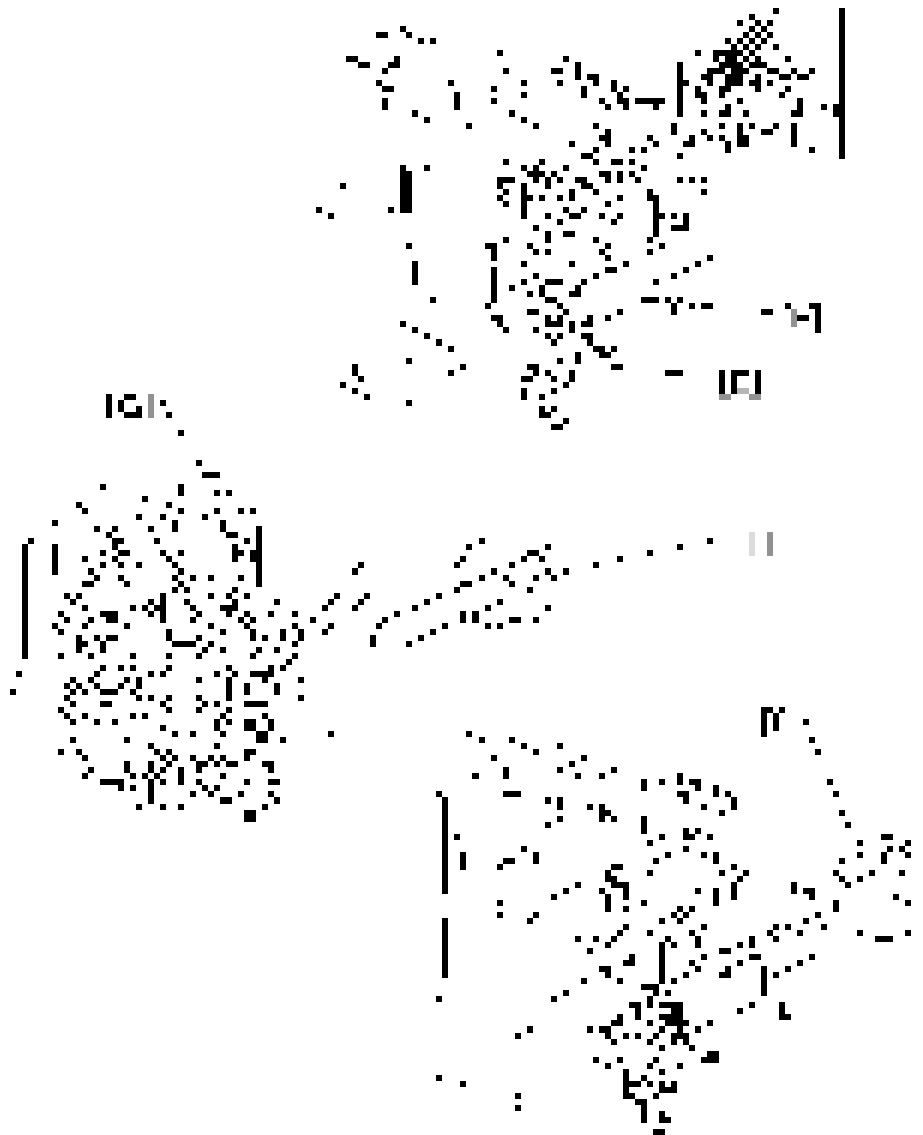


Do not change the position of the spring [G] and make sure that the bushing [H] on the PCU drive shaft is in the correct position you when you reassemble. You can adjust its position by rotating the gear [I] seen from the opening of the gearbox.

Replacement
and
Adjustment

Gear Arrangement in the Gearbox

The gears are numbered 1 to 12 in the order in which they are to be installed in the gearbox.

These numbers show both on the gearbox and on the front (exposed) surface of each gear. If the gears fall out, start by finding gear number 1 and installing it onto location number 1 (setting it into place so that the side with the printed number stays visible). Then install the remaining gears (2 to 12) in the same way.

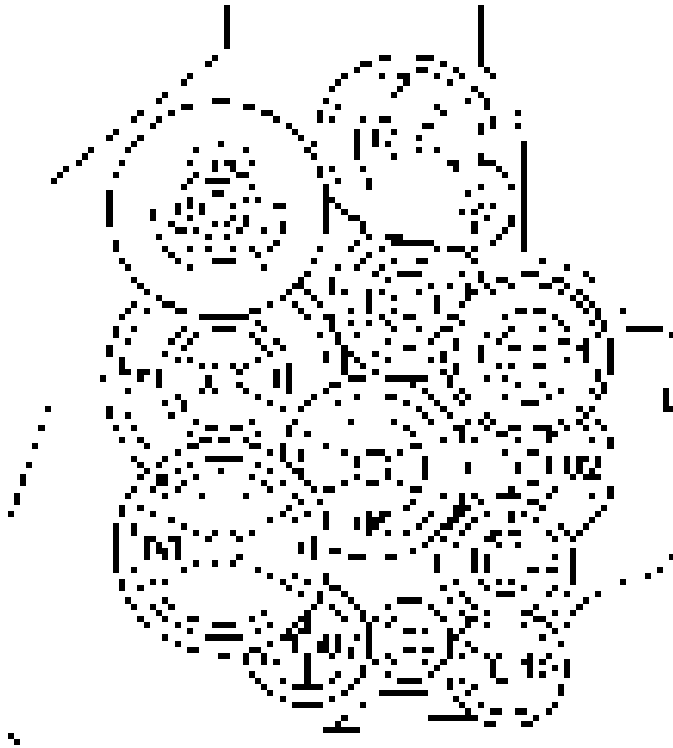

4.14 COPY ADJUSTMENTS PRINTING/SCANNING

Note

- You need to perform the adjustment after you do a Memory All Clear, and after you replace or adjust any of the following parts.
 - First or second scanner
 - Lens Block
 - Scanner Motor
 - Polygonal Mirror Motor
 - Paper Tray
 - Paper Side Fence
- For detailed explanations about how to access and use the SP modes, see Section 5.

4.14.1 PRINTING

Note


- Make sure the paper is installed correctly in each paper tray before you start these adjustments.
- Use the Trimming Area Pattern SP5-902, No. 10 (D160/D161/D170) or SP2-109, No.14 (D158/D159) to print the test pattern for the printing adjustments below.
- Set SP5-902 (D160/D161/D170) or SP2-109 (D158/D159) to 0 again after you complete these printing adjustments.

- Registration - Leading Edge/Side-to-Side -

1. Check the leading edge registration for each paper feed station, and adjust each of these registrations using SP1-001.
2. Check the side-to-side registration for each paper feed station, and adjust these registrations using SP1-001. (Adjust the trays in order: the 1st tray first, then the 2nd tray, etc.)

Tray	SP mode	Specification
Any paper tray: Plain	SP1-001-002	$2 \pm 1.5 \text{ mm}$
Any paper tray: Mid Thick	SP1-001-003	
Any paper tray: Thick	SP1-001-004	
By-pass feed: Plain	SP1-001-007	

Tray	SP mode	Specification
By-pass feed: Mid Thick	SP1-001-008	
By-pass feed: Thick	SP1-001-009	
Duplex: Plain	SP1-001-013	
Duplex: Mid Thick	SP1-001-014	
Duplex: Thick	SP1-001-015	
By-pass feed	SP1-002-001	
Tray Main 1	SP1-002-002	
Tray Main 2	SP1-002-003	
Tray Bank 1	SP1-002-004	
Tray Bank 2	SP1-002-005	
Duplex	SP1-002-006	

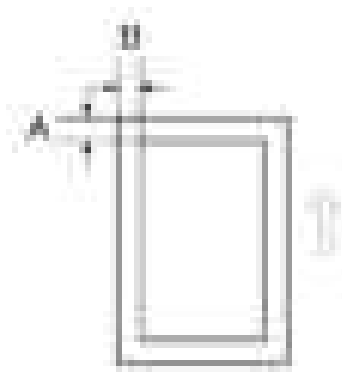

A: Leading Edge Registration

B: Side-to-side Registration

- Blank Margin -

Note


- If the leading edge or side-to-side registration cannot be adjusted to within the specification, then adjust the leading-edge blank margin or the left-side blank margin.
1. Check the trailing edge and right side edge blank margins, and adjust them using the following SP modes.
<D160/D161/D170>

	SP mode	Specification
Trailing edge	SP2-101-002	2 +2.5/-1.5 mm
Right edge	SP2-101-004	
Leading edge	SP2-101-001	2 ± 1.5 mm
Left edge	SP2-101-003	

<D158/D159>

	SP mode	Specification
Trailing edge	SP2-103-002	3.0 mm [0.0-9.0 mm]
Leading edge	SP2-103-001	
Right edge	SP2-103-004	2.0 mm [0.0-9.0 mm]
Left edge	SP2-103-003	
Duplex Trail: L Size: Plain	SP2-103-005	1.0 mm [0.0-4.0 mm]
Duplex Trail: M Size: Plain	SP2-103-006	0.8 mm [0.0-4.0 mm]
Duplex Trail: S Size: Plain	SP2-103-007	0.6 mm [0.0-4.0 mm]
Duplex Left: Plain	SP2-103-008	0.3 mm [0.0-1.5 mm]
Duplex Right: Plain	SP2-103-009	
Duplex Trail: L Size: Thick	SP2-103-010	0.8 mm [0.0-4.0 mm]
Duplex Trail: M Size: Thick	SP2-103-011	0.6 mm [0.0-4.0 mm]
Duplex Trail: S Size: Thick	SP2-103-012	0.4 mm [0.0-4.0 mm]
Duplex Left: Thick	SP2-103-013	0.1 mm [0.0-1.5 mm]
Duplex Right: Thick	SP2-103-014	

Replacement
and
Adjustment

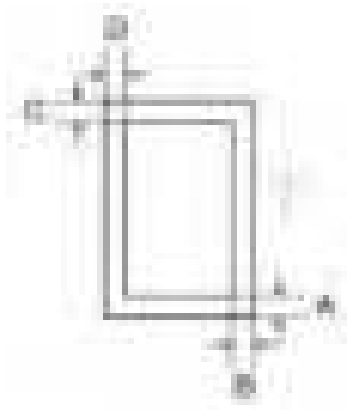

A: Trailing Edge Blank Margin

B: Right Edge Blank Margin

C: Leading Edge Blank Margin

D: Left Edge Blank Margin

- Main Scan Magnification -

1. Print the single-dot grid pattern (D160/D161/D170: SP5-902-001, No.5, D158/D159: SP2-109-001, No.7).
2. Check the magnification (the grid size should be 2.7 x 2.7 mm), and if necessary use SP 2998 to adjust it. The specification is $100 \pm 1\%$.

4.14.2 SCANNING


Note

- Before doing the following scanner adjustments, check and adjust the printing leading-edge and side-to-side registrations and the printing blank margins (as described above).
- Use an A3 test chart to perform the following adjustments.

- Registration: Platen Mode -

- Place the test chart on the exposure glass and make a copy from one of the feed stations.
- Check the leading edge and side-to-side registration, and adjust as necessary with the following SP modes.


	SP mode	Specification
Leading edge	SP4-010	2 ± 2.0 mm
Side-to-side	SP4-011	2 ± 2.5 mm

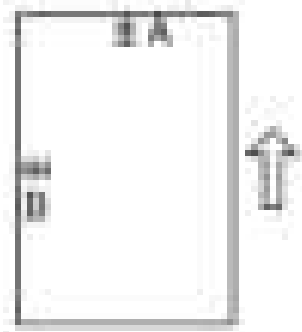

A: Leading edge registration

B: Side-to-side registration

- Magnification -

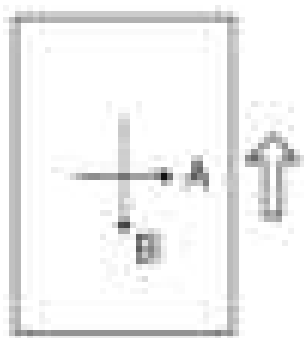

A: Main scan magnification

B: Sub-scan magnification

- Main Scan Magnification (Only for D160/D161/D170) -

1. Place the OS-A3 test chart on the exposure glass and make a copy from one of the feed stations.
2. Check the magnification ratio. If necessary, adjust the magnification with the following SP mode.


	SP mode	Specification
Main-scan magnification	SP4-009	± 1.0%

- Sub-Scan Magnification -

1. Place the OS-A3 test chart on the exposure glass and make a copy from one of the feed stations.
2. Check the magnification ratio. If necessary, adjust the magnification with the following SP mode.

	SP mode	Specification
Sub-scan magnification	SP4-008	± 1.0%

4.14.3 ARDF IMAGE ADJUSTMENT

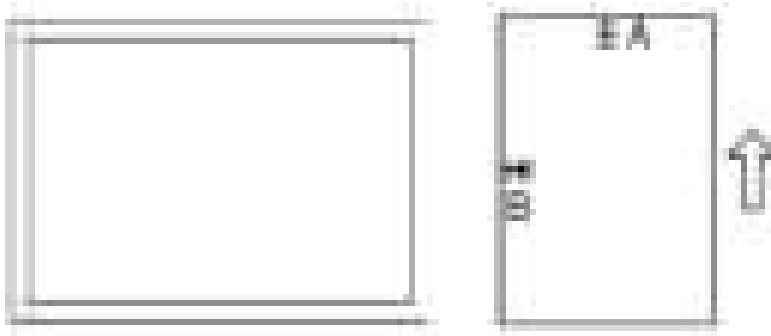

A: Leading edge registration


B: Side-to-side registration

Note

- Make a temporary test chart as shown above, using A3/11" x 17" paper.
1. Place the temporary test chart on the ARDF and make a copy from one of the feed stations.
 2. Check the registrations, and adjust as necessary with the appropriate SP modes, as follows.

	SP mode
ADF Adjustment - Side to Side Registration	SP6-006-001 (D160/D161/D170)
ADF Adjustment - Leading Registration	SP6-006-002 (D160/D161/D170)
ADF Adjustment - Magnification	SP6-006-005 (D160/D161/D170)
ADF Adjustment - Side to Side Registration: Front	SP6-006-001 (D158/D159)
ADF Adjustment - Side to Side Registration: Rear	SP6-006-002 (D158/D159)
ADF Adjustment - Leading Edge Registration	SP6-006-003 (D158/D159)
DF Magnification Adjustment	SP6-017-001 (D158/D159)

- Sub-scan Magnification -

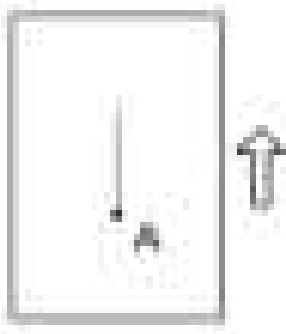

A: Sub-scan magnification

Note

- Make a temporary test chart as shown above, with A3/11" x 17" paper.
1. Place the temporary test chart on the ARDF and make a copy from one of the feed stations.
 2. Check the registration, and if necessary adjust it with SP6-017-001. The specification is \pm 1.0%.

TROUBLESHOOTING

REVISION HISTORY		
Page	Date	Added/Updated/New
27 ~ 42	11/07/2013	Added SC670-00 thru SC672-99
34 ~ 97	01/16/2014	Added SC8xx: Controller SC Codes
98 ~ 106	01/16/2014	Moved original pages 34-42 to 98-106

5. TROUBLESHOOTING

5.1 TROUBLESHOOTING IMAGE QUALITY PROBLEMS

5.1.1 MARKS (VERTICAL STREAKS) ON PRINTS AND COPIES DUE TO SCANNING PROBLEMS

Marks on prints and copies are mostly due to dirt on the DF exposure glass [A], generally caused by adhesive contaminants (such as ball point pen ink and correction fluid).





Compared to non-adhesive contaminants (such as paper fragments and eraser dust), adhesive contaminants are more likely to lead to complaints from customers because of the following:

- Vertical streaks caused by adhesive contaminants are more visible in terms of image quality.
- Unless removed by cleaning, adhesive contaminants continue to produce vertical streaks, while non-adhesive contaminants stop producing streaks after they are dislodged.
- Many adhesive contaminants are difficult to remove by cleaning.

The ARDF DF2020 (D684) features a system (non-contact scanning) to reduce vertical streaks caused by adhesive contaminants.

Troubleshooting Image Quality Problems

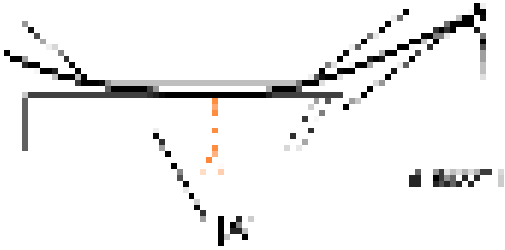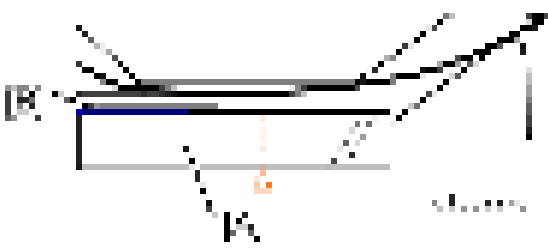Contact scanning: Other ADFs/ARDFs	Non-contact scanning: ARDF DF2020 (D684)
 <p>In contact scanning, the whole of the original comes into contact with the DF exposure glass [A] so that non-adhesive contaminants can be removed.</p>	 <p>By means of the Mylar sheet [B], originals are kept slightly above the DF exposure glass [A], preventing adhesive contaminants from adhering to the glass.</p>

The ARDF DF2020 (D684) can be converted from non-contact scanning to contact scanning for users who wish to reduce vertical streaks caused by non-adhesive contaminants.

Converting the ARDF DF2020 (D684) to Contact Scanning

★ Important

- **Unplug the machine power cord before starting the following procedure.**


1. ARDF front cover [A] (📎 x 1)



2. Scanning guide plate [B] (📎 [A] x 1)




3. Remove the plastic guides [A] on the sides of the scanning guide plate. (📎 x 1)

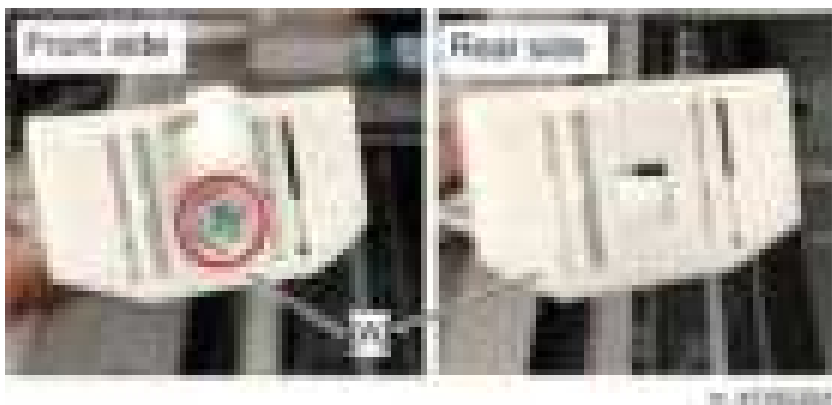

4. Attach the guides for contact scanning. Each guide has a hole [B].

Trouble-shooting

Troubleshooting Image Quality Problems

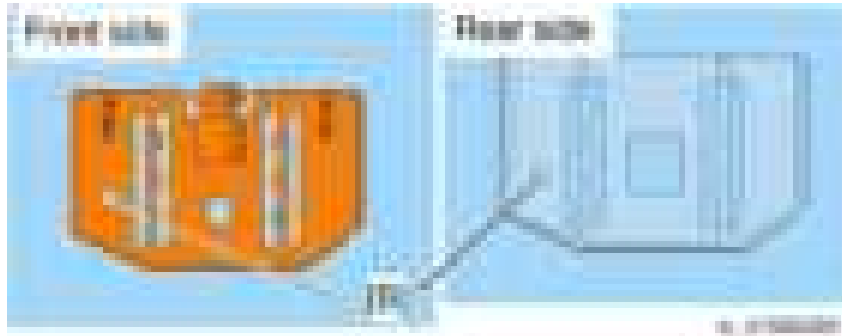

5. Mount the scanning guide plate, taking care not to damage the Mylar sheet [A].




6. Peel off the mylar from the DF exposure glass with your hands.



7. Use alcohol to clean the DF exposure glass [A].

⬇ Note

- To avoid paper jams, make sure adhesive is completely removed.

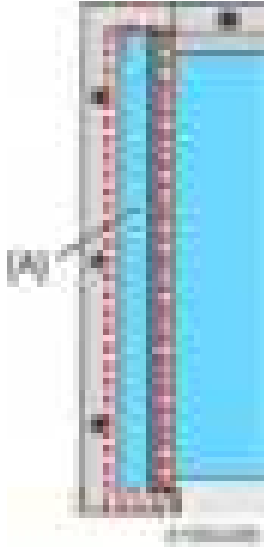

8. Turn the main switch on.
9. Start the SP mode.
10. Select SP4-688-001 (DF Density Adjustment) and change the setting to “101%” (For the non-contact method, select “106%”).

5.2 SERVICE CALL CONDITIONS

5.2.1 SUMMARY

There are four levels of service call conditions.

Level	Definition	Reset Procedure
A	To prevent damage to the machine, the main machine cannot be operated until the SC has been reset by a service representative (see the note below).	Enter SP mode, and then turn the main power switch off and on.
B	If the SC was caused by incorrect sensor detection, the SC can be reset by turning the main power switch off and on.	Turn the main power switch off and on.
C	The main machine can be operated as usual, excluding the unit related to the service call.	Turn the main power switch off and on.
D	The SC history is updated. The machine can be operated as usual.	The SC will not be displayed. Only the SC history is updated.

Note

- If the problem concerns electrical circuit boards, first disconnect then reconnect the connectors before replacing the PCBs.
- If the problem concerns a motor lock, first check the mechanical load before replacing motors or sensors.

5.2.2 SC CODE DESCRIPTIONS

SC1xx: Scanning

No. Definition		Symptom	Possible Cause
101-01	B	Exposure Lamp Error (D158/D159)	
		The standard white level was not detected properly when scanning the white plate.	<ul style="list-style-type: none"> ▪ Exposure lamp ▪ Exposure lamp stabilizer ▪ Exposure lamp connector ▪ Dirty scanner mirror or scanner mirror out of position ▪ SBU board ▪ SBU connector ▪ Lens block out of position
101-02	B	Exposure Lamp Error (LED light adjustment) (D158/D159)	
		LED error flag is on	<ul style="list-style-type: none"> ▪ Defective LED ▪ Defective LED driver ▪ Defective harness
101	B	Exposure Lamp Error (D160/D161/D170)	
		The standard white level was not detected properly when scanning the white plate.	<ul style="list-style-type: none"> ▪ Defective LED ▪ Defective harness ▪ Dirty scanner mirror or scanner mirror out of position
102	B	LED light adjustment error (D158/D159)	
		Reading white plate level is over prescribed rate.	<ul style="list-style-type: none"> ▪ Defective LED ▪ Defective LED driver ▪ Defective SBU ▪ Defective BICU ▪ Defective harness

Trouble-shooting

No. Definition		Symptom	Possible Cause
120	B	Scanner home position error 1	
		The scanner home position sensor does not detect the off condition during initialization or copying.	<ul style="list-style-type: none"> ▪ Scanner home position sensor ▪ Scanner drive motor ▪ Scanner home position sensor connector ▪ Scanner drive motor connector ▪ BICU board
121	B	Scanner home position error 2	
		The scanner home position sensor does not detect the on condition during initialization or copying.	<ul style="list-style-type: none"> ▪ Scanner home position sensor ▪ Scanner drive motor ▪ Scanner home position sensor connector ▪ Scanner drive motor connector ▪ BICU board
141	B	Black level correction error	
		Black level is over prescribed rate.	<ul style="list-style-type: none"> ▪ Defective SBU ▪ Defective BICU ▪ Defective harness
142	B	White level correction error	
		White level is over prescribed rate.	<ul style="list-style-type: none"> ▪ Defective SBU ▪ Defective LED ▪ Defective LED driver ▪ Defective BICU ▪ Defective harness ▪ Scanner unit condensation ▪ Dirty scanner mirror or lens ▪ Dirty platen sheet

No. Definition		Symptom	Possible Cause
144	B	Communication Error between BICU and SBU	
		The BICU board cannot detect the SBU connect signal.	<ul style="list-style-type: none"> ▪ The flat cable between the BICU board and the SBU has a poor connection ▪ The flat cable between the BICU board and the SBU is damaged ▪ BICU board ▪ SBU
161-01	B	IPU (BICU) error (LSYNC error) (D158/D159)	
		Error was detected in the result of the BICU self-check at startup.	<ul style="list-style-type: none"> ▪ Defective BICU ▪ Bad cable connection between the SBU and the BICU.
161-02	B	IPU (BICU) error (RI response error) (D158/D159)	
		Error was detected on access to the RI.	<ul style="list-style-type: none"> ▪ Defective BICU
165	B	Unauthorized copy protection Failed (D158/D159)	
		Detected the wrong type of copy data protection unit, or no unit was found when copy protection was turned on, or a problem was detected with the unit at startup.	<ul style="list-style-type: none"> ▪ Copy data protection unit not attached firmly. ▪ Defective copy data protection unit
195	B	Serial number mismatch	
		Checking if the serial number matches.	<ul style="list-style-type: none"> ▪ Serial numbers (11 digits) do not match.

SC2xx: Exposure (D158/D159)

No. Definition		Symptom	Possible Cause
202	C	Polygon motor error : ON timeout	
		When the polygon motor is rotating.	<ul style="list-style-type: none"> ▪ Defective or disconnected harness to polygon motor ▪ Defective polygon motor ▪ The polygon motor drive pulse is not released correctly.
203	C	Polygon motor error : OFF timeout	
		When the polygon motor is OFF.	<ul style="list-style-type: none"> ▪ Defective or disconnected harness to polygon motor ▪ Defective polygon motor ▪ The polygon motor drive pulse is not released correctly.
204	C	Polygon motor error : PMRDY_N signal error	
		When the polygon motor is rotating.	<ul style="list-style-type: none"> ▪ Defective or disconnected harness to polygon motor ▪ Defective polygon motor
220	C	Laser synchronizing detection error	
		When the laser synchronizing detection is ON	<ul style="list-style-type: none"> ▪ Disconnected or defective I/F harness to laser unit. ▪ The laser fails to reach the photo detector. ▪ Defective laser unit ▪ Defective BICU

No. Definition		Symptom	Possible Cause
230	C	FGATE ON error	
		When processing the image	<ul style="list-style-type: none"> ▪ Disconnected or defective connector between BICU and controller board ▪ Disconnected or defective harness between BICU and laser unit
231	C	FGATE OFF error	
		When processing the image	<ul style="list-style-type: none"> ▪ Defective BICU ▪ Disconnected or defective connector between BICU and controller board
240	D	LD error	
		The LD driver's error signal is detected after LD initialization.	<ul style="list-style-type: none"> ▪ Worn-out LD ▪ Disconnected or broken harness of the LD ▪ Defective LD drive component ▪ Defective laser unit
270	B	GAVD communication error	
		Energy saver mode was turned off during main power is ON.	<ul style="list-style-type: none"> ▪ Defective BICU

SC3xx: Image Processing

No. Definition		Symptom	Possible Cause
302	B	Charge roller current leak	
		A current leak signal for the charge roller is detected.	<ul style="list-style-type: none"> ▪ Charge roller damaged ▪ High voltage supply board ▪ Poor connection of the PCU
320	B	Polygonal mirror motor error	
		The polygon mirror motor does not reach operating speed within 10 seconds after the motor ON signal is sent, or does not turn on within one of the 200 ms check intervals during operation.	<ul style="list-style-type: none"> ▪ Polygon mirror motor ▪ Poor connection between the polygonal mirror motor driver and the BICU board ▪ Damaged cable between BICU and polygonal mirror motor driver ▪ BICU board
321	C	No laser writing signal (F-GATE) error	
		The laser-writing signal (F-GATE) fails to turn Low after the laser crosses 5 mm on the drum surface from the laser writing start position.	<ul style="list-style-type: none"> ▪ BICU board ▪ The fax controller or printer controller has a poor connection ▪ Fax controller or printer controller
322	B	Laser synchronization error	
		The main scan synchronization detector board cannot detect the laser synchronization signal for more than 5 consecutive 100 ms intervals.	<ul style="list-style-type: none"> ▪ Poor connection between the laser unit and the BICU board ▪ Damaged cable between BICU and laser unit ▪ Laser unit ▪ BICU board

No. Definition		Symptom	Possible Cause
350	B	ID sensor error (In-process)	
		Vsg adjustment error Vsp error Vsg error Vsg-Vsp error TD sensor error	<ul style="list-style-type: none"> ▪ Dirt on the ID sensor ▪ ID sensor not installed at the correct angle. ▪ Defective ID sensor ▪ Defective PCU ▪ Development roller is not rotating
351	B	ID sensor : Vsg measurement error (In-process) (D158/D159)	
		When the ID sensor detects that Vsg is 5 V and LED drive current is minimum (PWM=0).	<ul style="list-style-type: none"> ▪ Defective ID sensor ▪ Disconnection of the harness to the ID sensor ▪ Bad electrical contact of the ID sensor connector ▪ Defective BCU ▪ Defective laser unit ▪ Defective developer density ▪ Defective high-voltage power pack ▪ Dirty ID sensor
353	B	ID sensor : Auto adjustment value error (In-process) (D158/D159)	
		When the ID sensor is adjusting Vsg automatically.	<ul style="list-style-type: none"> ▪ Defective ID sensor ▪ Disconnection of the harness to the ID sensor ▪ Bad electrical contact of the ID sensor connector ▪ Defective BCU ▪ Defective laser unit ▪ Defective developer density ▪ Defective high-voltage power pack ▪ Dirty ID sensor

No. Definition	Symptom	Possible Cause
354	<p data-bbox="331 360 363 936">B</p> <p data-bbox="391 360 764 936">When the ID sensor is adjusting Vsg automatically.</p>	<p data-bbox="391 360 1316 434">ID sensor : Auto adjustment time-out (In-process) (D158/D159)</p> <ul data-bbox="786 456 1286 920" style="list-style-type: none"> ▪ Defective ID sensor ▪ Disconnection of the harness to the ID sensor ▪ Bad electrical contact of the ID sensor connector ▪ Defective BCU ▪ Defective laser unit ▪ Defective developer density ▪ Defective high-voltage power pack ▪ Dirty ID sensor
355	<p data-bbox="331 936 363 1512">D</p> <p data-bbox="391 936 764 1512">SC350~354 happen during normal operation. This error isn't displayed on the panel but is left in the error log.</p>	<p data-bbox="391 936 1316 1010">P sensor error (D158/D159)</p> <ul data-bbox="786 1032 1286 1496" style="list-style-type: none"> ▪ Defective ID sensor ▪ Disconnection of the harness to the ID sensor ▪ Bad electrical contact of the ID sensor connector ▪ Defective BCU ▪ Defective laser unit ▪ Defective developer density ▪ Defective high-voltage power pack ▪ Dirty ID sensor
389	<p data-bbox="331 1512 363 1895">D</p> <p data-bbox="391 1512 764 1895">Detected the following value TD sensor output value < 0.2V TD sensor output value > 4.0V 10 times in series.</p>	<p data-bbox="391 1512 1316 1585">TD sensor error (D158/D159)</p> <ul data-bbox="786 1608 1286 1883" style="list-style-type: none"> ▪ Defective TD sensor ▪ Bad contact of the connector to the TD sensor

No. Definition		Symptom	Possible Cause
390	B	TD sensor error	
		The TD sensor outputs less than 0.2 V or more than 4.0 V 10 times consecutively during copying.	<ul style="list-style-type: none"> ▪ TD sensor abnormal ▪ Poor connection of the PCU
391	B	Development bias leak	
		A development bias leak signal is detected.	<ul style="list-style-type: none"> ▪ Poor connection of the PCU ▪ High voltage supply board
392	B	TD sensor initial setting error	
		TD sensor initial setting is not performed correctly.	<ul style="list-style-type: none"> ▪ ID sensor ▪ No developer ▪ Drum does not turn ▪ Development roller does not turn ▪ Poor connection of the PCU ▪ The voltage is not applied to charge roller

SC4xx: Image Processing

No. Definition		Symptom	Possible Cause
440	B	Image transfer positive electrode current error	
		An interrupt checks the status of the power pack every 20 ms. This SC is issued if the BCU detects a short in the power pack 10 times consecutively.	<ul style="list-style-type: none"> ▪ Defective image transfer roller ▪ Defective high voltage supply unit ▪ Connection error ▪ Image transfer unit is not installed correctly.
460	B	Separation power pack output error (D158/D159)	
		An interrupt checks the status of the power pack every 20 ms. This SC is issued if the BCU detects a short in the power pack 10 times at D (ac).	<ul style="list-style-type: none"> ▪ High-voltage leak ▪ Loose connection ▪ Broken harness ▪ Defective-high voltage supply unit
490	B	Toner transport motor error (D158/D159)	
		When the toner transport motor is ON	<ul style="list-style-type: none"> ▪ Motor lock ▪ Defective motor drive

SC5xx: Paper Feed and Fusing

No. Definition		Symptom	Possible Cause
501	C	Tray 1 lift motor malfunction (Optional paper tray units)	
		The paper lift sensor fails to activate twice continuously after the tray lift motor has been on for 12 seconds.	<ul style="list-style-type: none"> ▪ Paper lift sensor ▪ Tray lift motor ▪ Too much load on the drive mechanism ▪ Poor tray lift motor connection
502	C	Tray 2 lift motor malfunction (Optional paper tray units)	
		The paper lift sensor fails to activate twice continuously after the tray lift motor has been on for 12 seconds.	<ul style="list-style-type: none"> ▪ Paper lift sensor ▪ Tray lift motor ▪ Too much load on the drive mechanism ▪ Poor tray lift motor connection
503 -01 -11	C	Paper bank 1 error (Paper Feed Unit or LCT) (Paper lift error) (D158/D159)	
		The paper lift sensor fails to activate after the tray lift motor has been on for 18 seconds	<ul style="list-style-type: none"> ▪ Paper lift sensor ▪ Tray lift motor ▪ Poor tray lift motor connection ▪ Broken harness ▪ Defective bank controller board
503 -02 -12	C	Paper bank 1 error (Paper Feed Unit or LCT) (Upper limit error) (D158/D159)	
		The paper lift sensor fails to activate three times continuously right after the tray lift motor has been turned on.	<ul style="list-style-type: none"> ▪ Paper lift sensor ▪ Broken harness ▪ Defective bank controller board

**Trouble-
shooting**

Service Call Conditions

No. Definition		Symptom	Possible Cause
503	C	Tray 3 error (D160/D161/D170)	
		The paper lift sensor fails to activate three times continuously after the tray lift motor has been on for 18 seconds.	<ul style="list-style-type: none"> ▪ Paper lift sensor ▪ Tray lift motor ▪ Broken harness ▪ Defective bank controller board
504-01-11	C	Paper bank 2 error (Paper Feed Unit or LCT) (Paper lift error) (D158/D159)	
		The paper lift sensor fails to activate after the tray lift motor has been on for 18 seconds.	<ul style="list-style-type: none"> ▪ Paper lift sensor ▪ Tray lift motor ▪ Broken harness ▪ Defective bank controller board
504-02-12	C	Paper bank 2 error (Paper Feed Unit or LCT) (Upper limit error) (D158/D159)	
		The paper lift sensor fails to activate right after the tray lift motor has been turned on.	<ul style="list-style-type: none"> ▪ Paper lift sensor ▪ Broken harness ▪ Defective bank controller board
504	C	Tray 4 error (D160/D161/D170)	
		The paper lift sensor fails to activate three times continuously after the tray lift motor has been on for 18 seconds.	<ul style="list-style-type: none"> ▪ Paper lift sensor ▪ Tray lift motor ▪ Broken harness ▪ Defective bank controller board

No. Definition	Symptom	Possible Cause
508	C	<p>By-pass bottom plate error</p> <p>The signal from the by-pass tray HP sensor does not change for 1.0 second after the by-pass motor has rotated counterclockwise. If this condition occurs three consecutive times, the SC is generated.</p> <ul style="list-style-type: none"> ▪ Disconnect or defective harness of the by-pass motor ▪ Defective or disconnected connection for the by-pass motor.
520	C	<p>Registration motor error</p> <p>When the registration motor is rotating</p> <ul style="list-style-type: none"> ▪ Motor lock ▪ Defective motor driver
521 -01 -11	C	<p>Bank transport motor error (D158/D159)</p> <p>An error code is issued from the paper bank unit.</p> <ul style="list-style-type: none"> ▪ Defective bank transport motor ▪ Loose connection ▪ Disconnected or broken harness ▪ Defective bank controller board
521	C	<p>Bank transport motor error (D160/D161/D170)</p> <p>The error code occurs when the optional paper tray unit (D698) is installed.</p> <ul style="list-style-type: none"> ▪ Defective bank transport motor ▪ Loose connection ▪ Defective bank controller board
530	B	Fusing fan error (D158/D159)
531	B	QSU fan error (D158/D159)

Service Call Conditions

No. Definition		Symptom	Possible Cause
532	B	CTL fan error (D158/D159)	
		Lock signal is not issued for more than 50 consecutive 100 ms intervals, during fan is rotating.	<ul style="list-style-type: none"> ▪ Motor overload ▪ Loose connection
541	A	Fusing thermistor open (center)	
		The fusing temperature is below 0°C for 5 seconds (detected by the thermistor).	<ul style="list-style-type: none"> ▪ Fusing thermistor defective or out of position ▪ Loose connectors
542-01	A	Fusing reload failed (center) (D158/D159)	
		The fusing temperature rises less than 4 degrees in 2 seconds, and this continues 5 times consecutively.	<ul style="list-style-type: none"> ▪ Fusing thermistor defective or out of position ▪ Power supply board
542-03	A	Fusing reload failed (center) (D158/D159)	
		The fusing temperature does not reach the target within 28 seconds after the fusing lamp controller is activated.	<ul style="list-style-type: none"> ▪ Broken fusing lamp cables

No. Definition	Symptom	Possible Cause
542	A	Fusing reload failed (center) (D160/D161/D170)
		NOT reaching the reload temperature in 20 ms after starting fusing lamp control. <ul style="list-style-type: none"> ▪ Defective thermistor ▪ Disconnected fusing lamp
543	A	Fusing overheat error (center)
		The fusing temperature is over 230°C for 1 second (detected by the thermistor). <ul style="list-style-type: none"> ▪ Fusing thermistor ▪ Power supply board
544	A	Fusing overheat error (center) 2
		The fusing temperature is over 250°C for more than a certain time (zero cross signal x 3). (detected by the fusing temperature monitor circuit). <ul style="list-style-type: none"> ▪ Fusing thermistor ▪ Power supply board
545	A	Fusing lamp overheat error (center)
		After the fusing temperature reaches the target temperature, the fusing lamp does not turn off for 29 consecutive seconds. <ul style="list-style-type: none"> ▪ Fusing thermistor defective or out of position ▪ Power supply board ▪ Broken fusing lamp cables

Service Call Conditions

No. Definition	Symptom	Possible Cause
547-01	B	Zero cross signal malfunction(D158/D159)
		Zero cross signals are detected three consecutive times at 50 ms intervals. This error is detected before the fusing relay is turned on after turning on the main power or closing all the doors. <ul style="list-style-type: none"> ▪ Defective fusing relay ▪ Defective fusing relay circuit ▪ Defective PSU ▪ Power supply board
547-02	B	Zero cross signal malfunction (D158/D159)
		The zero cross signal is not detected for 3 seconds even though the fusing relay is on after turning on the main power or closing all the doors. <ul style="list-style-type: none"> ▪ Defective fusing relay ▪ Defective fusing relay circuit ▪ Defective PSU ▪ Power supply board
547-03	B	Zero cross signal malfunction(D158/D159)
		A detection error occurs twice or more in 11 frequency detections. This error is defined when the detected zero cross signal is less than 45. <ul style="list-style-type: none"> ▪ Defective fusing relay ▪ Defective fusing relay circuit ▪ Defective PSU ▪ Power supply board
547	B	Zero cross signal malfunction (D160/D161/D170)
		Detecting low-frequency wave <ul style="list-style-type: none"> ▪ Defective PSU ▪ Defective BICU

No. Definition		Symptom	Possible Cause
551	A	Fusing thermistor open (rear)	
		The fusing temperature is below 0°C for 5 seconds (detected by the thermistor).	<ul style="list-style-type: none"> ▪ Fusing thermistor defective or out of position ▪ Loose connectors
552-01	A	Fusing temperature warm-up error (rear) (D158/D159)	
		The fusing temperature rises less than 4 degrees in 2 seconds, and this continues 5 times consecutively.	<ul style="list-style-type: none"> ▪ Fusing thermistor defective or out of position ▪ Power supply board
552-03	A	Fusing temperature warm-up error (rear) (D158/D159)	
		The fusing temperature does not reach the target within 28 seconds after the fusing lamp controller is activated.	<ul style="list-style-type: none"> ▪ Broken fusing lamp cables
552	A	Fusing reload failed (rear) (D160/D161/D170)	
		NOT reaching the reload temperature in 20 ms after starting fusing lamp control.	<ul style="list-style-type: none"> ▪ Defective thermistor ▪ Disconnection of fusing lamp
553	A	Fusing overheat error (rear)	
		The fusing temperature is over 230°C for 1 second (detected by the thermistor).	<ul style="list-style-type: none"> ▪ Fusing thermistor ▪ Power supply board
554	A	Heating roller fusing lamp overheat 2 (hardware error) (D158/D159)	
		-	<ul style="list-style-type: none"> ▪ The triac has shorted out. ▪ Defective BICU ▪ Defective fusing control system

Service Call Conditions

No. Definition	Symptom	Possible Cause
555	A	Fusing lamp overheat error (rear)
		<p>After the fusing temperature reaches the target temperature, the fusing lamp does not turn off for 20 consecutive seconds.</p> <ul style="list-style-type: none"> ▪ Fusing thermistor defective or out of position ▪ Power supply board
557	D	Zero cross frequency error (D158/D159)
		<p>The detection error occurs 10 times or more in 11 frequency detections. This error is defined when the detected zero cross signal is more than 66.</p> <ul style="list-style-type: none"> ▪ Caused by noise
559	A	Jam error detected 3 times in succession
		<p>The exit sensor and the duplex sensor detect a paper jam 3 times in succession This condition can occur when SP1-159-001 is set to 'on'. The default is 'off'.</p> <ul style="list-style-type: none"> ▪ Paper jams can occur for the following reasons. ▪ Dampness ▪ Paper curl ▪ Incorrect paper setting in the paper tray ▪ Stripper pawls coming apart
590	B	Left exhaust fan motor error (D160/D161/D170)
		<p>The CPU detects an exhaust fan lock signal for more than 5 seconds.</p> <ul style="list-style-type: none"> ▪ Loose connection of the exhaust fan motor ▪ Too much load on the motor drive
591	B	Rear exhaust fan motor error (D160/D161/D170)
		<p>The CPU detects an exhaust fan lock signal for more than 5 seconds.</p> <ul style="list-style-type: none"> ▪ Loose connection of the exhaust fan motor ▪ Too much load on the motor drive

SC6xx: Device Communication

No. Definition		Symptom	Possible Cause
620	B	Communication error between BICU and ADF	
		The BICU does not receive a response from the ARDF main board for 4 seconds or more. The BICU receives a break signal from the ARDF main board.	<ul style="list-style-type: none"> ▪ Poor connection between the BICU and ARDF main board (DF connector) ▪ ARDF main board ▪ BICU defective
621	B	ADF connection error (D160/D161/D170)	
		An incorrect ARDF is detected. An ARDF (including the correct ARDF) is installed while the copier is in the energy saver mode.	<ul style="list-style-type: none"> ▪ ARDF incorrect ▪ The connector of the ARDF is installed while the machine is in the energy saver mode.
622	B	Paper Bank communication error	
		An error occurs during line connection. A communication error report is received from the UART.	<ul style="list-style-type: none"> ▪ The paper bank's control board is faulty. ▪ Defective BCU/IOB ▪ The paper bank's connection is faulty.
632	B	Accounting error 1	
		An error is detected during the communication with the MF accounting device.	<ul style="list-style-type: none"> ▪ Accounting device ▪ Loose connection

Service Call Conditions

No. Definition		Symptom	Possible Cause
634	C	Accounting RAM error	
		An error is detected in the RAM that saves the information on the MF accounting.	<ul style="list-style-type: none"> ▪ Accounting device
635	C	Accounting RAM error	
		An error is detected in the RAM that saves the information on the MF accounting.	<ul style="list-style-type: none"> ▪ Accounting device
669-01	B	EEPROM communication error – ID error (D158/D159)	
-02	B	EEPROM communication error – Channel error (D158/D159)	
-03	B	EEPROM communication error – Device error (D158/D159)	
-04	B	EEPROM communication error – Communication failed error (D158/D159)	
-05	B	EEPROM communication error – Timeout error (D158/D159)	
-06	B	EEPROM communication error – Communication suspended error (D158/D159)	
-07	B	EEPROM communication error – Buffer full error (D158/D159)	
-08	B	EEPROM communication error – No error code (D158/D159)	
-09	B	EEPROM communication error – ID error (D158/D159)	
-10	B	EEPROM communication error – No error code (D158/D159)	
-11	B	EEPROM communication error – ID error (D158/D159)	
-12	B	EEPROM communication error – Channel error (D158/D159)	
-13	B	EEPROM communication error – Device error(D158/D159)	

No. Definition		Symptom	Possible Cause
-14	B	EEPROM communication error – Communication failed error (D158/D159)	
-15	B	EEPROM communication error – Timeout error (D158/D159)	
-16	B	EEPROM communication error – Communication suspended error (D158/D159)	
-17	B	EEPROM communication error – Buffer full error (D158/D159)	
-18	B	EEPROM communication error – No error code (D158/D159)	
-19	B	EEPROM communication error – ID error (D158/D159)	
-20	B	EEPROM communication error – Channel error (D158/D159)	
-21	B	EEPROM communication error – Device error (D158/D159)	
-22	B	EEPROM communication error – Communication failed error (D158/D159)	
-23	B	EEPROM communication error – Timeout error (D158/D159)	
-24	B	EEPROM communication error – Communication suspended error (D158/D159)	
-25	B	EEPROM communication error – Buffer full error (D158/D159)	
-26	B	EEPROM communication error – No error code (D158/D159)	
		Retry of EEPROM communication fails three times after the machine has detected the EEPROM error.	<ul style="list-style-type: none"> ▪ Caused by noise ▪ Defective EEPROM

Trouble shooting

No. Definition		Symptom	Possible Cause
⇒ SC670 -00	D	Engine start up error	
		<p>Case 1</p> <ul style="list-style-type: none"> ▪ /ENGRDY signal was not asserted when the machine was turned on or returned from energy saver mode. ▪ /IPURDY signal was not asserted when the machine was turned on or returned from energy saver mode. ▪ EC response was not received within specified time from power on. ▪ PC response was not received within specified time from power on. ▪ SC response was not received within specified time from power on. ▪ Writing to Rapi driver failed (the other party not found through PCI). <p>Case 2</p> <ul style="list-style-type: none"> ▪ Unexpected down status was detected after /ENGRDY assertion. 	
		<p>Case 1</p> <ul style="list-style-type: none"> ▪ Engine board does not start up. <p>Case 2</p> <ul style="list-style-type: none"> ▪ Engine board reset unexpectedly. 	
		<p>Check the connection between the engine board and the controller board.</p> <ul style="list-style-type: none"> ▪ If it is always reproduced, replace the engine board. If the problem persists, consider replacing the controller board or other boards between them. ▪ If reproducibility is low, multiple causes are to be considered, such as software, engine board, controller board, and PSU. 	

No. Definition		Symptom	Possible Cause
⇒ SC672-10	D	Controller start up error	
		After the machine was powered on, communication between the controller and the operation panel was not established.	
		<ul style="list-style-type: none"> ▪ Controller stalled ▪ Board installed incorrectly ▪ Controller board defective ▪ Operation panel connector loose, broken, or defective ▪ Controller late 	
		<ul style="list-style-type: none"> ▪ Turn the main power off/on. ▪ Check the connection of the controller board. ▪ Replace the controller board. ▪ Check the control panel harness. 	
⇒ SC672-11	D	Controller start up error	
		After the machine was powered on, communication between the controller and the operation panel was not established, or communication with controller was interrupted after a normal startup.	
		<ul style="list-style-type: none"> ▪ Controller stalled ▪ Board installed incorrectly ▪ Controller board defective ▪ Operation panel connector loose, broken, or defective ▪ Controller late 	
		<ul style="list-style-type: none"> ▪ Turn the main power off/on. ▪ Check the connection of the controller board. ▪ Replace the controller board. ▪ Check the control panel harness. 	

Trouble shooting

No. Definition		Symptom	Possible Cause
⇒ SC672-12	D	Controller start up error	
		Communication with controller was interrupted after a normal startup.	
		<ul style="list-style-type: none"> ▪ Controller stalled ▪ Board installed incorrectly ▪ Controller board defective ▪ Operation panel connector loose, broken, or defective ▪ Controller late 	
		<ul style="list-style-type: none"> ▪ Turn the main power off/on. ▪ Check the connection of the controller board. ▪ Replace the controller board. ▪ Check the control panel harness. 	
⇒ SC672-13	D	Controller start up error	
		The operation panel detected that the controller is down.	
		<ul style="list-style-type: none"> ▪ Controller stalled ▪ Board installed incorrectly ▪ Controller board defective ▪ Operation panel connector loose, broken, or defective ▪ Controller late 	
		<ul style="list-style-type: none"> ▪ Turn the main power off/on. ▪ Check the connection of the controller board. ▪ Replace the controller board. ▪ Check the control panel harness. 	

No. Definition		Symptom	Possible Cause
⇒ SC672-99	D	Controller start up error	
		The operation panel software ended abnormally.	
		<ul style="list-style-type: none"> ▪ Controller stalled ▪ Board installed incorrectly ▪ Controller board defective ▪ Operation panel connector loose, broken, or defective ▪ Controller late 	
		<ul style="list-style-type: none"> ▪ Turn the main power off/on. ▪ Check the connection of the controller board. ▪ Replace the controller board. ▪ Check the control panel harness. 	
681-01	B	Device ID is not identified. (D158/D159)	
-06	B	Channel error (D158/D159)	
-11	B	Device error (No ID chip) (D158/D159)	
-16	B	Communication failed (D158/D159)	
-21	B	Timeout error (D158/D159)	
-26	B	Device detection suspended (D158/D159)	
-31	B	The requested buffer is full (D158/D159)	
-36	B	No error code (D158/D159)	
		Retry of ID tag communication fails three times after the machine has detected the ID tag error.	<ul style="list-style-type: none"> ▪ Caused by noise

Trouble shooting

No. Definition		Symptom	Possible Cause
687	B	Memory address command error (D158/D159)	
		From among the I/F commands with the controller, the image transfer available report (for each command) cannot be received.	<ul style="list-style-type: none"> ▪ Caused by noise ▪ Defective controller board
692	C	Controller board communication abnormal (D160/D161/D170)	
		Communication error between the printer part of the controller board and BICU.	<ul style="list-style-type: none"> ▪ The connector is abnormal between the controller board and the BICU board.
694	C	Controller board communication abnormal (D160/D161/D170)	
		Communication error between the scanner part of the controller board and BICU.	<ul style="list-style-type: none"> ▪ The connector is abnormal between the controller board and the BICU board.

SC7xx: Peripherals

No. Definition		Symptom	Possible Cause
701-03	B	Paper feed motor driver error (ARDF) (D158/D159)	
-08	B	Paper exit motor driver error (ARDF) (D158/D159)	
		Error signal from the motor driver	<ul style="list-style-type: none"> ▪ Loose connection ▪ Defective encoder ▪ Motor overload ▪ Worn-out motor
702-01	B	Protected element block error 1 (ARDF) (D158/D159)	
-02	B	Protected element block error 2 (ARDF) (D158/D159)	
-03	B	Protected element block error 3 (ARDF) (D158/D159)	
		Protected element block is detected.	<ul style="list-style-type: none"> ▪ Defective motor ▪ Defective solenoid ▪ Harness shorted
760	B	ADF gate abnormal 1	
		The ARDF Gate signal line between the ARDF main board and the BICU is disconnected.	<ul style="list-style-type: none"> ▪ ARDF main board ▪ Input/output board ▪ Poor connection (ARDF Gate line) between the ARDF main board and the BICU.

Trouble-shooting

⇒ **SC8xx: Controller**

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC816	[0x0000]	Energy save I/O subsystem error
SC816-01	D	Subsystem error
SC816-02	D	Sysarch (LPUX_GET_PORT_INFO) error
SC816-03	D	Transition to STR was denied.
SC816-04	D	Interrupt in kernel communication driver
SC816-05	D	Preparation for transition to STR failed.
SC816-07	D	Sysarch (LPUX_GET_PORT_INFO) error
SC816-08	D	Sysarch (LPUX_ENGINE_TIMERCTRL) error
SC816-09	D	Sysarch (LPUX_RETURN_FACTOR_STR) error
SC816-10	D	Sysarch (LPUX_GET_PORT_INFO) error
SC816-11	D	Sysarch (LPUX_GET_PORT_INFO) error
SC816-12	D	Sysarch (LPUX_GET_PORT_INFO) error
SC816-13	D	open() error
SC816-14	D	Memory address error
SC816-15	D	open() error
SC816-16	D	open() error
SC816-17	D	open() error
SC816-18	D	open() error
SC816-19	D	Double open() error
SC816-20	D	open() error
SC816-22	D	Parameter error
SC816-23	D	read() error

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC816-24	D	read() error
SC816-25	D	read() error
SC816-26	D	write() communication retry error
SC816-27	D	write() communication retry error
SC816-28	D	write() communication retry error
SC816-29	D	write() communication retry error
SC816-30	D	write() communication retry error
SC816-35	D	read() error
SC816-36	D	Subsystem error
SC816-37	D	Subsystem error
SC816-38	D	Subsystem error
SC816-39	D	Subsystem error
SC816-40	D	Subsystem error
SC816-41	D	Subsystem error
SC816-42	D	Subsystem error
SC816-43	D	Subsystem error
SC816-44	D	Subsystem error
SC816-45	D	Subsystem error
SC816-46	D	Subsystem error
SC816-47	D	Subsystem error
SC816--48	D	Subsystem error
SC816--49	D	Subsystem error
SC816--50	D	Subsystem error
SC816--51	D	Subsystem error

Trouble-shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC816--52	D	Subsystem error
SC816--53	D	Subsystem error
SC816--54	D	Subsystem error
SC816--55	D	Subsystem error
SC816--56	D	Subsystem error
SC816--57	D	Subsystem error
SC816--58	D	Subsystem error
SC816--59	D	Subsystem error
SC816--60	D	Subsystem error
SC816--61	D	Subsystem error
SC816--62	D	Subsystem error
SC816--63	D	Subsystem error
SC816--64	D	Subsystem error
SC816--65	D	Subsystem error
SC816--66	D	Subsystem error
SC816--67	D	Subsystem error
SC816--68	D	Subsystem error
SC816--69	D	Subsystem error
SC816--70	D	Subsystem error
SC816--71	D	Subsystem error
SC816--72	D	Subsystem error
SC816--73	D	Subsystem error
SC816--74	D	Subsystem error
SC816--75	D	Subsystem error

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC816--76	D	Subsystem error
SC816--77	D	Subsystem error
SC816--78	D	Subsystem error
SC816--79	D	Subsystem error
SC816--80	D	Subsystem error
SC816--81	D	Subsystem error
SC816--82	D	Subsystem error
SC816--83	D	Subsystem error
SC816--84	D	Subsystem error
SC816--85	D	Subsystem error
SC816--86	D	Subsystem error
SC816--87	D	Subsystem error
SC816--88	D	Subsystem error
SC816--89	D	Subsystem error
SC816--90	D	Subsystem error
SC816--91	D	Subsystem error
SC816--92	D	Subsystem error
SC816--93	D	Subsystem error
SC816--94	D	Subsystem error
		Energy save I/O subsystem detected some abnormality.
		<ul style="list-style-type: none"> ▪ Energy save I/O subsystem defective ▪ Energy save I/O subsystem detected a controller board error (non-response). ▪ Error was detected during preparation for transition to STR.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		<ul style="list-style-type: none"> ▪ Turn the main power off/on. ▪ Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC840-00	D	EEPROM access error
		An error occurred during I/O processing. <ul style="list-style-type: none"> ▪ A read error occurred and 3 retries failed. ▪ A write error occurred.
		EEPROM defective or end-of-life
		-

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC841-00	D	EEPROM read data error
		Compared the data from 3 areas of the EEPROM mirror data with the original data and all 3 of them were different from the original data.
		Data in the specific area of the EEPROM has been modified.
		-

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC842-00	C	Nand-Flash updating verification error
		During remote ROM update or ROM update, the SCS detected a write error (verify error) regarding the data written to the Nand-Flash.
		Nand-Flash damaged
		Turn the main power off/on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC842-01	B	Nand-Flash bad block number exceeding the threshold
		When the status of the Nand-Flash was checked at power-on or when returning from energy saver mode, the number of bad blocks exceeded the threshold.
		Nand-Flash bad block number exceeding the threshold
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC842-02	B	Number of times of Nand-Flash block erase exceeding the threshold
		When the status of the Nand-Flash was checked at power-on or when returning from energy saver mode, the number of times the block was erased exceeded the threshold.
		Number of times of Nand-Flash block erase exceeding the threshold
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC853-00	B	Bluetooth device connection error
		The Bluetooth hardware (USB type) was connected after the machine was turned on.
		The Bluetooth hardware (USB type) was connected after the machine was turned on.
		Turn the main power with the Bluetooth hardware (USB type) connected.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC854-00	B	Bluetooth device disconnected
		The Bluetooth hardware (USB type) was disconnected after the machine was turned on.
		The Bluetooth hardware (USB type) was disconnected after the machine was turned on.
		Turn the main power with the Bluetooth hardware (USB type) connected.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC855-01	B	Wireless LAN board error (driver attachment failure)
		Wireless LAN board error (wireless LAN card: 802.11 is covered)
		<ul style="list-style-type: none"> ▪ Defective wireless LAN board ▪ Loose connection
		<ul style="list-style-type: none"> ▪ Turn the main power off/on. ▪ Replace wireless LAN board

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC855-02	B	Wireless LAN board error (driver initialization failure)
		Wireless LAN board error (wireless LAN card: 802.11 is covered)
		<ul style="list-style-type: none"> ▪ Defective wireless LAN board ▪ Loose connection
		<ul style="list-style-type: none"> ▪ Turn the main power off/on. ▪ Replace wireless LAN board

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC857-00	B	USB I/F Error
		The USB interface is unusable because of a driver error.
		USB driver error (There are three causes of USB error: RX error/CRC error/STALL. SC is issued only in the case of STALL.)
		<ul style="list-style-type: none"> ▪ Check USB connection. ▪ Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC858-01	-	Data encryption conversion error (HDD Key Setting Error)
		A serious error occurred during an attempt to update the encryption key.
		<ul style="list-style-type: none"> ▪ Data in the USB Flash etc. corrupted ▪ Communication error because of electromagnetic interference etc. ▪ Controller board defective
		Replace the board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC858-02	A	Data encryption conversion error (NVRAM read/write error)
		A serious error occurred after data conversion during an attempt to update the encryption key.
		NVRAM defective
		Replace the board.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC858-30	A	Data encryption conversion error (NVRAM Before Replace error)
		A serious error occurred after data conversion during an attempt to update the encryption key.
		Software error such as conversion parameters being invalid.
		Replace the board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC858-31	A	Data encryption conversion error (Other Error)
		A serious error occurred after data conversion during an attempt to update the encryption key.
		Controller board defective
		Replace the board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC859-01	B	Data encryption conversion HDD conversion error (HDD check error)
		HDD was not converted correctly during an attempt to update the encryption key. Only an error screen is displayed and no SC is issued during conversion. This SC is issued after machine restart.
		<ul style="list-style-type: none"> ▪ HDD conversion was selected in the Encryption key update function but the machine was turned on with the HDD removed. ▪ Power failure occurred during encryption key update. ▪ HDD was not successfully converted during encryption key update due to HDD errors or cable noises.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		<ul style="list-style-type: none"> ▪ Check HDD connection. ▪ Format the HDD. ▪ If there is a problem with the HDD, it has to be replaced.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC859-02	B	Data encryption conversion HDD conversion error (Power failure during conversion)
		HDD was not converted correctly during an attempt to update the encryption key. Only an error screen is displayed and no SC is issued during conversion. This SC is issued after machine restart. Details: NVRAM/HDD conversion is incomplete.
		Power failure occurred during encryption key update.
		None The display after restart instructs the user to format the HDD.


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC859-10	B	Data encryption conversion HDD conversion error (Data read/write command error)
		HDD was not converted correctly during an attempt to update the encryption key. Only an error screen is displayed and no SC is issued during conversion. This SC is issued after machine restart. Details: Abnormal DMAC return value has been received two or more times (DMAC timeout, serial communication error etc.)
		HDD was not successfully converted during encryption key update due to HDD errors or cable noises.

Trouble-shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		<ul style="list-style-type: none"> ▪ Check HDD connection. ▪ Format the HDD. ▪ If there is a problem with the HDD, it has to be replaced.


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC860-00	B	HDD startup error at main power on (HDD error)
		<ul style="list-style-type: none"> ▪ The HDD is connected but the driver detected the following errors. <ul style="list-style-type: none"> ▪ SS_NOT_READY:/* (-2)HDD does not become READY*/ ▪ SS_BAD_LABEL:/* (-4)Wrong partition type*/ ▪ SS_READ_ERROR:/* (-5)Error occurred while reading or checking the label*/ ▪ SS_WRITE_ERROR:/* (-6)Error occurred while writing or checking the label*/ ▪ SS_FS_ERROR:/* (-7)Failed to repair the filesystem*/ ▪ SS_MOUNT_ERROR:/* (-8)Failed to mount the filesystem*/ ▪ SS_COMMAND_ERROR:/* (-9)Drive not responding to command*/ ▪ SS_KERNEL_ERROR:/* (-10)Internal kernel error*/ ▪ SS_SIZE_ERROR:/* (-11)Drive size too small*/ ▪ SS_NO_PARTITION:/* (-12)The specified partition does not exist*/ ▪ SS_NO_FILE:/* (-13)Device file does not exist*/ ▪ Attempted to acquire HDD status through the driver but there has been no response for 30 seconds or more.
		<ul style="list-style-type: none"> ▪ Unformatted HDD ▪ Label data corrupted ▪ HDD defective
		Format the HDD through SP mode.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-01	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in an area that does not belong to a partition, such as the disklabel area.)
		<p>Guide for when to replace the HDD</p> <ol style="list-style-type: none"> 1. When SC863 has occurred ten times or more <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. 2. It takes a long time after main power on for the operation panel to become ready. HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.

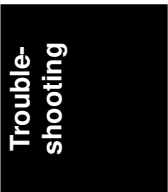


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-02	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "a".)
		<p>Guide for when to replace the HDD</p> <p>3. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>4. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-03	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "b".)
		<p>Guide for when to replace the HDD</p> <p>5. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>6. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

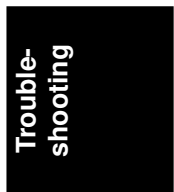


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-04	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "c".)
		<p>Guide for when to replace the HDD</p> <p>7. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>8. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-05	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "d".)
		<p>Guide for when to replace the HDD</p> <p>9. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>10. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

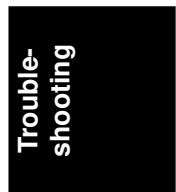


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-06	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "e".)
		<p>Guide for when to replace the HDD</p> <p>11. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>12. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-07	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "f".)
		<p>Guide for when to replace the HDD</p> <p>13. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>14. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

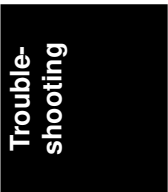


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-08	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "g".)
		<p>Guide for when to replace the HDD</p> <p>15. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>16. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-09	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "h".)
		<p>Guide for when to replace the HDD</p> <p>17. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>18. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

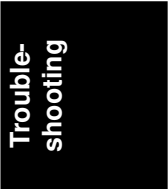


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-10	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "i".)
		<p>Guide for when to replace the HDD</p> <p>19. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>20. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-11	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "j".)
		<p>Guide for when to replace the HDD</p> <p>21. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>22. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

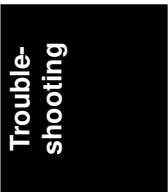


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-12	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "k".)
		<p>Guide for when to replace the HDD</p> <p>23. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>24. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-13	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "I".)
		<p>Guide for when to replace the HDD</p> <p>25. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>26. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

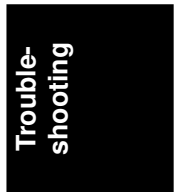


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-14	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "m".)
		<p>Guide for when to replace the HDD</p> <p>27. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>28. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-15	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "n".)
		<p>Guide for when to replace the HDD</p> <p>29. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>30. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

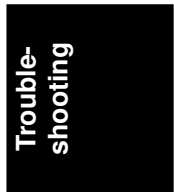


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-16	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "o".)
		<p>Guide for when to replace the HDD</p> <p>31. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>32. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-17	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "p".)
		<p>Guide for when to replace the HDD</p> <p>33. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>34. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

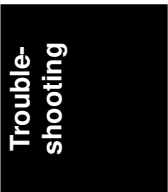

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-18	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "q".)
		<p>Guide for when to replace the HDD</p> <p>35. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>36. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-19	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "r.")
		<p>Guide for when to replace the HDD</p> <p>37. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>38. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

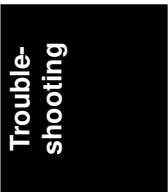


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-20	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "r.")
		<p>Guide for when to replace the HDD</p> <p>39. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>40. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-21	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "t)
		<p>Guide for when to replace the HDD</p> <p>41. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>42. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>



SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-22	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "u".)
		<p>Guide for when to replace the HDD</p> <p>43. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>44. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC863-23	D	HDD data read failure
		The data written to the HDD cannot be read normally.
		Bad sectors were generated during operation. (An error occurred in partition "y".)
		<p>Guide for when to replace the HDD</p> <p>45. When SC863 has occurred ten times or more</p> <ul style="list-style-type: none"> ▪ The interval is short. ▪ Repeatedly occurs in the same situation (At power-on, etc.). ▪ Startup takes a long time when the main power is turned on. <p>46. It takes a long time after main power on for the operation panel to become ready.</p> <p>HDD access may be consuming time. Normal HDD access time after main power on is about 5 seconds. If the machine is not waiting for the engine to be ready and it still takes 20 to 30 seconds or more, the HDD may be the cause. If there is a problem with the HDD, HDD-related SCs such as SC860 and SC863 will occur frequently. Print the SC log data and check them.</p>

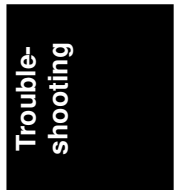

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-01	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in an area that does not belong to a partition, such as the disklabel area.)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-02	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "a".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-03	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "b".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-04	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "c".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-05	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "d".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-06	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "e".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-07	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "f".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-08	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "g".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-09	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "h".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-10	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "i".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-11	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "j".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-12	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "k".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-13	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "l".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-14	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "m".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-15	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "n".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-16	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "o".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-17	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "p".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-18	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "q".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-19	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "r".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-20	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "s".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-21	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "t".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-22	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "u".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC864-23	D	HDD data CRC error
		During HDD operation, the HDD returned a CRC error.
		Bad sectors were generated during operation. (An error occurred in partition "v".)
		<ul style="list-style-type: none"> ▪ Format the HDD. ▪ Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-00	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error).
		Replace the HDD.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-01	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in an area that does not belong to a partition, such as the disklabel area.)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-02	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "a".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-03	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "b".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-03	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "c".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-05	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "d".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-06	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "e".)
		Replace the HDD.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-07	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "f".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-08	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "g".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-09	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "h".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-10	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "i".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-11	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "j".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-12	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "k".)
		Replace the HDD.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-13	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "l".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-14	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "m".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-15	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "n".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-16	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "o".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-17	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "p".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-18	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "q".)
		Replace the HDD.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-19	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "r".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-20	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "s".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-21	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "t".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-22	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "u".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC865-23	D	HDD access error
		During HDD operation, the HDD returned an error.
		The HDD returned an error that does not constitute SC863 (bad sector) or SC864 (CRC error). (An error occurred in partition "v".)
		Replace the HDD.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC866-00	B	SD card authentication error
		A license error of an application that is started from the SD card was detected.
		Invalid program data is stored on the SD card.
		Store a valid program data on the SD card.

Trouble shooting

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC867-00	D	SD card removed
		The SD card that starts an application was removed from the slot.
		The SD card that starts an application was removed from the slot (mount point of /mnt/sd0).
		Turn the main power off/on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC867-01	D	SD card removed
		The SD card that starts an application was removed from the slot.
		The SD card that starts an application was removed from the slot (mount point of /mnt/sd1).
		Turn the main power off/on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC867-02	D	SD card removed
		The SD card that starts an application was removed from the slot.
		The SD card that starts an application was removed from the slot (mount point of /mnt/sd2).
		Turn the main power off/on.


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC868-00	D	SD card access error
		The SD controller returned an error during operation. (Error occurred at the mount point of /mnt/sd0)
		<ul style="list-style-type: none"> ▪ SD card defective ▪ SD controller defective
		<ul style="list-style-type: none"> ▪ Reformat the SD card (using the "SD Formatter" made by Panasonic).* ▪ Check the SD card insertion status. ▪ Replace the SD card. ▪ Replace the controller board.

* Do not format an SD card supplied with the main machine or sold as an option. You may only format SD cards used for Firmware Update by a Customer Engineer.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC868-01	D	SD card access error
		The SD controller returned an error during operation. (Error occurred at the mount point of /mnt/sd1)
		<ul style="list-style-type: none"> ▪ SD card defective ▪ SD controller defective
		<p>SD card that starts an application</p> <ul style="list-style-type: none"> ▪ Turn the main power off and check the SD card insertion status. <ul style="list-style-type: none"> ▪ If no problem is found, insert the SD card and turn the main power on. ▪ If an error occurs, replace the SD card. ▪ SD card for users <ul style="list-style-type: none"> ▪ In case of a file system error, reformat the SD card (using the "SD Formatter" made by Panasonic).* ▪ In case of a device access error, turn the main power off and check the SD card insertion status. ▪ If no problem is found, insert the SD card and turn the main power on. ▪ If an error occurs, use another SD card. ▪ If the error persists

* Do not format an SD card supplied with the main machine or sold as an option. You may only format SD cards used for Firmware Update by a Customer Engineer.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC868-02	D	SD card access error
		The SD controller returned an error during operation. (Error occurred at the mount point of /mnt/sd1)
		<ul style="list-style-type: none"> ▪ SD card defective ▪ SD controller defective
		<p>SD card that starts an application</p> <ul style="list-style-type: none"> ▪ Turn the main power off and check the SD card insertion status. <ul style="list-style-type: none"> ▪ If no problem is found, insert the SD card and turn the main power on. ▪ If an error occurs, replace the SD card. ▪ SD card for users <ul style="list-style-type: none"> ▪ In case of a file system error, reformat the SD card (using the "SD Formatter" made by Panasonic).* ▪ In case of a device access error, turn the main power off and check the SD card insertion status. ▪ If no problem is found, insert the SD card and turn the main power on. ▪ If an error occurs, use another SD card. ▪ If the error persists

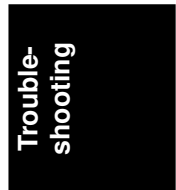

* Do not format an SD card supplied with the main machine or sold as an option. You may only format SD cards used for Firmware Update by a Customer Engineer.


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC870-00	B	Address Book data error (Anytime: Address Book Error.)
SC870-01	B	Address Book data error (On startup: Media required for storing the Address Book is missing.)
SC870-02	B	Address Book data error (On startup: encryption is configured but the module required for encryption (DESS) is missing.)
SC870-03	B	Address Book data error (Initialization: Failed to generate a file to store internal Address Book.)
SC870-04	B	Address Book data error (Initialization: Failed to generate a file to store delivery sender.)
SC870-05	B	Address Book data error (Initialization: Failed to generate a file to store delivery destination.)
SC870-06	B	Address Book data error (Initialization: Failed to generate a file to store information required for LDAP search.)
SC870-07	B	Address Book data error (Initialization: Failed to initialize entries required for machine operation.)
SC870-08	B	Address Book data error (Machine configuration: HDD is present but the space for storing the Address Book is unusable.)
SC870-09	B	Address Book data error (Machine configuration: Inconsistency in the NVRAM area used for storing settings required for Address Book configuration.)
SC870-10	B	Address Book data error (Machine configuration: Cannot make a directory for storing the Address Book in the SD/USB FlashROM.)
SC870-11	B	Address Book data error (On startup: Inconsistency in Address Book entry number.)
SC870-20	B	Address Book data error (File I/O: Failed to initialize file.)
SC870-21	B	Address Book data error (File I/O: Failed to generate file.)
SC870-22	B	Address Book data error (File I/O: Failed to open file.)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC870-23	B	Address Book data error (File I/O: Failed to write to file.)
SC870-24	B	Address Book data error (File I/O: Failed to read file.)
SC870-25	B	Address Book data error (File I/O: Failed to check file size.)
SC870-26	B	Address Book data error (File I/O: Failed to delete data.)
SC870-27	B	Address Book data error (File I/O: Failed to add data.)
SC870-30	B	Address Book data error (Search: Failed to obtain data from cache when searching in the machine Address Book. delivery destination/sender.)
SC870-31	B	Address Book data error (Search:Failed to obtain data from cache during LDAP search.)
SC870-32	B	Address Book data error (Search:Failed to obtain data from cache while searching the WS-Scanner Address Book.)
SC870-41	B	Address Book data error (Cache: failed to obtain data from cache.)
SC870-50	B	Address Book data error (On startup: Detected abnormality of the Address Book encryption status.)
SC870-51	B	Address Book data error (Encryption settings: Failed to create directory required for conversion between plaintext and encrypted text.)
SC870-52	B	Address Book data error (Encryption settings: Failed to convert from plaintext to encrypted text.)
SC870-53	B	Address Book data error (Encryption settings: Failed to convert from encrypted text to plaintext.)
SC870-54	B	Address Book data error (Encryption settings: Detected data inconsistency when reading the encrypted Address Book.)
SC870-55	B	Address Book data error (Encryption settings: Failed to delete file when changing encryption setting.)

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC870-56	B	Address Book data error (Encryption settings: Failed to erase the file that records the encryption key during an attempt to change the encryption setting.)
SC870-57	B	Address Book data error (Encryption settings: Failed to move a file during an attempt to change the encryption setting.)
SC870-58	B	Address Book data error (Encryption settings: Failed to delete a directory during an attempt to change the encryption setting.)
SC870-59	B	Address Book data error (Encryption settings: Detected a resource shortage during an attempt to change the encryption setting.)
SC870-60	B	Address Book data error (Unable to obtain the on/off setting for administrator authentication (06A and later).)
		When an error related to the Address Book is detected during startup or operation.
		<ul style="list-style-type: none"> ▪ Software bug ▪ Inconsistency of Address Book source location (machine/delivery server/LDAP server) ▪ Inconsistency of Address Book encryption setting or encryption key (NVRAM or HDD was replaced individually without formatting the Address Book) ▪ Address Book storage device (SD/HDD) was temporarily removed or hardware configuration does not match the application configuration. ▪ Address Book data corruption was detected.
		<ul style="list-style-type: none"> ▪ Check the HDD connection. ▪ Initialize all UCS settings and address/authentication information (SP5-846-046). ▪ Initialize the Address Book partition (SP5-832-006).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC872-00	B	HDD mail reception error
		An error was detected on the HDD immediately after the machine was turned on.
		<ul style="list-style-type: none"> ▪ HDD defective ▪ Power was turned of while the machine used the HDD.
		<ul style="list-style-type: none"> ▪ Format the HDD (SP5-832-007). ▪ Replace the HDD. <p>When you do the above, the following information will be initialized.</p> <ul style="list-style-type: none"> ▪ Partly received partial mail messages. ▪ Already-read statuses of POP3-received messages (All messages on the mail server are handled as new messages).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC873-00	B	HDD mail reception error
		An error was detected on the HDD immediately after the machine was turned on.
		<ul style="list-style-type: none"> ▪ HDD defective ▪ Power was turned of while the machine used the HDD.
		<ul style="list-style-type: none"> ▪ Format the HDD (SP5-832-007). ▪ Replace the HDD. <p>When you do the above, the following information will be initialized.</p> <ul style="list-style-type: none"> ▪ Default sender name/password (SMB/FTP/NCP) ▪ Administrator mail address ▪ Scanner delivery history

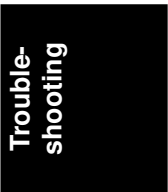

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC875-01	D	Delete all error (HDD erasure) (hddcheck -i error)
SC875-02	D	Delete all error (HDD erasure) (Data deletion failure)
		An error was detected before HDD/data erasure starts. (Failed to erase data/failed to logically format HDD)
		<ul style="list-style-type: none"> ▪ HDD logical formatting failed. ▪ The modules failed to erase data.
		Turn the main power off/on.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Log Data Error 1
SC876-01	D	An error was detected in the handling of the log data at power on or during machine operation.
		Damaged log data file
		Initialize the HDD (SP5-832-004).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
		Log Data Error 2
SC876-02	D	An error was detected in the handling of the log data at power on or during machine operation.
		Log encryption is enabled but encryption module is not installed.
		<ul style="list-style-type: none"> ▪ Replace or set again the encryption module. ▪ Disable the log encryption setting.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC876-03	D	Log Data Error 3
		An error was detected in the handling of the log data at power on or during machine operation.
		Inconsistency of encryption key between NV-RAM and HDD.
		<ul style="list-style-type: none"> ▪ Disable the log encryption setting. ▪ Initialize LCS memory (SP5801-019). ▪ Initialize the HDD (SP5-832-004).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC876-04	D	Log Data Error 4
		An error was detected in the handling of the log data at power on or during machine operation.
		<ul style="list-style-type: none"> ▪ Log encryption key is disabled but the log data file is encrypted. (NVRAM data corruption) ▪ Log encryption key is enabled but the log data file is not encrypted. (NVRAM data corruption)
		Initialize the HDD (SP5-832-004).




SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC876-05	D	Log Data Error 5
		An error was detected in the handling of the log data at power on or during machine operation.
		<ul style="list-style-type: none"> ▪ Only the NV-RAM has been replaced with one previously used in another machine. ▪ Only the HDD has been replaced with one previously used in another machine.
		<ul style="list-style-type: none"> ▪ Attach the original NV-RAM. ▪ Attach the original HDD. ▪ With the configuration that caused the SC, initialize the HDD (SP5-832-004).

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC876-99	D	Log Data Error 99
		An error was detected in the handling of the log data at power on or during machine operation.
		Other causes
		-

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC877-00	B	Data Overwrite Security card error
		The "Auto Erase Memory" function of the Data Overwrite Security is set to on but it cannot be done.
		<ul style="list-style-type: none"> ▪ Data Overwrite Security option SD card is broken. ▪ Data Overwrite Security option SD card has been removed.
		<ul style="list-style-type: none"> ▪ If the SD card is broken, prepare a new Data Overwrite Security option SD card and replace the NVRAM. ▪ If the SD card has been removed, turn the main power off and reinstall a working Data Overwrite Security option SD card.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC878-00	D	TPM electronic authentication error
		The machine failed TPM electronic authentication. System hash registered in the TPM did not match the data on the USB flash.
		<ul style="list-style-type: none"> ▪ System module was updated in an unauthorized manner. ▪ USB flash is not working correctly.
		Replace the board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC878-01	D	USB Flash error
		USB Flash file system error
		USB Flash file system has been destroyed.
		Replace the controller board.

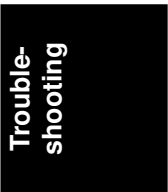


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC878-02	D	TPM error
		Error occurred in the TPM or TPM driver.
		TPM defective
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC878-03	D	TCSO error
		Error occurred in TPM software stack.
		<ul style="list-style-type: none"> ▪ Unable to start TPM ▪ Necessary files missing from the TPM.
		Replace the controller board.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC880-00	D	MLB error
		Reply to MLB access was not returned within a specified time.
		MLB defective
		<ul style="list-style-type: none"> ▪ Replace the MLB. ▪ Remove the MLB.

SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC881-01	D	Authentication area error
		<ul style="list-style-type: none"> ▪ Software error detected. ▪ This error may occur even if IC card option (ERIE/AYU/Greenland etc.) is not installed.
		<ul style="list-style-type: none"> ▪ This is caused by accumulation of abnormal authentication information in the software. (User operation will not directly cause it.) ▪ Occurs when authentication is done. <p>Example: When a job is sent to the printer/when logged on from the operation panel/when logged on from a Web browser</p>
		Turn the main power off/on.


SC No.	Level	Error Name/Error Condition/Major Cause/Solution
SC899-00	D	Software performance error (signal reception end)
		-
		Occurs when an internal program behaves abnormally.
		<p>In case of a hardware defect</p> <ul style="list-style-type: none"> ▪ Replace the hardware. <p>In case of a software error</p> <ul style="list-style-type: none"> ▪ Turn the main power off/on. ▪ Try updating the firmware.

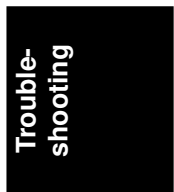

SC9xx: Miscellaneous

No. Definition		Symptom	Possible Cause
901	B	Mechanical total counter	
		The mechanical total counter does not work properly.	<ul style="list-style-type: none"> ▪ Defective total counter ▪ Loose connection ▪ Defective IOB
903	B	Engine total counter error (D160/D161/D170)	
		The checksum of the total counter is not correct.	<ul style="list-style-type: none"> ▪ NVRAM on the BICU
928	B	Memory error (D160/D161/D170)	
		The machine detects a discrepancy in the write/read data during its write/read test (done at power off/on and at recovery from low power or night/off mode).	<ul style="list-style-type: none"> ▪ BICU ▪ Poor connection between BICU and memory
929	B	IMAC error (hardware) (D160/D161/D170)	
		Error register for IMAC is on, while IMAC is operating. Mechanical problem (e.g. interlock does not turned off when right door is open and .bypass tray is used at the same time.)	<ul style="list-style-type: none"> ▪ Defective BICU ▪ Defective interlock switch
981	B	NV-RAM error (D160/D161/D170)	
		If the machine fails to read the specific value written onto the NV-RAM on program startup, an SC code appears.	<ul style="list-style-type: none"> ▪ Defective NV-RAM ▪ NV-RAM is not installed


No. Definition		Symptom	Possible Cause
982	B	Localization error (D160/D161/D170)	
		The localization settings in the nonvolatile ROM and RAM are different (SP5807).	<ul style="list-style-type: none"> ▪ First machine start after the NVRAM is replaced. ▪ Incorrect localization setting ▪ NVRAM
995	B	Machine information error	
		Checking if the serial number matches.	<ul style="list-style-type: none"> ▪ Serial numbers (11 digits) do not match.

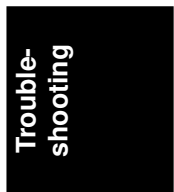

SC9xx: Miscellaneous

No. Definition		Symptom	Possible Cause
901	B	Mechanical total counter	
		The mechanical total counter does not work properly.	<ul style="list-style-type: none"> ▪ Defective total counter ▪ Loose connection ▪ Defective IOB
903	B	Engine total counter error (D160/D161/D170)	
		The checksum of the total counter is not correct.	<ul style="list-style-type: none"> ▪ NVRAM on the BICU
928	B	Memory error (D160/D161/D170)	
		The machine detects a discrepancy in the write/read data during its write/read test (done at power off/on and at recovery from low power or night/off mode).	<ul style="list-style-type: none"> ▪ BICU ▪ Poor connection between BICU and memory
929	B	IMAC error (hardware) (D160/D161/D170)	
		Error register for IMAC is on, while IMAC is operating. Mechanical problem (e.g. interlock does not turned off when right door is open and .bypass tray is used at the same time.)	<ul style="list-style-type: none"> ▪ Defective BICU ▪ Defective interlock switch
981	B	NV-RAM error (D160/D161/D170)	
		If the machine fails to read the specific value written onto the NV-RAM on program startup, an SC code appears.	<ul style="list-style-type: none"> ▪ Defective NV-RAM ▪ NV-RAM is not installed

No. Definition		Symptom	Possible Cause
982	B	Localization error (D160/D161/D170)	
		The localization settings in the nonvolatile ROM and RAM are different (SP5807).	<ul style="list-style-type: none"> ▪ First machine start after the NVRAM is replaced. ▪ Incorrect localization setting ▪ NVRAM
995	B	Machine information error	
		Checking if the serial number matches.	<ul style="list-style-type: none"> ▪ Serial numbers (11 digits) do not match.

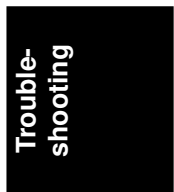

5.3 ELECTRICAL COMPONENT DEFECTS

5.3.1 SENSORS

Component	CN	Condition	Symptom
Registration	123-6 (BICU)	Open	The Paper Jam message will appear whenever a copy is made (paper has not reached the sensor).
		Shorted	The Paper Jam message appears even if there is no paper at the sensor.
Relay 1	123-9 (BICU)	Open	The Paper Jam message will appear whenever a copy is made except for 1st and by-pass tray feeding.
		Shorted	The Paper Jam message appears even if there is no paper at the sensor.
Paper End 1	114-2 (BICU)	Open	The Paper End indicator lights when the 1st paper tray is selected, even if there is paper in the tray.
		Shorted	The Paper End indicator does not light when the 1st paper tray is selected, even if there is no paper in the tray. The Paper Jam message will appear whenever a copy is made from the 1st paper tray.

Component	CN	Condition	Symptom
Vertical Transport	110-2 (BICU)	Open	The Paper Jam message will appear whenever a copy is made from an optional paper tray unit.
		Shorted	The Paper Jam message appears even if there is no paper at the sensor.
Paper End 2	113-7 (BICU)	Open	The Paper End indicator lights when the 2nd paper tray is selected, even if there is paper in the tray.
		Shorted	The Paper End indicator does not light when the 2nd paper tray is selected, even if there is no paper in the tray. The Paper Jam message will appear whenever a copy is made from the 2nd paper tray.
		Shorted	
By-pass Paper End	136-12 (BICU)	Open	The Paper End indicator lights when the bypass tray is selected, even if there is paper in the tray.
		Shorted	The Paper End indicator does not light when the bypass tray is selected, even if there is no paper in the tray. The Paper Jam message will appear whenever a copy is made from the bypass tray.

Trouble-shooting

Component	CN	Condition	Symptom
Exit	124-2 (BICU)	Open	The Paper Jam message will appear whenever a copy is made (paper has not reached the sensor).
		Shorted	The Paper Jam message appears even if there is no paper at the sensor.
Toner Density	125-3 (BICU)	Open	SC390 is displayed.
		Shorted	
Image Density	123-2 (BICU)	Open	The toner density control process is changed (see the note below the table).
		Shorted	
Scanner H.P. (D158/D159)	318-2 (SIO)	Open	SC120 shows.
		Shorted	
Scanner H.P. (D160/D161/D170)	404-14	Open	SC120 shows.
		Shorted	
Platen Cover (D158/D159)	318-5 (SIO)	Open	APS and Auto Reduce/Enlarge do not function correctly.
		Shorted	If the Start button is pressed with the platen cover or ARDF closed, "Cannot detect original size" is displayed.

Component	CN	Condition	Symptom
Platen Cover (D160/D161/D170)	402-2 (SIO)	Open	APS and Auto Reduce/Enlarge do not function correctly.
		Shorted	If the Start button is pressed with the platen cover or ARDF closed, "Cannot detect original size" is displayed.
APS 1 (D158/D159)	313-2 (SIO)	Open	The CPU cannot detect the original size properly. APS and Auto Reduce/Enlarge do not function correctly.
		Shorted	
APS 2 (D158/D159)	313-5 (SIO)	Open	The CPU cannot detect the original size properly. APS and Auto Reduce/Enlarge do not function correctly.
		Shorted	
APS (Width) (D160/D161/D170)	404-11, 14 (BICU)	Open	The CPU cannot detect the original size properly. APS and Auto Reduce/Enlarge do not function correctly.
		Shorted	
APS (Length) (D160/D161/D170)	404-5, 8 (BICU)	Open	The CPU cannot detect the original size properly. APS and Auto Reduce/Enlarge do not function correctly.
		Shorted	

Trouble-shooting

Component	CN	Condition	Symptom
Duplex Entrance	143-2 (BICU)	Open	The Paper Jam message will appear whenever a duplex copy is made (paper has not reached the sensor).
		Shorted	The Paper Jam message appears even if there is no paper at the sensor.
Duplex Exit	143-5 (BICU)	Open	The Paper Jam message will appear whenever a duplex copy is made (paper has not reached the sensor).
		Shorted	The Paper Jam message appears even if there is no paper at the sensor.
Inverter (D158/D159/D160/D161)	145-4 (BICU)	Open	The Paper Jam message will appear whenever a duplex copy is made (paper has not reached the sensor).
		Shorted	The Paper Jam message appears even if there is no paper at the sensor.

 **Note**

- SC392 is activated when the CPU detects an ID sensor error during developer initialization (SP2-801). However, SC392 is not displayed on the LCD but simply logged in the SC log (SMC printout), unless the technician exits SP Mode as soon as an error message is displayed.

5.3.2 SWITCHES

Component	CN	Condition	Symptom
Upper Paper Size	115-1,2,3,5 (BICU)	Open	The CPU cannot detect the proper paper size, and misfeeds may occur when a copy is made from the 1st paper tray.
		Shorted	
Vertical Transport Door	110-5 (BICU)	Open	The Cover Open indicator is lit even if the vertical transport door is closed.
		Shorted	The Cover Open indicator is not lit even if the vertical transport door is opened.
Lower Paper Size	113-1,2,3,5 (BICU)	Open	The CPU cannot detect the proper paper size, and misfeeds may occur when a copy is made from the 2nd paper tray.
		Shorted	
By-pass Paper Size	136-3,4,5,6,7 (BICU)	Open	The CPU misdetects or is not able to detect the size of the paper set in the bypass tray, causing possible misfeeds when feeding from this tray.
Right Door	124-5 (BICU)	Open	The Cover Open indicator is lit even if the right door is closed.
		Shorted	The Cover Open indicator is not lit even if the right door is open.
Front/Right Cover	130-1 (BICU)	Open	The Cover Open indicator is lit even if doors are closed.
		Shorted	The Cover Open indicator is not lit even if doors are open.
Main	281-3,4 (PSU)	Open	The machine does not turn on.
		Shorted	The machine does not turn off.

5.4 BLOWN FUSE CONDITIONS

All the fuses in the following table are on the power supply board.

The fuses below are not replaceable.

Fuse	Rating	
	NA/TWN	EU/AA/CHN
FU1	15A/250V	8A/250V
FU2	8A/250V	5A/250V
FU3	1A/250V	1A/250V
FU4	5A/250V	5A/250V
FU5	6.3A/250V	6.3A/250V
FU6	6.3A/250V	6.3A/250V

SERVICE TABLES

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

6. SERVICE TABLES

6.1 SERVICE PROGRAM MODE

 **Note**

- Do not let the user access the SP mode. Only service representatives are allowed to access the SP mode. The machine quality or its operation is NOT guaranteed if persons other than service representatives accesses the SP mode.

6.1.1 SP TABLES

See "[Appendices](#)" for the following information:

System/Copy SP Tables

Printer SP Tables

Scanner SP Tables

6.2 FIRMWARE UPDATE

6.2.1 FIRMWARE UPDATE PROCEDURE (D158/D159)

Before You Begin

An SD card is a precision device. Always observe the following precautions when you handle SD cards:

- Always switch the machine off before you insert an SD card. Never insert the SD card into the slot with the power on.
- Do not remove the SD card from the service slot after the power has been switched on.
- Never switch the machine off while the firmware is downloading from the SD card.
- Keep SD cards in a safe location where they are not exposed to high temperature, high humidity, or exposure to direct sunlight.
- Always handle SD cards with care. Do not bend or scratch them. Do not let the SD card get exposed to shock or vibration.
- Make sure that the write protection of an SD card is unlocked when you download an application to it. If not, downloading fails and a download error (e.g. Error Code 44) occurs during a firmware upgrade.
- Keep the following points in mind when you use the firmware update software:
- "Upload" means to send data from the machine to the SD card. "Download" means to send data from the SD card to the machine.
- To select an item on the LCD, touch the appropriate button on the soft touch-screen of the LCD.
- Disconnect the Ethernet interface cable, Gigabit Ethernet cable, IEEE1284 interface cable and remove the Wireless LAN interface board before you start the firmware update procedure. Make sure that the machine is disconnected from the network to prevent a print job for arriving while the firmware update is in progress.

Preparation

- If the SD card is blank, copy the entire "romdata" folder onto the SD card.
- If the card already contains the "romdata" folder, copy the "D158" folder onto the card.


If the card already contains folders up to "D158", copy the necessary firmware files (e.g. D158xxxx.fwu) into this folder.

Note

- Do not put multiple machine firmware programs on the same SD card. Copy the only model firmware you want.

Updating Procedure

1. Turn the main power switch off.

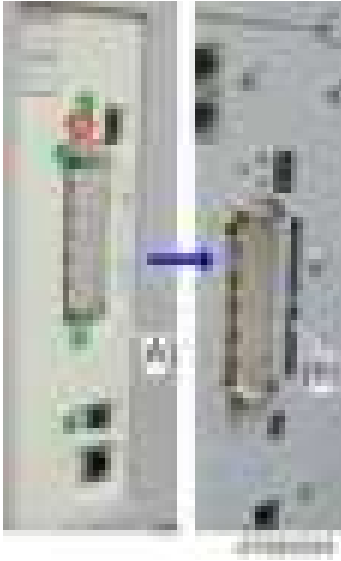

2. Remove the slot cover [A] (1 x 1).
3. Insert the SD card into SD Card Slot 2 [B]. Make sure the label on the SD card faces the front side of the machine.
4. Slowly push the SD card into the slot so it locks in place. You will hear it click. Make sure the SD card locks in place.

Note

- To remove the SD, push it in to unlock the spring lock. Then release it so it pops out of the slot.
5. Disconnect the network cable if the machine is connected to a network.
 6. Switch the main power switch on. After about 45 seconds, the initial version update screen appears on the LCD in English.
 7. On the screen, touch the button or press the corresponding number key on the operation panel to select the item in the menu that you want to update.

ROM/NEW	What it means
ROM:	Tells you the number of the module and name of the version currently installed. The first line is the module number, the second line the version name.
NEW:	Tells you the number of the module and name version on the SD card. The first line is the module number, the second line the version name.

Note

- Controller, engine and operation panel firmware cannot be updated at the same time. It is recommended to update firmware modules one by one.

8. Touch "UpDate (#)" to start the update.

Note

- The progress bar appears on the operation panel.
9. The "Update is Done" message appears on the operation panel after completing the updating. The message differs depending on the firmware that has been updated.
10. Switch the machine main power switch off when you see the "Update is Done" message or follow the procedure that is displayed on the operation panel.
11. Press in the SD card to release it. Then remove it from the slot.
12. Switch the machine on for normal operation.

Firmware Update Error

If firmware update fails, an error code appears.

The following example (E36) reports that the program which you wish to update is not in the machine or the data in the machine you wish to update does not correspond to the data in the card.




6.2.2 FIRMWARE UPDATE PROCEDURE (D160/D161/D170)

Engine (BICU)

An IC card and the bridge board [A] (with FFC [B]) are required for updating the engine firmware.



1. Acquire the update data then install it on the IC card.
2. Insert the IC card [A] into the bridge board [B].
3. Connect the FFC to the board, and pull the hook [C] up to lock it. Be sure to attach the FFC on its correct side as shown below.

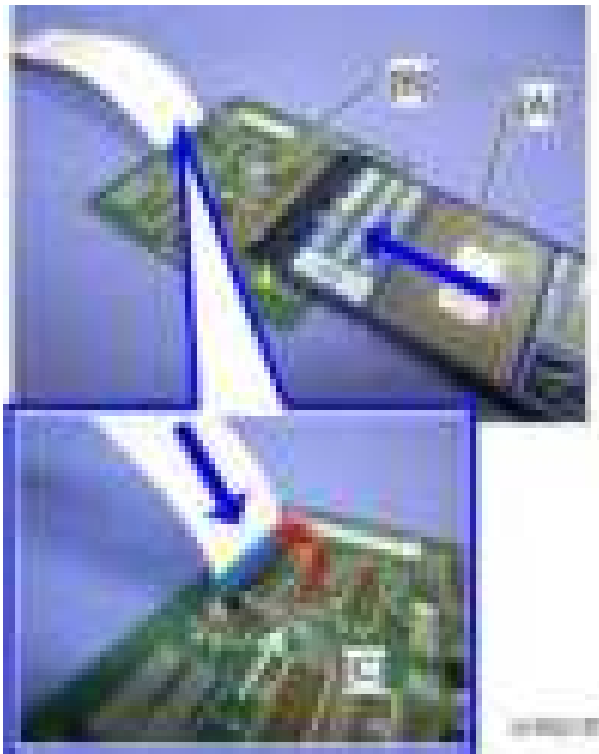

4. Turn the main power switch off, and connect the bridge board and BICU board (CN190).

Firmware Update



5. Turn the main switch on while holding down the operation switch [A] on the operation panel.




6. "BOOT (IC CARD)" appears, then switch to SP5-827-001 (Program Download) on the display.
7. Press "Execute". Update will start.
8. "End" appears, then confirm the version and the SUM value on the display.
9. Turn the main power OFF and detach the FFC from the BICU board.

GDI (Printer/Scanner)

An SD card is used to update the controller firmware.

1. Setup a folder on the SD card, "model name"(E.g., "D161").
2. Re-name the update file to "D161****.brn", and save under the relevant folder on the SD Card.

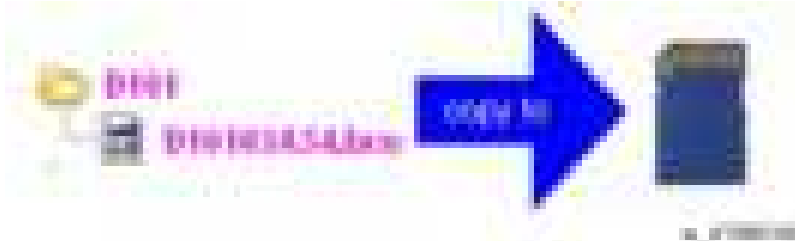

Note

- The name of the new firmware saved in the SD card should be made up of numbers '0' to '9' or characters "A" to "Z". E.g., "D16103A34.brn" is correct, "D161_03A4.brn" is incorrect.

3. Remove the slot cover [A] (x 1).
4. Insert the SD card into SD Card Slot 2 [B]. Make sure the label on the SD card faces the front side of the machine.




5. Turn the update switch (SW2) [A] on.

Firmware Update



6. Turn the main power switch. "Please wait..." appears.
7. Press the "OK" key
8. Press "Execute". Update will start.

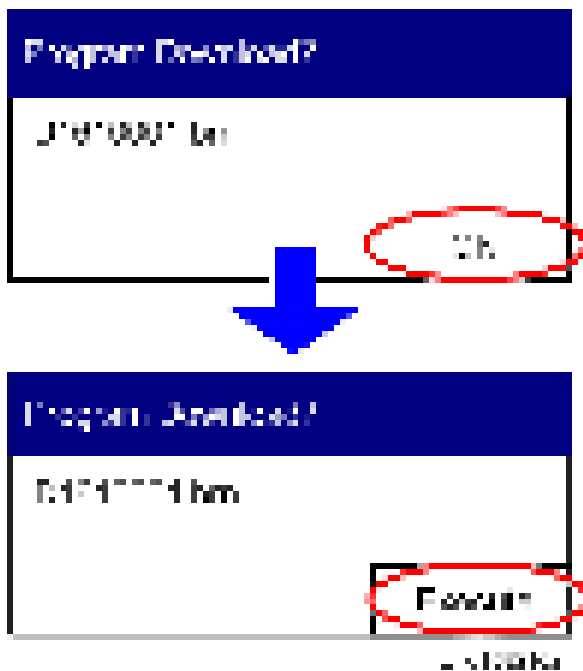

9. After update is finished, turn off the main power, switch SW2 to OFF, and unplug the SD card.
10. Turn on the main power, then the new firmware will be working.

Note

- During firmware update, there is no LED indication (no lighting).
- When update is finished, A Yellow LED [A] flashes if the update was OK or a Red LED [B] if the update failed.



6.3 NVRAM DATA UPLOAD/DOWNLOAD

6.3.1 UPLOADING CONTENT OF NVRAM TO AN SD CARD (D158/D159)

Do the following procedure to upload SP code settings from NVRAM to an SD card.

Note

- This data should always be uploaded to an SD card before the NVRAM is replaced.
 - Make sure that the write protection of an SD card is unlocked
1. Do SP5-990-001 (SMC Print) before you switch the machine off. You will need a record of the NVRAM settings if the upload fails.
 2. Switch the machine main power switch off.



3. Remove the SD slot cover [A] (x 1).
4. Insert the SD card into SD card slot 2 [B]. Then switch the machine on.
5. Execute SP5-824-001 (NVRAM Data Upload) and then press the “Execute” key.
6. The following files are copied to an NVRAM folder on the SD card when the upload procedure is finished. The file is saved to the path and the following filename:
NVRAM¥<serial number>.NV
Here is an example with Serial Number “K5000017114”:
NVRAM¥K5000017114.NV
7. In order to prevent an error during the download, be sure to mark the SD card that holds the uploaded data with the number of the machine from which the data was uploaded.

6.3.2 DOWNLOADING AN SD CARD TO NVRAM (D158/D159)

Do the following procedure to download SP data from an SD card to the NVRAM in the machine.

★ Important

- If copying of the data required for NV-RAM replacement fails, you need to specify the region and serial number when you replace the NV-RAM.
- Contact your supervisor for details on how to enter the serial number and destination code.
- SC995 or "Fusing Unit Setting Error" can be shown until the serial number and destination code are correctly programmed.

↓ Note

- The NVRAM data download may fail if the SD card with the NVRAM data is damaged, or if the connection between the controller and BCU is defective.
- Do the download procedure again if the download fails.
- Do the following procedure if the second attempt fails:
Enter the NVRAM data manually using the SMC print you created before uploading the NVRAM data.

1. Switch the machine main power switch off.



2. Remove the SD slot cover [A] (x 1).
3. Insert the SD card with the NVRAM data into SD Card Slot 2 [B].
4. Switch the machine main power switch on.
5. Do SP5-825-001 (NVRAM Data Download) and press the "Execute" key.

Note

- The serial number of the file on the SD card must match the serial number of the machine for the NVRAM data to download successfully. The download fails if the serial numbers do not match.

This procedure does not download the following data to the NVRAM:

- Total Count
- C/O, P/O Count

6.3.3 NVRAM DATA UPLOAD/DOWNLOAD (D160/D161/D170)

Engine

D160/D161/D170 models do not support "uploading/downloading" functions, that are usually used in order to save the data stored in the BICU NVRAM out to external media for back-up before memory clearing. So if you need to make a back-up of the data, do the following steps.

1. Print out all SMCs.
2. Prepare a new NV-RAM
3. Remove the original NV-RAM and install the new NV-RAM that you just prepared.
4. Turn on the machine. All engine SP data will be overwritten to the default values from the new NV-RAM (this does exactly the same as executing the engine memory clear in SP mode)
5. Refer the SMC list you printed in step 1 and input all data manually.
6. Now you have two NV-RAMs with the same settings. Keep one of these as a backup.

Before you change the NVRAM for uploading, do SP5-990-001 (SMC Print). You will need this engine data to restore the values after replacing the NV-RAM.

After replacing the NVRAM, specify the serial number and destination code of the machine.

Note

- Installing a new NV-RAM initializes the engine information in the NVRAM.


Controller

There is no removable NV-RAM on the CTL board. When the controller board is replaced, it is necessary to re-enter the information manually (p.4-94 "When Replacing the New Controller Board (GDI)").

6.4 USING SP MODES

6.4.1 ADJUSTING REGISTRATION AND MAGNIFICATION

To adjust the registration and magnification, you need to use several service programs. The chart shows an example of the procedure to adjust the machine in the basic configuration.

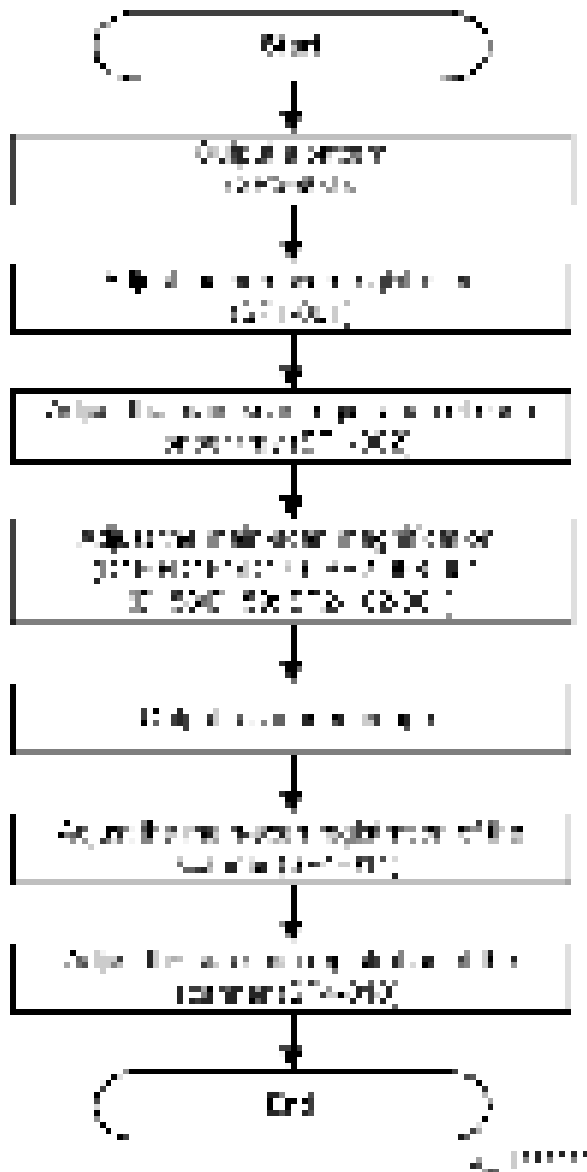

Service Tables

6.4.2 DISPLAY APS DATA (SP 4301 1)

D170/D160/D161 Models

- Sensor Positions -

The APS (auto paper select) sensors are arranged as shown in the diagram.



- Reading the Data -


<p>Example 1 Paper Size: 11000000 8¹/₂x13 ☐ DF Open: 1</p>	<p>Example 2 Paper Size: 00110000 A4 ☐ DF Open: 0</p>
--	---

Example 1 indicates that the paper size and its orientation is "8¹/₂ x 13 SEF," and that the document feeder (or platen cover) is open. Example 2 indicates that the paper size and its orientation is "A4 LEF," and that the document feeder (or platen cover) is closed.

The "Paper Size" data starts with eight digits. The first digit indicates the output of L2; the second digit, L1; the third digit, W2; and the fourth digit, W1. The other four digits (from the fifth through the eighth) are always "0000." In Example 1, the APS sensors L2 and L1 detect paper (W2 and W1 do not).

In Example 2, APS sensors W2 and W1 detect paper (L2 and L1 do not). The paper size and its orientation is based on the outputs of these four APS sensors.


The "DF Open" data shows "1" or "0," indicating if the document feeder (or platen cover) is open or closed respectively. The data is based on the output of the platen cover sensor [A].

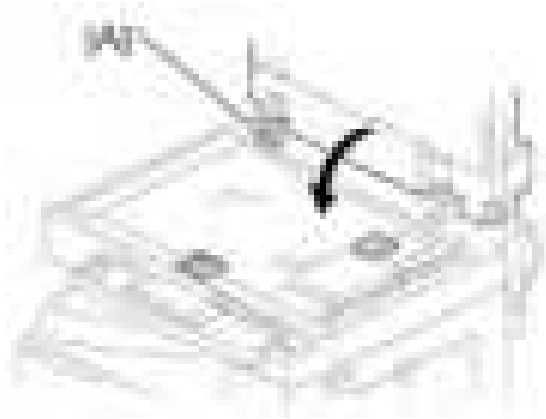

D158/D159 Models



- There is no APS sensor (width) in the scanner unit. However, the original width can be detected by CCD. The APS sensor (length) [A] detects the original length.
- The BICU board checks each sensor status when the platen cover sensor [B] is activated as it is closed. It detects the original size by the on/off signals it gets from each sensor.
- If the copy is made with the platen cover fully open, the CPU determines the original size from the sensor outputs after the Start key is pressed.



6.4.3 MEMORY CLEAR

The basic machine (D170: the machine without the optional controller) stores all the data in the NVRAM on the BICU. The data is cleared by SP5-801-002 (Memory Clear - Engine) (see exceptions).

The GDI or GW+ machines (the machines with the optional controller) store the engine data in the NVRAM on the BICU, and store the other data in the NVRAM on the optional controller. To distinguish between the engine data and the other data, see SP5-801-003 through -024. This service program (003-024) handles the controller data. Any data that is not handled by SP 5801 is the engine data. The data in the BICU NVRAM (engine data) is cleared by SP5-801-002.

Machine	Data	NVRAM	Cleared by	Remarks
Basic (D170)	All data	BICU	SP5-801-002	
GW+ (D158/D159)	Engine data	BICU	SP5-801-002	Any data other than controller data
	Controller data	GW + Controller	SP5-801-001 -003 to -025	SCS, IMH, MCS, Copier application, Printer application, Scanner application, Web service/network application, NCS, R-Fax, DCS, UCS
GDI (D160/D161)	Engine data	BICU	SP5-801-002	Any data other than controller data
	Controller data	GDI Controller	SP5-801-001 -003 to -025	Copier application, Printer application, Scanner application, Web service/network application

- Exceptions -


SP5-801-002 (Memory Clear - Engine) clears most of the settings and counters stored in the NVRAM on the BICU (the values return to their default values). However, the following settings are not cleared:

- SP5-807-001 (Area Selection)
- SP5-811-001 (Serial Num Input [Code Set])
- SP5-811-003 (Serial Num Input [ID2 Code Display])
- SP5-812-001 (Service TEL [Telephone])
- SP5-812-002 (Service TEL [Facsimile])
- SP5-907-001 (Plug & Play)
- SP 7 (Data Log)
- SP 8 (History)

SP5-801-002 (Memory Clear - Engine) after you have replaced the BICU NVRAM or when the BICU NVRAM data is corrupted. When the program ends normally, the message "Completed" shows. When you have replaced the controller NVRAM or when the controller NVRAM data is corrupted, use SP5-801-001 (Memory Clear / All Clear)

- With SD Card (D158/D159 models only)-

1. Upload the NVRAM data to the SD card (■ p.6-10 "NVRAM Data Upload/Download").
2. Print out all SMC data lists (■ p.6-37).

 **Note**

- Be sure to print out all the lists. You have to manually change the SP settings if the NVRAM data upload ends abnormally.
3. Select SP5-801-002.
 4. Press the OK key.
 5. Select "Execute." The messages "Execute?" followed by "Cancel" and "Execute" shows.
 6. Select "Execute."
 7. When the program has ended normally, the message "Completed" shows. If the program has ended abnormally, an error message shows.
 8. Press the cancel key.
 9. Turn the main switch off and on.
 10. Download the NVRAM data from the SD card.

- Without SD Card -

1. Print out all SMC data lists (■ p.6-37).
2. Select SP5-801-002.
3. Press the OK key.
4. Select "Execute" The messages "Execute?" followed by "Cancel" and "Execute" show.
5. Select "Execute".
6. When the program has ended normally, the message "Completed" is displayed. If the program has ended abnormally, an error message shows.
7. Turn the main switch off and on.
8. Adjust the printer and scanner registration and magnification (■ p.4-105 "Copy Adjustments Printing/Scanning").
9. Refer to the factory SMC lists, and enter any values that differ from the factory settings.
10. Initialize the TD sensor (SP2-801-001 (Developer Initialization))
11. Check the copy quality and the paper path.

6.4.4 INPUT CHECK

Input Check Table for Copier (D160/D161/D170)

- Conducting an Input Check -

1. Select SP5-803.
2. Select the number (see the table below) corresponding to the component.
3. Select "Execute." The copy mode is activated.
4. Either "01H" or "00H" appears (see the table below).

Num.	Sensor/Switch	00H	01H
001	Safety SW	OFF	ON
002	Safety SW-LD 5V	OFF	ON
003	Right Cover SW	Closed	Open
004	Right Low Cover SW	Closed	Open
006	Upper Relay S	Not detected	Paper detected
007	Lower Relay S	Not detected	Paper detected
009	Registration Sensor	Not detected	Paper detected
010	Exit Sensor	Not detected	Paper detected

Num.	Sensor/Switch	00H	01H
011	Duplex Inverter S	Not detected	Paper detected
012	Duplex Entrance S	Not detected	Paper detected
013	Duplex Exit S	Not detected	Paper detected
014	By-pass PE S	Not detected	Paper detected
015	By-pass P Size S	*1	
016	Upper PE S	Not detected	Paper detected
017	Lower PE S	Not detected	Paper detected
018	Upper P Size SW	*1	
019	Lower P Size SW	*1	
032	Main M Lock	Not locked	Locked
033	Polygon M Lock	Not locked	Locked
035	Total CO Install	Not installed	Installed
036	Key CO Install	Not installed	Installed
037	L-Synchronization	Not detected	Detected
045	Platen Cover S	Closed	Open
050	Fan Motor Lock	Locked*2	Not locked
051	2 Tray BK Install	Not installed	Installed
053	HP Sensor	Not detected	Detected
054	Duplex Fan M Lock	Locked*2	Not locked
055	Tray1: Tray Set	Not installed	Installed
056	Tray2: Tray Set	Not installed	Installed
057	Tray1: Paper Lift	Not at upper limit	At upper limit
058	Tray2: Paper Lift	Not at upper limit	At upper limit
059	Bypass: Length	Not detected	Paper detected

Using SP Modes

Num.	Sensor/Switch	00H	01H
060	Bypass: HP	Not lifted	Lifted
061	Key Card Install	Not installed	Installed
071	Bank: CPU-Port2	*3	
072	Bank: CPU-Port3	*3	
073	Bank: CPU-PortA	*3	
074	Bank: CPU-PortB	*3	
080	ADF Lift Up	Closed	Open
081	ADF Feed Cover	Closed	Open
082	ADF Original Set	Not detected	Paper detected
083	ADF Registration	Not detected	Paper detected
084	ADF Exit Sensor	Not detected	Paper detected
085	ADF Rear Edge	Not detected	Paper detected
086	ADF Org Length1	*4	
087	ADF Org Length2	*4	
088	ADF Org Length3	*4	
089	ADF Org Width1	*4	
090	ADF Org Width2	*4	
091	ADF Org Width3	*4	
092	ADF Org Width4	*4	
093	ADF Skew Correct	Not detected	Paper detected

*1: Paper size code

Copier	00	01	02	03	04	05	06	07
EU	LT SEF	B5 SEF	HLT LEF	A3 SEF	A4 SEF	B5 LEF	A4 LEF	B4 SEF
NA	LT SEF	B5 SEF	A5 LEF	DLT SEF	A4 SEF	Exe	LT LEF	LGT SEF

By-Pass Tray	00	01	02	03	04	05	06	07	08	09	0C	0C	10	11	18	19
EU	A5 SEF	A5 SEF	B5 SEF	B5 SEF	B5 LEF	B4 SEF	A5 LEF	A4 SEF	A5 SEF	A5 SEF	A4 SEF	A4 LEF	A5 SEF	A5 SEF	B6 SEF	B6 SEF
NA	HLT SEF	HLT SEF	LT S/LG	LT S/LG	LT LEF	DLT	LT S/LG	LT S/LG	HLT SEF	HLT SEF	LT LEF	LT LEF	HLT SEF	HLT SEF	HLT SEF	HLT SEF

*2: Fan motor lock – High speed rotation only.

*3: Bank: CPU-port information

*4: ADF: Combination of the APS sensor (length) and APS sensor (width)

Size (W x L) [mm]	APS sensor (Width)				APS sensor (Length)		
	1	2	3	4	B5	A4	LG
A3 SEF (297 x 420)	Y	Y	Y	Y	Y	Y	Y
B4 SEF (257 x 364)	Y	Y	-	-	Y	Y	Y
A4 SEF (210 x 297)	Y	-	-	-	Y	Y	-
A4 LEF (297 x 210)	Y	Y	Y	Y	-	-	-
B5 SEF (182 x 257)	-	-	-	-	Y	-	-
B5 LEF (257 x 182)	Y	Y	-	-	-	-	-
A5 SEF (148 x 210)	-	-	-	-	-	-	-

Using SP Modes

Size (W x L) [mm]	APS sensor (Width)				APS sensor (Length)		
	1	2	3	4	B5	A4	LG
A5 LEF (210 x 148)	Y	-	-	-	-	-	-
DLT SEF (11" x 17")	Y	Y	Y	-	Y	Y	Y
Folio SEF (11" x 15")	Y	Y	Y	-	Y	Y	Y
Folio SEF (10" x 14")	Y	Y	-	-	Y	Y	Y
LG SEF (8 ¹ / ₂ " x 14")	Y	-	-	-	Y	Y	Y
Foolscap SEF (8 ¹ / ₂ " x 13")	Y	-	-	-	Y	Y	Y
Folio SEF (8 ¹ / ₄ " x 13")	Y	-	-	-	Y	Y	Y
F SEF (8" x 13")	Y	-	-	-	Y	Y	Y
LT SEF (8 ¹ / ₂ " x 11")	Y	-	-	-	Y	-	-
LT LEF (11" x 8 ¹ / ₂ ")	Y	Y	Y	-	-	-	-
US EXE SEF (7 ¹ / ₄ " x 10 ¹ / ₂ ")	Y	-	-	-	Y	-	-
US EXE LEF (10 ¹ / ₂ " x 7 ¹ / ₄ ")	Y	Y	Y	-	-	-	-
Folio SEF (8" x 10")	Y	-	-	-	Y	-	-
HLT SEF (5 ¹ / ₂ " x 8 ¹ / ₂ ")	-	-	-	-	-	-	-
HLT LEF (8 ¹ / ₂ " x 5 ¹ / ₂ ")	Y	-	-	-	-	-	-
8K SEF (267 x 390)	Y	Y	Y	-	Y	Y	Y
16K SEF (195 x 267)	Y	-	-	-	Y	-	-
16K LEF (267 x 195)	Y	Y	Y	-	-	-	-

Remarks:

Y:	Detected
-:	Not supported

Input Check Table for Copier (D158/D159)**-Conducting an Input Check -**

1. Select SP5-803.
2. Select the number (see the table below) corresponding to the component.
3. Select "Execute." The copy mode is activated.
4. Either "01H" or "00H" appears (see the table below).

Num.	Sensor/Switch	00H	01H
001	Tray 1: Paper Size Sensor	*1: See "Table 1"	*1: See "Table 1"
002	Tray 2: Paper Size Sensor	*1: See "Table 1"	*1: See "Table 1"
003	Tray 1: Tray Set Sensor	Installed	Not installed
004	Tray 2: Tray Set Sensor	Installed	Not installed
009	Tray 1: Paper End Sensor	Paper detected	Paper end
010	Tray 2: Paper End Sensor	Paper detected	Paper end
011	Tray 1: Paper Lift Sensor	Not at upper limit	At upper limit
012	Tray 2: Paper Lift Sensor	Not at upper limit	At upper limit
015	By-pass: Paper Size Sensor	*1: See "Table 1"	*1: See "Table 1"
016	By-pass: Paper End Sensor	Paper detected	Paper end
017	By-pass: Paper Length Sensor	Paper detected	Not detected
018	By-pass: Home Position Sensor	Lowered	Lifted
019	Paper Exit Sensor	Paper detected	Not detected
020	Paper Feed Sensor 1	Paper detected	Not detected
021	Paper Feed Sensor 2	Paper detected	Not detected
022	Registration Sensor	Paper detected	Not detected
023	Interchange Sensor	Paper detected	Not detected
024	Duplex: Exit Sensor	Paper detected	Not detected
025	Duplex: Entrance Sensor	Paper detected	Not detected

Using SP Modes

Num.	Sensor/Switch	00H	01H
027	Front Safety Sw - 24V	Front door: Open	Front door: Closed
029	Right Cover Open	Right door: Closed	Right door: Open
030	Duplex Fan Lock	Locked	Not locked
033	Fan Lock	Locked	Not locked
035	Main Motor Lock	Locked	Not locked
037	PCU Set	Not set	Set
039	Key Card Set	Set	Not set
040	Mechanical Counter Set	Not set	Set
041	Key Counter Set	*2: See "Table 2"	*2: See "Table 2"
042	BICU Version	*2: See "Table 2"	
043	VFEEDCOVER	Closed	Open
071	Bank: CPU-Port 2	*3: See "Table 3"	*3: See "Table 3"
072	Bank: CPU-Port 3	*3: See "Table 3"	*3: See "Table 3"
073	Bank: CPU-Port A	*3: See "Table 3"	*3: See "Table 3"
074	Bank: CPU-Port B	*3: See "Table 3"	*3: See "Table 3"
200	HP Sensor	Not home position	Home position
201	Platen Cover Sensor	Open	Closed

*1: Table 1: Paper Size Switch

Paper Size		Bit 2	Bit 1	Bit 0
EU/ASIA	NA			
A3 SEF (DLT SEF)	DLT SEF(A3 SEF)	1	0	0
B4 SEF (LG SEF)	LG SEF (B4 SEF)	0	0	0
A4 SEF	A4 SEF	0	1	1
LT SEF	LT SEF	1	1	1
B5 SEF	B5 SEF	1	1	0
A4 LEF (LT LEF)	LT LEF (A4 LEF)	0	0	1
B5 LEF (Exe LEF)	Exe LEF (B5 LEF)	0	1	0
A5 LEF (HLT LEF)	HLT LEF (A5 LEF)	1	0	1

*2: Table 2: Indication

Status	Set detection 1 (Bit 1)	Set detection 2 (Bit 0)
Installed	0	1
Not installed	1	0

*3: Table 3: Bit meaning

CPU	Valid Bit number	Meaning
CPU-Port 2	Bit:0	Bank motor lock signal
CPU-Port 3	Bit:0	Paper pressure revision sensor 1
	Bit:2	Paper pressure revision sensor 2
CPU-Port A	Bit:0	Relay sensor
	Bit:1	Paper end detection 1
	Bit:2	Upper limit detection 1
	Bit:4	Upper limit detection 2
	Bit:6	Paper end detection 2
	Bit:7	Right door open detection
CPU-Port B	Bit:0	Tray set detection 1
	Bit:1	Size detection 1-1
	Bit:2	Size detection 1-2
	Bit:3	Size detection 1-3
	Bit:4	Tray set detection 2
	Bit:5	Size detection 2-1
	Bit:6	Size detection 2-2
	Bit:7	Size detection 2-3

6.4.5 OUTPUT CHECK

- Conducting an Output Check –

↓ Note

- To prevent mechanical or electrical damage, do not keep an electrical component on for a long time.
1. Select SP5-804.
 2. Select the number (see the table below) corresponding to the component.
 3. Select "ON."
 4. To stop the operation, select "OFF."

- Output Check Table -

Number 005, 006, 040, and 041 may not respond when the fusing temperature is high.

Num.	Component (D160/D161/D170)
001	Main Motor Forward
002	Main Motor Reverse
003	Quenching Lamp
004	Toner Supply Motor Forward
005	Fan Motor High
006	Fan Motor Low
007	Registration Clutch
008	By-pass Feed Clutch
009	Upper Feed Clutch
010	Lower Feed Clutch
011	BK-Low Lift Motor Up
012	BK-Low Lift Motor Down
013	Relay Clutch
014	BK-Relay Clutch
015	BK-Upper Feed Clutch

Using SP Modes

Num.	Component (D160/D161/D170)
016	BK-Lower Feed Clutch
017	BK-Lift Motor
018	BK-Up Lift Motor Up
019	BK-Up Lift Motor Down
020	Duplex Inv Motor Reverse
021	Duplex Inv Motor Forward
022	Duplex Trans Motor
023	Duplex Gate Solenoid
024	Duplex Inv Motor Hold
025	Dup Trans Motor Hold
026	Polygon Motor
027	Polygon M/LD
038	Fusing Solenoid
040	Duplex Fan Motor High
041	Duplex Fan Motor Low
042	1st Tray Up
043	1st Tray Down
044	2nd Tray Up
045	2nd Tray Down
046	Bypass Tray CL
071	Bank: Motor
072	Bank: Feed Clutch 1
073	Bank: Feed Clutch 2
074	Bank: Trans Clutch

Num.	Component (D160/D161/D170)
080	ADF Feed Motor F
081	ADF Relay Motor F
082	ADF Feed Clutch
083	ADF Inverter Sol
084	ADF Feed Motor R
085	ADF Relay Motor R
086	ADF Feed Solenoid
087	ADF Stamp
202	Scanner Lamp
203	Scanner Light: BW

Num.	Component (D158/D159)
001	Main Motor: CW: High
002	Main Motor: CW: Low
003	Main Motor: CCW: High
004	Main Motor: CCW: Low
005	Duplex Motor: Hold
006	Duplex Motor: CCW: 582.4
007	Duplex Motor: CCW: 636.6
008	Duplex Motor: CCW: 708.5
009	Duplex Motor: CCW: 774.8
010	Interchange Motor: Hold
011	Interchange Motor: CW: 430.1
012	Interchange Motor: CW: 524.5

Using SP Modes

Num.	Component (D158/D159)
013	Interchange Motor: CCW: 430.1
014	Interchange Motor: CCW: 474.3
015	Interchange Motor: CCW: 524.5
016	Interchange Motor: CCW: 577.3
020	Toner Bottle Motor
021	1st Tray Up
022	1st Tray Down
023	2nd Tray Up
024	2nd Tray Down
025	Exhaust Fan Motor: High
026	Exhaust Fan Motor: Low
027	Duplex Fan
032	Registration CL
033	1st Paper Feed CL
034	2nd Paper Feed CL
035	Paper Transport CL1
039	Interchange SOL
040	Fusing SOL
041	Dehumidification Heater
042	PP.: Image Transfer: -
043	PP.: Image Transfer: +
044	PP.: Separation Voltage
045	PP.: Development
046	PP.: Charge

Num.	Component (D158/D159)
047	P Sensor
048	Anti-static LED
049	Polygon Motor: High
050	Polygon Motor: Low
051	LD On
055	By-pass CL
056	By-pass Tray CL
071	Bank: Motor
072	Bank: Feed Clutch 1
073	Bank: Feed Clutch 2
074	Bank: Trans Clutch
202	Scanner Lamp

6.4.6 SERIAL NUMBER INPUT (SP 5811) (D158/D159)

- Specifying Characters -

SP5-811-004 specifies the serial number.

A serial number consists of 11 characters. You can change each character by pressing one of the first 11 keys on the numeric keypad (1, 2, 3, ..., 0).

For example, when you press the 1 key, the first character of the serial number changes as follows:

0 ⇒ 1 ⇒ 2 ⇒ ... ⇒ 8 ⇒ 9 ⇒ A ⇒ B ⇒ ... ⇒ X ⇒ Y ⇒ Z.

When you press the 2 key, the second character changes likewise.

You can specify a digit ("0" to "9") or a capital letter ("A" to "Z") for the first four characters of a serial number, and you can specify a digit in the other seven characters (not capital letters).

6.4.7 TEST PATTERN PRINT

D160/D161/D170 models

- Executing Test Pattern Printing -

1. Turn the main switch on.
2. Start the SP mode.
3. Select SP5-902-001 (Test Pattern).
4. Specify the pattern number and press the OK key.
5. Press the copy start key. The copy mode is activated
6. Specify copy settings and press the Start key.
7. To return to the SP mode, press the Stop key.

- Test Patterns -

Test Patterns Using VCU	
No.	Pattern
0	(No print)
1	Vertical Lines (Single Dot)
2	Horizontal Lines (Single Dot)
3	Vertical Lines (Double Dot)
4	Horizontal Lines (Double Dot)
5	Grid Pattern (Single Dot)
6	Grid Pattern (Double Dot)
7	Alternating Dot Pattern
8	Isolated one dot
9	Black Band (Horizontal)
10	Trimming Area
11	Argyle Pattern (Single Dot)
12	Grayscales (Horizontal)
13	Grayscales (Vertical)

Test Patterns Using VCU	
14	Grayscales (Vertical/Horizontal)
15	Grayscales (Vertical/Horizontal Overlay)
16	Grayscales With White Lines (Horizontal)
17	Grayscales with White Lines (Vertical)
18	Grayscales with White Lines (Vertical/Horizontal)

D158/D159 models

-Executing Test Pattern Printing-

1. Turn the main switch on.
2. Start the SP mode.
3. Select SP2-109-001 (Test Pattern Select).
4. Specify the pattern number and press the OK key.
5. Press the copy start key. The copy mode is activated
6. Specify copy settings and press the Start key.
7. To return to the SP mode, press the Stop key.

- Test Patterns -

Test Patterns	
No.	Pattern
0	None
1	Vertical Line (1 dot)
2	Vertical Line (2 dot)
3	Horizontal Line (1 dot)
4	Horizontal Line (2 dot)
5	Grid Vertical Line
6	Grid Horizontal Line
7	Grid Pattern Small

Using SP Modes

Test Patterns	
8	Grid Pattern Large
9	Argyle Pattern Small
10	Argyle Pattern Large
11	Independent Pattern (1 dot)
12	Independent Pattern (2 dot)
13	Independent Pattern (4 dot)
14	Trimming Area
15	Black Band (Horizontal)
16	Black Band (Vertical)
17	Checker Flag Pattern
18	Grayscale (Vertical)
19	Grayscale (Horizontal)
20	Full Dot Pattern
21	All White Pattern

6.4.8 PAPER JAM COUNTERS (SP 7504)

The table lists the menu numbers (the last three digits of SP7-504-XXX) and the paper jam timings and locations.

Code	Timing and Locations (D160/D161/D170)
001	At Power On
010	Off-Regist NoFeed
011	Off-1 Vertical SN
012	On-1 Vertical SN
021	Off-2 Vertical SN
022	On-2 Vertical SN
031	Off-3 Vertical SN
032	On-3 Vertical SN
050	Off-Regist Bypass
060	Off-Regist Duplex
070	On-Regist SN
120	On-Exit SN
121	Off-Exit SN
122	On-Exit SN
123	Off-Dup Inverter
125	On-Dup Inverter
126	Off-Dup Entrance
127	On-Dup Entrance
128	Off-Duplex Exit
129	On-Duplex Exit

Using SP Modes

Code	Timing and Locations (D160/D161/D170)
130	Off-1Bin Exit
131	On-1Bin Exit

Code	Timing and Locations (D158/D159)
001	Paper Jam Loc At Power On
003	Paper Jam Loc MainTray1:No Feed
004	Paper Jam Loc MainTray2:No Feed
005	Paper Jam Loc Bank 1: On
006	Paper Jam Loc Bank 2: On
008	Paper Jam Loc Bypass: On
009	Paper Jam Loc Duplex: On
011	Paper Jam Loc Vertical Transport 1: On
012	Paper Jam Loc Vertical Transport 2: On
017	Paper Jam Loc Registration: On
020	Paper Jam Loc Paper Exit: On
024	Paper Jam Loc Inverter SN: On
025	Paper Jam Loc Duplex Exit: On
027	Paper Jam Loc Duplex Entrance: On
051	Paper Jam Loc Vertical Transport 1: Off
052	Paper Jam Loc Vertical Transport 2: Off
053	Paper Jam Loc Bank: Transport: Off
057	Paper Jam Loc Registration Sensor: Off
060	Paper Jam Loc Paper Exit: Off
064	Paper Jam Loc Inverter SN: Off

Code	Timing and Locations (D158/D159)
065	Paper Jam Loc Duplex Exit: Off
067	Paper Jam Loc Duplex Entrance: Off

6.4.9 SMC PRINT (SP 5990)

SP 5990 outputs machine status lists.

1. Select SP5-990.
 2. Select from the menu:
 - D160/D161/D170:** 001 All, 002 SP, 003 User Program, 004 Logging Data, or 005 Big Font
 - D158/D159:** 001 All (Data List), 002 SP (Mode Data List), 003 User Program, 004 Logging Data, 005 Diagnostic Report, 006 Non-Default, 007 NIB Summary, 008 Net File Log, 021 Copier User Program, 022 Scanner SP, 023 Scanner User Program, 024 SDK/J Summary, or 025 SDK/J Application information, 026 SP Print Mode Printer SP, 064 SP Print Mode Normal Count Print, 065 SP Print Mode User Code Counter, 066 SP Print Mode Key Operator Counter, 067 SP Print Mode Contact List Print, 069 SP Print Mode Heading1 print, 070 SP Print Mode Heading2 print, 071 SP Print Mode Heading3 print, 072 SP Print Mode Group List Print, 074 SP Print Mode Key Code Print, 080 SP Print Mode TCRU Print
- Note**
- The output given by the menu "Big Font" is suitable for faxing.
3. Press the "Execute" key.
 - D158/D159:** The copy mode is activated
Specify copy settings and press the Start key. The machine status lists is output.
 - D160/D161/D170:** The machine status list is output.
 4. To return to the SP mode, press the Start key.

6.4.10 SMC PRINT TO SD CARD (SP 5992)

Overview

The SMC List Card Save (SP Text Mode) function is used to save the SMC list as CSV files to the SD card inserted into the operation panel SD-card slot or SD card slot 2 (lower). If both the slots are in use, the list is saved in the SD card in the operation panel preferentially.

Procedure

1. Turn the main power switch OFF.
2. Insert the SD card into the operation panel SD card slot. Then turn the power ON.
3. Enter SP mode.
4. Select "Copy SP".




5. Select SP-5992 "SP Text Mode".
6. Select a detail SP number shown below to save data on the SD card.
7. SP-5992-xxx (SP Text Mode)


Detail No.	SMC Categories to Save
001	All (Data List)
002	SP (Mode Data List)
003	User Program
004	Logging Data
005	Diagnostic Report
006	Non-Default
007	NIB Summary
008	Capture Log

Detail No.	SMC Categories to Save
021	Copier User Program
022	Scanner SP
023	Scanner User Program
024	SDK/J Summary
025	SDK/J Application Info
026	Printer SP


8. Press [EXECUTE].

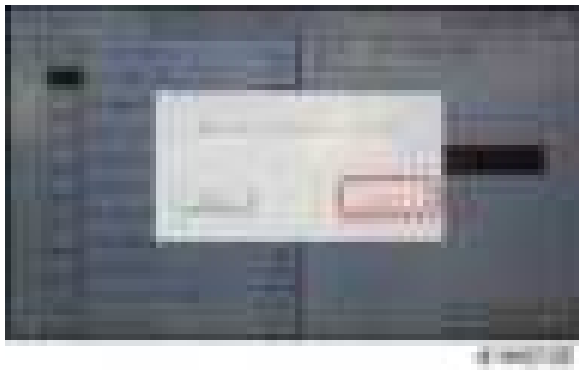

9. Press [EXECUTE] again to start. Press [CANCEL] to cancel the saving.

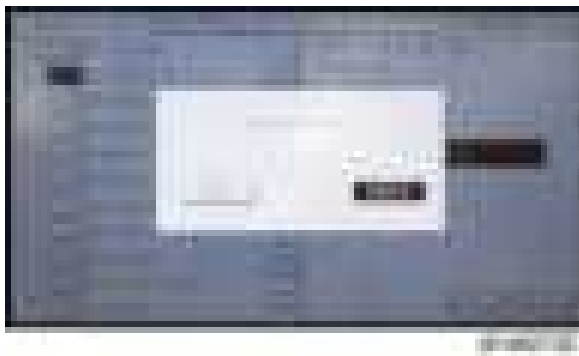

10. "It is executing it" is shown on the screen while executing.

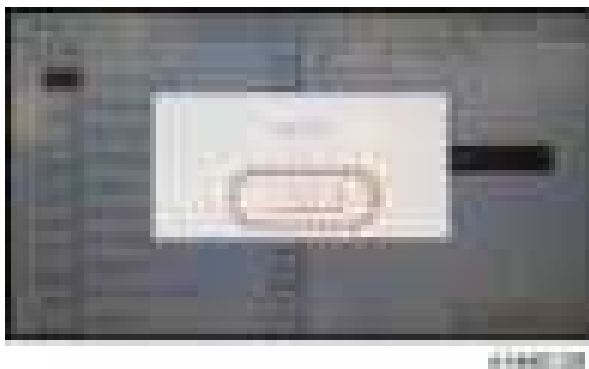

11. Wait for 2 to 3 minutes until “Completed” is shown.

Note


- The SMC list saving may take from 2 to 3 minutes to complete.
- Press [CANCEL] to abort executing.

12. Press [Exit] to exit from SP mode.

File Names of the Saved SMC Lists

The SMC list data saved on the SD card will be named automatically. The file naming rules are as follows.

Example:

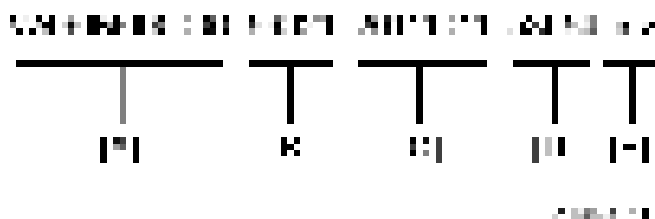

A:

Machine serial number (fixed for each machine)

B:

SP number saved in this file.

The first four digits (5992) in this part are fixed. The other one or two digits are the detail SP number(s). In this case, it is one digit. Therefore, this file is for SP5-992-001 (All data list). See the upper SP table for the correspondence between SP detail numbers and the contents.

C:

File creation date

Year/Month/Day (“Zero” will be omitted if each is one digit.)

D:

File creation time

Hour/Minute/Second (“Zero” will be omitted if each is one digit.)

E:

File Extension CSV (Comma Separated Value)

This part is fixed.

Note

- A folder named with the machine serial number will be created on the SD card when this function is executed.

6.4.11 ORIGINAL JAM HISTORY DISPLAY (SP 7508)

- Viewing the Copy Jam History -

You can view the information on the most recent 10 events. The information on older events is deleted automatically.

Note

- The information on jam history is saved in the NVRAM.
1. Select SP7-508.
 2. Select one of the menu items ("Latest 1" through Latest 10").
 3. Press the OK key. The summary of the jam history shows.
 4. To view more information, select "Detail."

Jam History Codes

Code	Meaning
001	Original Jam History Latest
002	Original Jam History Latest 1
003	Original Jam History Latest 2
004	Original Jam History Latest 3
005	Original Jam History Latest 4
006	Original Jam History Latest 5
007	Original Jam History Latest 6
008	Original Jam History Latest 7
009	Original Jam History Latest 8
010	Original Jam History Latest 9

6.4.12 SC HISTORY DISPLAY (SP 7403)

- Viewing the SC History -

You can view the information on the most recent 10 events. The information on older events is deleted automatically.

Note

- The information on SC history is saved in the NVRAM.
1. Press the OK key.
 2. Select SP7-403.
 3. Select one of the menu items ("Latest 1" through Latest 10").
 4. Press the OK key. The summary of the SC history appears.
 5. To view more information, select "Detail."

SC History Codes

Code	Meaning
001	Latest
002	Latest 1
003	Latest 2
004	Latest 3
005	Latest 4
006	Latest 5
007	Latest 6
008	Latest 7
009	Latest 8
010	Latest 9

D158/D159/D160/D161/D170
SERVICE MANUAL APPENDICES

D158/D159/D160/D161/D170

APPENDICES

TABLE OF CONTENTS

1. APPENDIX: GENERAL SPECIFICATIONS	1-1
1.1 SPECIFICATIONS	1-1
1.1.1 GENERAL SPECIFICATIONS	1-1
1.2 SUPPORTED PAPER SIZES	1-6
1.2.1 ORIGINAL SIZE DETECTION	1-6
1.2.2 PAPER FEED	1-10
Mainframe, Bank (Optional Paper Trays), Bypass Tray	1-10
1.2.3 PAPER EXIT	1-13
Main: Mainframe / 1-bin: 1-bin tray (D158/D159 only)	1-13
1.3 SOFTWARE ACCESSORIES	1-15
1.3.1 PRINTER DRIVERS	1-15
D158/D159	1-15
D160/D160/D170	1-16
1.3.2 SCANNER AND LAN FAX DRIVERS	1-17
D158/D159	1-17
D160/D161/D170	1-18
1.4 OPTIONAL EQUIPMENT	1-19
1.4.1 ARDF (D724)	1-19
1.4.2 ARDF (D684)	1-20
1.4.3 ONE-TRAY PAPER TRAY UNIT	1-21
1.4.4 TWO-TRAY PAPER TRAY UNIT	1-22
1.4.5 ONE-BIN TRAY	1-23
2. APPENDIX: PM TABLES	2-1
2.1 MAINTENANCE TABLES	2-1
2.1.1 PREVENTIVE MAINTENANCE ITEMS	2-1
Mainframe (D158, D159)	2-1
Mainframe (D170, D160, D161)	2-5

3. APPENDIX: SERVICE PROGRAM MODE TABLES	3-1
3.1 MAIN SP TABLES-1	3-1
3.1.1 SP1-XXX (FEED).....	3-1
3.2 MAIN SP TABLES-2	3-18
3.2.1 SP2-XXX (DRUM).....	3-18
3.3 MAIN SP TABLES-3	3-38
3.3.1 SP3-XXX (PROCESS).....	3-38
3.4 MAIN SP TABLES-4	3-39
3.4.1 SP4-XXX (SCANNER).....	3-39
3.5 MAIN SP TABLES-5	3-79
3.5.1 SP5-XXX (MODE).....	3-79
3.6 MAIN SP TABLES-6	3-188
3.6.1 SP6-XXX (PERIPHERALS)	3-188
3.7 MAIN SP TABLES-7	3-196
3.7.1 SP7-XXX (DATA LOG)	3-196
3.8 SYSTEM SP TABLES-8	3-212
3.8.1 SP8-XXX: DATA LOG 2.....	3-212
3.9 INPUT AND OUTPUT CHECK	3-248
3.9.1 INPUT CHEK	3-248
3.9.2 OUTPUT CHECK.....	3-257
3.10 PRINTER SP TABLES	3-264
3.10.1 SP1-XXX (SERVICE MODE).....	3-264
D158/D159	3-264
3.11 SCANNER SP TABLES	3-278
3.11.1 SP1-XXX (SYSTEM AND OTHERS)	3-278
D158/159.....	3-278
3.11.2 SP2-XXX (SCANNING-IMAGE QUALITY).....	3-280
D158/D159	3-280
3.12 TEST PATTERN PRINTING	3-281
3.12.1 D158/D159.....	3-281
3.12.2 D160/D161/D170	3-282

APPENDIX: SPECIFICATIONS

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

1. APPENDIX: GENERAL SPECIFICATIONS

1.1 SPECIFICATIONS

1.1.1 GENERAL SPECIFICATIONS

Configuration:	Desktop	
Photosensitivity type:	OPC drum	
Original scanning:	One-dimensional solid-state scanning system through CCD (D158/D159) or CIS (D170/D160/D161)	
Copy Process:	Laser beam scanning/marketing & electro-photographic printing.	
Development:	Dry two-component magnetic brush development system	
Fusing:	Heating roller pressure system	
Resolution:	Scanning originals: 600 dpi Copying: 600 dpi	
Exposure glass:	Stationary original exposure type	
Original reference position:	Rear left corner	
Warm-up time:	Less than 20 seconds (23°C (73.4°F), rated voltage)	
Originals:	Sheet/Book/Object	
Maximum original size:	A3/11" x 17"	
Copy Paper Size:	Trays:	A3 LEF - A5 SEF, 11" x 17" LEF - 5 ¹ / ₂ " x 8 ¹ / ₂ " SEF
	Bypass:	A3 LEF - A6 LEF, 11" x 17" LEF - 5 ¹ / ₂ " x 8 ¹ / ₂ " LEF
	Bypass (Custom size):	Vertical: 90–297 mm, 3.55"–11.69" Horizontal: 148–600 mm, 5.83"–23.62"

Specifications

Copy Paper Weight:	Paper Tray:	60–105 g/m ² , 16–28 lb.		
	Bypass:	52–162 g/m ² , 14–43 lb.		
Missing image area:		<p>Leading edge: 3 ± 2 mm (0.12" ± 0.08") Trailing edge: 3 ± 2 mm (0.12" ± 0.08") (4.2 ± 2 mm (0.17" ± 0.08") for even pages when using the duplex function.) Left edge: 2 ± 1.5 mm (0.08" ± 0.06") Right edge: 2 + 2.5/-1.5 mm (0.08" + 0.1"/-0.06")</p> <p>-Note- Missing image area of envelopes is 10 mm (0.40") and that of thick paper is 5 mm (0.20").</p>		
First copy time:		<p>D158/D159: Less than 5 seconds D170/D160/D161: Less than 6.5 seconds (A4 LEF, 8¹/₂" × 11" LEF, 100 %, feeding from Tray 1)</p>		
Copying speed:		<p>D158/D160/D170: 20 copies/minute (A4 LEF, 8¹/₂" × 11" LEF) D159/D161: 25 copies/minute (A4 LEF, 8¹/₂" × 11" LEF)</p>		
Reproduction ratio:		3 enlargement and 4 reduction		
			A3/A4 Version	LT/DLT Version
		Enlargement	200 %	155 %
			141 %	129 %
			122 %	121 %
Full Size	100 %	100 %		
Reduction	93 %	93 %		
	82 %	78 %		
	71 %	65 %		
	50 %	50 %		

Zoom:	25 % to 200 %, in 1 % steps	
Continuous copying count:	1-99 copies	
Copy Paper Capacity:	Paper Tray:	250 sheets (D158/D160/D170) (80 g/m ² , 20 lb.) 250 sheets x 2 (D159/D161) (80 g/m ² , 20 lb.)
	Bypass Tray:	100 sheets
	Optional Paper Tray Unit:	500 x 2
Manual Image Density:	D160/D161/D170: 5 steps D158/D159: Less than 7 steps	
Automatic Reset:	Default is 60 seconds. Can be set from 10 to 999 seconds with user tools.	
Automatic Shut-off:	Default is 1 minute. Can be set from 1 to 240 minutes with user tools.	
Toner Replenishment:	Cartridge replacement (260 g/cartridge)	
Optional Equipment:	Platen cover Auto-reverse document feeder Paper tray unit (1 tray) Paper tray unit (2 trays) 1-bin tray (D158/D159 only)	
Toner Yield:	NA, EU, Asia, Taiwan: 9k copies (A4 LEF, 6 % full black, 1 to 2 copying, normal text mode) China: 6.5k copies (A4 LEF, 6 % full black, 1 to 2 copying, normal text mode)	

Specifications

Memory:		D158/D159: 1024 MB D158/D159: 1536 MB (with expanded memory) D160/D161/D170: 128 MB
Power source:	Taiwan:	110V 60Hz 13A
	North and South America:	120 - 127V 60Hz 12A
	Europe, Asia, China:	220V - 240V 50/60Hz 8A
Power consumption:	Complete system:	Not more than 1.55 kW
	Sleep Mode:	D160/D161/D170: Not more than 2.5 W D158/D159: Not more than 1 W
	Off Mode:	D160/D161/D170: Not more than 1 W
Noise emission:	Complete system:	Stand-by: Not more than 40 dB(A) Copying: D159/D160/D170: Not more than 67 dB(A) D158/D161: Not more than 68.8 dB(A)
<p>-Note- The above measurements were made in accordance with ISO7779. Measurements were taken from the normal position of the operator.</p>		
Dimensions (W x D x H up to exposure glass):	D158	587 x 568 x 460 mm (23.1" x 22.4" x 18.1")
	D159	587 x 568 x 558 mm (23.1" x 22.4" x 22.0")
	D160/D170	587 x 568 x 431 mm (23.1" x 22.4" x 17.0")
	D161	587 x 568 x 529 mm (23.1" x 22.4" x 20.8")

Weight:	D158	Less than 45 kg (99.2 lb)
	D159/D161	Less than 47 kg (103.6 lb)
	D160	Less than 37 kg (81.6 lb)
	D170	Less than 35 kg (77.2 lb)
Duplex (D158/D159/D160/D161 only)		
Paper size:	A3 LEF, B4 JIS LEF, A4 SEF/LEF, B5 JIS SEF/LEF, A5 SEF/LEF, 11" x 17" LEF, 8" x 14" LEF, 8 ¹ / ₂ " x 13" LEF, 8 ¹ / ₄ " x 13" LEF, 8" x 13" LEF, 8 ¹ / ₂ " x 11" SEF/LEF, 7 ¹ / ₄ " x 10 ¹ / ₂ " SEF/LEF, 8K LEF, 16K SEF/LEF	

1.2 SUPPORTED PAPER SIZES

1.2.1 ORIGINAL SIZE DETECTION

D160/D161/D170 Models

Size (W x L) [mm]	NA		EU/Asia/Oceania		China	
	Platen	ARDF	Platen	ARDF	Platen	ARDF
A3 SEF (297 x 420)	-	Y	Y	Y	Y ^{*1}	
B4 SEF (257 x 364)	-	-	Y	Y	Y ^{*1}	
A4 SEF (210 x 297)	Y ^{*1}	Y	Y ^{*1}	Y	Y ^{*1}	
A4 LEF (297 x 210)	Y ^{*1}	Y	Y ^{*1}	Y	Y ^{*1}	
B5 SEF (182 x 257)	-	-	-	Y	Y ^{*1}	
B5 LEF (257 x 182)	-	-	Y	Y	Y ^{*1}	
A5 SEF (148 x 210)	-	-	Y ^{*3}	Y	Y ^{*3}	
A5 LEF (210 x 148)	-	-	Y ^{*3}	Y	Y ^{*3}	
B6 SEF (128 x 182)	-	-	-	-	-	-
B6 LEF (182 x 128)	-	-	-	-	-	-
DLT SEF (11" x 17")	Y	Y ^{*2}	-	Y ^{*2}	-	Y ^{*2}
LG SEF (8 ^{1/2} " x 14")	Y	Y ^{*2}	-	-	-	-
LT SEF (8 ^{1/2} " x 11")	Y ^{*1}	Y ^{*2}	Y ^{*1}	Y ^{*2}	-	Y ^{*2}
LT LEF (11" x 8 ^{1/2} ")	Y ^{*1}	Y ^{*2}	Y ^{*1}	Y ^{*2}	-	Y ^{*2}
HLT SEF (5 ^{1/2} " x 8 ^{1/2} ")	Y ^{*3}	Y	-	-	-	-

Size (W x L) [mm]	NA		EU/Asia/Oceania		China	
HLT LEF (8 ¹ / ₂ " x 5 ¹ / ₂ ")	Y ^{*3}	Y	-	-	-	-
F SEF (8" x 13")	-	-	Y ^{*4}	Y ^{*4}	-	Y ^{*4}
Foolscap SEF (8 ¹ / ₂ " x 13")	-	Y ^{*2}	Y ^{*4}	Y ^{*4}	-	Y ^{*4}
Folio SEF (8 ¹ / ₄ " x 13")	-	-	Y ^{*4}	Y ^{*4}	-	Y ^{*4}
Folio SEF (11" x 15")	-	Y ^{*2}	-	-	-	-
Folio SEF (10" x 14")	-	Y	-	-	-	-
Folio SEF (8" x 10")	-	Y ^{*2}	-	-	-	-
US EXE SEF (7 ¹ / ₄ " x 10 ¹ / ₂ ")	-	Y	-	-	-	-
US EXE LEF (10 ¹ / ₂ " x 7 ¹ / ₄ ")	-	Y ^{*2}	-	-	-	-
8K SEF (267 x 390)	-	-	-	Y ^{*2}	Y ^{*1}	Y ^{*2}
16K SEF (195 x 267)	-	-	-	Y ^{*2}	Y ^{*1}	Y ^{*2}
16K LEF (267 x 195)	-	-	-	Y ^{*2}	Y ^{*1}	Y ^{*2}

D158/D159 Models

Size (W x L) [mm]	NA		EU/Asia/Oceania/TW/China	
	Platen	ARDF	Platen	ARDF
A3 SEF (297 x 420)	-	Y	Y ^{*1}	Y
B4 SEF (257 x 364)	-	-	Y ^{*1}	Y
A4 SEF (210 x 297)	Y ^{*1}	Y	Y ^{*1}	Y
A4 LEF (297 x 210)	Y ^{*1}	Y	Y ^{*1}	Y
B5 SEF (182 x 257)	-	-	Y ^{*1}	Y
B5 LEF (257 x 182)	-	-	Y ^{*1}	Y
A5 SEF (148 x 210)	-	-	Y ^{*3} /Y ^{*1}	Y
A5 LEF (210 x 148)	-	-	Y ^{*1}	Y
B6 SEF (128 x 182)	-	Y ^{*5}	-	Y
B6 LEF (182 x 128)	-	Y ^{*5}	-	Y
DLT SEF (11" x 17")	Y	Y ^{*2}	-	Y ^{*2}
LG SEF (8 ¹ / ₂ " x 14")	Y	Y ^{*2}	-	-
LT SEF (8 ¹ / ₂ " x 11")	Y ^{*1}	Y ^{*2}	Y ^{*1}	Y ^{*2}
LT LEF (11" x 8 ¹ / ₂ ")	Y ^{*1}	Y ^{*2}	Y ^{*1}	Y ^{*2}
HLT SEF (5 ¹ / ₂ " x 8 ¹ / ₂ ")	Y ^{*3}	Y	-	-
HLT LEF (8 ¹ / ₂ " x 5 ¹ / ₂ ")	Y	Y	-	-
F SEF (8" x 13")	-	-	Y ^{*4}	Y ^{*4}

Size (W x L) [mm]	NA		EU/Asia/Oceania/TW/China	
	Platen	ARDF	Platen	ARDF
Foolscap SEF (8 ¹ / ₂ " x 13")	-	Y ^{*2}	Y ^{*4}	Y ^{*4}
Folio SEF (8 ¹ / ₄ " x 13")	-	-	Y ^{*4}	Y ^{*4}
Folio SEF (11" x 15")	-	Y ^{*2}	-	-
Folio SEF (10" x 14")	-	Y	-	-
Folio SEF (8" x 10")	-	Y ^{*2}	-	-
US EXE SEF (7 ¹ / ₄ " x 10 ¹ / ₂ ")	-	Y	-	-
US EXE LEF (10 ¹ / ₂ " x 7 ¹ / ₄ ")	-	Y ^{*2}	-	-
8K SEF (267 x 390)	-	-	Y ^{*1}	Y ^{*2}
16K SEF (195 x 267)	-	-	Y ^{*1}	Y ^{*2}
16K LEF (267 x 195)	-	-	Y ^{*1}	Y ^{*2}

*1: The machine can detect the paper size depending on the setting of SP4-305-001 (D160/D161/D170), SP4-305-001 (D158/D159).

*2: The machine can detect the paper size depending on the setting of SP6-016-001.

*3: The machine can detect the paper size depending on the setting of SP4-303-001 (D160/D161/D170).

*4: The machine can detect the paper size depending on the setting of SP5-126-001.

*5: The machine can detect the paper size when the optional ARDF is installed.

Remarks:

Y	Supported
-	Not supported.

1.2.2 PAPER FEED

Mainframe, Bank (Optional Paper Trays), Bypass Tray

Size (W x L) [mm]	Mainframe tray		Bank		Bypass-Tray	
	NA	EU/ Asia/ TW	NA	EU/ Asia/ TW	NA	EU/ Asia/ TW
A3 SEF (297 x 420)	S	A	S	A	M	M
A4 SEF (210 x 297)	A	A	A	A	M	M
A4 LEF (297 x 210)	S	A	S	A	M	M
A5 SEF (148 x 210)	-	-	M	B	M	M
A5 LEF (210 x 148)	S	A	A	A	M	M
A6 SEF (105 x 148)	-	-	-	-	M	M
B4 SEF (257 x 364)	S	A	S	A	M	M
B5 SEF (182 x 257)	A	A	A	A	M	M
B5 LEF (257 x 182)	S	A	S	A	M	M
B6 SEF (128 x 182)	-	-	M	M	M	M
DLT SEF (11" x 17")	A	S	A	S	M	M
Legal SEF (8 ¹ / ₂ " x 14")	A	S	A	S	S	M
Foolscap SEF (8 ¹ / ₂ " x 13")	M	M	M	M	M	M
LT SEF (8 ¹ / ₂ " x 11")	A	A	A	A	M	M

Size (W x L) [mm]	Mainframe tray		Bank		Bypass-Tray	
	NA	EU/ Asia/ TW	NA	EU/ Asia/ TW	NA	EU/ Asia/ TW
LT LEF (11" x 8 ¹ / ₂ ")	A	S	A	S	M	M
Gov. LG SEF (8 ¹ / ₄ " x 14")	M	M	M	M	M	M
Folio SEF (8 ¹ / ₄ " x 13")	M	M	M	M	M	M
F/GL SEF (8" x 13")	M	M	M	M	M	M
G LT SEF (8" x 10 ¹ / ₂ ")	M	M	M	M	M	M
G LT LEF (10 ¹ / ₂ " x 8")	M	M	M	M	M	M
Eng Quatro SEF (8" x 10")	M	M	M	M	M	M
Eng Quatro LEF (10" x 8")	M	M	M	M	M	M
Executive SEF (7 ¹ / ₄ " x 10 ¹ / ₂ ")	M	M	M	M	M	M
Executive LEF (10 ¹ / ₂ " x 7 ¹ / ₄ ")	A	S	A	S	M	M
HLT SEF (5 ¹ / ₂ " x 8 ¹ / ₂ ")	-	-	M	M	M	M
HLT LEF (8 ¹ / ₂ " x 5 ¹ / ₂ ")	A	S	-	-	M	M
Com10 SEF (4 ¹ / ₈ " x 9 ¹ / ₂ ")	-	-	-	-	M	M

Supported Paper Sizes

Monarch SEF (3 ⁷ / ₈ " x 7 ¹ / ₂ ")	-	-	-	-	M	M
C5 SEF (162 x 229)	-	-	-	-	M	M
C5 LEF (229 x 162)	-	-	-	-	M	M
C6 Env SEF (114 x 162)	-	-	-	-	M	M
DL Env SEF (110 x 220)	-	-	-	-	M	M
8K SEF (267 x 390)	M	M	M	M	M	
16K SEF (195 x 267)	M	M	M	M	M	M
16K LEF (267 x 195)	M	M	M	M	M	M
12" x 18" SEF	-	-	-	-	M	M
Folio SEF (11" x 15")	M	M	M	M	M	M
Folio SEF (11" x 14")	M	M	M	M	M	M
Folio SEF (10" x 15")	M	M	M	M	M	M
Folio SEF (10" x 14")	M	M	M	M	M	M

Remarks:

A:	Supported: the sensor detects the paper size.
M:	Supported: the user specifies the paper size.
S:	Supported: depends on a technician adjustment
-:	Not supported

1.2.3 PAPER EXIT

Main: Mainframe / 1-bin: 1-bin tray (D158/D159 only)

Size (W x L) [mm]	Main	1-bin
A3 SEF (297 x 420)	A	A
A4 SEF (210 x 297)	A	A
A4 LEF (297 x 210)	A	A
A5 SEF (148 x 210)	A	A
A5 LEF (210 x 148)	A	A
A6 SEF (105 x 148)	A	A
B4 SEF (257 x 364)	A	A
B5 SEF (182 x 257)	A	A
B5 LEF (257 x 182)	A	A
B6 SEF (128 x 182)	A	A
Ledger (11" x 17")	A	A
Legal SEF (8.5" x 14")	A	A
Foolscap SEF (8.5" x 13")	A	A
Letter SEF (8.5" x 11")	A	A
Letter LEF (11" x 8.5")	A	A
Government LG SEF (8.25" x 14")	A	A
Folio SEF (8.25" x 13")	A	A
F/GL SEF (8" x 13")	A	A
G LT SEF (8" x 10.5")	A	A
G LT LEF (10.5" x 8")	A	A
Eng Quatro SEF (8" x 10")	A	A

Supported Paper Sizes

Size (W x L) [mm]	Main	1-bin
Eng Quatro LEF (10" x 8")	A	A
Executive SEF (7.25" x 10.5")	A	A
Executive LEF (10.5" x 7.25")	A	A
Half Letter SEF (5.5" x 8.5")	A	A
Half Letter LEF (8.5" x 5.5")	A	A
Com10 SEF (4.125" x 9.5")	A	-
Monarch SEF (3.875" x 7.5")	A	-
C5 SEF (162 x 229)	A	-
C5 LEF (229 x 162)	A	-
C6 SEF (114 x 162)	A	-
DL SEF (110 x 220)	A	-
8K SEF (267 x 390)	A	A
16K SEF (195 x 267)	A	A
16K LEF (267 x 195)	A	A
12" x 18" SEF	A	A
11" x 15" SEF	A	A
11" x 14" SEF	A	A
10" x 15" SEF	A	A
10" x 14" SEF	A	A

Remarks:

A	Supported
-	Not supported

1.3 SOFTWARE ACCESSORIES

The printer drivers and utility software are provided on one CD-ROM. An auto-run installer allows you to select which components to install.

1.3.1 PRINTER DRIVERS

D158/D159

Printer Language	Windows XP ^{*1*6}	Windows Vista ^{*2*6}	Windows 7 ^{*3*6}
PCL 5c/6	Yes	Yes	Yes
GDI	No	No	No
PS3	Yes	Yes	Yes

Printer Language	Windows Server 2003 ^{*4*6}	Windows Server 2008 or later ^{*5*6}	Macintosh ^{*7}
PCL 5c/6	Yes	Yes	No
GDI	No	No	No
PS3	Yes	Yes	Yes

D160/D160/D170

Printer Language	Windows XP ^{*1*6}	Windows Vista ^{*2*6}	Windows 7 ^{*3*6}
PCL 5c/6	No	No	No
GDI	Yes	Yes	Yes
PS3	No	No	No

Printer Language	Windows Server 2003 ^{*4*6}	Windows Server 2008 or later ^{*5*6}	Macintosh ^{*7}
PCL 5c/6	No	No	No
GDI	Yes	Yes	No
PS3	No	No	No

*1 Microsoft Windows XP Professional Edition / Home Edition

*2 Microsoft Windows Vista Ultimate / Enterprise / Business / Home Premium / Home Basic

*3 Microsoft Windows 7 Home Premium / Professional / Ultimate / Enterprise

*4 Microsoft Windows Server 2003 Standard Edition / Enterprise Edition / Microsoft Windows Server 2003 R2 Standard Edition / Enterprise Edition

*5 Microsoft Windows Server 2008 Standard / Enterprise / Microsoft Windows Server 2008 R2 Standard / Enterprise

*6 Supports both versions (32/64 bit)

*7 Mac OS X 10.5 or later (native mode).

 **Note**

- The PS3 drivers are all genuine AdobePS drivers, except for Windows 2000, which uses Microsoft PS.
- A PPD file for each operating system is provided with the driver.

1.3.2 SCANNER AND LAN FAX DRIVERS

D158/D159

Driver	Windows XP ^{*1*6}	Windows Vista ^{*2*6}	Windows 7 ^{*3*6}
Network TWAIN	Yes	Yes	Yes
LAN-FAX	Yes	Yes	Yes

Driver	Windows Server 2003 ^{*4*6}	Windows Server 2008 or later ^{*5*6}	Macintosh
Network TWAIN	Yes	Yes	No
LAN-FAX	Yes	Yes	No

D160/D161/D170

Driver	Windows XP ^{*1*6}	Windows Vista ^{*2*6}	Windows 7 ^{*3*6}
Network TWAIN	Yes: D160, D161 No:D170	Yes: D160, D161 No:D170	Yes: D160, D161 No:D170
LAN-FAX	No	No	No

Driver	Windows Server 2003 ^{*4*6}	Windows Server 2008 or later ^{*5*6}	Macintosh
Network TWAIN	Yes: D160, D161 No:D170	Yes: D160, D161 No:D170	No
LAN-FAX	No	No	No

*1 Microsoft Windows XP Professional Edition / Home Edition

*2 Microsoft Windows Vista Ultimate / Enterprise / Business / Home Premium / Home Basic

*3 Microsoft Windows 7 Home Premium / Professional / Ultimate / Enterprise

*4 Microsoft Windows Server 2003 Standard Edition / Enterprise Edition / Microsoft Windows Server 2003 R2 Standard Edition / Enterprise Edition

*5 Microsoft Windows Server 2008 Standard / Enterprise / Microsoft Windows Server 2008 R2 Standard / Enterprise

*6 Supports both versions (32/64 bit)

Note

- The LAN Fax driver lets you fax documents directly from your PC. Address Book Editor and Cover Sheet Editor must be installed as well.
- The Network TWAIN driver operates in 32-bit compatibility mode on 64-bit operating systems
- The Network TWAIN driver is provided on the scanner driver CD-ROM.

1.4 OPTIONAL EQUIPMENT

1.4.1 ARDF (D724)

Original Size:	<p>Standard sizes</p> <p>Single-sided mode: A3 to A5, 11" x 17" to 5¹/₂" x 8¹/₂"</p> <p>Double-sided mode: A3 to A5, 11" x 17" to 5¹/₂" x 8¹/₂"</p> <p>Non-standard sizes (Single-sided mode only)</p> <p>Max. width 297 mm</p> <p>Min. width 128 mm</p> <p>Max. length 1260 mm</p> <p>Min. length 128 mm</p>
Original Weight:	<p>Single-sided mode: 40 – 128 g/m², 10 – 34 lb</p> <p>Double-sided mode: 52 – 105 g/m², 14 – 28 lb</p>
Table Capacity:	50 sheets (81.4 g/m ² , 70 kg)
Original Standard Position:	Rear left corner
Separation:	FRR
Original Transport:	Roller transport
Original Feed Order:	From the top original
Reproduction Range:	33.3 to 200% (Sub scan direction only)
Power Source:	24 and 5 Vdc from the copier
Power Consumption:	33 W
Dimensions (W x D x H):	550 x 496 x 120 mm (21.6" x 19.6 x 4.7")
Weight:	Not more than 10 kg (22 lb)

1.4.2 ARDF (D684)

Original Size:	Standard sizes (Single-sided mode only): A3 to B6, 11" x 17" to 5 ¹ / ₂ " x 8 ¹ / ₂ " Non-standard sizes (Single-sided mode only): Max. width 297 mm Min. width 128 mm Max. length 1,260 mm Min. length 128 mm
Original Weight:	52 – 105 g/m ² (14 – 28 lb)
Table Capacity:	100 sheets (81.4 g/m ² , 22 lb)
Original Standard Position:	Rear left corner
Separation:	RF
Original Transport:	Roller transport
Original Feed Order:	From the top original
Reproduction Range:	50 – 200%
Power Source:	24 and 5 Vdc (from the mainframe)
Power Consumption:	42 W
Dimensions (W x D x H):	565 x 500 x 125 mm (22.4" x 19.6 x 4.9")
Weight:	Not more than 8.2 kg (18 lb)

1.4.3 ONE-TRAY PAPER TRAY UNIT

Paper Size:	A5 to A3, 5 ¹ / ₂ " x 8 ¹ / ₂ " SEF to 11" x 17"	
Paper Weight:	60 – 105 g/m ² , 16 – 28 lb	
Tray Capacity:	500 sheets (80 g/m ² , 20 lb) x 1 tray 570 sheets (67 g/m ² , 20 lb) x 1 tray	
Paper Feed System:	Feed roller and friction pad	
Paper Height Detection:	2 steps (100%, End)	
Power Source:	24 Vdc and 5Vdc (from the copier/printer): 120 Vac (120 V version) from the copier/printer when the optional tray heater is installed 220 – 240 Vac (230 V version) from the copier/printer when the optional tray heater is installed	
Power Consumption:	Max:	15 W (Copying/printing)
Weight:	12 kg (26.4 lb)	
Size (W x D x H):	553 x 548 x 137 mm (21.7" x 21.5 x 5.3")	

1.4.4 TWO-TRAY PAPER TRAY UNIT

Paper Size:	A5 to A3, 5 ¹ / ₂ " x 8 ¹ / ₂ " SEF to 11" x 17"	
Paper Weight:	60 – 105 g/m ² , 16 – 28 lb	
Tray Capacity:	500 sheets (80 g/m ² , 20 lb) x 2 trays 570 sheets (67 g/m ² , 20 lb) x 2 trays	
Paper Feed System:	Feed roller and friction pad	
Paper Height Detection:	2 steps (100%, End)	
Power Source:	24 Vdc and 5Vdc (from the copier/printer): 120 Vac (120 V version) from the copier/printer when the optional tray heater is installed 220 – 240 Vac (230 V version) from the copier/printer when the optional tray heater is installed	
Power Consumption:	Max:	35 W (Copying/printing)
Weight:	25 kg (55 lb)	
Size (W x D x H):	553 x 548 x 271 mm (21.7" x 21.5 x 10.6")	

1.4.5 ONE-BIN TRAY

Paper Size:	Width: 140 ~ 297 mm Length: 140 – 432 mm
Output Standard Position:	Center
Paper Weight:	60 – 105 g/m ² , 16 – 28 lb
Tray Capacity:	100 sheets (A4 LEF 80 g/m ² , 20 lb)
Power Source:	5 VDC, 24 VDC (from the copier)
Power Consumption:	Max. 9 W
Weight:	2 kg (4.4 lb)
Size (W x D x H):	193 x 388 x 63 mm (7.5" x 15.2 x 2.4") (when tray is not extended)

**APPENDIX:
PM TABLES**

2. APPENDIX: PM TABLES

2.1 MAINTENANCE TABLES

2.1.1 PREVENTIVE MAINTENANCE ITEMS

Chart: A4 (LT)/5%

Mode: 2 copies / original (prints/job)

Ratio 20%

Environment: Normal temperature and humidity

Yield may change depending on circumstances and print conditions.

Symbol keys: C: Clean, R: Replace, L: Lubricant, I: Inspect

Mainframe (D158, D159)

Item	60K	120K	180K	EM	Remarks
Scanner					
Reflector	C				Optics cloth
1st / 2nd / 3rd mirrors	C			C	Optics cloth
Scanner Guide Rails	C				Do not use alcohol.
Platen cover	C			I	Replace the platen sheet if necessary. Blower brush or alcohol
Exposure Glass	C			C	Blower brush or alcohol
Toner Shield Glass	C			C	Optics cloth
APS Sensor	C				Blower brush or dry cloth
PCU					

Maintenance Tables

Item	60K	120K	180K	EM	Remarks
PCU	I				
OPC Drum	R				Replace parts every 60K
Charge Roller	R				
Charge Roller Cleaning Roller	R				
Drum Cleaning Blade	R				
Pick-off Pawls	R				
Transfer					
Transfer Rollers		R			
Static Charge Needle		R			
ID Sensor	C			C	Blower brush or dry cloth
Fusing					
Hot Roller		R/C			Lubricate the bearings, when replacing hot roller.
Pressure Roller		R			
Fusing Thermistors		R			
Hot roller stripper pawls	C	R			Washed with alcohol after cleaning with OA cleaner.
Fusing Entrance Guide Plates	C				Washed with alcohol after cleaning with OA cleaner.

Item	60K	120K	180K	EM	Remarks
Fusing Exit Guide Plates	C				Washed with alcohol after cleaning with OA cleaner.
Bearing		C			Lubricate if necessary.
Paper Path					
Registration Roller	C			C	Damp cloth
Registration Sensor				C	Blower brush or dry cloth
Registration Roller Dust Blade	C			C	Blower brush
Feed Rollers (Tray)		R		C	Damp cloth
Friction Pad (Tray)		R		C	Blower brush or dry cloth
Home position Sensor (Tray)				C	Blower brush or dry cloth
By-pass Feed Roller				C	Blower brush or dry cloth
By-pass Friction Pad				C	Blower brush or dry cloth
By-pass Home Position Sensor				C	Damp cloth
Paper Path (Optional Tray)					
Paper feed rollers				C	Damp cloth
Feed sensor				C	Blower brush or dry cloth

Maintenance Tables

Item	60K	120K	180K	EM	Remarks
Feed Rollers				C	Blower brush or dry cloth
Separate roller				C	Blower brush or dry cloth
Paper Path (Duplex)					
Duplex Rollers				C	Damp cloth
Duplex Entrance Sensor				C	Blower brush or dry cloth
Duplex Exit Sensor				C	Blower brush or dry cloth
Output					
Exit Roller				C	Damp cloth
Reverse Roller				C	Damp cloth
Reverse Sensor				C	Blower brush or dry cloth

Mainframe (D170, D160, D161)

Item	60K	120K	180K	EM	Remarks
Scanner					
Platen cover	C			I	Replace the platen sheet if necessary. Blower brush or alcohol
Exposure Glass	C			C	Blower brush or alcohol
Toner Shield Glass	C			C	Optics cloth
PCU					
PCU	I				
OPC Drum	R				Replace parts every 60K
Charge Roller	R				
Charge Roller Cleaning Roller	R				
Drum Cleaning Blade	R				
Pick-off Pawls	R				
Transfer					
Transfer Rollers		R			
Static Charge Needle		R			
ID Sensor	C			C	Blower brush or dry cloth

Maintenance Tables

Item	60K	120K	180K	EM	Remarks
Fusing					
Hot Roller		R/C			Lubricate the bearings, when replacing hot roller.
Pressure Roller		R			
Fusing Thermistors		R			
Hot roller stripper pawls	C	R			Washed with alcohol after cleaning with OA cleaner.
Cleaning Roller		C			Clean the bearing also. Washed with alcohol after cleaning with OA cleaner.
Fusing Entrance Guide Plates	C				Washed with alcohol after cleaning with OA cleaner.
Fusing Exit Guide Plates	C				Washed with alcohol after cleaning with OA cleaner.
Bearing		C			Lubricate if necessary.

Item	60K	120K	180K	EM	Remarks
Paper Path					
Registration Roller	C			C	Damp cloth
Registration Sensor				C	Blower brush or dry cloth
Registration Roller Dust Blade	C			C	Blower brush
Feed Rollers (Tray)		R		C	Damp cloth
Friction Pad (Tray)		R		C	Blower brush or dry cloth
Home position Sensor (Tray)				C	Blower brush or dry cloth
By-pass Feed Roller				C	Blower brush or dry cloth
By-pass Friction Pad				C	Blower brush or dry cloth
By-pass Home Position Sensor				C	Damp cloth
Paper Path (Optional Tray)					
Paper feed rollers				C	Damp cloth
Feed sensor				C	Blower brush or dry cloth
Feed Rollers				C	Blower brush or dry cloth
Separate roller				C	Blower brush or dry cloth

Maintenance Tables

Item	60K	120K	180K	EM	Remarks
Paper Path (Duplex)					
Duplex Rollers				C	Damp cloth
Duplex Entrance Sensor				C	Blower brush or dry cloth
Duplex Exit Sensor				C	Blower brush or dry cloth
Output					
Exit Roller				C	Damp cloth
Reverse Roller				C	Damp cloth
Reverse Sensor				C	Blower brush or dry cloth

APPENDIX:

SERVICE PROGRAM MODE TABLES

REVISION HISTORY		
Page	Date	Added/Updated/New
95	07/15/2013	Added SP 5305-101 Auto OFF Set
181	07/15/2013	Added SP 5900-001 ID Card Copy Mode
241	7/11/2014	SP8801 Toner Remain

3. APPENDIX: SERVICE PROGRAM MODE TABLES

3.1 MAIN SP TABLES-1

3.1.1 SP1-XXX (FEED)

1001	<p>[Leading Edge Registration] (D158/D159) [LE Regist] (D160/D161/D170) Leading Edge Registration Adjustment (Tray Location, Paper Type, Color Mode), Paper Type: Plain, Thick 1, Thick 2 or Thick3</p>		
	<p>Adjusts the leading edge registration by changing the registration motor operation timing for each mode. Increasing a value: an image is moved to the trailing edge of paper. Decreasing a value: an image is moved to the leading edge of paper.</p>		
002	Tray: Plain	*ENG	[-9.0 to 9.0 / 0.0 / 0.1 mm / step]
003	Tray: Middle Thick	*ENG	[-9.0 to 9.0 / 0.0 / 0.1 mm / step]
004	Tray: Thick	*ENG	[-9.0 to 9.0 / 0.0 / 0.1 mm / step]
007	By-pass: Plain	*ENG	[-9.0 to 9.0 / 0.0 / 0.1 mm / step]
008	By-pass: Middle Thick	*ENG	[-9.0 to 9.0 / 0.0 / 0.1 mm / step]
009	By-pass: Thick	*ENG	[-9.0 to 9.0 / 0.0 / 0.1 mm / step]
013	Duplex: Plain:	*ENG	[-9.0 to 9.0 / 0.0 / 0.1 mm / step]
014	Duplex: Middle Thick	*ENG	[-9.0 to 9.0 / 0.0 / 0.1 mm / step]
015	Duplex: Thick	*ENG	[-9.0 to 9.0 / 0.0 / 0.1 mm / step]

1002	[Side-to-Side Registration] (D158/D159) [S-to-S Regist] (D160/D161/D170)		
	Adjusts the printing side-to-side registration from each paper feed station, using the Trimming Area Pattern (SP 5902, No.10). Adjustments are supported for all 4 possible feed trays (including optional trays). The SP 1002 1 setting is applied to all trays, not just the 1st tray. Settings for trays 2 to 4 are offsets relative to the SP 1002 1 setting. For duplex copies, the value for the front side is determined by SP 1002 1 to 4, and the value for the rear side is determined by SP 1002 6.		
001	By-pass	*ENG	[-4.0 to 4.0 / 0.0 / 0.1 mm / step]
002	Tray Main1	*ENG	[-4.0 to 4.0 / 0.0 / 0.1 mm / step]
003	Tray Main2	*ENG	[-4.0 to 4.0 / 0.0 / 0.1 mm / step]
004	Tray Bank1	*ENG	[-4.0 to 4.0 / 0.0 / 0.1 mm / step]
005	Tray Bank2	*ENG	[-4.0 to 4.0 / 0.0 / 0.1 mm / step]
006	Duplex	*ENG	[-4.0 to 4.0 / 0.0 / 0.1 mm / step]

1003	[Paper Buckle] Paper Buckle Adjustment (Tray Location, Paper Type)		
	Adjusts the amount of paper buckle on the registration roller.		
002	Tray1: Plain	*ENG	[-9 to 5 / 0 / 1 mm / step]
003	Tray1: Middle Thick	*ENG	[-9 to 5 / 0 / 1 mm / step]
004	Tray1: Thick	*ENG	[-9 to 5 / 0 / 1 mm / step]
007	Tray2/3/4: Plain	*ENG	[-9 to 5 / 0 / 1 mm / step]
008	Tray2/3/4: Plain: Middle Thick	*ENG	[-9 to 5 / 0 / 1 mm / step]
009	Tray2/3/4: Plain: Thick	*ENG	[-9 to 5 / 0 / 1 mm / step]
012	By-pass: Plain	*ENG	[-9 to 5 / 0 / 1 mm / step]
013	By-pass: Middle Thick	*ENG	[-9 to 5 / 0 / 1 mm / step]

014	By-pass: Thick	*ENG	[-9 to 5 / 0 / 1 mm / step]
018	Duplex: Plain	*ENG	[-9 to 5 / 0 / 1 mm / step]
019	Duplex: Middle Thick	*ENG	[-9 to 5 / 0 / 1 mm / step]
020	Duplex: Thick	*ENG	[-9 to 5 / 0 / 1 mm / step]

1007	[By-pass Size Adjust]		
	0: LT SEF 1: LG		
002	Bypass:1 (Bypass Size Adj)	*ENG	[0 or 1 / 0 / 1/step]

1101	[Flicker Control] (D158/D159) [Inrush Control] (D160/D161/D170)		
	Enables or disables the Flicker Control.		
001	Flicker Control (Inrush Control)	*ENG	[0 or 1 / 0 / 1 / step] 0: Disable 1: Enable

1103	[Reload Permit Setting] (D158/D159) [Reload Setting] (D160/D161/D170)		
	Specifies the settings of the reload permit for cold temperature in color mode.		
001	0:OFF 1:ON 2:OFF+Temp (Set1)	*ENG	[0 to 2 / 0 / 1 / step] 0:OFF 1:ON 2:OFF+Temp
002	Reload: Temp: Center (Temp:Cen)	*ENG	[100 to 150 / 125 / 1 deg / step]
003	Reload Temp: Ends (Temp:Ends)	*ENG	[100 to 150 / 125 / 1 deg / step]

Main SP Tables-1

004	Temp: Cold: Center (Temp: Cold: Cen)	*ENG	[100 to 150 / 125 / 1 deg / step]
005	Temp: Cold: End (Temp:Cold:Ends)	*ENG	[100 to 150 / 125 / 1 deg / step]

1105	[Fusing Temperature Adjustment] (D158/D159) [Fusing Temp Adj] (D160/D161/D170)		
	Adjusts the target fusing temperature. "Center" indicates the center of the roller; "End" indicates the front and rear ends.		
001	Roller Center: Plain1 (D158/D159)	*ENG	[100 to 200 / 145 / 1 deg / step]
002	Roller Ends: Plain1 (D158/D159)	*ENG	[100 to 200 / 145 / 1 deg / step]
003	Roller Center: Plain2 (Roller Cen:PI2)	*ENG	[100 to 200 / 155 / 1 deg / step]
004	Roller Ends: Plain2 (Roller Ends:PI2)	*ENG	[100 to 200 / 155 / 1 deg / step]
005	Roller Center: M-Thick (D158/D159)	*ENG	[100 to 200 / 160 / 1 deg / step]
006	Roller Ends: M-Thick (D158/D159)	*ENG	[100 to 200 / 160 / 1 deg / step]
007	Roller Center: Thick Paper (Roller Cen:Thick)	*ENG	[100 to 200 / 175 / 1 deg / step]
008	Roller Ends: Thick Paper (Roller Ends:Thick)	*ENG	[100 to 200 / 175 / 1 deg / step]
009	Roller Center: Thin (D158/D159)	*ENG	[100 to 200 / 135 / 1 deg / step]

010	Roller Ends: Thin (D158/D159)	*ENG	[100 to 200 / 135 / 1 deg / step]
011	Energy Saver	*ENG	[100 to 200 / 135 / 1 deg / step]
012	Wait Temp: Center (Wait Temp:Gen)	*ENG	[100 to 200 / 145 / 1 deg / step]
013	Wait Temp: Ends	*ENG	[100 to 200 / 150 / 1 deg / step]
014	Thresh: S1	*ENG	[0 to 50 / 16 / 1 deg / step]
015	Thresh: delta t	*ENG	[0 to 50 / 0 / 1 deg / step]
016	Low: Plain1 (D158/D159)	*ENG	[0 to 30 / 5 / 1 deg / step]
017	Low: Plain2	*ENG	[0 to 30 / 5 / 1 deg / step]
018	Low: M-Thick (D158/D159)	*ENG	[0 to 30 / 5 / 1 deg / step]
019	Low: Thick	*ENG	[0 to 30 / 10 / 1 deg / step]
020	Registration Waiting: Plain1 (D158/D159)	*ENG	[0 or 1 / 1 / 1 / step]
021	Registration Waiting: Plain2 (Waiting:PI2)	*ENG	[0 or 1 / 1 / 1 / step]
022	Registration Waiting: M-Thick (D158/D159)	*ENG	[0 or 1 / 1 / 1 / step]
023	Registration Waiting:Thick (Waiting:Thick)	*ENG	[0 or 1 / 1 / 1 / step]
024	Waiting: Center Lower:Plain1: Center (D158/D159)	*ENG	[0 to 60 / 60 / 1 deg / step]

Main SP Tables-1

025	Waiting: Center Lower:Plain1: Ends (D158/D159)	*ENG	[0 to 60 / 60 / 1 deg / step]
026	Waiting: Center Lower:Plain2: Center (Lower:PI2:cen)	*ENG	[0 to 60 / 60 / 1 deg / step]
027	Waiting: Center Lower:Plain2: Ends (Lower:PI:ends)	*ENG	[0 to 60 / 60 / 1 deg / step]
028	Waiting: Center Lower:M-Thick: Center	*ENG	[0 to 60 / 5 / 1 deg / step]
029	Waiting: Center Lower:M-Thick: Ends	*ENG	[0 to 60 / 5 / 1 deg / step]
030	Waiting: Center Lower: Thick: Center (Lower Thick:cen)	*ENG	[0 to 60 / 0 / 1 deg / step]
031	Waiting: Center Lower: Thick: Ends (Lower Thick:ends)	*ENG	[0 to 60 / 0 / 1 deg / step]
032	Waiting: Center Upper: Plain1: Center (D158/D159)	*ENG	[0 to 60 / 40 / 1 deg / step]
033	Waiting: Center Upper: Plain1: Ends (D158/D159)	*ENG	[0 to 60 / 40 / 1 deg / step]
034	Waiting: Center Upper: Plain2: Center (Upper:PI2:cen)	*ENG	[0 to 60 / 40 / 1 deg / step]
035	Waiting: Center Upper: Plain2: Ends (Upper:PI2:ends)	*ENG	[0 to 60 / 40 / 1 deg / step]

036	Waiting: Center Upper: M-Thick: Center (D158/D159)	*ENG	[0 to 60 / 40 / 1 deg / step]
037	Waiting: Center Upper: M-Thick: Ends (D158/D159)	*ENG	[0 to 60 / 40 / 1 deg / step]
038	Waiting: Center Upper: Thick: Center (Upper:Thick:cen)	*ENG	[0 to 60 / 40 / 1 deg / step]
039	Waiting: Center Upper: Thick: Ends (Upper:Thick:ends)	*ENG	[0 to 60 / 40 / 1 deg / step]
040	Low: Thin (D158/D159)	*ENG	[0 to 30 / 5 / 1 deg / step]
041	Waiting: Thin (D158/D159)	*ENG	[0 or 1 / 1 / 1 deg / step]
042	Waiting: Center Lower: Thin:Center (D158/D159)	*ENG	[0 to 60 / 60 / 1 deg / step]
043	Waiting: Center Lower: Thin:Ends (D158/D159)	*ENG	[0 to 60 / 60 / 1 deg / step]
044	Waiting: Center Upper: Thin:Center (D158/D159)	*ENG	[0 to 60 / 40 / 1 deg / step]
045	Waiting: Center Upper: Thin:Ends (D158/D159)	*ENG	[0 to 60 / 40 / 1 deg / step]
046	Pint Ready: Center (Print Ready:cen)	*ENG	[120 to 180 / 150 / 1 deg / step]
047	Pint Ready: Ends (Print Ready:ends)	*ENG	[120 to 180 / 155 / 1 deg / step]

1106	[Fusing Temperature Display] Fusing Temperature Display (Heating or Pressure)		
	Displays the current temperature of the heating and pressure rollers.		
001	Roller Center	ENG	[-20 to 250 / 0 / 1 deg / step]
002	Roller Ends	ENG	[-20 to 250 / 0 / 1 deg / step]
	The heating roller has two lamps. One heats the center of the heating roller and the other heats both ends of the heating roller.		
003	In The Machine at Power On (Mac at Power On)	ENG	[-20 to 250 / 0 / 1 deg / step]
	The pressure roller has two lamps. One heats the center of the heating roller and the other heats both ends of the heating roller.		

1107	[Fusing Soft Start] (D160/D161/D170)		
	-		
003	Softstop 100V	*ENG	[0 to 1 / 0 / 1 / step]
004	Softstop 200V	*ENG	[0 to 1 / 0 / 1 / step]

1108	[Fusing Soft Start Setting] (D158/D159)		
	[Fusing Soft St Set] (D160/D161/D170)		
Sets the target temperature for immediately after reload temperature has been achieved or paper has been fed.			
001	Warming-Up	*ENG	[100 to 2000 / 1000 / 100 msec / step]
002	Print	*ENG	[100 to 2000 / 1000 / 100 msec / step]
003	Wait	*ENG	[100 to 2000 / 1000 / 100 msec / step]
004	Print Start	*ENG	[100 to 2000 / 1000 / 100 msec / step]
005	Print Start Time	*ENG	[0 to 999 / 5 / 1 sec / step]

1110	[Fan Control Timer] (D160/D161/D170)		
	Specifies the fan control time. The fan motor keeps its operating speed for the specified time before changing the speed or stopping. The fan control timer prevents the exhaust fan from suddenly stopping. This function protects the copier from overheating.		
001	Fan Control Timer	*ENG	[30 to 60 / 30 / 100 msec / step]

1112	[Image Process Temp.]		
	These SPs are used for the fusing temperature control for variable job images. This control saves the power consumption when the machine copies or prints a job text image in black and white mode.		
001	Correction Temp. : Normal: Level1	*ENG	[-25 to 10 / 0 / 1 deg / step]
002	Correction Temp. : Normal: Level2	*ENG	[-25 to 10 / -5 / 1 deg / step]

1124	[CPM Down Setting] (D160/D161/D170)		
	Sets the temperature differential used to calculate CPM down for low and high temperatures. Also, sets the interval for temperature checks for CPM down.		
001	Low:Down Temp. (Low:Down Tp)	*ENG	[-50 to 0 / -25 / 1 deg / step]
002	Low:Up Temp. (Low:Up Tp)	*ENG	[-50 to 0 / -5 / 1 deg / step]
003	Low :1st CPM	*ENG	[10 to 100 / 75 / 5 % / step]
004	Low :2nd CPM	*ENG	[10 to 100 / 65 / 5 % / step]
005	Low :3rd CPM	*ENG	[10 to 100 / 40 / 5 % / step]
006	High:1st CPM :Plain1 (High:1st CPM:20)	*ENG	[10 to 100 / D158/D160/D161/D170:60, D159:50 / 5%/step]

Main SP Tables-1

007	High:2nd CPM :Plain1 (High:2nd CPM:20)	*ENG	[10 to 100 / D158/D160/D161/D170:60, D159:50 / 1%/step]
008	High:3rd CPM (High:3rd CPM:20)	*ENG	[10 to 100 / D158/D160/D161/D170:60, D159:50 / 5%/step]
009	High:1st CPM Down Temp.:A3 (High:1st Down:A3)	*ENG	[100 to 250 / 215 / 1deg/step]
010	High:2nd CPM Down Temp.:A3 (High:2nd Down:A3)	*ENG	[100 to 250 / 220 / 1deg/step]
011	High:3rd CPM Down Temp.:A3 (High:3rd Down:A3)	*ENG	[100 to 250 / 225 / 1 deg / step]
012	High:1st CPM Down Temp.:A4 (High:1st Down:A4)	*ENG	[100 to 250 / 215 / 1 deg / step]
013	High:2nd CPM Down Temp.:A4 (High:2nd Down:A4)	*ENG	[100 to 250 / 220 / 1 deg / step]
014	High:3rd CPM Down Temp.:A4 (High:3rd Down:A4)	*ENG	[100 to 250 / 225 / 1 deg / step]
015	High:1st CPM Down Temp.:B5 (High:1st Down:B5)	*ENG	[100 to 250 / 205 / 1 deg / step]

016	High:2nd CPM Down Temp.:B5 (High:2nd Down:B5)	*ENG	[100 to 250 / 205 / 1 deg / step]
017	High:3rd CPM Down Temp.: B5 (High:3rd Down:B5)	*ENG	[100 to 250 / 205 / 1 deg / step]
018	High:1st CPM Down Temp.:A5 (High:1st Down:A5)	*ENG	[100 to 250 / 205 / 1 deg / step]
019	High:2nd CPM Down Temp.:A5 (High:2nd Down:A5)	*ENG	[100 to 250 / 205 / 1 deg / step]
020	High:3rd CPM Down Temp.:A5 (High:3rd Down:A5)	*ENG	[100 to 250 / 205 / 1 deg / step]
021	High:1st CPM Down Temp.:A6 (High:1st Down:A6)	*ENG	[100 to 250 / 205 / 1 deg / step]
022	High:2nd CPM Down Temp.:A6 (High:2nd Down:A6)	*ENG	[100 to 250 / 205 / 1 deg / step]
023	High:3rd CPM Down Temp.:A6 (High:3rd Down:A6)	*ENG	[100 to 250 / 205 / 1 deg / step]
024	Judging Interval	*ENG	[1 to 250 / 10 / 1sec / step]
025	Setting Start Timing (Start Timing)	*ENG	[1 to 999 / 10 / 1 sec / step]

Main SP Tables-1

026	High:1st CPM:25 (D160/D161/D170)	*ENG	[10 to 100 / 50 / 1 % / step]
027	High:2nd CPM:25 (D160/D161/D170)	*ENG	[10 to 100 / 50 / 1 % / step]
028	High:3rd CPM:25 (D160/D161/D170)	*ENG	[10 to 100 / 50 / 1 % / step]

1152	[Fusing Nip Band Check]		
	Checks and adjusts the nip of the hot roller and pressure roller.		
001	0:OFF, 1:ON	ENG	[0 or 1 / 1 / 1 / step]
002	Pre-idling Time	*ENG	[0 to 999 / 300 / 1 sec / step]
003	Stop Time	*ENG	[0 to 100 / 20 / 1 sec / step]

1159	[Fusing Jam Detection] (D158/D159) [Fusing Jam SC] (D160/D161/D170)		
	This SP mode detects SC559. Set this SP mode to 'Yes' if the machine experiences paper jam problems on a continual basis.		
001	SC Display (Fusing Jam SC)	*ENG	[0 to 1 / 0 / 1 / step]

1801	[MotorSpeedAdjust]		
	Adjusts the speeds of each motor.		
001	MainMonitor:122	*ENG	[-4.00 to 4.00 / 0.00 / 0.01 % / step]
	Adjusts the speed of main motor.		
002	MainMonitor:100 (D158/D159)	*ENG	[-4.00 to 4.00 / 0.00 / 0.01 % / step]
	Adjusts the speeds of main motor.		
010	Duplex:Low (D158/D159)	*ENG	[-4.0 to 4.0 / 0.0 / 0.1 % / step]

	Directly reflects the adjusted value.		
011	Duplex:High (D158/D159)	*ENG	[-4.0 to 4.0 / 0.0 / 0.1 % / step]
	Directly reflects the adjusted value		
024	Reverse:Low (D158/D159)	*ENG	[-4.0 to 4.0 / 0.0 / 0.1 % / step]
	Directly reflects the adjusted value		
029	Reverse:High (D158/D159)	*ENG	[-4.0 to 4.0 / 0.0 / 0.1 % / step]
	Directly reflects the adjusted value		

1902	[Zero Cross] (D160/D161/D170)		
	It reflects the number of zero-cross interrupted times that has been measured when frequency is determined. More than 11 times: 60Hz Less than 10 times: 50Hz Less than 3 times: SC547		
001	Count Value	ENG	[0 to 255 / 0 / 1 / step]

1903	[Feed CI Re-energize]		
	Directly reflects the adjusted value. <ul style="list-style-type: none"> ▪ A "+" setting increases the amount of driving. ▪ A "-" setting decreases the amount of driving. 		
001	By-pass Feed	*ENG	[-10 to 10 / 0 / 1 mm / step]
002	Tray1 Feed	*ENG	[-10 to 10 / 0 / 1 mm / step]
003	Tray2/3/4 (Other Teays)	*ENG	[-10 to 10 / 0 / 1 mm / step]

1907	[Paper Feed Timing Adj.]		
	Adjusts the timing of paper feed. (A "+" setting broadens paper feed interval, a "-" setting narrows paper feed interval.)		
005	Inverter Stop Position (Inverter Stop Pos)	*ENG	[-10 to 10 / 0 / 1 mm / step]
006	Inverter Wait	*ENG	[0 or 1 / 0 / 1/ step]
010	Main1 Plate Pressure (Main1 Plate Press)	*ENG	[-1000 to 1000 / 0 / 20 msec/ step]
011	Main1 Plate Bass Up (Main1 Plate Up)	*ENG	[-1000 to 1000 / 0 / 20 msec / step]
012	Main1 Plate Base Down (Main1 Plate Down)	*ENG	[-1000 to 1000 / 0 / 20 msec / step]
013	Main1 Plate Paper End (Main1 Plate End)	*ENG	[-500 to 500 / 0 / 20 msec / step]
015	Re-Feed Stop Position (Re-Feed Stop Pos)	*ENG	[-10 to 10 / 0 / 1 mm / step]
020	Main2 Plate Pressure (Main2 Plate Press)	*ENG	[-1000 to 1000 / 0 / 20 msec / step]
021	Main2 Plate Base Up (Main2 Plate Up)	*ENG	[-1000 to 1000 / 0 / 20 msec / step]
022	Main2 Plate Base Down (Main2 Plate Down)	*ENG	[-1000 to 1000 / 0 / 20 msec / step]

1991	[Max Fusing Lamp Duty] (D158/D159)		
	[Max Fusing Lp Duty] (D160/D161/D170)		
	-		
001	Roller Center	*ENG	[40 to 100 / 100 / 10 % / step]
002	Roller Ends	*ENG	[40 to 100 / 100 / 10 % / step]
003	After Warming-up- Center (After Warmup Cen)	*ENG	[40 to 100 / 100 / 10 % / step]
004	After Warming-up- Ends (After Warnup Ends)	*ENG	[40 to 100 / 100 / 10 % / step]

1996	[Heater Forced Off]		
	-		
005	After Printing	*ENG	[0 to 120 / 7 / 10 sec / step]
006	Temp (After Printing Tp)	*ENG	[100 to 200 / 135 / 1 deg / step]

3.2 MAIN SP TABLES-2

3.2.1 SP2-XXX (DRUM)

2001	[Charge Roller Bias Adjust] (D158/D159) [CR Bias Adj] (D160/D161/D170)		
	-		
001	Setting (Copying) (Printing)	*ENG	[-2100 to -1500 / -1600 / 10 vol / step]
	Adjusts the voltage applied to the charge roller when printing. The actually applied voltage changes automatically as charge roller voltage correction is carried out. The value you set here becomes the base value on which this correction is carried out.		
002	ID Sensor Pattern	*ENG	[0 to 400 / 200 / 10 vol / step]
	Adjusts the voltage applied to the charge roller when generating the Vsdp ID sensor pattern (as part of charge roller voltage correction). The actual chargeroller voltage is obtained by adding this value to the value of SP 2001 1.		
003	Temporally Input (D158/D159)	*ENG	[-2500 to 0 / 0 / 10 vol / step]
	Enter the voltage values directly. Background dirt occurs when the value is too low, and easy to adhere the toner careers when it is too high. Between 1600V to -1800V recommended.		

2005	[Charge Bias Correction] (D158/D159)		
	[CR Bias Vsdp] (D160/D161/D170)		
001	Vsdp Min (Min)	*ENG	[0 to 100 / 90 / 1 % / step]
	Sets the minimum value of Vsdp.		
002	Vsdp Max (Max)	*ENG	[0 to 100 / 95 / 1 % / step]
	Sets the maximum value of Vsdp.		
003	Revision Step (Step)	*ENG	[0 to 200 / 50 / 10 vol / step]

2101	[Erase Margin Adj] (D160/D161/D170)		
	Adjusts the width of the erased area of the each edges.		
001	Leading Edge	*ENG	[0.0 to 90.0 / 20.0 / 0.1 mm / step]
002	Trailing Edge	*ENG	[0.0 to 90.0 / 30.0 / 0.1 mm / step]
003	Left Side	*ENG	[0.0 to 90.0 / 20.0 / 0.1 mm / step]
004	Right Side	*ENG	[0.0 to 90.0 / 20.0 / 0.1 mm / step]

2102	[Main Scan Mag. Adjustment] (D158/D159)		
	Adjust the image scale for main scan magnification. <ul style="list-style-type: none"> ▪ A "+" setting stretches the image. ▪ A "-" setting compresses the image. 		
001	-	*ENG	[-0.5 to 0.5 / 0.0 / 0.1 % / step]

2103	[Erase Margin Adjustment] (Area, Paper Size) (D158/D159)		
	Adjusts the erase margin by deleting image data at the margins.		
001	Lead Edge	*ENG	[0.0 to 9.0 / 3.0 / 0.1 mm / step]
	Directly reflects the adjusted value		
002	Trailing Edge	*ENG	[0.0 to 9.0 / 3.0 / 0.1 mm / step]
	Directly reflects the adjusted value		
003	Left	*ENG	[0.0 to 9.9 / 2.0 / 0.1 mm / step]
004	Right	*ENG	
005	Duplex Trail.: L Size: Plain	ENG	[0.0 to 4.0 / 1.2 / 0.1 mm / step]
006	Duplex Trail.: M Size: Plain	ENG	[0.0 to 4.0 / 0.8 / 0.1 mm / step]
007	Duplex Trail.: S Size: Plain	ENG	[0.0 to 4.0 / 0.6 / 0.1 mm / step]
008	Duplex Left: Plain	ENG	[0.0 to 1.5 / 0.3 / 0.1 mm / step]
009	Duplex Right: Plain	ENG	[0.0 to 1.5 / 0.3 / 0.1 mm / step]
010	Duplex Trail.: L Size: Thick	ENG	[0.0 to 4.0 / 1.0 / 0.1 mm / step]
011	Duplex Trail.: M Size: Thick	ENG	[0.0 to 4.0 / 0.6 / 0.1 mm / step]
012	Duplex Trail.: S Size: Thick	ENG	[0.0 to 4.0 / 0.4 / 0.1 mm / step]
013	Duplex: Left: Thick	ENG	[0.0 to 1.5 / 0.1 / 0.1 mm / step]
014	Duplex: Right: Thick	ENG	[0.0 to 1.5 / 0.1 / 0.1 mm / step]

2109	[Test Pattern] (D158/D159)		
	Generates the test pattern using "COPY Window" tab in the LCD.		
001	Pattern Selection	ENG	[0 to 21 / 0 / 1 / step]
	0: None 1: Vertical Line (1dot) 2: Vertical Line (2dot) 3: Horizontal (1dot) 4: Horizontal (2dot) 5: Grid Vertical Line 6: Grid Horizontal Line 7: Grid pattern Small 8: Grid pattern Large 9: Argyle Pattern Small 10: Argyle Pattern Large		11: Independent Pattern (1dot) 12: Independent Pattern (2dot) 13: Independent Pattern (4dot) 14: Trimming Area 15: Black Band (Horizontal) 16: Black Band (Vertical) 17: Checker Flag Pattern 18: Grayscale (Vertical) 19: Grayscale (Horizontal) 20: Full Dot Pattern 21: All White Pattern
002	Test Pattern Density	ENG	[0 to 15 / 15 / 1 / step]

2201	[Development Bias Adjust] (D158/D159)		
	[Dv Bias Adj] (D160/D161/D170)		
	-		
001	Printing	*ENG	[-1500 to 0 / -550 / 10 V / step]
	Adjusts the voltage applied to the development roller for printing. Image density becomes higher when you specify a smaller value (a greater absolute value). Image density becomes lower when you specify a greater value (a smaller absolute value).		
02	P Pattern Revision (ID Sensor Pattern)	*ENG	[0 to 4 / 0 / 1 / step] 0: Normal 1: Dark 2: Light 3: Darker 4: Lighter
	Adjusts the voltage applied to the development roller for the ID sensor pattern. The voltage applied is obtained by adding SP2-201-002 to SP2-201-001. The setting affects ID sensor pattern density, which in turn affects the toner supply.		
003	ID Sensor Pattern (Temporally Input) (ID Pattern Voltage)	*ENG	[-700 to -300 / -350 / 10 V / step]
	Adjusts the voltage applied to the development roller when generating the ID sensor pattern. The actual voltage applied is this setting plus the value of SP2-201-001. The setting affects ID sensor pattern density, which in turn affects the toner supply.		

2210	[Bias Off Time] (D158/D159)		
	-		
001	Charge Bias	*ENG	[10 to 150 / 100 / 10 / step]
002	Development Bias	*ENG	[10 to 200 / 90 / 10 / step]

2211	[PCU Reverse Interval]		
	Stops printing and reverses PCU every sheets that has been set.		
001	PCU Reverse Int	*ENG	[0 to 999 / 100 / 1 sheet / step]

2213	[Copies After Toner Near End End Limits] (D158/D159)		
	Sets the number of copy/print pages that can be made after toner near-end has been detected. Reduce the number of pages if the user normally makes copies with a high image ratio.		
001	-	*ENG	[0 or 1 / 0 / 1 / step] 0: 50 sheets 1: 20 sheets

2213	[Outputs After NE] (D160/D161/D170)		
	[0 = 50 pages / 1 = 20 pages] Sets the number of copy/print/fax pages that can be made after toner near-end has been detected. Reduce the number of pages if the user normally makes copies with a high image ratio.		
001	-	*ENG	[0 or 1 / 0 / 1 / step]

2220	[Process Data Dilay] (D158/D159) [ID Error Analysis] (D160/D161/D170)		
	Displays: a) Vt: the current TD sensor output value and b) Vref: the target TD output value Vts (SP2-926) + correction for ID sensor output. The TD sensor output value changes every copy. If a > b, toner is supplied to the development unit.		
001	Vsp	*ENG	[0.00 to 9.99 / 0.00 / 0.01 vol / step]
002	Vsg	*ENG	[0.00 to 9.99 / 0.00 / 0.01 vol / step]
003	Vsdp	*ENG	[0.00 to 9.99 / 0.00 / 0.01 vol / step]
004	Vt	*ENG	[0.00 to 9.99 / 0.00 / 0.01 vol / step]
005	Vtref	*ENG	[0.00 to 9.99 / 2.5 / 0.01 vol / step]

2224	[Copies After Toner Near End] (D158/D159)		
	Current counter after near end.		
001	Counter	*ENG	[0 to 999 / 0 / 1 sheet / step]

2301	[Transfer Current Adjust] (D158/D159)		
	-		
001	Thin:1side:Image Area	*ENG	[-8 to 8 / 0 / 1 uA / step]
002	Thin:1side:Lead Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
003	Thin:1side:Trail Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
004	Thin:2side:Image Area	*ENG	[-8 to 8 / 0 / 1 uA / step]
005	Thin:2side:Lead Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
006	Thin:2side:Trail Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
007	Plain:1side:Image Area	*ENG	[-8 to 8 / 0 / 1 uA / step]

008	Plain:1side:Lead Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
009	Plain:1side:Trail Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
010	Plain:2side:Image Area	*ENG	[-8 to 8 / 0 / 1 uA / step]
011	Plain:2side:Lead Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
012	Plain:2side:Trail Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
013	Middle:1side:Image Area	*ENG	[-8 to 8 / 0 / 1 uA / step]
014	Middle:1side:Lead Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
015	Middle:1side:Trail Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
016	Middle:2side:Image Area	*ENG	[-8 to 8 / 0 / 1 uA / step]
017	Middle:2side:Lead Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
018	Middle:2side:Trail Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
019	Thick:1side:Image Area	*ENG	[-8 to 8 / 0 / 1 uA / step]
020	Thick:1side:Lead Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
021	Thick:1side:Trail Edge	*ENG	[-8 to 8 / 0 / 1 uA / step]
022	Input:1side	ENG	[0 to 30 / 0 / 1 uA / step]
023	Input:2side	ENG	[0 to 30 / 0 / 1 uA / step]
024	Non Image Area	*ENG	[0 to 30 / 10 / 1 uA / step]
025	Temp Inside The Machine	*ENG	[0 to 99 / 20 / 1 deg / step]

2301	[Tr Current Adj] (D160/D161/D170)		
	-		
001	Normal Paper	*ENG	[-2 to 2 / 0 / 1 / step]
	Adjusts the current applied to the transfer roller when feeding from a paper tray. Use a high setting if the user normally feeds relatively thick paper (within spec) from a paper tray.		
002	Thick/Special	*ENG	[-2 to 2 / 0 / 1 / step]
	Adjusts the current applied to the transfer roller when feeding from the by-pass tray. Use a high setting (a) if the user normally feeds relatively thick paper from the by-pass tray, or (b) if waste toner is re-attracted from the drum (which can occur when using transparencies).		
003	Duplex	*ENG	[-2 to 2 / 0 / 1 / step]
	Adjusts the current applied to the transfer roller when carrying out a duplex job. Use this SP if there is poor image transfer on the rear side of duplex copies.		
004	Cleaning/Negative	*ENG	[-10 to 1 / -4 / 1 uA/ step]
	Adjusts the current applied to the transfer roller for roller cleaning. Increase the current if toner remains on the roller after cleaning. (Remaining toner may cause dirty background on the rear side.)		
005	Cleaning/Positive	*ENG	[0 to 20 / 10 / 1 uA/ step]
006	Input/1side	*ENG	[0 to 30 / 0 / 1 uA/ step]
007	Input/2side	*ENG	[0 to 30 / 0 / 1 uA/ step]
008	Non Image Area	*ENG	[0 to 30 / 10 / 1 uA/ step]
009	Inside Temp	*ENG	[0 to 99 / 20 / 1 deg / step]

2302	[Transfer Switch Timing] (D158/D159)		
001	Lead Edge	*ENG	[-10 to 10 / 0 / 1 mm / step]
	Sets to change the image transfer electric current position that is based on the FGATE assert.		
002	Trail Edge	*ENG	[-10 to 10 / 0 / 1mm / step]
	Sets to change the image transfer off position that is based on the FGATE negation.		

2303	[Transfer Roller Cleaning Bias] (D158/D159)		
001	Positive	*ENG	[0 to 20 / 10 / 1 uA / step]
	Adjusts when backside contamination occurred that is caused by reverse polarity toner on the transfer roller or weak charging toner on the drum.		
002	Negative	*ENG	[0 to 20 / 4 / 1 -uA / step]
	Adjusts to improve the toner cleaning performance adhered on the transfer roller due to paper jamming etc...		

2401	[Special mode in low image] (D158/D159)		
	-		
001	Special mode in low image	*ENG	[0 to 3 / 0 / 1 / step]
	Switches the special mode in low image On / Off.		
002	Deterioration Threshold	*ENG	[0 to 200 / 21 / 1 cm ² /m / step]
	Threshold of image area per running distance to determine the degree of degradation.		
003	Deterioration Coveraeg Sum	*ENG	[0 to 30000 / 0 / 1 cm ² / step]
	Accumulates the difference between the image area of the actual image forming operation and threshold (x running distance) set by SP2-401-002.		

Main SP Tables-2

004	Deterioration Coverage Sum Threshold	*ENG	[0 to 30000 / 18700 / 1cm ² / step]
	Controls special mode in low image when this value is reached more than SP2-401-003.		
005	Charge Bias Correction	*ENG	[-300 to 0 / -50 / 10 vol / step]
	Adds this value to SP2-001-001 (the controlling value of the normal charging voltage) when controlling the toner adhesion amount control.		
006	Development Bias Correction	*ENG	[-300 to 0 / -50 / 10 vol / step]
	Adds this value to SP2-201-001 (the controlling value of the normal development voltage) when controlling the toner adhesion amount control.		

2401	[Separation Voltage] (D160/D161/D170)		
	-		
001	1side/Lead Edge	*ENG	[-4000 to 0 / 0 / 10 V / step]
002	1side/Image Area	*ENG	[-4000 to 0 / 0 / 10 V / step]
003	2side/Lead Edge	*ENG	[-4000 to 0 / 0 / 10 V / step]
004	2side/Image Area	*ENG	[-4000 to 0 / 0 / 10 V / step]
005	Switching Timing	*ENG	[-20 to 20 / 15 / 1 mm / step]

2801	[Developer Initialization] (D158/D159)		
	[Devlpr Initialize] (D160/D161/D170)		
001	Standard Speed (Devlpr Initialize)	ENG	[- / - / -] [Execute]
	Executes developer initialization when new PCU is replaced.		

2802	[Developer Mixing] (D158/D159) [Force DevlpChurn] (D160/D161/D170)		
	-	ENG	[- / - / -] [Execute]
001	Initializes the developer and checks the TD sensor output (Vt). The machine mixes the developer for 2 minutes while reading and displaying the Vt value. The machine does not initialize the TD sensor output. If the machine has not been used for a long period, prints may have a dirty background. In a case like this, use this SP to mix the developer. The message "Completed" is displayed when the program ends normally.		

2803	[Developer Initialization Date] (D158/D159)		
001	Vtref	*ENG	[0.00 to 9.99 / 2.50 / 0.01 vol / step]
	Vtref value at the completion of the initial agent configuration		
002	ID Sensor PWM Value	*ENG	[0 to 1023 / 0 / 1 /step]
	ID sensor PWM value at the time of completion of the initial agent configuration		

2901	[Separation Voltage Adjust] (D158/D159)		
001	1side:Lead Edge	*ENG	[0 to 4000 / 0 / 100 -V / step]
	Used to improve the separation of the 1side.		
002	1side:Image Area	*ENG	[0 to 4000 / 0 / 100 -V / step]
	Used to improve the separation of the 1side, the improvement of dust.		
003	2side:Lead Edge	*ENG	[0 to 4000 / 0 / 100 -V / step]
	Used to improve the separation of the 2side.		
004	2side:Image Area	*ENG	[0 to 4000 / 0 / 100 -V / step]
	Used to improve the separation of the 2side, the improvement of dust.		
005	Switch Lead Edge Timing	*ENG	[-20 to 20 / 15 / 1 mm / step]
	Set when you want to change the position of the image separation bias based on the assertion FGATE.		

2906	[Tailing Control Number of Sheets] (D158/D159) [Tailing Crctn] (D160/D161/D170)		
001	Shift Value (D160/D161/D170)	*ENG	[0.0 to 10.0 / 0.0 / 0.1 mm / step]
	Shifts the image position at the intervals specified by SP2-906-002. When the copier is continuously printing vertical lines (such as in tables), the paper may not separate correctly. This SP can prevent this.		
002	Number of Sheets (Interval)	ENG	D158/D159: [0 to 10 / 0 / 1 sheet / step] D160/D161/D170: [1 to 10 / 1 / 1 sheet / step]
	Changes the interval of the image position shift specified by SP2-906-001.		

2908	[Forced Toner Supply] (D158/D159) [Force Toner Supp] (D160/D161/D170)		
001	Number of Sheets (Force Toner Supp)	ENG	[- / - / -] [Execute]
	Supplies the toner to the development unit. The processing stops under either of the following conditions: <ul style="list-style-type: none"> ▪ The toner density in the development unit reaches the standard level. ▪ The processing has continued for 2 minutes. 		

2915	[Polygon Rotate Timing] (D158/D159)		
001	Idling Time ADJ	*ENG	[0 to 60 / 15 / 1 sec / step]
	Adjusts the polygon motor idling time.		
002	Post Idling Time ADJ	*ENG	[0 to 60 / 15 / 1 sec / step]
	Adjusts the post idling time		

2915	[Polygon Idling] (D160/D161/D170)		
001	Polygon Idling	*ENG	[0 to 2 / 1 / 1 / step]
	Adjusts the polygon motor idling time.		

2921	[Toner Supply Mode]		
001	Mode Select (Toner Supply Mode)	*ENG	[0 to 3 / 0 / 1 / step]
	0:Normal1 1:Normal2 2:Fixed1 3:Fixed2		

2922	[Toner Supply Time [sec]] (D158/D159) [Toner Supply Time] (D160/D161/D170)		
	Adjusts the toner supply time. The toner supply motor remains on for the specified time. To validate this setting, select "0" in SP2-921-001. Specify a greater value if the user tends to make many copies having high proportions of solid black image areas.		
001	-	*ENG	[0.1 to 5.0 / 0.4 / 0.1 / step]

2923	[Toner Recovery Time] (D158/D159) [Toner Recovery] (D160/D161/D170)		
	Sets the toner recovery time.		
001	-	*ENG	D158/D159: [1 to 60 / 30 / 1 sec / step] D160/D161/D170: [3 to 60 / 30 / 1 sec / step]

2925	[Toner Supply Ratio] (D158/D159) [Toner Supply Rate] (D160/D161/D170)		
	0: x1 1: x2 2: x4 3: x8 4: x12 5: x16 6: Continuation 7: Not Supply		
001	Ratio Select (Toner Supply Rate)	*ENG	[0 to 7 / 0 / 1 / step]

2926	[Standard Vt] DFU		
	Sets reference value of T sensor control to control toner density. This SP clears SP2-224-001: Copies After Toner Near End		
001	-	*ENG	[0.00 to 5.00 / D158/D159:2.50, D160/D161/D170:2.40 / 0.05 vol / step]

2927	[ID Sensor Control Function Select] (D158/D159) [ID Sensor Control] (D160/D161/D170)		
	Determines whether the ID sensor signal is referenced or not for the toner density control. Keep the default value in usual operations.		
001	0: Off , 1: On (ID Sensor Control)	ENG	[0 or 1 / 1 / 1 / step] 0: Correction Off 1: Correction On

2928	[Toner End Clear]		
	Clears the following messages and counters without supplying the toner: <ul style="list-style-type: none"> ▪ Toner near end message ▪ Toner end message ▪ Toner near end counter ▪ Toner end counter Do not use this SP in usual operations. When the toner in the development unit is abnormally insufficient, the drum may attract the toner carrier to its surface. The toner carrier might damage the drum surface.		
001	0: Off , 1: On (Toner End Clear)	ENG	[0 or 1 / 0 / 1 / step]

2929	[Vref Adjustment] (D158/D159)		
	[Vtref Limits] (D160/D161/D170)		
	Adjust the upper or lower Vref limit.		
001	Upper Limit (Upper)	*ENG	[0.50 to 3.50 / D158/D159:2.80, D160/D161/D170:2.45 / 0.05 vol / step]
002	Lower Limit (Lower)	*ENG	[0.50 to 3.50 / D158/D159:1.4, D160/D161/D170:1.25 / 0.05 vol / step]

2930	[TD Sensor Manual Setting] (D158/D159)		
	Manually enters Vtref value. SP2-926-001 will be disabled when this SP is set.		
001	-	*ENG	[0.00 to 5.00 / 0.00 / 0.05 vol / step]

2931	[TD (V/ wt%) Setting]		
	Sets the toner supply ease.		
001	[V/ wt%]	*ENG	[0.01to 1.50 / 0.40 / 0.01 / step]

2932	[Toner Density Control Level] (D158/D159)		
	[Toner Density Adj] (D160/D161/D170)		
	Enables when SP2-921-001 (the toner supply mode) is set to "1: Normal2". 0:Normal 1:Dark 2:Light 3:Darker 4:Lighter		
001	Level Select	*ENG	[0 to 4 / 0 / 1 / step]

2933	[ID Sensor Control Correction] (D158/D159) [ID Sensor Adj] (D160/D161/D170)		
	Adjusts the correction value for P sensor. This SP is design use only and do not change.		
001	-	*ENG	[0.0 to 3.0 / 1.0 / 0.1 / step]

2934	[ID Sensor PWM Setting] (D158/D159) [ID Error Analysis] (D160/D161/D170)		
	001	Dilay (PWM)	*ENG
	Displays ID Sensor PWM value.		
003	Upper Limit Correction	*ENG	[0 to 1023 / 100 / 1 / step]
	Upper limit value of ID sensor PMW.		

2935	[ID Sensor Initialization] (D158/D159)		
	Executes ID Sensor initialization. It must be done after replacing the ID sensor. This SP clears PWM value and executes Vsg adjustment again, then resets PWM value.		
001	-	ENG	[0 or 1 / 0 / 1 / step]

2936	[ID Sensor Detection Interval] (D158/D159) [ID Sensor Detection] (D160/D161/D170)		
	Counts every page printed. If this counter reached the number set in SP9-995-002, interrupt the print job and do the process set in SP2-995-003.		
001	Counter	*ENG	[0 to 999 / 0 / 1 page / step]

2992	[After ID Sensor Error] (D158/D159)		
	Displays SC after the limit number of copies printed when ID sensor error is occurred.		
001	Copies Limit	*ENG	[0 or 1 / 0 / 1 / step] 0: 100 1: 200

2995	[ID Sensor Detection] (D158/D159)		
001	Interval Warming-up	*ENG	[0 to 999 / 480 / 1 min / step]
	Performs ID sensor warmup after recovering from energy-saving mode when the machine stayed energy-saving mode more than specified time.		
002	Interval Number of Pages	*ENG	[0 to 999 / 100 / 1 sheet / step]
	Interrupts printing jobs and performs the process set in SP2-995-003 when this number reached SP2-936-001.		
003	Effect Timing	*ENG	[0 or 1 / 0 / 1 / step]
	0:Job End 1:Interrupt		
	Sets executing timing of ID sensor controlling.		

2995	[ID Detect Temp] (D160/D161/D170)		
	-		
001	ID Detect Temp	*ENG	[30 to 90 / 30 / 1 deg/ step]
002	Number of Pages	*ENG	[0 to 999 / 100 / 1 sheet / step]
003	JobEnd/Interrupt	*ENG	[0 or 1 / 0 / 1 / step]

2996	[Transfer Roller Cleaning] (D158/D159) [T Roller Cleaning] (D160/D161/D170)		
001	Function Select (T Roller Cleaning)	*ENG	[0 or 1 / 0 / 1 / step] 0: Off 1: On
	Selects the transfer roller cleaning before printing On / Off.		
002	Interval	*ENG	[0 to 100 / 50 / 1 / step]
	Executes the transfer roller cleaning after job end when the counter (SP2-996-003) reached this SP.		
003	Counter	ENG	[0 to 255 / 0 / 1 sheet / step]
	Counter for executing SP2-996-002. Counts up when registration is resumed.		

2998	[PCU Reverse Rotation Time] (D158/D159)		
001	Wait Time	*ENG	[240 to 999 / 300 / 1 ms / step]
	Sets the time until the reverse rotation starts after the main motor stopped.		
002	Reverse Time	*ENG	[0 to 99 / 60 / 1 ms / step]
	Sets the reverse rotation time.		

2998	[Main Mag-print] (D160/D161/D170)		
001	Main Mag-print	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 % / step]
	Adjusts the magnification for the main scanning direction.		

2999	[Main Motor Adj] (D160/D161/D170)		
001	Wait Time	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 % / step]
002	Reverse Time	*ENG	[0 to 99 / 60 / 1 ms / step]

3.3 MAIN SP TABLES-3

3.3.1 SP3-XXX (PROCESS)

There are no Group 3 SP modes for this machine.

3.4 MAIN SP TABLES-4


3.4.1 SP4-XXX (SCANNER)

4008	[Sub Scan Magnification Adj] (D158/D159)		
	[Sub Scan Mag] (D160/D161/D170)		
Adjusts the sub-scan magnification by changing the scanner motor speed.			
001	-	ENG	D158/D159: [-1.0 to 1.0 / 0.0 / 0.1 % / step] D160/D161/D170: [-9.0 to 9.0 / 0.0 / 0.1 % / step]

4009	[Main Scan Mag] (D160/D161/D170)		
	Adjusts the main-scan magnification by using the zooming function of IPU.		
001	-	ENG	[-10 to 10 / 0.0 / 0.1 % / step]

4010	[Sub Scan Registration Adj] (D158/D159)		
	[LE Scan Regist] (D160/D161/D170)		
Adjusts the leading edge registration for scanning.			
001	-	ENG	D158/D159: [-2.0 to 2.0 / 0.0 / 0.1 mm / step] D160/D161/D170: [-10.0 to 10.0 / 0.0 / 0.1 mm / step]

4011	[Main Scan Reg] (D158/D159)		
	[StoS Scan Regist] (D160/D161/D170)		
Adjusts the side-to-side registration by changing the scanning start timing in the main scan direction.			
001	-	ENG	[-2.5 to 2.5 / 0.0 / 0.1 mm / step]

4012	[Set Scale Mask] (D158/D159) [Scan Erase Margin] (D160/D161/D170)		
	Adjusts scanning margins for the leading and trailing edges (sub scan) and right and left edge (main scan). <div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> ▪ Do not adjust unless the customer desires a scanner margin greater than the printer margin. These settings are adjusted to erase shadows caused by the gap between the original and the scale of the scanner unit. 		
001	Book: Sub Ledge (Leading Edge)	ENG	D158/D159 [0.0 to 3.0 / 1.0 / 0.1 mm / step] D160/D161/D170 [0.0 to 9.0 / 1.0 / 0.1 mm / step]
002	Book: Sub TEdge (Trailing Edge)	ENG	D158/D159 [0.0 to 3.0 / 0.0 / 0.1 mm / step] D160/D161/D170 [0.0 to 9.0 / 1.0 / 0.1 mm / step]
003	Book: Main Ledge (Left Side)	ENG	D158/D159 [0.0 to 3.0 / 1.0 / 0.1 mm / step] D160/D161/D170 [0.0 to 9.0 / 1.0 / 0.1 mm / step]
004	Book: Main TEdge (Right Side)	ENG	D158/D159 [0.0 to 3.0 / 0.0 / 0.1 mm / step] D160/D161/D170 [0.0 to 9.0 / 1.0 / 0.1 mm / step]
005	Scale ADF: Leading Edge (D158/D159)	*ENG	[0.0 to 3.0 / 0.0 / 0.1 mm / step]
007	Scale ADF: Right (D158/D159)	*ENG	[0.0 to 3.0 / 0.0 / 0.1 mm / step]
008	Scale ADF: left (D158/D159)	*ENG	[0.0 to 3.0 / 0.0 / 0.1 mm / step]

4013	[Scanner Free Run]		
	Performs a scanner free run with the exposure lamp on or off.		
001	Book mode: Lamp Off (Scanner Free Run)	ENG	[0 or 1 / 0 / 1 / step] 0:OFF, 1:ON
002	Book mode: Lamp On (D158/D159)	ENG	[0 or 1 / 0 / 1 / step] 0:OFF, 1:ON

4014	[Scan] (D158/D159)		
	Executes the scanner free run with each mode.		
001	HP Detection Enable	ENG	[0 or 1 / 0 / 1 / step] 0:OFF, 1:ON
002	HP Detection Disable	ENG	[0 or 1 / 0 / 1 / step] 0:OFF, 1:ON

4020	[Dust Check] (D158/D159)		
	-		
001	Dust Detection:On/Off	*ENG	[0 or 1 / 0 / 1 / step] 0: OFF, 1: ON
002	Dust Detect: Lvl	*ENG	Selects the detect level. [0 to 8 / 4 / 1 / step] 0: lowest detection level 8: highest detection level
003	Dust Reject: Lvl	*ENG	Selects the level. [0 to 4 / 0 / 1 / step]

4301	[Operation Check] (D158/D159)		
	[Display-APS Data] (D160/D161/D170)		
Displays the size detected by APS Sensor which is in the scanner unit.			
001	APS Sensor (Display-APS Data)	ENG	D158/D159 [0 to 255 / 0 / 1 / step] D160/D161/D170 [0 to 0xFFFF / 0 / 1 / step]

4303	[Min Size for APS] (D158/D159)		
	[APS Small Origin] (D160/D161/D170)		
Determines whether an original of non-standard size is detected as A5/HLT size by the APS sensor.			
001	-	*ENG	[0 to 2 / 0 / 1 / step] 0: No original 1: HLT SEF(US), A5 SEF(The other) 2: HLT LEF(US), A5 LEF(The other)

4305	[8K/16K Detection] (D158/D159)		
	0: Normal Detection 1: A4-Sideways LT-Lengthwise 2: LT-Sideways A4-Lengthwise 3: 8K 16K		
001	Detection ON/OFF	*ENG	[0 to 3 / 0 / 1 / step]

4305	[APS Priority] (D160/D161/D170)		
	0: Normal Detection 1: LT SEF LEF - A4 SEF LEF(US) A4 SEF LEF - LT SEF LEF(Except US/CHN) A3 SEF,B4 SEF – 8K SEF(CHN) A4 SEF,B5 SEF – 16K SEF(CHN) A4 LEF,B5 LEF – 16K LEF(CHN)		
001	-	*ENG	[0 to 1 / 0 / 1 / step]

4308	[Scan Size Detection] (D158/D159)		
	Selects whether the machine detects the scan size. 0:OFF 1:ON 2:APS		
001	Detection ON/OFF	*ENG	[0 to 2 / 1 / 1 / step]

4309	[Scan Size Detect:Setting] (D158/D159)		
001	Original Density Thresh	*ENG	[0 to 255 / 18 / 1 digit / step]
	Adjusts the density for the scan size detection.		
002	Detection Time	*ENG	[20 to 100 / 60 / 20 msec / step]
	Adjusts the detection time for scan size detection.		
003	Lamp ON:Delay Time	*ENG	[40 to 200 / 40 / 10 msec / step]
	Adjusts the timing when to lamp on for the scan size detection.		
004	LED PWM Duty	*ENG	[0 to 100 / 60 / 1 / step]
	Adjusts the light value for the scan size detection.		

4310	[Scan Size Detect Value] (D158/D159)		
	Checks the density of scanning data for the scan size detection.		
001	S1:R	ENG	[0 to 255 / 0 / 1 digit / step]
002	S1:G	ENG	[0 to 255 / 0 / 1 digit / step]
003	S1:B	ENG	[0 to 255 / 0 / 1 digit / step]
004	S2:R	ENG	[0 to 255 / 0 / 1 digit / step]
005	S2:G	ENG	[0 to 255 / 0 / 1 digit / step]
006	S2:B	ENG	[0 to 255 / 0 / 1 digit / step]
007	S3:R	ENG	[0 to 255 / 0 / 1 digit / step]
008	S3:G	ENG	[0 to 255 / 0 / 1 digit / step]
009	S3:B	ENG	[0 to 255 / 0 / 1 digit / step]

4350	[Intermittent Shading: B/W] (D158/D159)		
001	Switch On/Off	ENG	[0 or 1 / 1 / 1 / step]
002	Interval 1	ENG	[0 to 65535 / 180 / 1 sec / step]
003	Interval 1 Times	ENG	[1 to 60 / 1 / 1 / step]
004	Interval 2	ENG	[0 to 65535 / 180 / 1 sec / step]

4350	[ADF Shading Time] (D160/D161/D170)		
	-		
001	ADF Shading Time	*ENG	[0 to 90 / 60 / 1 sec / step]

4351	[Intermittent Shading: Color] (D158/D159)		
	-		
001	Switch On/Off	ENG	[0 or 1 / 1 / 1 / step]
002	Interval 1	ENG	[0 to 65535 / 180 / 1 sec / step]
003	Interval 1 Times	ENG	[1 to 60 / 1 / 1 / step]
004	Interval 2	ENG	[0 to 65535 / 180 / 1 sec / step]

4400	[Org Edge Mask] (D158/D159)		
	Sets the Mask for Original. These SPs set the area to be masked during platen (book) mode scanning.		
001	Book: Sub:LEdge	ENG	[0.0 to 3.0 / 0.0 / 0.1 mm / step]
002	Book: Sub:TEdge	ENG	[0.0 to 3.0 / 0.0 / 0.1 mm / step]
003	Book: Main:LEdge	ENG	[0.0 to 3.0 / 0.0 / 0.1 mm / step]
004	Book: Main:TEdge	ENG	[0.0 to 3.0 / 0.0 / 0.1 mm / step]
4400	[Scanner Erase Margin] (D158/D159)		
	Sets the Mask for Original. These SPs set the area to be masked during ADF mode scanning.		
005	ADF: Leading Edge	*ENG	[0.0 to 3.0 / 0.0 / 0.1 mm / step]
007	ADF: Right	*ENG	[0.0 to 3.0 / 0.0 / 0.1 mm / step]
008	ADF: Left	*ENG	[0.0 to 3.0 / 0.0 / 0.1 mm / step]

4417	[IPU Test Pattern] (D158/D159)		
	Selects the IPU test pattern.		
001	Test Pattern	ENG	[0 to 8 / 0 / 1 / step]
	-		
0	Scanned image	5	Slant grid pattern C
1	Gradation main scan A	6	Slant grid pattern D
2	Patch 16C	7	Scanned+Slant Grid C
3	Grid pattern A	8	Scanned+Slant Grid D
4	Slant grid pattern B	-	

4429	[Select Copy Data Security] (D158/D159)		
	Adjusts the pattern density of illegal copy output for Copy, Scanner, and Fax.		
001	Copying	*ENG	[0 to 3 / 3 / 1 / step] 3: Darkest density
002	Scanning	*ENG	
003	Fax Operation	*ENG	

4450	[Scan Image Pass Selection] (D158/D159)		
	[Image Path] (D160/D161/D170)		
001	Black Subtraction ON/OFF (BK Offset Enable)	ENG	[0 or 1 / 1 / 1 / step] 0: OFF, 1: ON
	Uses or does not use the black reduction image path.		
002	SH ON/OFF (SH Pass Enable)	ENG	D158/D159 [0 or 1 / 0 / 1 / step] D160/D161/D170 [0 or 1 / 0 / 1 / step] 0: OFF, 1: ON

	Uses or does not use the shading image path.
--	--

4460	[Digital AE] (D158/D159)		
	Adjusts the background level.		
001	Lower Limit:Value	*ENG	[0 to 1023 / 364 / 1 / step]
002	Background Level	*ENG	[512 to 1535 / 932 / 1 / step]

4550	[Scan Apli:Txt/Print] (D158/D159)		
	Sets the text/print MTF level of the scanner application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4551	[Scan Apli:Txt] (D158/D159)		
	Sets the text MTF level of the scanner application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4552	[Scan Apli:Txt Dropout] (D158/D159)		
	Sets the text dropout color MTF level of the scanner application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4553	[Scan Apli:Txt/Photo] (D158/D159)		
	Sets the text/photo MTF level of the scanner application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4554	[Scan Apli:Photo] (D158/D159)		
	Sets the photo MTF level of the scanner application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4565	[Scan Apli:GrayScale] (D158/D159)		
	Sets the Grayscale MTF level of the scanner application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4570	[Scan Apli:Col Txt/Photo] (D158/D159)		
	Sets the color text/photo MTF level of the scanner application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4571	[Scan Apli:Col Gloss Photo] (D158/D159)		
	Sets the color gloss photo MTF level of the scanner application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4572	[Scan Apli:AutoCol] (D158/D159)		
	Sets the automatic color MTF level of the scanner application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]

007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4580	[Fax Apli:Txt/Chart] (D158/D159)		
	Sets the text/chart MTF level of the fax application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]
010	Texture Erase: 0 (Fix), 1-2	*ENG	[0 to 2 / 0 / 1 / step]

4581	[Fax Apli:Txt] (D158/D159)		
	Sets the text MTF level of the fax application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4582	[Fax Apli:Txt/Photo] (D158/D159)		
	Sets the text/photo MTF level of the fax application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]
010	Texture Erase: 0 (Fix), 1-2	*ENG	[0 to 2 / 0 / 1 / step]

4583	[Fax Apli:Photo] (D158/D159)		
	Sets the photo MTF level of the fax application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]
010	Texture Erase: 0 (Fix), 1-2	*ENG	[0 to 2 / 0 / 1 / step]

4584	[Fax Apli:Original 1] (D158/D159)		
	Sets the original 1 MTF level of the fax application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Ind Dot Erase: 0(Off) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4585	[Fax Apli:Original 2] (D158/D159)		
	Sets the original 2 MTF level of the fax application.		
005	MTF: 0(Off) 1-15 (Weak-Strong)	*ENG	[0 to 15 / 8 / 1 / step]
006	Smoothing: 0(x1) 1-7 (Weak-Strong)	*ENG	[0 to 7 / 4 / 1 / step]
007	Brightness: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
008	Contrast: 1-255	*ENG	[1 to 255 / 128 / 1 / step]
009	Independent Dot Erase (0)/ 1-7 (Strong)	*ENG	[0 to 7 / 0 / 1 / step]

4600	[SBU Version Display] (D158/D159)		
	-		
001	SBU ID	ENG	[0x00 to 0xFF / 0 / 1 / step]
002	SCAT ID	ENG	[0x00 to 0xFF / 0 / 1 / step]

4602	[Scanner Memory Access] (D158/D159)		
	Enables the read and write check for the SBU registers.		
001	Scanner Memory Access	ENG	[0x00000000 to 0xFFFFFFFF / 0x00000000 / - / step]

4603	[Auto Adjustment Operation] (D158/D159)		
	Executes the AGC and enables the home position detection.		
001	HP Detection Enable	ENG	[0 or 1 / 0 / 1 / step]
002	HP Detection Disable	ENG	[0 or 1 / 0 / 1 / step]

4603	[Force AGC] (D160/D161/D170)		
	-		
001	Force AGC	ENG	[0 or 1 / 0 / 1 / step]

4604	[FGATE Open/Close] (D158/D159)		
	Opens or closes the FGATE		
001	FGATE Open/Close	ENG	[0 or 1 / 0 / 1 / step] 0:OFF, 1:ON

4609	[Gray Balance Set: R]		
	Displays the adjustment value of the gray balance for red.		
001	Book Scan	*ENG	D158/D159 [-384 to 255 / -100 / 1 digit / step] D160/D161/D170 [128 to 383 / 256 / 1 / step]
002	DF Scan	*ENG	D158/D159 [-384 to 255 / -100 / 1 digit / step] D160/D161/D170 [128 to 383 / 256 / 1 / step]

4610	[Gray Balance Set: G]		
	Displays the adjustment value of the gray balance for green.		
001	Book Scan	*ENG	D158/D159 [-384 to 255 / -100 / 1 digit / step] D160/D161/D170 [128 to 383 / 256 / 1 / step]
002	DF Scan	*ENG	D158/D159 [-384 to 255 / -100 / 1 digit / step] D160/D161/D170 [128 to 383 / 256 / 1 / step]

4610	[Gray Balance Set: BW] (D160/D161/D170)		
	Displays the adjustment value of the gray balance for BW		
003	Book Scan	*ENG	[128 to 383 / 256 / 1 / step]
004	DF Scan	*ENG	[128 to 383 / 256 / 1 / step]

4611	[Gray Balance Set: B]		
	Displays the adjustment value of the gray balance for blue.		
001	Book Scan	*ENG	D158/D159 [-384 to 255 / -100 / 1 digit / step] D160/D161/D170 [128 to 383 / 256 / 1 / step]
002	DF Scan	*ENG	D158/D159 [-384 to 255 / -100 / 1 digit / step] D160/D161/D170 [128 to 383 / 256 / 1 / step]

4623	[Black Level Adj] (D160/D161/D170)		
	-		
001	Latest:RCL_DAC	ENG	[0 to 15 / 0 / 1 / step]
002	Latest:OFFSET_DAC	ENG	[0 to 255 / 0 / 1 / step]

4635	[SSCG Corection] DFU (D158/D159)		
	-		
001	Set Mode Selection	*ENG	[0 to 3 / 1 / 1 / step]

4637	[SSCG Corection Value (Ana.)] DFU (D158/D159)		
	-		
001	Latest: RE	ENG	[-31 to 31 / 0 / 1 digit / step]
002	Latest: RO	ENG	[-31 to 31 / 0 / 1 digit / step]
003	Latest: GE	ENG	[-31 to 31 / 0 / 1 digit / step]
004	Latest: GO	ENG	[-31 to 31 / 0 / 1 digit / step]
005	Latest: BE	ENG	[-31 to 31 / 0 / 1 digit / step]
006	Latest: BO	ENG	[-31 to 31 / 0 / 1 digit / step]

4638	[SSCG Corection Value (Dig.)] DFU (D158/D159)		
	-		
001	Latest: RE	ENG	[-255 to 255 / 0 / 1 digit / step]
002	Latest: RO	ENG	[-255 to 255 / 0 / 1 digit / step]
003	Latest: GE	ENG	[-255 to 255 / 0 / 1 digit / step]
004	Latest: GO	ENG	[-255 to 255 / 0 / 1 digit / step]
005	Latest: BE	ENG	[-255 to 255 / 0 / 1 digit / step]
006	Latest: BO	ENG	[-255 to 255 / 0 / 1 digit / step]

4639	[SSCG Corection Value (Ana.)] DFU (D158/D159)		
	-		
001	Factory Setting: RE	*ENG	[-31 to 31 / 0 / 1 digit / step]
002	Factory Setting: RO	*ENG	[-31 to 31 / 0 / 1 digit / step]
003	Factory Setting: GE	*ENG	[-31 to 31 / 0 / 1 digit / step]
004	Factory Setting: GO	*ENG	[-31 to 31 / 0 / 1 digit / step]
005	Factory Setting: BE	*ENG	[-31 to 31 / 0 / 1 digit / step]
006	Factory Setting: BO	*ENG	[-31 to 31 / 0 / 1 digit / step]

4640	[SSCG Corection Value (Dig.)] DFU (D158/D159)		
	-		
001	Factory Setting: RE	*ENG	[-255 to 255 / 0 / 1 digit / step]
002	Factory Setting: RO	*ENG	[-255 to 255 / 0 / 1 digit / step]
003	Factory Setting: GE	*ENG	[-255 to 255 / 0 / 1 digit / step]
004	Factory Setting: GO	*ENG	[-255 to 255 / 0 / 1 digit / step]
005	Factory Setting: BE	*ENG	[-255 to 255 / 0 / 1 digit / step]
006	Factory Setting: BO	*ENG	[-255 to 255 / 0 / 1 digit / step]

4641	[SSCG Noise Amplitude] (D158/D159)		
	-		
001	RE	ENG	[0 to 1023 / 0 / 1 digit / step]
002	RO	ENG	[0 to 1023 / 0 / 1 digit / step]
003	GE	ENG	[0 to 1023 / 0 / 1 digit / step]
004	GO	ENG	[0 to 1023 / 0 / 1 digit / step]
005	BE	ENG	[0 to 1023 / 0 / 1 digit / step]
006	BO	ENG	[0 to 1023 / 0 / 1 digit / step]

4645	[White Level Adj Loop] (D160/D161/D170)		
	-		
001	Red	ENG	[0 to 30 / 0 / 1 / step]
002	Green	ENG	[0 to 30 / 0 / 1 / step]
003	Blue	ENG	[0 to 30 / 0 / 1 / step]
005	Black Level	ENG	[0 to 20 / 0 / 1 / step]

4646	[Scan Adjust Error] (D158/D159)		
	[Scan Adj Error] (D160/D161/D170)		
Displays the error value of the scanning adjustment.			
001	White level	ENG	D158/D159 [0 to 65535 / 0 / 1 / step] D160/D161/D170 [0 to 127 / 0 / 1 / step]
002	Black level	ENG	D158/D159 [0 to 65535 / 0 / 1 / step] D160/D161/D170 [0 to 3 / 0 / 1 / step]
003	SSCG Correction (D158/D159)	ENG	D158/D159 [0 to 65535 / 0 / 1 / step]

4647	[Scanner Hard Error]		
	Displays the result of the SBU connection check.		
001	Power-ON	ENG	D158/D159 [0 to 65535 / 0 / 1 / step] D160/D161/D170 [0 to 3 / 0 / 1 / step]

4651	[Black Level Adj. Value (Ana.)] (D158/D159)		
	-		
001	Latest: RE	ENG	[0 to 127 / 0 / 1 digit / step]
002	Latest: RO	ENG	[0 to 127 / 0 / 1 digit / step]

4652	[Black Level Adj. Value (Ana.)] (D158/D159)		
	-		
001	Latest: GE	ENG	[0 to 127 / 0 / 1 digit / step]
002	Latest: GO	ENG	[0 to 127 / 0 / 1 digit / step]

4653	[Black Level Adj. Value (Ana.)] (D158/D159)		
	-		
001	Latest: BE	ENG	[0 to 127 / 0 / 1 digit / step]
002	Latest: BO	ENG	[0 to 127 / 0 / 1 digit / step]

4654	[Black Level Adj. Value (Dig.)] (D158/D159)		
	Displays the last correct adjustment value of the black level. RE: Red Even signal, RO: Red Odd signal		
001	Latest: RE	ENG	Displays the black offset value for the even red signal in the CCD circuit board (color printing speed). [0 to 16383 / 0 / 1 digit / step]
002	Latest: RO	ENG	Displays the black offset value for the odd red signal in the CCD circuit board (color printing speed). [0 to 16383 / 0 / 1 digit / step]

4655	[Black Level Adj. Value (Dig.)] (D158/D159)		
	Displays the last correct adjustment value of the black level. GE: Green Even signal, GO: Green Odd signal BkE: Black Even signal, BkO: Black Odd signal		
001	Latest: GE	ENG	Displays the black offset value for the even green signal in the CCD circuit board (color printing speed). [0 to 16383 / 0 / 1 digit / step]
002	Latest: GO	ENG	Displays the black offset value for the odd green signal in the CCD circuit board (color printing speed). [0 to 16383 / 0 / 1 digit / step]

4656	[Black Level Adj. Value (Dig.)] (D158/D159)		
	Displays the last correct adjustment value of the black level. BE: Blue Even signal, BO: Blue Odd signal		
001	Latest: BE	ENG	Displays the black offset value for the even blue signal in the CCD circuit board (color printing speed). [0 to 16383 / 0 / 1 digit / step]
002	Latest: BO	ENG	Displays the black offset value for the odd blue signal in the CCD circuit board (color printing speed). [0 to 16383 / 0 / 1 digit / step]

4658	[Analog Gain Adjust] (D158/D159)		
	-		
001	Latest: R	*ENG	[0 to 14 / 0 / 1 digit / step]

4659	[Analog Gain Adjust] (D158/D159)		
	-		
001	Latest: G	*ENG	[0 to 14 / 0 / 1 digit / step]

4660	[Analog Gain Adjust] (D158/D159)		
	-		
001	Latest: B	*ENG	[0 to 14 / 0 / 1 digit / step]

4661	[Digital Gain Adjust] (D158/D159)		
	Displays the last correct adjustment value of the digital gain. RE: Red Even signal, RO: Red Odd signal		
001	Latest: RE	*ENG	[0 to 1023 / 0 / 1 digit / step]
002	Latest: RO	*ENG	

4662	[Digital Gain Adjust] (D158/D159)		
	Displays the last correct adjustment value of the digital gain. GE: Green Even signal, GO: Green Odd signal		
001	Latest: GE	*ENG	[0 to 1023 / 0 / 1 digit / step]
002	Latest: GO	*ENG	[0 to 1023 / 0 / 1 digit / step]

4663	[Digital Gain Adjust] (D158/D159)		
	Displays the last correct adjustment value of the digital gain. BE: Blue Even signal, BO: Blue Odd signal		
001	Latest: BE	*ENG	[0 to 1023 / 0 / 1 digit / step]
002	Latest: BO	*ENG	

4670	[Black Level Adj. Value (Ana.)] (D158/D159)		
	-		
001	Factory Setting: RE	*ENG	[0 to 127 / 0 / 1 digit / step]
002	Factory Setting: RO	*ENG	[0 to 127 / 0 / 1 digit / step]

4671	[Black Level Adj. Value (Ana.)] (D158/D159)		
	Displays the factory setting values of the black level.		
001	Factory Setting: GE	*ENG	[0 to 127 / 0 / 1 digit / step]
002	Factory Setting: GO	*ENG	[0 to 127 / 0 / 1 digit / step]

4672	[Black Level Adj. Value (Ana.)] (D158/D159)		
	-		
001	Factory Setting: BE	*ENG	[0 to 127 / 0 / 1 digit / step]
002	Factory Setting: BO	*ENG	[0 to 127 / 0 / 1 digit / step]

4673	[Black Level Adj. Value (Dig.)] (D158/D159)		
	[Black Level Adj] (D160/D161/D170)		
Displays the factory setting values of the black level. RE: Red Even signal, RO: Red Odd signal			
001	Factory Setting: RE (Fact:RLC_DAC)	*ENG	D158/D159 [0 to 16383 / 0 / 1 digit / step] D160/D161/D170 [0 to 15 / 0 / 1 / step]
002	Factory Setting: RO (Fact:OFFSET_DAC)	*ENG	D158/D159 [0 to 16383 / 0 / 1 digit / step] D160/D161/D170 [0 to 255 / 0 / 1 / step]

4674	[Black Level Adj. Value (Dig.)] (D158/D159)		
	Displays the factory setting values of the black level. GE: Green Even signal, GO: Green Odd signal		
001	Factory Setting: GE	*ENG	Displays the factory setting values of the black level adjustment for the even green signal in the CCD circuit board (color printing speed). [0 to 16383 / 0 / 1 digit / step]
002	Factory Setting: GO	*ENG	Displays the factory setting values of the black level adjustment for the odd green signal in the CCD circuit board (color printing speed). [0 to 16383 / 0 / 1 digit / step]

4675	[Black Level Adj. Value (Dig.)] (D158/D159)		
	Displays the factory setting values of the black level. BE: Blue Even signal, BO: Blue Odd signal		
001	Factory Setting: BE	*ENG	Displays the factory setting values of the black level adjustment for the even blue signal in the CCD circuit board (color printing speed). [0 to 16383 / 0 / 1 digit / step]
002	Factory Setting: BO	*ENG	Displays the factory setting values of the black level adjustment for the odd blue signal in the CCD circuit board (color printing speed). [0 to 16383 / 0 / 1 digit / step]

4677	[Analog Gain Adjust] (D158/D159)		
	-		
001	Factory Setting: R	*ENG	[0 to 14 / 0 / 1 digit / step]

4678	[Analog Gain Adjust] (D158/D159)		
	-		
001	Factory Setting: G	*ENG	[0 to 14 / 0 / 1 digit / step]

4679	[Analog Gain Adjust] (D158/D159)		
	-		
001	Factory Setting: B	*ENG	[0 to 14 / 0 / 1 digit / step]

4680	[Analog Gain Adjust] (D158/D159)		
	-		
001	Factory Setting: RE	*ENG	[0 to 1023 / 0 / 1 digit / step]
002	Factory Setting: RO	*ENG	

4681	[Digital Gain Adjust] (D158/D159)		
	Displays the gain value of the amplifiers on the controller for Green. GE: Green Even signal, GO: Green Odd signal		
001	Factory Setting: GE	*ENG	[0 to 1023 / 0 / 1 digit / step]
002	Factory Setting: GO	*ENG	[0 to 1023 / 0 / 1 digit / step]

4682	[Digital Gain Adjust] (D158/D159)		
	-		
001	Factory Setting: BE	*ENG	[0 to 1023 / 0 / 1 digit / step]
002	Factory Setting: BO	*ENG	

4688	[DF Density Adjustment] (D158/D159)		
	[Scan Image Density] (D160/D161/D170)		
Adjust the density difference in the ADF and the Book.			
001	(ARDF)	*ENG	D158/D159 [80 to 120 / 106 / 1 % / step] D160/D161/D170 [80 to 120 / 103 / 1 % / step]

4690	[White Level Peak Read] (D158/D159)		
	[White Level Peak] (D160/D161/D170)		
Displays the peak level of the white level scanning.			
001	RE (Red)	ENG	D158/D159 [0 to 1023 / 0 / 1 digit / step] D160/D161/D170 [0 to 255 / 0 / 1 / step]
002	RO (D158/D159)	ENG	[0 to 1023 / 0 / 1 digit / step]

4691	[White Level Peak Read] (D158/D159)		
	[White Level Peak] (D160/D161/D170)		
Displays the peak level of the white level scanning. GE: Green Even signal, GO: Green Odd signal			
001	GE (Green)	ENG	D158/D159 [0 to 1023 / 0 / 1 digit / step] 160/D161/D170 [0 to 255 / 0 / 1 / step]
002	GO (D158/D159)	ENG	[0 to 1023 / 0 / 1 digit / step]

4692	[White Level Peak Read] (D158/D159)		
	[White Level Peak] (D160/D161/D170)		
Displays the peak level of the white level scanning. BE: Blue Even signal, BO: Blue Odd signal			
001	BE (Blue)	ENG	D158/D159 [0 to 1023 / 0 / 1 digit / step] D160/D161/D170 [0 to 255 / 0 / 1 / step]
002	BO (D158/D159)	ENG	[0 to 1023 / 0 / 1 digit / step]

4693	[Black Level Peak Read] (D158/D159)		
	Displays the peak level of the black level scanning. RE: Red Even signal, RO: Red Odd signal		
001	RE	ENG	[0 to 1023 / 0 / 1 digit / step]
002	RO	ENG	

4693	[Black Level Bottom] (D160/D161/D170)		
	-		
001	Black Level	ENG	[0 to 1023 / 0 / 1 / step]

4694	[Black Level Peak Read] (D158/D159)		
	Displays the peak level of the black level scanning. GE: Green Even signal, GO: Green Odd signal		
001	GE	ENG	[0 to 1023 / 0 / 1 digit / step]
002	GO	ENG	

4695	[Black Level Peak Read] (D158/D159)		
	Displays the peak level of the black level scanning. BE: Blue Even signal, BO: Blue Odd signal		
001	BE	ENG	[0 to 1023 / 0 / 1 digit / step]
002	BO	ENG	

4698	[Factory Setting Input] (D158/D159)		
	-		
001	ON/OFF	ENG	[0 or 1 / 0 / 1 / step]
002	Execution Flag	*ENG	

4699	[SBU Test Pattern Change] (D158/D159)		
	-		
001	-	ENG	[0 to 255 / 0 / 1 / step]

4802	[Scanner Free run DF mode] (D158/D159)		
	Executes the document feeder shading free run.		
001	Lamp Off	ENG	Turns off the scanner lamp. [0 or 1 / 0 / 1 / step]
002	Lamp On		Turns on the scanner lamp. [0 or 1 / 0 / 1 / step]

4803	[Home Position Adj Value] (D158/D159)		
	[Home Position Adj] (D160/D161/D170)		
	-		
001	-	*ENG	Adjusts the scanner home position. [-2.0 to 2.0 / 0.0 / 0.1 mm / step]

4804	[Home Position Operation] (D158/D159)		
	-		
001	Home Position Operation	ENG	Executes the scanner HP detection. [0 or 1 / 0 / 0 / step]

4806	[Scan Carriage Retract Op] (D158/D159)		
	-		
001	-	ENG	Moves the carriage from the scanner home position. Dust may fall through the DF exposure glass. Therefore, do this SP when you transport the machine a long distance. [0 or 1 / 0 / 0 / step]

4807	[SBU Off Mode] (D158/D159)		
	-		
001	On/Off	*ENG	[0 or 1 / 1 / 0 / step]

4813	[ALC Selection] (D158/D159)		
	-		
001	FC	*ENG	[0 or 1 / 1 / 1 / step]
002	BW	*ENG	[0 or 1 / 1 / 1 / step]

4850	[PMW] (D158/D159)		
	-		
001	Latest	*ENG	[0 to 8191 / 0 / 1 digit / step]
002	Factory Setting	*ENG	[0 to 8191 / 0 / 1 digit / step]

4850	[LED Lighting Duty:C] (D160/D161/D170)		
	-		
001	Latest:Red	ENG	[0 to 16383 / 0 / 1 / step]
003	Latest:Green	ENG	[0 to 16383 / 0 / 1 / step]
005	Latest:Blue	ENG	[0 to 16383 / 0 / 1 / step]

4851	[LED White Level Peak Read] (D158/D159)		
	[LED Lighting Duty:C] (D160/D161/D170)		
-			
001	Latest: RE (Last:Red)	*ENG	D158/D159 [0 to 1023 / 0 / 1 digit / step] D160/D161/D170 [0 to 16383 / 1360 / 1 / step]
002	Latest: RO (D158/D159)	*ENG	[0 to 1023 / 0 / 1 digit / step]
003	Latest: GE (Last:Green)	*ENG	D158/D159 [0 to 1023 / 0 / 1 digit / step] D160/D161/D170 [0 to 16383 / 1360 / 1 / step]
004	Latest: GO (D158/D159)	*ENG	[0 to 1023 / 0 / 1 digit / step]
005	Latest: BE (D158/D159)	*ENG	[0 to 1023 / 0 / 1 digit / step]

Main SP Tables-4

006	Latest: BO (Last:Blue)	*ENG	D158/D159 [0 to 1023 / 0 / 1 digit / step] D160/D161/D170 [0 to 16383 / 1360 / 1 / step]
-----	---------------------------	------	---

4852	[LED White Level Peak Read] (D158/D159)		
	[LED Lighting Duty:C] (D160/D161/D170)		
	-		
001	Factory Setting: BO (Fact:Red)	*ENG	D158/D159 [0 to 1023 / 0 / 1 digit / step] D160/D161/D170 [0 to 16383 / 1 / 1 / step]
002	Factory Setting: RO (D158/D159)	*ENG	[0 to 1023 / 0 / 1 digit / step]
003	Factory Setting: GE (Fact:Green)	*ENG	D158/D159: [0 to 1023 / 0 / 1 digit / step] D160/D161/D170 [0 to 16383 / 0 / 1 / step]
004	Factory Setting: GO (D158/D159)	*ENG	[0 to 1023 / 0 / 1 digit / step]
005	Factory Setting: GO (Fact:Blue)	*ENG	D158/D159 [0 to 1023 / 0 / 1 digit / step] D160/D161/D170 [0 to 16383 / 0 / 1 / step]
006	Factory Setting: BO (D158/D159)	*ENG	[0 to 1023 / 0 / 1 digit / step]

4903	[Filter Setting] (D158/D159)		
	This SP outputs the final data read at the end of ACC execution. A zero is returned if there was an error reading the data.		
001	Ind Dot Erase: Text	*ENG	Photo C Patch Level 1 (8-bit) [0 to 7 / 0 / 1 / step]
002	Ind Dot Erase: Generation Copy	*ENG	Photo M Patch Level 1 (8-bit) [0 to 7 / 0 / 1 / step]

4903	[ADS Level] (D160/D161/D170)		
	Adjusts the ADS level.		
001	ADS Level	*ENG	[0 to 255 / 252 / 1 / step]

4904	[ADS Lower Limit] (D160/D161/D170)		
	Adjusts the ADS lower limit.		
001	ADS Lower Limit	*ENG	[0 to 255 / 80 / 1 / step]

4905	[Select Gradation Level] (D158/D159)		
	-		
001	Select Gradation Level	*ENG	[0 to 255 / 0 / 1 / step]

4905	[ADS Area Select] (D160/D161/D170)		
	Checks the whole area (0 = All) or the specific areas (1 = One) to adjust the ADS level. The specific areas are as follows: ADF: 15 to 90 mm from the left edge Platen Cover: 15 to 90 mm from the left edge		
001	Select Gradation Level	*ENG	[0 or 1 / 0 / 1 / step]

4918	[Man Gamma Adj] (DFU) (D158/D159)		
	Adjusts the manual gamma for Copy/Photo or Copy/Text with the soft keys on the operation panel.		
009	Man Gamma Adj	ENG	[- / - / -]

4921	[Image Adj Select] (D160/D161/D170)		
001	Copy	*ENG	[0 to 10 / 0 / 1 / step]
	Selects which mode the settings from SP4-922 to SP4-932 are used for. 0 = None, 1 = Text 1, 2 =Text 2, 3= Photo 1, 4 = Photo 2, 5 = Photo 3, 6 = Special 1, 7 = Special 2, 8 = Special 3, 9 = Special 4, 10 = Special 5		

4922	[Scanner Gamma] (D160/D161/D170)		
001	Copy	*ENG	[0 to 2 / 0 / 1 / step]
	Selects "text" or "photo" as the priority output mode. This setting is applied to all image processing modes of SP4-921. [0=System default / 1=Text / 2=Photo]		

4923	[Notch Selection] (D160/D161/D170)		
001	Copy	*ENG	[-1 to 1 / 0 / 1 / step]
	Selects the value of the center ID adjustment notch for the ID adjustment LEDs. <ul style="list-style-type: none"> ▪ Normally the center notch is 3 (range 1-5). If -1 is selected, each notch shifts down (becomes lighter). If +1 is selected, each notch shifts up (becomes darker). ▪ This setting is applied to all image processing modes of SP4-921. 		

4926	[Texture Removal] (D160/D161/D170)		
001	Copy	*ENG	[0 to 6 / 0 / 1 / step]
	<p>Adjusts the texture removal level that is used with error diffusion. 0: The default value for each mode is used. Text 1, Photo 2, Special 2, and Special 5 have a default of 3 and Photo 1, 3 have a default of 6.</p> <p>1: No removal applied.</p> <p>2 – 6: Removal applied at the level specified here.</p> <p>The higher the setting (level), the less clear the image will become (more texture removal). This setting is only applied to the originals in SP4-921.</p>		

4927	[Line Width] (D160/D161/D170)		
001	Copy	*ENG	[-2 to 2 / 0 / 1 / step]
	<p>Adjusts the line width correction algorithm. Positive settings produce thicker lines; negative settings produce thinner lines. This setting is only applied to the originals in SP4-921.</p>		

4928	[IndpdntDot Erase] (D160/D161/D170)		
001	Copy	*ENG	[-2 to 2 / 0 / 1 / step]
	<p>Selects the dot erase level. Higher settings provide greater erasure. This setting is only applied to the originals in SP4-921.</p>		

4929	[Positive/Negative] (D160/D161/D170)		
001	Copy	*ENG	[0 or 1 / 0 / 1 / step]
	<p>Inverts white and black. This setting is only applied to the originals in SP4-921.</p>		

4930	[Sharpness-Edge] (D160/D161/D170)		
001	Copy	*ENG	[-2 to 2 / 0 / 1 / step]
	Adjust the clarity. This setting is only applied to the originals in SP4-921.		

4931	[Sharpness-Solid] (D160/D161/D170)		
001	Copy	*ENG	[-2 to 2 / 0 / 1 / step]
	Adjust the clarity. This setting is only applied to the originals in SP4-921.		

4932	[Sharpness-LowID] (D160/D161/D170)		
001	Copy	*ENG	[-2 to 2 / 0 / 1 / step]
	Adjust the clarity. This setting is only applied to the originals in SP4-921.		

4941	[White Line Erase] (D160/D161/D170)		
001	White Line Erase	*ENG	[0 to 2 / 0 / 1 / step]
	Selects the white line erase level. 0: None 1: Weak 2: Strong <ul style="list-style-type: none"> • This setting is effective for all modes. • 0: White line erase is not used, and white level correction is used instead. • This setting is applied regardless of what mode has been selected in SP4-921. 		

4942	[Black Line Erase] (D160/D161/D170)		
001	Black Line Erase	*ENG	[0 to 3 / 2 / 1 / step]
	Selects the black line erase level. This setting is effective only when originals are scanned by the DF. [0 = No / 1 = Very weak / 2 = Weak / 3 = Strong] This setting is applied regardless of what mode has been selected in SP4-921.		

4954	[Read/Restore:Std] (D158/D159)		
	Reads or restores the standard chart.		
005	Chroma Rank	*ENG	Restores the standard chromaticity rank. [0 to 255 / 0 / 1 / step]

4991	[IPU Image Pass Selection] (D158/D159)		
	-		
001	RGB Frame Memory	ENG	[0 to 19 / 2 / 1 / step]
002	Filter test output	ENG	[0 to 28 / 24 / 1 / step]
003	Filter FM output	ENG	[0 to 15 / 1 / 1 / step]
004	Filter CPR output	ENG	[0 to 15 / 0 / 1 / step]

4993	[High Light Correction] (D158/D159)		
	-		
001	Sensitivity Selection	*ENG	Selects the Highlight correction level. [0 to 9 / 4 / 1 / step] 0: weakest sensitivity 9: strongest sensitivity
002	Range Selection	*ENG	Selects the range level of Highlight correction. [0 to 9 / 4 / 1 / step] 0: weakest skew correction, 9: strongest skew correction

4994	[Adj Txt/Photo Recog Level] (D158/D159)		
	Selects the definition level between Text and Photo for high compression PDF.		
001	High Compression PDF	*ENG	[0 to 2 / 1 / 1 / step]

4996	[White Paper Detection Level] (D158/D159)		
	-		
001	-	*ENG	[0 to 6 / 3 / 1 / step]


3.5 MAIN SP TABLES-5

3.5.1 SP5-XXX (MODE)

5001	[All Indicators On] (D160/D161/D170)		
	All LEDs turn on. The LCD turns on or off every 3 seconds. Press the reset key to end this program.		
001	-	CTL	-

5009	[Add Disp. Lang] (D158/159)		
	Adds language available in user choice. (Only the languages registered in the machine) Refer to the displayed language list to set in the way showed below. List Num.Assigned Bit Switch No.1~8BIT1 to 8 (SP5009-201) No.9~16BIT1 to 8 (SP5009-202) No.17~24BIT1 to 8 (SP5009-203) No.25~32BIT1 to 8 (SP5009-204) Example: To add American(No.3 in the list) or Czech (No.15) Turn Bit 3 of "SP5009-201" 0 to 1 for American. Turn Bit 7 of "SP5009-202" 0 to 1 for Czech . After setting, turn the main power switch off and on to make the setting valid.		
	201	Bit SW	*CTL
	202	Bit SW	*CTL
	203	Bit SW	*CTL
204	Bit SW	*CTL	[1 to 255/ 0 / 1 / step]

5024	[mm/inch Display Selection] (D158/159)		
	Selects the unit of measurement. After selection, turn the main power switch off and on.		
001	0:mm 1:inch	*CTL	[0 or 1 / 0 / 1 / step] 0: mm (Europe/Asia) 1: inch (North America)

5045	[Accounting Counter] (D158/159)		
	[Dsply-Counter] (D160/D161/D170)		
Selects the counting method to either developments or prints.			
<p> Note</p> <ul style="list-style-type: none"> The counting method can be changed only once, regardless of whether the counter value is negative or positive. 			
001	Counter Method	*CTL	[0 or 1 / 0 / 1 / step] 0: Developments 1: Prints

5047	[Paper Display] (D158/159)		
001	-	*CTL	[0 or 1 / - / 1 / step] 0: OFF, 1:ON

5055	[Display IP Address] (D158/159)		
	Display or does not display the IP address on the operation panel.		
001	Display IP Address	*CTL	[0 or 1 / 0 / 1/step] 0: OFF, 1: ON

5062	[Parts PM Display Setting] (D158/159)		
	Display or does not display the PM part yield on the LCD.		
001	-	*CTL	[0 or 1 / 0 / 1/step] 0: No display, 1: Display

5066	[PM Parts Display] (D158/159) Display or does not display the "PM parts" button on the LCD.		
001	PM Parts Display	*CTL	[0 or 1 / 0 / 1/step] 0: No display, 1: Display

5067	[Parts PM System Setting] (D158/159)		
	Selects the service maintenance or user maintenance for each PM parts. If the user service is selected, PM alert is displayed on the LCD.		
001	-	*CTL	[0 or 1 / 0 / 1/step] 0: Service, 1: User

5071	[Set Bypass Paper Size Display] (D158/159)		
001	Set Bypass Paper Size Display	CTL	[0 or 1 / 0 / 1/step] 0: Disable, 1: Enable
	Enables or disables the bypass paper size display for confirmation		

5074	[HomeScreenLogin] (D158/159)		
002	Home Screen Login Setting	*CTL	[FFh / 0x0 / 1hex/step] 0:On, 1:Off
091	(0:OFF 1:SDK 2:Reserve)	*CTL	[0 to 2 / 0 / 1/step] 0: Function disable 1: SDK application 2: Legacy application (reserved)
092	Product ID	*CTL	Sets the Application product ID. [0x00 to 0xFFFF FFFF / 0 / 1/step]
093	Application ID	*CTL	Sets the display category of the application that is specified in the SP5075-001,002 [0 to 255 / 0 / 1/step]

5075	[USB Keyboard] (D158/159)		
001	Function Setting	*CTL	[0 or 1 / 0 / 1/step] 0: Disable 1: Enable

5083	[TonarNearEndLedSetting] (D158/159)		
	Turns LED lighting ON and OFF at Toner Near End.		
001	0: OFF 1: ON	*CTL	[0 or 1 / 1 / 1/step] 0: OFF, 1: ON

5104	[DoubleCount] (D158/159) [A3 Double Count] (D160/D161/D170)		
	Specifies whether the counter is doubled for A3/DLT. "Yes" counts except from the bypass tray. When "Yes" is selected, A3 and DLT paper are counted twice, that is A4 x2 and LT x2 respectively.		
001	0: OFF 1: ON	*CTL	[0 or 1 / 1 / 1/step] 0: OFF, 1: ON
002	ManSizeNoFixExchangeOverA3 (D158/159)	*CTL	[0 or 1 / 0 / 1/step] 0: A4 (LT), 1: A3 (DLT)

5112	[Non-Std. Paper Sel.] (D158/159)		
	Selects On/Off to allow the setting of the custom size.		
001	(0:OFF 1:ON)	*CTL	[0 or 1 / 1 / 1/step] 0: OFF, 1: ON

5113	[Optional Counter Type] (D158/159) [Op Counter Type] (D160/D161/D170)		
001	Default Optional Counter Type (D158/159)	*CTL	This program specifies the counter type. [0 to 9 / 0 / 1/step] 0: None, 1: Key card (RK 3, 4) 2: Key card (down), 3: Prepaid card 4: Coin lock, 5: MF key card 8: Key counter + Vendor 9: Bar-code Printer
001	Op Counter Type (D160/D161/D170)	*CTL	[0 to 12 / 0 / 1/step] 0: None 11: MF key card (Increment) 12: MF key card (Decrement)
002	External Optional Counter Type (D158/159)	*CTL	This program specifies the external counter type. [0 to 3 / 0 / 1/step] 0: None 1: Expansion Device 1 2: Expansion Device 2 3: Expansion Device 3

5114	[Optional Counter I/F] (D158/159)		
	Set when connecting an expansion unit using the MF key card I/F. Use this SP and change the setting to "1" only when the "5" (MF Key Card) is selected with SP5113-001.		
001	MF Key Card Extension	*CTL	[0x00 or 0x01 / 0x00 / 1/step] 0: Not installed 1: Installed (scanning accounting)

5118	[Disable Copying] (D158/159)		
	This program disables copying.		
001	Disable Copying	*CTL	[0 or 1 / 0 / 1/step] 0: Not disabled 1: Disabled

5120	[Mode Clear Opt. Counter Removal] (D158/159)		
	[Clr-OP Count Remv] (D160/D161/D170)		
This program updates the information on the optional counter. When you install or remove an optional counter, check the settings.			
001	0:Yes 1:StandBy 2:No	*CTL	[0 to 2 / 0 / 1/step] 0: Yes. (Always mode clear) 1: StandBy. (Mode clear before/after a job) 2: No. (No mode clear)

5121	[Counter Up Timing]		
	This program specifies when the counter goes up. The settings refer to “paper feed” and “paper exit” respectively.		
001	0:Feed 1:Exit	*CTL	[0 or 1 / 0 / 1/step] 0: Feed, 1: Exit

5126	[Set F-size Document] (D158/159)		
	[F-size Document] (D160/D161/D170)		
Selects F size original setting.			
001	-	ENG	[0 to 2 / 0 / 1/step] 0: 8 1/2 x 13 (Foolscap) 1: 8 1/4 x 13 (Folio) 2: 8 x 13 (F)

5127	[APS Mode]		
	Selects whether the APS function is enabled or disabled with the contact of a pre-paid card or coin lock.		
001	APS Mode	*CTL	[0 or 1 / 0 / 1/step] 0: Enabled 1: Disabled

5131	[Paper Size Type Selection] (D158/159)		
	The program selects a paper size system from the following alternatives: the AB system (0), the LT system (1), and the AF system (2).		
001	Paper Size Type Selection	*ENG	[1 to 2 / 1(NA), 2(EU, ASIA, CHN, TW) / 1/step]

5150	[Bypass Length Setting] (D158/159)		
	Sets up the by-pass tray for long paper.		
001	0: OFF 1: ON	CTL	[0 or 1 / 0 / 1/step] 0: OFF, 1: ON

5162	[App. Switch Method] (D158/159)		
	Determines whether the application screen is switched with a hardware switch or software switch.		
001	App. Switch Method	*CTL	[0 or 1 / 0 / 1/step] 0: Soft Key Set 1: Hard Key Set

5166	[Auto Delete Time] (D158/159)		
	Last Deleted Time		
021	Auto Delete Time	*CTL	[0 to 4294967295 / 0 / 1/step]

5167	[Fax Printing Mode at Optional Counter Off] (D158/159)		
	Enables or disables the automatic print out without an accounting device. This SP is used when the receiving fax is accounted by an external accounting device.		
001	FaxPrnt CntOff	*CTL	[0 or 1 / 0 / 1/step] 0: Automatic printing 1: No automatic printing

5169	[CE Login] (D158/159)		
	If you will change the printer bit switches, you must 'log in' to service mode with this SP before you go into the printer SP mode.		
001	CE Login	*CTL	[0 or 1 / 0 / 1/step] 0: Disabled 1: Enabled

5181	[Tray Size Adjust] (D158/159)		
	Adjusts the paper size for each tray.		
001	Tray1:1	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: A4 LEF 1: LE LEF
002	Tray1:2	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: A3 1: DLT
003	Tray1:3	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: B4 1: LG

004	Tray1:4	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: B5 LEF 1: Exe LEF
006	Tray2:1	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: A4 LEF 1: LE LEF
007	Tray2:2	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: A3 1: DLT
008	Tray2:3	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: B4 1: LG
009	Tray2:4	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: B5 LEF 1: Exe LEF
010	Tray3:1	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: A4 LEF 1: LE LEF
011	Tray3:2	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: A3 1: DLT

012	Tray3:3	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: B4 1: LG
013	Tray3:4	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: B5 LEF 1: Exe LEF
014	Tray4:1	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: A4 LEF 1: LE LEF
015	Tray4:2	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: A3 1: DLT
016	Tray4:3	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0:B4 1: LG
017	Tray4:4	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: B5 LEF 1: Exe LEF
018	Tray1:5	*ENG	[0 or 1 / 1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: A5 LEF 1: HLT LEF

019	Tray2:5	*ENG	[0 or 1 / D158: 0(NA,EU, ASIA, CHN,TW), D159:1(NA), 0(EU, ASIA, CHN,TW) / 1/step] 0: A5 LEF 1: HLT LEF
-----	---------	------	---

5181	[Tray Size Adjust] (D160/D161/D170)		
	Adjusts the paper size for each tray.		
001	Tray1:1(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: A4 LEF 1: LE LEF
002	Tray1:2(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: A3 1: DLT
003	Tray1:3(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: B4 1: LG
004	Tray1:4(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: B5 LEF 1: Exe LEF
006	Tray2:1(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: A4 LEF 1: LE LEF
007	Tray2:2(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: A3 1: DLT

008	Tray2:3(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: B4 1: LG
009	Tray2:4(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: B5 LEF 1: Exe LEF
010	Tray3:1(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: A4 LEF 1: LE LEF
011	Tray3:2(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: A3 1: DLT
012	Tray3:3(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: B4 1: LG
013	Tray3:4(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: B5 LEF 1: Exe LEF
014	Tray4:1(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: A4 LEF 1: LE LEF
015	Tray4:2(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: A3 1: DLT

016	Tray4:3(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: B4 1: LG
017	Tray4:4(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: B5 LEF 1: Exe LEF
018	Tray1:5(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: A5 LEF 1: HLT LEF
019	Tray2:5(EU)	*ENG	[0 or 1 / 0 / 1/step] 0: A5 LEF 1: HLT LEF
021	Tray1:1(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: A4 LEF 1: LE LEF
022	Tray1:2(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: A3 1: DLT
023	Tray1:3(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: B4 1: LG
024	Tray1:4(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: B5 LEF 1: Exe LEF

026	Tray2:1(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: A4 LEF 1: LE LEF
027	Tray2:2(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: A3 1: DLT
028	Tray2:3(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: B4 1: LG
029	Tray2:4(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: B5 LEF 1: Exe LEF
030	Tray3:1(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: A4 LEF 1: LE LEF
031	Tray3:2(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: A3 1: DLT
032	Tray3:3(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: B4 1: LG
033	Tray3:4(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: B5 LEF 1: Exe LEF

034	Tray4:1(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: A4 LEF 1: LE LEF
035	Tray4:2(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: A3 1: DLT
036	Tray4:3(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: B4 1: LG
037	Tray4:4(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: B5 LEF 1: Exe LEF
038	Tray1:5(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: A5 LEF 1: HLT LEF
039	Tray2:5(NA)	*ENG	[0 or 1 / 1 / 1/step] 0: A5 LEF 1: HLT LEF

5186	[RK4: Setting] (D158/159)		
	Enables or disables the prevention for RK4 (accounting device) disconnection. If the RK4 is disconnected for 10 seconds when this SP is set to "1 (Enable)", the machine automatically jams a sheet of paper.		
001	-	*ENG	[0 or 1 / 0 / 1/step] 0: Disable 1: Enable

5188	[Copy NvVersion] (D158/159)		
	Displays the version number of the NVRAM on the controller board.		
001	Copy MvVersion	*CTL	[- / - / -]

5191	[Power Setting] (D158/159)		
	Shifts to the power save mode or not.		
001	Power Str	*CTL	[0 or 1 / 1 / 1/step] 0: OFF, 1: ON

5193	[External Controller Info. Settings] (D158/159)		
	External controller settings.		
001	-	CTL	[0 to 10 / 0 / 1/step] 0: External Controller is not installed 1: EFI, 2: Ratio, 3: Egret 4: GJ, 5:Creo, 6: QX-100 7: Kurofune 8~10: Reserved


5195	[SC991 Operation Mode Setting] (D158/159)		
	Sets whether or not to display the icon.		
002	SC Icon Display Setting	*CTL	[0 or 1 / 0 / 1/step]

5199	[Paper Exit After Staple End] (D158/159)		
	This SP determines whether the machine can output paper if staple supply runs out.		
001	0: OFF, 1:ON	CTL	[0 to 1 / 0 / 1] 0: OFF. Paper cannot exit if no staples are available. 1: ON. Paper can exit with no staples.

5302	[Set Time] (D158/159)		
	Adjusts the RTC (real time clock) time setting for the local time zone. Examples: For Japan (+9 GMT), enter 540 (9 hours x 60 min.) DOM: +540 (Tokyo) NA: -300 (New York) EU: + 60 (Paris) CH: +480 (Peking) TW: +480 (Taipei) AS: +480 (Hong Kong) KO: +540 (Korea)		
002	Time Difference	*CTL	[-1440 to 1440 / -300 / 1 min./step]

Appendix:
 Service
 Program
 Mode Tables

5305	[Auto OFF Set – Limit Set]		
	Auto OFF Set – Limit Set		
101	Settings	*CTL	[0 or 1] 0: OFF, 1: ON

5307	[Summer Time] (D158/159)		
001	Usable	*CTL	[0 to 1 / - / 1/step] 0: Disabled 1: Enabled (Default) 1: NA and EUR 0: ASIA and others
Enables or disables the summer time mode. <div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> ▪ Make sure that both SP5-307-3 and -4 are correctly set. Otherwise, this SP is not activated even if this SP is set to "1". 			
003	start data set	*CTL	[0 to 0xffffffff / - / 1hex/step] (Default) NA: 0x03200210 EUR: 0x03500010 ASIA: 0x10500010 Other: 0x00000000
Specifies the start setting for the summer time mode. There are 8 digits in this SP. For months 1 to 9, the "0" cannot be input in the first digit, so the eight-digit setting for -2 or -3 becomes a seven-digit setting. 1st and 2nd digits: The month. [1 to 12] 3rd digit: The week of the month. [1 to 5] 4th digit: The day of the week. [0 to 6 = Sunday to Saturday] 5th and 6th digits: The hour. [00 to 23] 7th digit: The length of the advanced time. [0 to 9 / 1 hour /step] 8th digit: The length of the advanced time. [0 to 5 / 10 minutes /step] <ul style="list-style-type: none"> ▪ The digits are counted from the left. ▪ Make sure that SP5-307-1 is set to "1". 			
For example: 3500010 (EU default) The timer is advanced by 1 hour at am 0:00 on the 5th Sunday in March			

	end data set	*CTL	[0 to 0xffffffff / - / 1hex/step] (Default) NA: 0x11100200 EUR: 0x10500100 ASIA: 0x03100000 Other: 0x00000000
004	<p>Specifies the end setting for the summer time mode.</p> <p>There are 8 digits in this SP.</p> <p>1st and 2nd digits: The month. [1 to 12]</p> <p>3rd digit: The week of the month. [0 to 5]</p> <p>4th digit: The day of the week. [0 to 7 = Sunday to Saturday]</p> <p>5th and 6th digits: The hour. [00 to 23]</p> <p>The 7th and 8 digits must be set to "00".</p> <ul style="list-style-type: none"> ▪ The digits are counted from the left. ▪ Make sure that SP5-307-1 is set to "1". 		

5401	[Access Control] (D158/159)		
103	Default Document ACL	*CTL	[0 to 3 / 0 / 1/step] 0: Read Only 1: Edit 2: Edit/Delete 3: Full control
104	Authentication Time	*CTL	[1 to 255 / 0 / 1sec/step] 0: 60 seconds 1 to 250 seconds
	Specifies the timeout of the authentication.		
	ExtAuth Detail	*CTL	[- / 0x00 / 0x01/step]
162	<p>Selects the log out type for the extend authentication device.</p> <p>Bit 0: Log-out without an IC card</p> <p>0: Not allowed (default)</p> <p>1: Allowed</p>		

200	SDK1 UniqueID	*CTL	[0 to 0xffffffff / 0 / 1/step]
201	SDK1 Certification Method	*CTL	[0 to 0xff / 0 / 1/step]
210	SDK2 UniqueID	*CTL	[0 to 0xffffffff / 0 / 1/step]
211	SDK2 Certification Method	*CTL	[0 to 0xff / 0 / 1/step]
220	SDK3 UniqueID	*CTL	[0 to 0xffffffff / 0 / 1/step]
221	SDK3 Certification Method	*CTL	[0 to 0xff / 0 / 1/step]
230	SDK Certification Device	*CTL	<p>[- / 0 / -]</p> <p>0-1: SDK authentication available</p> <p>0-0: Disable all functions</p> <p>1-1: SKB Display</p> <p>1-0: Disable</p> <p>2-1: Administrator login</p> <p>2-0: Disable</p> <p>3~7-0: Reserved (set "0" only)</p>
240	Detail Option	*CTL	<p>[/ 0x00 / 0x01/step]</p> <p>0: Logout confirm option</p> <p>-1: ON, 0: OFF</p> <p>2~1: Auto-logout timer(retry timer)</p> <p>-11: 30sec, 10: 20sec,</p> <p>01: 10sec, 00: 60sec</p> <p>3: personal authority / Group authority and operation</p> <p>-1: ON, 0: OFF</p> <p>4: Skip password entry</p> <p>-1: ON, 0: OFF</p> <p>5: Set the display of the remaining Frequency</p> <p>-1: ON, 0: OFF</p> <p>6~7: Set the display time</p> <p>-1: ON, 0: OFF</p>

5402	[Access Control] (D158/159)		
101	SDKJ1 Limit Setting	*CTL	[/ 0x00 / 0x01/step]
102	SDKJ2 Limit Setting	*CTL	bit0: SDKJ Authentication -0: Panel Type
103	SDKJ3 Limit Setting	*CTL	-1: Remote Type
104	SDKJ4 Limit Setting	*CTL	bit1: Using user code setup -0: OFF, 1: ON
105	SDKJ5 Limit Setting	*CTL	bit2: Using key-counter setup -0: OFF, 1: ON
106	SDKJ6 Limit Setting	*CTL	bit3: Using external billing device setup
107	SDKJ7 Limit Setting	*CTL	-0: OFF, 1: ON
108	SDKJ8 Limit Setting	*CTL	bit4: Using extended external billing device setup
109	SDKJ9 Limit Setting	*CTL	-0: OFF, 1: ON
110	SDKJ10 Limit Setting	*CTL	bit5~6: Not used bit7: Using extended function J limit users -0: OFF, 1: ON
111	SDKJ11 Limit Setting	*CTL	[/ 0x00 / 0x01/step]
112	SDKJ12 Limit Setting	*CTL	bit0: SDKJ Authentication -0: Panel Type
113	SDKJ13 Limit Setting	*CTL	-1: Remote Type
114	SDKJ14 Limit Setting	*CTL	bit1: Using user code setup -0: OFF, 1: ON
115	SDKJ15 Limit Setting	*CTL	bit2: Using key-counter setup -0: OFF, 1: ON
116	SDKJ16 Limit Setting	*CTL	

Main SP Tables-5

117	SDKJ17 Limit Setting	*CTL	<p>bit3: Using external billing device setup -0: OFF, 1: ON</p> <p>bit4: Using extended external billing device setup -0: OFF, 1: ON</p> <p>bit5~6: Not used</p> <p>bit7: Using extended function J limit users -0: OFF, 1: ON</p>
-----	----------------------	------	---

118	SDKJ18 Limit Setting	*CTL	
119	SDKJ19 Limit Setting	*CTL	
120	SDKJ20 Limit Setting	*CTL	
121	SDKJ21 Limit Setting	*CTL	[/ 0x00 / 0x01/step]
122	SDKJ22 Limit Setting	*CTL	bit0: SDKJ Authentication -0: Panel Type -1: Remote Type
123	SDKJ23 Limit Setting	*CTL	bit1: Using user code setup -0: OFF, 1: ON
124	SDKJ24 Limit Setting	*CTL	bit2: Using key-counter setup -0: OFF, 1: ON
125	SDKJ25 Limit Setting	*CTL	bit3: Using external billing device setup -0: OFF, 1: ON
126	SDKJ26 Limit Setting	*CTL	bit4: Using extended external billing device setup -0: OFF, 1: ON
127	SDKJ27 Limit Setting	*CTL	bit5~6: Not used
128	SDKJ28 Limit Setting	*CTL	bit7: Using extended function J limit users -0: OFF, 1: ON
129	SDKJ29 Limit Setting	*CTL	
130	SDKJ30 Limit Setting	*CTL	

5402	[Access Control] (D158/159)		
	Sets limited uses for SDKJ application data.		
141	SDKJ1 ProductID	*CTL	[0 to 0xffffffff / 0 / 1/step]
142	SDKJ2 ProductID	*CTL	
143	SDKJ3 ProductID	*CTL	
144	SDKJ4 ProductID	*CTL	
145	SDKJ5 ProductID	*CTL	
146	SDKJ6 ProductID	*CTL	

Main SP Tables-5

147	SDKJ7 ProductID	*CTL		
148	SDKJ8 ProductID	*CTL		
149	SDKJ9 ProductID	*CTL		
150	SDKJ10 ProductID	*CTL		
151	SDKJ11 ProductID	*CTL		
152	SDKJ12 ProductID	*CTL		
153	SDKJ13 ProductID	*CTL		
154	SDKJ14 ProductID	*CTL		
155	SDKJ15 ProductID	*CTL		[0 to 0xffffffff / 0 / 1/step]
156	SDKJ16 ProductID	*CTL		
157	SDKJ17 ProductID	*CTL		
158	SDKJ18 ProductID	*CTL		
159	SDKJ19 ProductID	*CTL		
160	SDKJ20 ProductID	*CTL		
161	SDKJ21 ProductID	*CTL		
162	SDKJ22 ProductID	*CTL		
163	SDKJ23 ProductID	*CTL		
164	SDKJ24 ProductID	*CTL		
165	SDKJ25 ProductID	*CTL		
166	SDKJ26 ProductID	*CTL		
167	SDKJ27 ProductID	*CTL		
168	SDKJ28 ProductID	*CTL		
169	SDKJ29 ProductID	*CTL		
170	SDKJ30 ProductID	*CTL		

5404	[User Code Count Clear] (D158/159)		
001	User Code Counter Clear	CTL	Clears all counters for users. [- / - / -] [Execute]

5411	[LDAP-Certification] (D158/159)		
004	Simplified Authentication	*CTL	Turns simple authentication on or off for LDAP. [0 or 1 / 1 / 1/step] 0: OFF, 1: ON
005	Password Null Not Permit	*CTL	This SP is referenced only when SP5411-4 is set to "1" (On). [0 or 1 / 1 / -] 0: Password NULL permitted. 1: Password NULL not permitted.
006	Detail Option	*CTL	Determines whether LDAP option (anonymous certification) is turned on or off. [- / 0x00 / 0x01/step] Bit0 0: OFF, 1: ON

5412	[Access Control] (D158/159)		
	Sets the level of Kerberos Certification.		
100	Encrypt Mode	*CTL	[0x01 to 0xFF / 0x1F / 1bit/step] 0x01:AES256-CTS-HMAC-SHA1-96 0x02:AES128-CTS-HMAC-SHA1-96 0x04:DES3-CBC-SHA1 0x08:RC4-HMAC 0x10:DES-CBC-MD5 0xFF(0x1F):ALL


5413	[Lockout Setting] (D158/159)		
001	Lockout On/Off	*CTL	[0 or 1 / 0 / 1/step] 0: OFF, 1: ON
	Switches on/off the lock on the local address book account.		
002	Lockout Threshold	*CTL	[1 to 10 / 5 / 1time/step]
	Sets a limit on the frequency of lockouts for account lockouts.		
003	Cancellation On/Off	*CTL	[0 or 1 / 0 / 1/step] 0: OFF (lockout not cancelled) 1: ON (system waits, cancels lockout if correct user ID and password are entered)
	Determines whether the system waits the prescribed time for input of a correct user ID and password after an account lockout has occurred.		
004	Cancellation Time	*CTL	[1 to 9999 / 60 / 1 min./step]
	Determines the length of time that the system waits for correct input of the user ID and password after a lockout has occurred. This setting is used only if SP5413-3 is set to "1" (on).		

5414	[Access Mitigation] (D158/159)		
001	Mitigation On/Off	*CTL	[0 or 1 / 0 / 1/step] 0: OFF, 1: ON
	Switches on/off masking of continuously used IDs and passwords that are identical.		
002	Mitigation Time	*CTL	[0 to 60 / 15 / 1 min./step]
	Sets the length of time for excluding continuous access for identical user IDs and passwords.		

5415	[Password Attack] (D158/159)		
001	Permissible Number	*CTL	[0 to 100 / 30 / 1times/step]
	Sets the threshold number of attempts to attack the system with random passwords to gain illegal access to the system.		
002	Detect Time	*CTL	[1 to 10 / 5 / 1sec/step]
	Sets a detection time to count a password attack.		

5416	[Access Information] (D158/159)		
001	Access User Max Num	*CTL	[50 to 200 / 200 / 1users/step]
	Limits the number of users used by the access exclusion and password attack detection functions.		
002	Access Password Num	*CTL	[50 to 200 / 200 / 1/step]
	Limits the number of passwords used by the access exclusion and password attack detection functions.		
003	Monitor Interval	*CTL	[1 to 10 / 3 / 1sec/step]
	Sets the processing time interval for referencing user ID and password information.		

5417	[Access Attack] (D158/159)		
001	Access Permissible Number	*CTL	[0 to 500 / 100 / 1times/step]
	Sets a limit on access attempts when an excessive number of attempts are detected for MFP features.		
002	Attack Detect Time	*CTL	[10 to 30 / 10 / 1sec/step]
	Sets the length of time for monitoring the frequency of access to MFP features.		
003	Productivity Fall Wait	*CTL	[0 to 9 / 3 / 1sec/step]
	Sets the wait time to slow down the speed of certification when an excessive number of access attempts have been detected.		
004	Attack Max Num	*CTL	[50 to 200 / 200 / 1/step]
	Sets a limit on the number of requests received for certification in order to slow down the certification speed when an excessive number of access attempts have been detected.		

5420	[User Authentication] (D158/159)		
	<p>These settings should be done with the System Administrator.</p> <p> Note</p> <ul style="list-style-type: none"> These functions are enabled only after the user access feature has been enabled. 		
001	Copy	*CTL	[0 or 1 / 0 / 1/step] 0: Authentication ON 1: Authentication OFF
	Determines whether certification is required before a user can use the copy applications.		
011	DocumentServer	*CTL	[0 or 1 / 0 / 1/step] 0: Authentication ON 1: Authentication OFF
	Determines whether certification is required before a user can use the document server.		

021	Fax	*CTL	[0 or 1 / 0 / 1/step] 0: Authentication ON 1: Authentication OFF
	Determines whether certification is required before a user can use the fax application.		
031	Scanner	*CTL	[0 or 1 / 0 / 1/step] 0: Authentication ON 1: Authentication OFF
	Determines whether certification is required before a user can use the scan applications.		
041	Printer	*CTL	[0 or 1 / 0 / 1/step] 0: Authentication ON 1: Authentication OFF
	Determines whether certification is required before a user can use the printer applications.		
051	SDK1	*CTL	Determines whether certification is required before a user can use the SDK application.
061	SDK2	*CTL	
071	SDK3	*CTL	[0 or 1 / 0 / 1/step] 0: Authentication ON 1: Authentication OFF
081	Browser	*CTL	[0 or 1 / 0 / 1/step] 0: Authentication ON 1: Authentication OFF
	Determines whether certification is required before a user can use the Browser application.		

5430	[Auth Dialog Message Change] (D158/159)		
	Displays the Authentication dialog message or not.		
001	Message Change On/Off	*CTL	[OFF or ON / OFF / 1/step] OFF: Function off. ON: Function on.
	Turns on or off the displayed message change for the authentication.		
002	Message Text Download	CTL	[- / - / -] [Execute]
	Executes the message download for the authentication.		
003	Message Text ID	CTL	[characters(max.16Byte) / ¥0 /-]
	Inputs message text for the authentication.		

5431	[External Auth User Preset] (D158/159)		
010	Tag	*CTL	[0 or 1 / 1 / 1/step] 0: Not permit, 1: Permit
011	Entry	*CTL	
012	Group	*CTL	
020	Mail	*CTL	
030	Fax	*CTL	
031	FaxSub	*CTL	
032	Folder	*CTL	
033	ProtectCode	*CTL	
034	SmtplibAuth	*CTL	
035	LdapAuth	*CTL	
036	Smb Ftp Fldr Auth	*CTL	
037	AcntAcl	*CTL	
038	DocumentAcl	*CTL	

040	CertCrypt	*CTL	
050	UserLimitCount	*CTL	

5481	[Authentication Error Code] (D158/159)		
	These SP codes determine how the authentication failures are displayed.		
001	System Log Disp	*CTL	[0 or 1 / 0 / 1/step] 0: Display OFF 1: Display ON
	Determines whether an error code appears in the system log after a user authentication failure occurs.		
002	Panel Disp	*CTL	[0 or 1 / 0 / 1/step] 0: Display OFF 1: Display ON
	Determines whether an error code appears on the operation panel after a user authentication failure occurs.		

5490	[MF KeyCard] (D158/159)		
	Sets up operation of the machine with a keycard.		
001	Job Permit Setting	*CTL	[0 or 1 / 0 / 1/step] 0: Disabled. Cancels operation without a user code. 1: Enabled. Allows operation without a user code.

5491	[Optional Counter] (D158/159)		
001	Detail Option	*CTL	[- / 0x00 / 0x01/step] bit0: Forced Job Canceling -1:Yes, 2: No

5501	[PM Alarm] (D158/159) [PM Alarm Interval] (D160/D161/D170)		
001	PM Alarm Level (Printout)	*CTL	[0 to 9999 / 0 / 1/step] 0: Alarm off 1 to 9999: Alarm goes off when Value (1 to 9999) x 1000 > PM counter
002	Original Count Alarm (D158/159)	*CTL	[0 or 1 / 0 / 1/step] 0: No alarm sounds 1: Alarm sounds after the number of originals passing through the ARDF > 10,000

5504	[Jam Alarm] (D158/159)		
001	Jam Alarm	*CTL	[0 to 3 / 3 / 1/step] 0: Zero (Off) 1: Low (2.5K jams) 2: Medium (3K jams) 3: High (6K jams)
	Sets the alarm to sound for the specified jam level (document miss feeds are not included).		

5505	[Error Alarm] (D158/159)		
	Sets the error alarm level. The error alarm counter counts "1" when any SC is detected. However, the error alarm counter decreases by "1" when an SC is not detected during a set number of copied sheets (for example, default 2000 sheets). The error alarm occurs when the SC error alarm counter reaches "5".		
001	Error Alarm	*CTL	[0 to 255 / 20 / 1hundred/step]

5507	[Supply Alarm] (D158/159)		
	Enables or disables the notifying a supply call via the @Remote.		
001	Paper Supply Alarm	*CTL	[0 or 1 / 0 / 1/step] 0: OFF, 1: ON
003	Toner Supply Alarm	*CTL	[0 or 1 / 1 / 1/step] 0: OFF, 1: ON
	If you select "1" the alarm will sound when the copier detects toner end.		
080	Toner Call Timing	*CTL	Changes the timing of the "Toner Supply Call" via the @Remote, when the following conditions occur. [0 or 1 / 0 / 1/step] 0: At replacement 1: At near end
128	Interval :Others	*CTL	[250 to 10000 / 1000 / 1page/step] The "Paper Supply Call Level: nn" SPs specify the paper control call interval for the referenced paper sizes.
132	Interval :A3	*CTL	
133	Interval :A4	*CTL	
134	Interval :A5	*CTL	
141	Interval :B4	*CTL	
142	Interval :B5	*CTL	
160	DLT	*CTL	
166	Interval :LT	*CTL	
172	Interval :HLT	*CTL	

5508	[CC Call] (D158/159)		
001	Jam Remains	*CTL	[0 or 1 / 1 / 1/step] 0: Disable, 1: Enable
	Enables/disables initiating a call for an unattended paper jam.		
002	Continuous Jams	*CTL	[0 or 1 / 1 / 1/step] 0: Disable, 1: Enable
	Enables/disables initiating a call for consecutive paper jams.		
003	Continuous Door Open	*CTL	[0 or 1 / 1 / 1/step] 0: Disable, 1: Enable
	Enables/disables initiating a call when the front door remains open.		
011	Jam Detection: Time Length	*CTL	[3 to 30 / 10 / 1min./step]
	Sets the time a jam must remain before it becomes an "unattended paper jam". This setting is enabled only when SP5508-004 is set to "1".		
012	Jam Detection: Continuous Count	*CTL	[2 to 10 / 5 / 1time /step]
	Sets the number of consecutive paper jams required to initiate a call. This setting is enabled only when SP5508-004 is set to "1".		
013	Door Open: Time Length	*CTL	[3 to 30 / 10 / 1min./step]
	Sets the length of time the door remains open before the machine initiates a call. This setting is enabled only when SP5-508-004 is set to "1".		
5515	[SC/Alarm Setting] (D158/159)	*CTL	-
	With @Remote in use, these SP codes can be set to issue an SC call when an SC error occurs. If this SP is switched off, the SC call is not issued when an SC error occurs.		
001	SC Call	*CTL	[0 or 1 / 1 / 1/step]

002	Service Parts Near End Call	*CTL	0: OFF, 1: ON
003	Service Parts End Call	*CTL	
004	User Call	*CTL	
006	Communication Test Call	*CTL	
007	Machine Information Notice	*CTL	
008	Alarm Notice	*CTL	
009	Non Genuine Tonner Ararm	*CTL	
010	Supply Automatic Ordering Call	*CTL	
011	Supply Management Report Call	*CTL	
012	Jam/Door Open Call	*CTL	

5713	[Service Blanch Information] (D158/159)		
	Sets the Service Blanch Information Code		
001	Service Blanch Information Code	*CTL	[7digit / - / -/step]

5730	[Extended Function Setting] (D158/159)		
010	Expiration Prior Alarm Set	*CTL	[0 to 999 / 20 / 1days/step]

5731	[Counter Effect] (D158/159)		
001	Change MK1 Cnt (Paper->Combine)	*CTL	[0 or 1 / 0 / 1/step]

5745	[EcoCountTime] (D158/159)		
005	EcoCountTime	*CTL	[0 to 1439 / 0 / -/step]
5745	[PowerConsumption]		
211	Controller Standby	*CTL	[0 to 9999 / 0 / 1/step]
212	STR	*CTL	[0 to 9999 / 0 / 1/step]
213	Main Power Off	*CTL	[0 to 9999 / 0 / 1/step]
214	Scanning and Printing	*CTL	[0 to 9999 / 0 / 1/step]
215	Printing	*CTL	[0 to 9999 / 0 / 1/step]
216	Scanning	*CTL	[0 to 9999 / 0 / 1/step]
217	Engine Standby	*CTL	[0 to 9999 / 0 / 1/step]
218	Low Power Consumption	*CTL	[0 to 9999 / 0 / 1/step]
219	Silent Consumption	*CTL	[0 to 9999 / 0 / 1/step]

5746	[BMLinkS] (D158/159)		
001	available	*CTL	[0 or 1 / 1 / 1 /step]
002	Interval: mon	*CTL	[0 to 3600 / 60 / 1 /step]
004	available:log	*CTL	[0 or 1 / 1 / 1 /step]

5747	[JPEG Quality] (D158/159)		
	-		
201	-	*CTL	[0 to 100 / 80 / 1%/step]
203	memory	*CTL	[0 or 1 / 0 / 1/step] 0: Use extended memory 1: Not use extended memory
204	Browser	*CTL	[0 or 1 / 0 / 1/step]
205	Browser2	*CTL	[0 to 3 / 0 / 1/step]
206	Browser3	*CTL	[0 to 255 / 0 / 1/step]

5749	[Import/Export] (D158/159)		
	Imports and exports preference information.		
001	Export	CTL	[- / - / -] Target: System, Printer, Fax, Scanner Option: Unique, Secret Copy config: Encryption, Encryption key(if selected) [Execute]
101	Import	CTL	[- / - / -] Option: Unique Copy config: Encryption, Encryption key(if selected) [Execute]
251	Export Result Print(SP)	CTL	[- / - / -] [Execute]
252	Import Result Print(SP)	CTL	[- / - / -] [Execute]

5792	[MS Debug SW] (D158/159)		
	-		
001	1	CTL	[0 to 255 / - / 1 /step]

5801	[Memory Clear]		
001	All Clear (D158/159)	CTL	[- / - / -] [Execute]
	Resets all correction data for process control and all software counters, and returns all modes and adjustments to their default values.		
002	Engin	ENG	[- / - / -] [Execute]
	Initializes all registration settings for the engine and copy process settings.		
003	SCS (D158/159)	CTL	[- / - / -] [Execute]
	Initializes default system settings, SCS (System Control Service) settings, operation display coordinates, and ROM update information.		
006	Copier Application (D158/159)	CTL	[- / - / -] [Execute]
	Initializes all copier application settings.		
007	FAX Application (D158/159)	CTL	[- / - / -] [Execute]
	Clears the fax application settings.		

008	Printer Application (D158/159)	CTL	[- / - / -] [Execute]
	<p>The following service settings:</p> <ul style="list-style-type: none"> ▪ Bit switches ▪ Gamma settings (User & Service) ▪ Toner Limit <p>The following user settings:</p> <ul style="list-style-type: none"> ▪ Tray Priority ▪ Menu Protect ▪ System Setting except for setting of Energy Saver ▪ I/F Setup (I/O Buffer and I/O Timeout) ▪ PCL Menu 		
009	Scanner Application (D158/159)	CTL	[- / - / -] [Execute]
	Initializes the scanner defaults for the scanner and all the scanner SP modes.		
010	Web Service (D158/159)	CTL	[- / - / -] [Execute]
	Deletes the network file application management files and thumbnails, and initializes the job login ID.		
011	NCS (D158/159)	CTL	[- / - / -] [Execute]
	All setting of Network Setup (User Menu) (NCS: Network Control Service)		
012	R-FAX (D158/159)	CTL	[- / - / -] [Execute]
	Initializes the R-FAX settings.		
014	Clear DCS Setting (D158/159)	CTL	[- / - / -] [Execute]
	Initializes the DCS (Delivery Control Service) settings.		

Main SP Tables-5

015	Clear UCS Settings (D158/159)	CTL	[- / - / -] [Execute]
	Initializes the UCS (User Information Control Service) settings.		
016	MIRS Setting (D158/159)	CTL	[- / - / -] [Execute]
	Initializes the MIRS (Machine Information Report Service) settings.		
017	CCS (D158/159)	CTL	[- / - / -] [Execute]
	Initializes the CCS (Certification and Charge-control Service) settings.		
018	SRM (D158/159)	CTL	[- / - / -] [Execute]
	Initializes the SRM (System Resource Manager) settings.		
019	LCS (D158/159)	CTL	[- / - / -] [Execute]
	Initializes the LCS settings.		
020	Web Uapl (D158/159)	CTL	[- / - / -] [Execute]
	Initializes the web user application settings.		
024	BROWSER (D158/159)	CTL	[- / - / -] [Execute]
	Initializes the browser settings.		
025	websys (D158/159)	CTL	[- / - / -] [Execute]

5802	[Machine Free Run] (D160/D161/D170)		
	Starts a free run of both the scanner and the printer. Press "ON" to start; press "OFF" to stop.		
001	Machine Free Run	*ENG	[- / - / -] [Execute]

5803	[INPUT Check] (D158/159)		
001	Tray1: Paper Size Sensor	ENG	[0 to 15 / 0 / 1/step]
002	Tray2: Paper Size Sensor	ENG	[0 to 7 / 0 / 1/step]
003	Tray1: Tray Set Sensor	ENG	[0 or 1 / 0 / 1/step]
004	Tray2: Tray Set Sensor	ENG	[0 or 1 / 0 / 1/step]
009	Tray1: Paper End Sensor	ENG	[0 or 1 / 0 / 1/step]
010	Tray2: Paper End Sensor	ENG	[0 or 1 / 0 / 1/step]
011	Tray1: Paper Lift Sensor	ENG	[0 or 1 / 0 / 1/step]
012	Tray2: Paper Lift Sensor	ENG	[0 or 1 / 0 / 1/step]
015	By-pass: Paper Size Sensor	ENG	[0 to 15 / 0 / 1/step]
016	By-pass: Paper End Sensor	ENG	[0 or 1 / 0 / 1/step]
017	By-pass: Paper Length Sensor	ENG	[0 or 1 / 0 / 1/step]
018	By-pass: Home Position Sensor	ENG	[0 or 1 / 0 / 1/step]
019	Paper Exit Sensor	ENG	[0 or 1 / 0 / 1/step]
020	Paper Feed Sensor1	ENG	[0 or 1 / 0 / 1/step]
021	Paper Feed Sensor2	ENG	[0 or 1 / 0 / 1/step]
022	Registration Sensor	ENG	[0 or 1 / 0 / 1/step]
023	Interchange Sensor	ENG	[0 or 1 / 0 / 1/step]

Main SP Tables-5

024	Duplex: Exit Sensor	ENG	[0 or 1 / 0 / 1/step]
025	Duplex: Entrance Sensor	ENG	[0 or 1 / 0 / 1/step]
027	Front Safety Sw-24v	ENG	[0 or 1 / 0 / 1/step]
029	Right Cover Open	ENG	[0 or 1 / 0 / 1/step]
030	Duplex Fan lock	ENG	[0 or 1 / 0 / 1/step]
033	Fan Lock	ENG	[0 or 1 / 0 / 1/step]
035	Main Motor Lock	ENG	[0 or 1 / 0 / 1/step]
037	PCU Set	ENG	[0 or 1 / 0 / 1/step]
039	Key Card Set	ENG	[0 or 1 / 0 / 1/step]
040	Mechanical Counter Set	ENG	[0 or 1 / 0 / 1/step]
041	Key Counter Set	ENG	[0 to 3 / 0 / 1/step]
042	BICU Version	ENG	[0 to 7 / 0 / 1/step]
043	VFEEDCOVER	ENG	[0 or 1 / 0 / 1/step]
071	Bank:CPU-Port2	ENG	[0 to 255 / 0 / 1/step]
072	Bank:CPU-Port3	ENG	[0 to 255 / 0 / 1/step]
073	Bank:CPU-Port A	ENG	[0 to 255 / 0 / 1/step]
074	Bank:CPU-Port B	ENG	[0 to 255 / 0 / 1/step]
200	HP Sensor	ENG	[0 or 1 / 0 / 1/step]
201	Platen Cover Sensor	ENG	[0 or 1 / 0 / 1/step]

5803	[Input Check] (D160/D161/D170)		
001	Safety SW	ENG	[0x00 to 0xFF / 0 / 1/step] 0:OFF 1:ON
002	Safety SW-LD5V	ENG	[0x00 to 0xFF / 0 / 1/step] 0:OFF 1:ON

003	Right Cover SW	ENG	[0x00 to 0xFF / 0 / 1/step] 0:CLOSE 1:OPEN
004	Right LowCover SW	ENG	[0x00 to 0xFF / 0 / 1/step] 0:CLOSE 1:OPEN
006	Upper Relay S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
007	Lower Relay S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
009	Regist Sensor	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
010	Exit Sensor	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
011	Duplex Inverter S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
012	Duplex Entrance S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
013	Duplex Exit S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
014	Bypass PE S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
015	Bypass P Size S	ENG	[0x00 to 0xFF / 0 / 1/step] Refer to *5

016	Upper PE S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
017	Lower PE S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
018	Upper P Size SW	ENG	[0x00 to 0xFF / 0 / 1/step] Refer to *5
019	Lower P Size SW	ENG	[0x00 to 0xFF / 0 / 1/step] Refer to *5
032	Main M Lock	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not locked 1:Locked
033	Polygon M Lock	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not locked 1:Locked
035	Total CO Install	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Unconnected 1:Connected
036	Key CO Install	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Unconnected 1:Connected
037	L-Synchronization	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Undetected 1:Detected
045	Platen Cover S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:CLOSE 1:OPEN
050	Fan Motor Lock	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*6Lock 1:Unlocked

051	2 Tray BK Install	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Connected 1:Connected
053	HP Sensor	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Detected
054	Duplex Fan M Lock	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*6Lock 1:Unlocked
055	Tray1: Tray Set	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Unset 1:Set
056	Tray2: Tray Set	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Unset 1:Set
057	Tray1: Paper Lift	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Maximum 1:Maximum
058	Tray2: Paper Lift	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Maximum 1:Maximum
059	Bypass: Length	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Paper Detected
060	Bypass: HP	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Lifted 1:Lifted
061	Key Card Install	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Unconnected 1:Connected

071	Bank:CPU-Port2	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*7 1:
072	Bank:CPU-Port3	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*8 1:
073	Bank:CPU-PortA	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*9 1:
074	Bank:CPU-PortB	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*10 1:
080	ADF Lift Up	ENG	[0x00 to 0xFF / 0 / 1/step] 0:CLOSE 1:OPEN
081	ADF Feed Cover	ENG	[0x00 to 0xFF / 0 / 1/step] 0:CLOSE 1:OPEN
082	ADF Original Set	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Paper Detected
083	ADF Registration	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Paper Detected
084	ADF Exit Sensor	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Paper Detected
085	ADF Rear Edge	ENG	[0x00 to 0xFF / 0 / 1/step] 0:No Paper Detected 1:Paper Detected

086	ADF Org Length1	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
087	ADF Org Length2	ENG	[0x00 to 0xFF / 0 / 1/step] *11
088	ADF Org Length3	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
089	ADF Org Width1	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
090	ADF Org Width2	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
091	ADF Org Width3	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
092	ADF Org Width4	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
093	ADF Skew Correct	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Paper Detected

*5 Size code for PFU (Paper feed unit) / By-pass tray

PFU	00	01	02	03	04	05	06	07
EU	LTT	B5T	HLTY	A3T	A4T	B5Y	A4Y	B4T
NA	LTT	B5T	A5Y	DLTT	A4T	Exe	LTY	LGT

Main SP Tables-5

By-pass Tray	00	01	02	03	04	05	06	07	08	09	0C	0D	10	11	18	19
EU	A5T	A5T	B5T	B5Y	B4Y	B4T	A5Y	A4T	A5T	A5T	A4Y	A3T	A5T	A5T	B6T	B6T
NA	HLTT	HLTT	LTS/LG	LTS/G	LT	DL	LTS/LG	LTS/LG	HLTT	HLTT	LT	DL	HLTT	HLTT	HLTT	HLTT

*6 Fan motor lock

Only available with High speed revolution.

(Can not refer with Low speed or Stop)

*7 Bank:CPU-Port2

Display CPU port infos “***” of [80 **H] from Bank with 8bit.

*8 Bank:CPU-Port3

Display CPU port infos “***” of [81 **H] from Bank with 8bit.

*9 Bank:CPU-PortA

Display CPU port infos “***” of [82 **H] from Bank with 8bit.

*10 Bank:CPU-PortB

Display CPU port infos “***” of [83 **H] from Bank with 8bit.

*11 ADF: Combination of detect sensor for Org Length/ Org Width.

Size (W*L)	Width detect sensor				On table sensor		
	1	2	3	4	B5	A4	LG
A3 vertical (297*420)	YES	YES	YES	YES	YES	YES	YES
B4 vertical (257*364)	YES	YES	-	-	YES	YES	YES
A4 vertical (210/297)	YES	-	-	-	YES	YES	-
A4 landscape (297*210)	YES	YES	YES	YES	-	-	-
B5 vertical (182*257)	-	-	-	-	YES	-	-
B5 landscape (257*182)	YES	YES	-	-	-	-	-
A5 vertical (148*210)	-	-	-	-	-	-	-

A5 landscape (210*148)	YES	-	-	-	-	-	-
11" * 17" (DLT) vertical	YES	YES	YES	-	YES	YES	YES
11" * 15" vertical	YES	YES	YES	-	YES	YES	YES
10" * 14" vertical	YES	YES	-	-	YES	YES	YES
8 1/2" * 14" (LG) vertical	YES	-	-	-	YES	YES	YES
8 1/2" * 13" (F4) * 2 vertical	YES	-	-	-	YES	YES	YES
8 1/4" * 13" vertical *	YES	-	-	-	YES	YES	YES
8" * 13" (F) * Vertical	YES	-	-	-	YES	YES	YES
8 1/2" * 11" (LT) vertical	YES	-	-	-	YES	-	-
11" * 8 1/2" (LT) Landscape	YES	YES	YES	-	-	-	-
7 1/4" * 10 1/2" (US EXE) vertical	YES	-	-	-	YES	-	-
10 1/2" * 7 1/4" (US EXE) landscape	YES	YES	YES	-	-	-	-
8" * 10" vertical	YES	-	-	-	YES	-	-
5 1/2" * 8 1/2" (HLT) vertical	-	-	-	-	-	-	-
8 1/2" * 5 1/2" (HLT) landscape	YES	-	-	-	-	-	-
8K vertical (267*390)	YES	YES	YES	-	YES	YES	YES
16K vertical (195*267)	YES	-	-	-	YES	-	-
16K landscape(267*195)	YES	YES	YES	-	-	-	-

5804	[OUTPUT Check] (D158/D159)		
001	Main Motor: CW: High	ENG	[0 or 1 / 0 / 1/step]
002	Main Motor: CW: Low	ENG	[0 or 1 / 0 / 1/step]
003	Main Motor: CCW: High	ENG	[0 or 1 / 0 / 1/step]
004	Main Motor: CCW: Low	ENG	[0 or 1 / 0 / 1/step]
005	Duplex Motor: HOLD	ENG	[0 or 1 / 0 / 1/step]
006	Duplex Motor: CCW: 582.4	ENG	[0 or 1 / 0 / 1/step]
007	Duplex Motor: CCW: 636.6	ENG	[0 or 1 / 0 / 1/step]
008	Duplex Motor: CCW: 708.5	ENG	[0 or 1 / 0 / 1/step]
009	Duplex Motor: CCW: 774.8	ENG	[0 or 1 / 0 / 1/step]
010	Interchange Motor: HOLD	ENG	[0 or 1 / 0 / 1/step]
011	Interchange Motor: CW:430.1	ENG	[0 or 1 / 0 / 1/step]
012	Interchange Motor: CW:524.5	ENG	[0 or 1 / 0 / 1/step]
013	Interchange Motor: CCW:430.1	ENG	[0 or 1 / 0 / 1/step]
014	Interchange Motor: CCW:474.3	ENG	[0 or 1 / 0 / 1/step]
015	Interchange Motor: CCW:524.5	ENG	[0 or 1 / 0 / 1/step]
016	Interchange Motor: CCW:577.3	ENG	[0 or 1 / 0 / 1/step]
020	Toner Bottle Motor	ENG	[0 or 1 / 0 / 1/step]
021	1st Tray Up	ENG	[0 or 1 / 0 / 1/step]
022	1st Tray Down	ENG	[0 or 1 / 0 / 1/step]

023	2nd Tray Up	ENG	[0 or 1 / 0 / 1/step]
024	2nd Tray Down	ENG	[0 or 1 / 0 / 1/step]
025	Exhaust Fan Motor: High	ENG	[0 or 1 / 0 / 1/step]
026	Exhaust Fan Motor: Low	ENG	[0 or 1 / 1 / 1/step]
027	Duplex Fan	ENG	[0 or 1 / 0 / 1/step]
032	Registration CL	ENG	[0 or 1 / 0 / 1/step]
033	1st Paper Feed CL	ENG	[0 or 1 / 0 / 1/step]
034	2nd Paper Feed CL	ENG	[0 or 1 / 0 / 1/step]
035	Paper Tranort CL1	ENG	[0 or 1 / 0 / 1/step]
039	Interchange SOL	ENG	[0 or 1 / 0 / 1/step]
040	Fusing SOL	ENG	[0 or 1 / 0 / 1/step]
041	Dehumidification Heater	ENG	[0 or 1 / 0 / 1/step]
042	PP:Image Transfer: -	ENG	[0 or 1 / 0 / 1/step]
043	PP:Image Transfer: +	ENG	[0 or 1 / 0 / 1/step]
044	Separation Voltage	ENG	[0 or 1 / 0 / 1/step]
045	PP:Development	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
046	PP:Charge	ENG	[0 or 1 / 0 / 1/step]
047	P Sensor	ENG	[0 or 1 / 0 / 1/step]
048	Anti-static LED	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
049	Polygon Motor: High	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
050	Polygon Motor: Low	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
051	LD On	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON


Main SP Tables-5


055	By-pass CL	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
056	By-pass Tray CL	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
071	Bank: Motor	ENG	[0 or 1 / 0 / 1/step]
072	Bank: Feed Clutch1	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
073	Bank: Feed Clutch2	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
074	Bank:Trans Clutch	ENG	[0 or 1 / 0 / 1/step]
202	Scanner Lamp	ENG	[0 or 1 / 0 / 1/step]

5804	[OUTPUT Check] (D160/D161/D170)		
001	Main M-Fwd	ENG	[0 or 1 / 0 / 1 / step]
002	Main M-Rev	ENG	[0 or 1 / 0 / 1 / step]
003	Quenching Lamp	ENG	[0 or 1 / 0 / 1 / step]
004	Toner Sup M-Fwd	ENG	[0 or 1 / 0 / 1 / step]
005	Fan M-High	ENG	[0 or 1 / 0 / 1 / step]
006	Fan M-Low	ENG	[0 or 1 / 0 / 1 / step]
007	Registration CL	ENG	[0 or 1 / 0 / 1 / step]
008	Bypass Feed CL	ENG	[0 or 1 / 0 / 1 / step]
009	Upper Feed CL	ENG	[0 or 1 / 0 / 1 / step]
010	Lower Feed CL	ENG	[0 or 1 / 0 / 1 / step]
011	BK-Low Lift M-Up	ENG	[0 or 1 / 0 / 1 / step]
012	BK-Low Lift M-Dw	ENG	[0 or 1 / 0 / 1 / step]
013	Relay CL	ENG	[0 or 1 / 0 / 1 / step]
014	BK-Relay CL	ENG	[0 or 1 / 0 / 1 / step]

015	BK-Upper Feed CL	ENG	[0 or 1 / 0 / 1 / step]
016	BK-Lower Feed CL	ENG	[0 or 1 / 0 / 1 / step]
017	BK-Lift M	ENG	[0 or 1 / 0 / 1 / step]
018	BK-Up Lift M-Up	ENG	[0 or 1 / 0 / 1 / step]
019	BK-Up Lift M-Dw	ENG	[0 or 1 / 0 / 1 / step]
020	Duplex Inv M-Rev	ENG	[0 or 1 / 0 / 1 / step]
021	Duplex Inv M-Fwd	ENG	[0 or 1 / 0 / 1 / step]
022	Duplex Trans M	ENG	[0 or 1 / 0 / 1 / step]
023	Duplex Gate SOL	ENG	[0 or 1 / 0 / 1 / step]
024	Duplex Inv M-Hold	ENG	[0 or 1 / 0 / 1 / step]
025	Dup Trans M-Hold	ENG	[0 or 1 / 0 / 1 / step]
026	Polygon M	ENG	[0 or 1 / 0 / 1 / step]
027	Polygon M/LD	ENG	[0 or 1 / 0 / 1 / step]
038	Fusing SOL	ENG	[0 or 1 / 0 / 1 / step]
040	Duplex Fan M-High	ENG	[0 or 1 / 0 / 1 / step]
041	Duplex Fan M-Low	ENG	[0 or 1 / 0 / 1 / step]
042	1st Tray Up	ENG	[0 or 1 / 0 / 1 / step]
043	1st Tray Down	ENG	[0 or 1 / 0 / 1 / step]
044	2nd Tray Up	ENG	[0 or 1 / 0 / 1 / step]
045	2nd Tray Down	ENG	[0 or 1 / 0 / 1 / step]
046	Bypass Tray CL	ENG	[0 or 1 / 0 / 1 / step]
071	Bank:Motor	ENG	[0 or 1 / 0 / 1 / step]
072	Bank:Feed Clutch1	ENG	[0 or 1 / 0 / 1 / step]
073	Bank:Feed Clutch2	ENG	[0 or 1 / 0 / 1 / step]
074	Bank:Trans Clutch	ENG	[0 or 1 / 0 / 1 / step]

080	ADF Feed Motor F	ENG	[0 or 1 / 0 / 1 / step]
081	ADF Relay Motor F	ENG	[0 or 1 / 0 / 1 / step]
082	ADF Feed Clutch	ENG	[0 or 1 / 0 / 1 / step]
083	ADF Inverter Sol	ENG	[0 or 1 / 0 / 1 / step]
084	ADF Feed Motor R	ENG	[0 or 1 / 0 / 1 / step]
085	ADF Relay Motor R	ENG	[0 or 1 / 0 / 1 / step]
086	ADF Feed Solenoid	ENG	[0 or 1 / 0 / 1 / step]
087	ADF Stamp	ENG	[0 or 1 / 0 / 1 / step]
202	Scanner Light:C	ENG	[0 or 1 / 0 / 1 / step]
203	Scanner Light:BW	ENG	[0 or 1 / 0 / 1 / step]

5807	[Area Selection] (D160/D161/D170)		
	Selects the display language. 2 North America, 3 Europe, 5 Asia, 6 China SP5-807-001 is not cleared by SP5-801-002.  Note <ul style="list-style-type: none"> SC982 is displayed if you specify a language that is inconsistent with your local model. 		
001	-	*ENG	[1 to 7 / 0 / 1 / step]

5810	[SC Reset] (D158/159)		
	Resets a type A service call condition.  Note <ul style="list-style-type: none"> Turn the main switch off and on after resetting the SC code. 		
001	Fusing SC Reset	ENG	[- / - / -] [Execute]


5811	[MachineSerial] (D158/159)		
	Machine Serial Number Display		
001	Set BICU	*ENG	[0 to 255 / 0 / 1/step]
002	Display BICU	*ENG	[0 to 255 / 0 / 1/step]
	Displays the machine serial number.		
004	Set EEPROM	ENG	[0 to 255 / 0 / 1/step]
	Inputs		
005	Display: Novita	ENG	[0 to 255 / 0 / 1/step]
	Inputs		

5811	[Serial Num Input] (D160/D161/D170)		
	Inputs 11 digits serial number (machine code + 7-digit serial number).		
001	Code Set	ENG	

5812	[Service Tel. No. Setting] (D158/159)		
001	Service	*CTL	[up to 20 / - / 1/step]
	Sets the telephone number for a service representative. This number is printed on the Counter List, which can be printed with the user's "Counter" menu. This can be up to 20 characters (both numbers and alphabetic characters can be input).		
002	Facsimile	*CTL	[up to 20 / - / 1/step]
	Sets the fax or telephone number for a service representative. This number is printed on the Counter List. This can be up to 20 characters (both numbers and alphabetic characters can be input).		

003	Supply	*CTL	[up to 20 / - / 1/step]
	Use this to input the telephone number of your supplier for consumables. Enter the number and press #.		
004	Operation	*CTL	[up to 20 / - / 1/step]
	Use this to input the telephone number of your sales agency. Enter the number and press #.		

5812	[Service TEL] (D160/D161/D170)		
001	Telephone	CTL	[- / - / -]
	Inputs the telephone number of the CE (displayed when a service call condition occurs.)		
002	Facsimile	CTL	[- / - / -]
	Use this to input the fax number of the CE printed on the Counter Report (UP mode).		

5816	[Remote Service] (D158/159)		
001	I/F Setting	*CTL	[0 to 2 / 2 / 1/step] 0: Remote service off 1: CSS remote service on 2: NRS remote service on
	Selects the remote service setting.		
002	CE Call	*CTL	[0 or 1 / 0 / 1/step] 0: Start of the service 1: End of the service
	Performs the CE Call at the start or end of the service.  Note ▪ This SP is activated only when SP 5816-001 is set to "2".		
003	Function Flag	*CTL	[0 or 1 / 0 / 1/step] 0: Disabled, 1: Enabled

	Enables or disables the remote service function.		
007	SSL Disable	*CTL	[0 or 1 / 0 / 1/step] 0: No. SSL used. 1: Yes. SSL not used.
	Controls if RCG (Remote Communication Gate) confirmation is done by SSL during an RCG send for the @Remote over a network interface.		
008	RCG Connect Timeout	*CTL	[1 to 90 / 30 / 1second/step]
	Sets the length of time (seconds) for the time-out when the RCG (Remote Communication Gate) connects during a call via the @Remote network.		
009	RCG Write Timeout	*CTL	[0 to 100 / 60 / 1second/step]
	Sets the length of time (seconds) for the time-out when sent data is written to the RCG during a call over the @Remote network.		
010	RCG Read Timeout	*CTL	[0 to 100 / 60 / 1second/step]
	Sets the length of time (seconds) for the timeout when sent data is written from the RCG during a call over the @Remote network.		
011	Port 80 Enable	*CTL	[0 or 1 / 0 / 1/step] 0: No. Access denied 1: Yes. Access granted.
	Controls if permission is given to get access to the SOAP method over Port 80 on the @Remote network.		
013	RFU Timing	*CTL	[0 or 1 / 1 / 1/step] 0: Any status of a target machine 1: Sleep or panel off mode only
	Selects the timing for the remote firmware updating.		
014	RCG Error Cause	CTL	[0 or 1 / 0 / 1/step] 0: Initial state, normal condition 1: Error
	Displays RCG connection error. cause		

021	RCG-C Registered	*CTL	[0 or 1 / 0 / 1/step] 0: Installation not completed 1: Installation completed
	This SP displays the RCG-N installation end flag.		
023	Connect Type (N/M)	*CTL	[0 or 1 / 0 / 1/step] 0: Internet connection 1: Dial-up connection
	This SP displays and selects the RCG-N connection method.		
061	Cert Expire Timing	*CTL	[0 to 0xffffffff / 0 / 1/step]
	Proximity of the expiration of the certification.		
062	Use Proxy	*CTL	[0 or 1 / 0 / 1/step] 0: Not use 1: Use
	This SP setting determines if the proxy server is used when the machine communicates with the service center.		
063	Proxy Host	*CTL	[up to 127 / - / 1/step]
	<p>This SP sets the address of the proxy server used for communication between the RCG device and the gateway. Use this SP to set up or display the customer proxy server address.</p> <p>The address is necessary to set up the embedded RCG-N.</p> <p>Note</p> <ul style="list-style-type: none"> ▪ The address display is limited to 128 characters. Characters beyond the 128 character are ignored. ▪ This address is customer information and is not printed in the SMC report. 		
064	Proxy Port Number	*CTL	[0 to 0xffff / 0 / 1/step]
	<p>This SP sets the port number of the proxy server used for communication between the embedded RCG-N and the gateway. This setting is necessary to set up the embedded RC Gate-N.</p> <p>Note</p> <ul style="list-style-type: none"> ▪ This port number is customer information and is not printed in the SMC report. 		

065	Proxy User Name	*CTL	[up to 31 / - / 1/step]
	<p>This SP sets the HTTP proxy certification user name.</p> <p>Note</p> <ul style="list-style-type: none"> The length of the name is limited to 31 characters. Any character beyond the 31st character is ignored. This name is customer information and is not printed in the SMC report. 		
066	Proxy Password	*CTL	[up to 31 / - / 1/step]
	<p>This SP sets the HTTP proxy certification password.</p> <p>Note</p> <ul style="list-style-type: none"> The length of the password is limited to 31 characters. Any character beyond the 31st character is ignored. This name is customer information and is not printed in the SMC report. 		
067	CERT: Up State	*CTL	[0 to 255 / 0 / 1/step]
	Displays the status of the certification update.		
	0	The certification used by Embedded RC Gate is set correctly.	
	1	The certification request (setAuthKey) for update has been received from the GW URL and certification is presently being updated.	
	2	The certification update is completed and the GW URL is being notified of the successful update.	
	3	The certification update failed, and the GW URL is being notified of the failed update.	
	4	The period of the certification has expired and new request for an update is being sent to the GW URL.	
	11	A rescue update for certification has been issued and a rescue certification setting is in progress for the rescue GW connection.	
12	The rescue certification setting is completed and the GW URL is being notified of the certification update request.		

	13	The notification of the request for certification update has completed successfully, and the system is waiting for the certification update request from the rescue GW URL.		
	14	The notification of the certification request has been received from the rescue GW controller, and the certification is being stored.		
	15	The certification has been stored, and the GW URL is being notified of the successful completion of this event.		
	16	The storing of the certification has failed, and the GW URL is being notified of the failure of this event.		
	17	The certification update request has been received from the GW URL, the GW URL was notified of the results of the update after it was completed, but a certification error has been received, and the rescue certification is being recorded.		
	18	The rescue certification of No. 17 has been recorded, and the GW URL is being notified of the failure of the certification update.		
068	CERT: Error		*CTL	[0 to 255 / 0 / 1/step]
	Displays a number code that describes the reason for the request for update of the certification.			
	0	Normal. There is no request for certification update in progress.		
	1	Request for certification update in progress. The current certification has expired.		
	2	An SSL error notification has been issued. Issued after the certification has expired.		
	3	Notification of shift from a common authentication to an individual certification.		
	4	Notification of a common certification without ID2.		
	5	Notification that no certification was issued.		
	6	Notification that GW URL does not exist.		

069	CERT:Up ID	*CTL	[- / - / -]
	The ID of the request for certification.		
083	Firm Up Status	*CTL	[0 to 5 / 0 / 1/step] 0: waiting for receiving firmware update. 1: waiting for scheduling firmware update start. 2: waiting for user confirmation 3: preparing for device firmware update. 4: processing device firmware update. 5: termination processing
			Displays the status of the firmware update
085	Firm Up User Check	*CTL	[- / - / -]
	This SP setting determines if the operator can confirm the previous version of the firmware before the firmware update execution. If the option to confirm the previous version is selected, a notification is sent to the system manager and the firmware update is done with the firmware files from the URL.		
086	Firmware Size	*CTL	[- / - / -]
	Allows the service technician to confirm the size of the firmware data files during the firmware update execution.		
087	CERT:Macro Ver.	CTL	[8digits / - / 1digit/step]
	Displays the macro version of the @Remote certification. This SP displays 8-digit characters.		

088	CERT:PAC Ver.	CTL	[16digits / - / 1digit/step]
	Displays the PAC version of the @Remote certification. This SP displays 16-digit characters.		
089	CERT:ID2Code	CTL	[17digits / - / 1digit/step]
	Displays ID2 for the @Remote certification. Spaces are displayed as underscores (_). Asterisks (****) indicate that no @Remote certification exists. This SP displays 17-digit characters.		
090	CERT:Subject	CTL	[17digits / - / 1digit/step]
	Displays the common name of the @Remote certification subject. CN = the following 17 bytes. Spaces are displayed as underscores (_). Asterisks (****) indicate that no DESS exists.		
091	CERT:Serial No.	CTL	[16digits / - / 1digit/step]
	Displays serial number for the NRS certification. Asterisks (****) indicate that no DESS exists. This SP displays 16-digit characters		
092	CERT:Issuer	CTL	[30digits / - / 1digit/step]
	Displays the common name of the issuer of the @Remote certification. CN = the following 30 bytes. Asterisks (****) indicate that no DESS exists.		
093	CERT:Valid Start	CTL	[10digits / - / 1digit/step]
	Displays the start time of the period for which the current @Remote certification is enabled. This SP displays 10-digit characters.		
094	CERT:Valid End	CTL	[10digits / - / 1digit/step]
	Displays the end time of the period for which the current @Remote certification is enabled. This SP displays 10-digit characters.		
102	CERT:Encrypt Level	*CTL	[1 or 2 / 1 / 1/step] 1: 512 bit 2: 2048 bit
	Displays cryptic strength of the NRS certification.		

150	Selection Country	*CTL	[0 to 10 / 1 / 1/step] 0: Japan, 1: USA, 2: Canada, 3: UK, 4: Germany, 5: France, 6: Italy, 7: Netherlands, 8: Belgium, 9: Luxembourg, 10: Spain
	<p>Select the country where embedded RCG-M is installed in the machine. After selecting the country, you must also set the following SP codes for embedded RCG-M:</p> <ul style="list-style-type: none"> ▪ SP5816-153 ▪ SP5816-154 ▪ SP5816-161 		
151	Line Type Automatic Judgement	CTL	[- / - / -] [Execute]
	<p>Setting this SP classifies the telephone line where embedded RCG-M is connected as either dial-up (pulse dial) or push (DTMF tone) type, so embedded RCG-M can automatically distinguish the number that connects to the outside line.</p> <ul style="list-style-type: none"> ▪ The current progress, success, or failure of this execution can be displayed with SP5816-152. ▪ If the execution succeeded, SP5816-153 will display the result for confirmation and SP5816-154 will display the telephone number for the connection to the outside line. 		
152	Line Type Judgement Result	CTL	[0 to 255 / 0 / 1/step]

	<p>Displays a number to show the result of the execution of SP5816 151. Here is a list of what the numbers mean.</p> <p>0: Success</p> <p>1: In progress (no result yet). Please wait.</p> <p>2: Line abnormal</p> <p>3: Cannot detect dial tone automatically</p> <p>4: Line is disconnected</p> <p>5: Insufficient electrical power supply</p> <p>6: Line classification not supported</p> <p>7: Error because fax transmission in progress – ioctl() occurred.</p> <p>8: Other error occurred</p> <p>9: Line classification still in progress. Please wait.</p>		
153	Selection Dial / Push	*CTL	<p>[0 or 1 / 0 / 1/step]</p> <p>0: Tone Dialing Phone</p> <p>1: Pulse Dialing Phone</p> <p>Inside Japan "2" may also be displayed:</p> <p>0: Tone Dialing Phone</p> <p>1: Pulse Dialing Phone 10PPS</p> <p>2: Pulse Dialing Phone 20PPS</p>
	<p>This SP displays the classification (tone or pulse) of the telephone line to the access point for embedded RCG-M. The number displayed (0 or 1) is the result of the execution of SP5816-151. However, this setting can also be changed manually.</p>		

	Outside Line Outgoing Number	*CTL	[4digits / - / 1digit/step]
154	<p>The SP sets the number that switches to PSTN for the outside connection for embedded RCG-M in a system that employs a PBX (internal line).</p> <ul style="list-style-type: none"> ▪ If the execution of SP5816-151 has succeeded and embedded RCG-M has connected to the external line, this SP display is completely blank. ▪ If embedded RCG-M has connected to an internal line, then the number of the connection to the external line is displayed. ▪ If embedded RCG-M has connected to an external line, a comma is displayed with the number. The comma is inserted for a 2 sec. pause. ▪ The number setting for the external line can be entered manually (including commas). 		
155	PPPConnectTimeout	*CTL	[1 to 65536 / 60 / 1 / step]
	Modifies connection timeout when RCG-M is accessing to PPP.		
	Dial Up User Name	*CTL	[up to 32 char. / - / -/step]
156	<p>Use this SP to set a user name for access to remote dial up. Follow these rules when setting a user name:</p> <ul style="list-style-type: none"> ▪ Name length: Up to 32 characters ▪ Spaces and # allowed but the entire entry must be enclosed by double quotation marks ("). 		
	Dial Up Password	*CTL	up to 32 char.
157	<p>Use this SP to set a password for access to remote dial up. Follow these rules when setting a user name:</p> <ul style="list-style-type: none"> ▪ Name length: Up to 32 characters ▪ Spaces and # allowed but the entire entry must be enclosed by double quotation marks ("). 		
	Local Phone Number	*CTL	up to 24 numbers
161	<p>Use this SP to set the telephone number of the line where embedded RCG-M is connected. This number is transmitted to and used by the Call Center to return calls. Limit: 24 numbers (numbers only)</p>		

162	Connection Timing Adjustment Incoming	*CTL	[0 to 24 / 1 / 1/step]
	<p>When the Call Center calls out to an embedded RCG-M modem, it sends a repeating ID tone (*#1#). This SP sets the time the line remains open to send these ID tones after the number of the embedded RCG-M modem is dialed up and connected.</p> <p>The actual amount of time is this setting x 2 sec. For example, if you set "2" the line will remain open for 4 sec.</p>		
163	Access Point	*CTL	up to 16 char.
	<p>This is the number of the dial-up access point for RCG-M. If no setting is done for this SP code, then a preset value (determined by the country selected) is used.</p> <p>Default: 0</p> <p>Allowed: Up to 16 alphanumeric characters</p>		
164	Line Connecting	*CTL	[0 to 1 / 0 / 1/step] 0: Sharing Fax 1: No Sharing Fax
	<p>This SP sets the connection conditions for the customer. This setting dedicates the line to RCG-M only, or sets the line for sharing between RCG-M and a fax unit.</p> <p>Note</p> <ul style="list-style-type: none"> ▪ If this setting is changed, the copier must be cycled off and on. ▪ SP5816 187 determines whether the off-hook button can be used to interrupt a RCG-M transmission in progress to open the line for fax transaction. 		
173	Modem Serial No.	*CTL	[- / - / -]
	This SP displays the serial number registered for the RCG-M.		

174	Retransmission Ringing	CTL	[- / - / -] [Execute]
	Normally, it is best to allow unlimited time for certification and ID2 update requests, and for the notification that the certification has been completed. However, RCG-M generates charges based on transmission time for the customer, so a limit is placed upon the time allowed for these transactions. If these transactions cannot be completed within the allowed time, do this SP to cancel the time restriction.		
200	Manual Polling	CTL	[- / - / -] [Execute]
	Executes the center polling manually.		
201	Regist Status	CTL	[0 to 4 / 0 / 1/step]
	Displays a number that indicates the status of the @Remote service device. 0: Neither the registered device by the external nor embedded RCG device is set. 1: The embedded RCG device is being set. Only Box registration is completed. In this status, this unit cannot answer a polling request from the external RCG. 2: The embedded RCG device is set. In this status, the external RCG unit cannot answer a polling request. 3: The registered device by the external RCG is being set. In this status the embedded RCG device cannot be set. 4 The registered module by the external RCG has not started.		
202	Letter Number	*CTL	[- / - / -]
	Allows entering the number of the request needed for the RCG-N device.		
203	Confirm Execute	CTL	[- / - / -] [Execute]
	Executes the inquiry request to the @Remote GW URL.		

204	Confirm Result	CTL	[0 to 255 / 0 / 1/step]
	<p>Displays a number that indicates the result of the inquiry executed with SP5816 203.</p> <p>0: Succeeded</p> <p>1: Inquiry number error</p> <p>3: Proxy error (proxy enabled)</p> <p>4: Proxy error (proxy disabled)</p> <p>5: Proxy error (Illegal user name or password)</p> <p>6: Communication error</p> <p>8: Other error</p> <p>9: Inquiry executing</p>		
205	Confirm Place	CTL	[- / - / -]
	<p>Displays the result of the notification sent to the device from the GW URL in answer to the inquiry request. Displayed only when the result is registered at the GW URL.</p>		
206	Register Execute	CTL	[- / - / -] [Execute]
	<p>Executes "Embedded RCG Registration".</p>		
207	Register Result	CTL	[0 to 255 / 0 / 1/step]
	<p>Displays a number that indicates the registration result.</p> <p>0: Succeeded</p> <p>1: Inquiry number error</p> <p>2: Registration in progress</p> <p>3: Proxy error (proxy enabled)</p> <p>4: Proxy error (proxy disabled)</p> <p>5: Proxy error (Illegal user name or password)</p> <p>8: Other error</p> <p>9: Registration executing</p>		

208	Error Code	CTL	[-2147483647 to 2147483647 / - / - / step]
	Displays a number that describes the error code that was issued when either SP5816-204 or SP5816-207 was executed.		
	Cause	Code	Meaning
	Illegal Modem Parameter	-11001	Chat parameter error
-11002		Chat execution error	
-11003		Unexpected error	
Operation Error, Incorrect Setting	-12002	Inquiry, registration attempted without acquiring device status.	
	-12003	Attempted registration without execution of an inquiry and no previous registration.	
	-12004	Attempted setting with illegal entries for certification and ID2.	
	-12005	@Remote communication is prohibited. The device has an Embedded RC gate-related problem.	
	-12006	A confirmation request was made after the confirmation had been already completed.	
	-12007	The request number used at registration was different from the one used at confirmation.	
	-12008	Update certification failed because mainframe was in use.	
	-12009	D2 mismatch between an individual certification and NVRAM.	
	-12010	Certification area is not initialized.	

	Error Caused by Response from GW URL	-2385	Attempted dial up overseas without the correct international prefix for the telephone number.
		-2387	Not supported at the Service Center
		-2389	Database out of service
		-2390	Program out of service
		-2391	Two registrations for same device
		-2392	Parameter error
		-2393	Basil not managed
		-2394	Device not managed
		-2395	Box ID for Basil is illegal
		-2396	Device ID for Basil is illegal
		-2397	Incorrect ID2 format
		-2398	Incorrect request number format
209	Install Clear	CTL	[- / - / -] [Execute]
	Releases the machine from its embedded RCG setup.		
250	CommLog Print	CTL	[- / - / -]
	Prints the communication log.		
	<p>Note</p> <ul style="list-style-type: none"> This SP is activated only when SP 5816-021 is set to "1". 		

5821	[Remote Service Address] (D158/159)		
002	RCG IP Address	*CTL	[00000000h to FFFFFFFFh / 00000000h / 1/step]
	Sets the IP address of the RCG (Remote Communication Gate) destination for call processing at the remote service center.		
003	RCG Port Number	*CTL	[0 to 65535/ 443 / 1/step]
	Sets the port number of the RCG (Remote Communication Gate) destination for call processing at the remote service center.		
004	RCG URL Path	*CTL	[0 to 16 characters (half characters) Default /RCG/services/ -]

5824	[NV-RAM Data Upload] (D158/159)		
Uploads the NVRAM data to an SD card. Push Execute.			
001	NV-RAM Data Upload	CTL	[- / - / -] [Execute]

5825	[NV-RAM Data Download] (D158/159)		
Downloads data from an SD card to the NVRAM in the machine. After downloading is completed, remove the card and turn the machine power off and on.			
001	NV-RAM Data Download	CTL	[- / - / -] [Execute]

5827	[Program Download] (D160/D161/D170)		
Copies the software program from the IC card to the flash ROM. To execute this SP, (1) turn off the main power switch, (2) insert the IC card, (3) press the power key and hold it down, and (4) turn on the main power switch (while you keep holding the power key). The copier reads the software program from the IC card if you turn on the copier like this. The SP mode is automatically activated.			

001	Program Download	CTL	[- / - / -] 0: Disabled, 1: Enabled
-----	------------------	-----	--

5828	[Network Setting] (D158/159)		
065	Job Spooling	*CTL	[0 or 1 / 0 / 1/step] 0: Disabled, 1: Enabled
	Enables/disables Job Spooling.		
066	Job Spooling Clear: Start Time	*CTL	[0 or 1 / 1 / 1/step] 0: Data is cleared) 1: Automatically printed
	Treatment of the job when a spooled job exists at power on.		
069	Job Spooling (Protocol)	*CTL	[- / 0x7f : All Active / -] 0: Off 1: Off bit0: LPR bit1: FTP bit2: IPP bit3: SMB bit4: BMLinkS bit5: DIPRINT bit6: sftp bit7: wsprnd
	This SP determines whether job spooling is enabled or disabled for each protocol. This is an 8-bit setting.		

087	Protocol usage	*CTL	[0 or 1 / 0x00000000 / 1bit/step]
	<p>Shows which protocols have been used with the network.</p> <p>0: Off (Not used the network with the protocol.)</p> <p>1: On (Used the network with the protocol once or more.)</p> <p>bit0: IPsec, bit1: IPv6, bit2: IEEE 802. 1X, bit3: Wireless LAN, bit4: Security mode level setting, bit5: Appletalk, bit6: DHCP, bit7: DHCPv6, bit8: telnet, bit9: SSL, bit10: HTTPS, bit11: BMLinkS printing, bit12: diprint printing, bit13: LPR printing, bit14: ftp printing, bit15: rsh printing, bit16: SMB printing, bit17: WSD-Printer, bit18: WSD-Scanner, bit19: Scan to SMB, bit20: Scan to NCP, bit21: Reserve, bit22: Bluetooth, bit23: IEEE 1284, bit24: USB printing, bit25: Dynamic DNS, bit26: Netware printing, bit27: LLTD, bit28: IPP printing, bit29: IPP printing (SSL), bit30: ssh, bit31: sftp</p>		
090	TELNET (0: OFF 1: ON)	*CTL	[0 or 1 / 1 / 1/step] 0: Disable, 1: Enable
	Enables or disables the Telnet protocol.		
091	Web (0: OFF 1: ON)	*CTL	[0 or 1 / 1 / 1/step] 0: Disable, 1: Enable
	Enables or disables the Web operation.		
145	Active IPv6 Link Local Address	CTL	[00000000000000000000000000000000h to FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF80h / 00000000000000000000000000000040h / -]
	<p>This is the IPv6 local address link referenced on the Ethernet or wireless LAN (802.11b) in the format: "Link Local Address" + "Prefix Length"</p> <p>The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.</p>		
147	SettingActive IPv6 Stateless Address 1	CTL	[00000000000000000000000000000000h to

149	SettingActive IPv6 Stateless Address 2	CTL	FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF80h / 00000000000000000000000000000040h / -]
151	SettingActive IPv6 Stateless Address 3	CTL	These SPs are the IPv6 status addresses (1 to 5) referenced on the Ethernet or wireless LAN (802.11b) in the format: "Status Address" + "Prefix Length" The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.
153	SettingActive IPv6 Stateless Address 4	CTL	
155	SettingActive IPv6 Stateless Address 5	CTL	
156	IPv6 Manual Address	*CTL	[00000000000000000000000000000000h to FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF80h / 00000000000000000000000000000040h / -]
	This SP is the IPv6 manually set address referenced on the Ethernet or wireless LAN (802.11b) in the format: "Manual Set Address" + "Prefix Length" The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.		
158	IPv6 Gateway Address	*CTL	[00000000000000000000000000000000h to FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFh / 00000000000000000000000000000000h / -]
	This SP is the IPv6 gateway address referenced on the Ethernet or wireless LAN (802.11b). The IPv6 address consists of a total 128 bits configured in 8 blocks of 16 bits each.		
161	IPv6 Stateless Auto Setting	*CTL	[0 or 1 / 1 / 1/step] 0: Disable, 1: Enable
	Enables or disables the automatic setting for IPv6 stateless.		
236	Web Item visible	*CTL	[0x0000 to 0xffff / 0xffff / -] 0: Not displayed, 1:Displayed bit0: Net RICOH bit1: Consumable Supplier bit2-15: Reserved (all)
	Displays or does not display the Web system items.		

237	Web shopping link visible	*CTL	[0 or 1 / 1 / 1/step] 0: Not display, 1:Display
	Displays or does not display the link to Net RICOH on the top page and link page of the web system.		
238	Web supplies Link visible	*CTL	[Up to 31char / URL1 / 1/step] 0: Not display, 1:Display
	Displays or does not display the link to Consumable Supplier on the top page and link page of the web system.		
239	Web Link1 Name	*CTL	[Up to 31char / URL1 / 1/step]
	This SP confirms or changes the URL1 name on the link page of the web system. The maximum characters for the URL name are 31 characters.		
240	Web Link1 URL	*CTL	[Up to 127char / URL1 / 1/step]
	This SP confirms or changes the link to URL1 on the link page of the web system. The maximum characters for the URL are 127 characters.		
241	Web Link1 visible	*CTL	[0 or 1 / 1 / 1] 0: Not display, 1:Display
	Displays or does not display the link to URL1 on the top page of the web system.		
242	Web Link2 Name	*CTL	Same as "-239"
243	Web Link2 URL	*CTL	Same as "-240"
244	Web Link2 visible	*CTL	Same as "-241"
249	DHCPv6 DUID	*CTL	[- / - / -]

5832	[HDD Formatting] (D158/159)		
	Initializes the hard disk. Use this SP mode only if there is a hard disk error.		
001	HDD Formatting (ALL)	CTL	[- / - / -] [Execute]
002	HDD Formatting (IMH)	CTL	
003	HDD Formatting (Thumbnail)	CTL	

Main SP Tables-5

004	HDD Formatting (Job Log)	CTL	
005	HDD Formatting (Printer Fonts)	CTL	
006	HDD Formatting (User Info1)	CTL	
007	HDD Formatting (User Info2)	CTL	
008	HDD Formatting (Scanner Mail)	CTL	
009	HDD Formatting (Data for a Design)	CTL	
010	HDD Formatting (Log)	CTL	
011	HDD Formatting (Ridoc I/F)	CTL	

5836	[Capture Settings] (D158/159)		
001	Capture Function (0:Off 1:On)	*CTL	[0 or 1 / 0 / 1] 0: Disable, 1: Enable
	With this function disabled, the settings related to the capture feature cannot be initialized, displayed, or selected.		
002	Panel Setting	*CTL	[0 or 1 / 0 / 1] 0: Displayed, 1: Not displayed
	Displays or does not display the capture function buttons.		
072	Reduction for Copy B&W Text	*CTL	[0 to 3, 6 / 0 / 1/step] 0: 1to-1
073	Reduction for Copy B&W Other	*CTL	1: 1/2 2: 1/3 3: 1/4 6: 2/3

075	Reduction for Printer B&W	*CTL	[0 to 3, 6 / 0 / 1/step] 0: 1to-1 1: 1/2 2: 1/3 3: 1/4 6: 2/3
082	Format for Copy B&W Text	*CTL	[0 to 3 / 1 / 1/step] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
083	Format for Copy B&W Other	*CTL	[0 to 3 / 1 / 1/step] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
085	Format for Printer B&W	*CTL	[0 to 3 / 1 / 1/step] 0: JFIF/JPEG, 1: TIFF/MMR, 2: TIFF/MH, 3: TIFF/MR
091	Default for JPEG	*CTL	[5 to 95 / 50 / 1/step]
	Sets the JPEG format default for documents sent to the document management server via the MLB with JPEG selected as the format. Enabled only when optional MLB (Media Link Board) is installed.		
101	Primary srv IP address	*CTL	[000.000.000.000 to 255.255.255.255 / - / 1/step]
	Sets the IP address for the primary capture server. This is basically adjusted by the remote system.		
102	Primary srv scheme	*CTL	[0 to 6 char / NULL / -/step]
	This is basically adjusted by the remote system.		
103	Primary srv port number	*CTL	[1 to 65535 / 80 / 1/step]
	This is basically adjusted by the remote system.		
104	Primary srv URL path	*CTL	[0 to 16 char / - / 1/step]
	This is basically adjusted by the remote system.		

111	Secondary srv IP address	*CTL	[000.000.000.000 to 255.255.255.255 / - / 1/step]
	Sets the IP address for the secondary capture server. This is basically adjusted by the remote system.		
112	Secondary srv scheme	*CTL	[0 to 6 char / NULL / -/step]
	This is basically adjusted by the remote system.		
113	Secondary srv port number	*CTL	[1 to 65535 / 80 / 1/step]
	This is basically adjusted by the remote system.		
114	Secondary srv URL path	*CTL	[0 to 16 char / - / 1/step]
	This is basically adjusted by the remote system.		
120	Default Reso Rate Switch	*CTL	[0 or 1 / 0 / 1/step]
	This is basically adjusted by the remote system.		
122	Reso: Copy(Mono)	*CTL	[0 to 255 / 3 / 1/step]
	Selects the resolution for BW copy mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
124	Reso: Print(Mono)	*CTL	[0 to 255 / 3 / 1/step]
	Selects the resolution for BW print mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
125	Reso: Fax(Color)	*CTL	[0 to 255 / 4 / 1/step]
	Selects the resolution for color fax mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
126	Reso: Fax(Mono)	*CTL	[0 to 255 / 3 / 1/step]
	Selects the resolution for BW fax mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		

127	Reso: Scanner(Color)	*CTL	[0 to 255 / 4 / 1/step]
	Selects the resolution for color scanning mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
128	Reso: Scanner(Mono)	*CTL	[0 to 255 / 3 / 1/step]
	Selects the resolution for BW scanning mode. This is basically adjusted by the remote system. 0: 600dpi/ 1: 400dpi/ 2: 300dpi/ 3: 200dpi/ 4: 150dpi/ 5: 100dpi/ 6: 75dpi		
141	All Addr Info Switch	*CTL	[0 or 1 / 1 / 1/step]
142	Stand-by Doc Max Number	*CTL	[10 to 10000 / 2000 / 1/step]

5840	[IEEE 802.11] (D158/159)		
006	Channel Max	*CTL	[1 to 14 / 11 (NA), 13 (EU), 14 (JPN) / 1/step] Range JPN: 1 to 14 NA: 1 to 11 EU: 1 to 13
	Sets the maximum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the maximum end of the range for each area. Adjust the upper 4 bits to set the maximum number of channels. Note <ul style="list-style-type: none"> ▪ Do not change the setting. 		

	Channel Min	*CTL	[1 to 14 / 1 / 1/step] Range JPN: 1 to 14 NA: 1 to 11 EU: 1 to 13
007	Sets the minimum number of channels available for data transmission via the wireless LAN. The number of channels available varies according to location. The default settings are set for the minimum end of the range for each area. Adjust the lower 4 bits to set the minimum number of channels. <div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block;"> ⬇ Note </div> <ul style="list-style-type: none"> ▪ Do not change the setting. 		
008	Transmission Speed	*CTL	[0x00 to 0xFF / 0xFF to Auto / -] 0 x FF to Auto [Default] 0 x 11 - 55M Fix 0 x 10 - 48M Fix 0 x 0F - 36M Fix 0 x 0F - 24M Fix 0 x 0E - 18M Fix 0 x 0D - 12M Fix 0 x 0B - 9M Fix 0 x 0A - 6M Fix 0 x 07 - 11M Fix 0 x 06 - 5.5M Fix 0 x 05 – 2M Fix 0 x 08 - 1M Fix 0 x 13 - 0 x FE (reserved) 0 x 12 - 72M (reserved) 0 x 09 - 22M (reserved)
011	WEP key Select	*CTL	[00 to 11 / 00 / 1/step] 00: Key #1 01: Key #2 (Reserved) 10: Key #3 (Reserved) 11: Key #4 (Reserved)
Selects the WEP key.			

013	RTS/CTS Thresh	*CTL	[0 to 3000 / 2432 / 1/step]
	Adjusts the RTS/CTS threshold for the IEEE802.11 card. This SP is displayed only when the IEEE802.11 card is installed.		
042	Fragment Thresh	*CTL	[256 to 2346 / 2346 / 1/step]
	Adjusts the fragment threshold for the IEEE802.11 card. This SP is displayed only when the IEEE802.11 card is installed.		
043	11g CTS to Self	*CTL	[0 or 1 / 1 / 1/step] 0: OFF, 1: ON
	Determines whether the CTS self function is turned on or off. This SP is displayed only when the IEEE802.11 card is installed.		
044	11g Slot Time	*CTL	[0 or 1 / 0 / 1/step] 0: 20 um, 1: 9 um
	Selects the slot time for IEEE802.11.		
045	WPA Debug Lvl	*CTL	[1 to 3 / 3 / 1/step] 1: Info, 2: warning, 3: error
	Selects the debug level for WPA authentication application. This SP is displayed only when the IEEE802.11 card is installed.		

5841	[Supply Name Setting] (D158/159)		
001	Toner Name Setting:Black	*CTL	Specifies supply names. These appear on the screen when the user presses the Inquiry button in the user tools screen. [0 to 20 / NULL / 1byte/step]
002	Toner Name Setting:Cyan	*CTL	
003	Toner Name Setting:Yellow	*CTL	
004	Toner Name Setting:Magenta	*CTL	
007	OrgStamp	*CTL	
011	Staple Std1	*CTL	
012	Staple Std2	*CTL	
013	Staple Std3	*CTL	

Main SP Tables-5

014	Staple Std4	*CTL	
021	Staple Bind 1	*CTL	
022	Staple Bind 2	*CTL	
023	Staple Bind 3	*CTL	

5842	[GWWS Analysis] (D158/159)		
001	Setting 1	*CTL	<p>[8bit assign / 00000000 / bit switch] 0bit[LSB]: system, other group 1bit: capture related group 2bit: authentication related group 3bit: address book related group 4bit: device management related group 5bit: output related(print, FAX, and delivery) group 6bit: repository, F0,etc. document related group 7bit: debug log level suppression</p>
	<p>Default: 00000000 – do not change Netfiles: Jobs to be printed from the document server using a PC and the DeskTopBinder software</p>		
002	Setting 2	*CTL	<p>[8bit assign / 00000000 / bit switch] 0~6bit: unused 7bit: time stamp setting for 5682mmesg log. (1: min./sec/msec, 0: day/hour/min./sec)</p>
	<p>Optional settings for debug output mode for each NFA process.</p>		

5844	[USB] (D158/159)		
001	Transfer Rate	*CTL	[0x01 or 0x04 / 0x04 / -] 0x01: Full speed (fixed) 0x04: H-speed, F-speed (auto change)
002	Vendor ID DFU	*CTL	[0x0000 to 0xFFFF / 0x05CA / 1/step]
	Displays the vendor ID.		
003	Product ID DFU	*CTL	[0x0000 to 0xFFFF / 0x0403 / 1/step]
	Displays the product ID.		
004	Device Release Number DFU	*CTL	[0 to 9999 / 100 / 1/step]
	Displays the development release version number.		
005	Fixed USB Port	*CTL	[0x00 to 0x02 / 0x00 / 1/step]
	0x00: Disable 0x01: Enable (Level 1) Device driver reinstallation is not required in the same machine. 0x02: Enable (Level 2) Device driver reinstallation is not required in any machine.		
006	PnP Model Name	*CTL	[20digits character / " Laser Printer " / -]
	Displays PnP Model Name.		
007	PnP Serial Number	*CTL	[12digits character / NULL / -]
	Displays PnP Serial No.		
008	Mac Supply Level	*CTL	[0 or 1 / 1 / 1/step] 0: Disable, 1: Enable
100	Notify Unsupport	*CTL	[0x00 or 0x01 / 0x01 / 1/step] 0x00: Function disabled 0x01: Function enabled

5845	[Delivery Server Setting] (D158/159)		
	Provides items for delivery server settings.		
001	FTP Port No.	*CTL	[1 to 65535 / 3670 / 1/step]
	Sets the FTP port number used when image files to the Scan Router Server.		
002	IP Address (Primary)	*CTL	[000.000.000.000 to 255.255.255.255 / - / 1/step]
	Use this SP to set the Scan Router Server address. The IP address under the transfer tab can be referenced by the initial system setting.		
006	Delivery Error Display Time	*CTL	[0 to 999 / 300 / 1sec/step]
	Use this setting to determine the length of time the prompt message is displayed when a test error occurs during document transfer with the NetFile application and an external device.		
008	IP Address (Secondary)	*CTL	[000.000.000.000 to 255.255.255.255 / 000.000.000.000 / 1/step]
	Specifies the IP address assigned to the computer designated to function as the secondary delivery server of Scan Router. This SP allows only the setting of the IP address without reference to the DNS setting.		
009	Delivery Server Model	*CTL	[0 to 4/ 0 / 1/step] 0: Unknown 1: SG1 Provided 2: SG1 Package 3: SG2 Provided 4: SG2 Package
			Allows changing the model of the delivery server registered by the I/O device.

010	Delivery Svr. Capability	*CTL	[0 to 255 / 0 / 1 /step]
	<p>Changes the capability of the registered that the I/O device registered.</p> <p>Bit7 = 1 Comment information exists</p> <p>Bit6 = 1 Direct specification of mail address possible</p> <p>Bit5 = 1 Mail RX confirmation setting possible</p> <p>Bit4 = 1 Address book automatic update function exists</p> <p>Bit3 = 1 Fax RX delivery function exists</p> <p>Bit2 = 1 Sender password function exists</p> <p>Bit1 = 1 Function to link MK-1 user and Sender exists</p> <p>Bit0 = 1 Sender specification required (if set to 1, Bit6 is set to "0")</p>		
011	Delivery Svr Capability (Ext)	*CTL	[0 to 255 / - / x2/step]
	<p>Changes the capability of the registered that the I/O device registered.</p> <p>Because SP5845-010 is full, set aside an area for future additional capabilities.</p> <p>Bit7 = 1: Not used</p> <p>Bit6 = 1: Not used</p> <p>Bit5 = 1: Not used</p> <p>Bit4 = 1: Not used</p> <p>Bit3 = 1: Not used</p> <p>Bit2 = 1: Not used</p> <p>Bit1 = 1: Not used</p> <p>Bit0 = 1: Not used</p>		
013	Server Scheme (Primary) DFU	*CTL	[Up to 6 char / - / -/step]
	This SP is used for the scan router program.		
014	Server Port Number (Primary) DFU	*CTL	[1 to 65535 / 80 / 1/step]
	This SP is used for the scan router program.		

015	Server URL Path (Primary) DFU	*CTL	[Up to 16 byte / - / -/step]
	This SP is used for the scan router program.		
016	Server Scheme (Secondary) DFU	*CTL	[Up to 6 char / - / -/step]
	This SP is used for the scan router program.		
017	Server Port Number (Secondary) DFU	*CTL	[1 to 65535 / 80 / 1/step]
	This SP is used for the scan router program.		
018	Server URL Path (Secondary) DFU	*CTL	[Up to 16 byte / - / -/step]
	This SP is used for the scan router program.		
022	Rapid Sending Control	*CTL	[0 or 1 / 1 / -/step] 0: Control disabled 1: Control enabled
	Enables or disables the prevention function for the continuous data sending error.		

5846	[UCS Settings] (D158/159)		
001	Machine ID (for Delivery Server)	*CTL	[- / - / -]
	Displays the unique device ID in use by the delivery server directory. The value is only displayed and cannot be changed. This ID is created from the NIC MAC or IEEE 1394 EUI. The ID is displayed as either 6-byte or 8-byte binary.		
002	Machine ID Clear(for Delivery Server)	*CTL	[- / - / -] [Execute]
	Clears the unique ID of the device used as the name in the file transfer directory. Execute this SP if the connection of the device to the delivery server is unstable. After clearing the ID, the ID will be established again automatically by cycling the machine off and on.		
003	Maximum Entries	*CTL	[2000 to 20000 / 2000 / 1/step]
	Changes the maximum number of entries that UCS can handle. If a value smaller than the present value is set, the UCS managed data is cleared, and the data (excluding user code information) is displayed.		
006	Delivery Server Retry Timer	*CTL	[0 to 255 / 0 / 1/step]
	Sets the interval for retry attempts when the delivery server fails to acquire the delivery server address book.		
007	Delivery Server Retry Times	*CTL	[0 to 255 / 0 / 1/step]
	Sets the number of retry attempts when the delivery server fails to acquire the delivery server address book.		
008	Delivery Server Maximum Entries	*CTL	[2000 to 20000 / 2000 / 1/step]
	Sets the maximum number account entries of the delivery server user information managed by UCS.		

010	LDAP Search Timeout	*CTL	[1 to 255 / 60 / 1/step]
	Sets the length of the timeout for the search of the LDAP server.		
020	WSD Maximum Entries	*CTL	[5 to 250 / 250 / 1/step]
	Sets the maximum entries for the address book of the WSD (WS-scanner).		
021	Folder Auth Change	*CTL	[0 or 1 / 0 / 1/step] 0: Login User, 1: Destination
040	Addr Book Migration(USB->HDD)	*CTL	[- / - / -] [Execute]
	Fill Addr Acl Info	*CTL	[- / - / -] [Execute]
041	<p>This SP must be executed immediately after installation of an HDD unit in a basic machine that previously had no HDD. The first time the machine is powered on with the new HDD installed, the system automatically takes the address book from the NVRAM and writes it onto the new HDD. However, the new address book on the HDD can be accessed only by the system administrator at this stage. Executing this SP by the service technician immediately after power on grants full address book access to all users.</p>		
	Procedure	<ol style="list-style-type: none"> 1. Turn the machine off. 2. Install the new HDD. 3. Turn the machine on. 4. The address book and its initial data are created on the HDD automatically. 5. However, at this point the address book can be accessed by only the system administrator or key operator. 6. Enter the SP mode and do SP5846-041. After this SP executes successfully, any user can access the address book. 	

043	Addr Book Media	*CTL	[0 to 30 / 0 /1/step] 0: Unconfirmed 1: SD Slot 1 2: SD Slot 2 3: SD Slot 3 4: USB Flash ROM 10: SD Slot 10 20: HDD 30: Nothing
	Displays the slot number where an address book data is in.		
047	Initialize Local Address Book	CTL	[- / - / -] [Execute]
	Clears the local address book information, including the user code.		
048	Initialize Delivery Addr Book	CTL	[- / - / -] [Execute]
	Clears the distribution address book information, except the user code.		
049	Initialize LDAP Addr Book	CTL	[- / - / -] [Execute]
	Clears the LDAP address book information, except the user code.		
050	Initialize All Addr Book	CTL	[- / - / -] [Execute]
	Clears all directory information managed by UCS, including all user codes.		
051	Backup All Addr Book	CTL	[- / - / -] [Execute]
	Uploads all directory information to the SD card.		
052	Restore All Addr Book	CTL	[- / - / -] [Execute]
	Downloads all directory information from the SD card.		

	Clear Backup Info	CTL	[- / - / -] [Execute]
053	<p>Deletes the address book data from the SD card in the service slot. Deletes only the files that were uploaded from this machine. This feature does not work if the card is write-protected.</p> <p>Note</p> <ul style="list-style-type: none"> After you do this SP, go out of the SP mode, and then turn the power off. Do not remove the SD card until the Power LED stops flashing. 		
	Search Option	*CTL	[0x00 to 0xff / 0x0f / 1]
060	<p>This SP uses bit switches to set up the fuzzy search options for the UCS local address book.</p> <p>Bit: Meaning</p> <p>0: Checks both upper/lower case characters</p> <p>1: Japan Only</p> <p>2: Japan Only</p> <p>3: Japan Only</p> <p>4 to 7: Not Used</p>		
	Complexity Option 1	*CTL	[0 to 32 / 0 / 1/step]
062	<p>Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to upper case and sets the length of the password.</p> <p>Note</p> <ul style="list-style-type: none"> This SP does not normally require adjustment. This SP is enabled only after the system administrator has set up a group password policy to control access to the address book. 		
	Complexity Option 2 DFU	*CTL	[0 to 32 / 0 / 1/step]
063	<p>Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to lower case and defines the length of the password.</p>		

064	Complexity Option 3 DFU	*CTL	[0 to 32 / 0 / 1/step]
	Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to numbers and defines the length of the password.		
065	Complexity Option 4 DFU	*CTL	[0 to 32 / 0 / 1/step]
	Use this SP to set the conditions for password entry to access the local address book. Specifically, this SP limits the password entry to symbols and defines the length of the password.		
091	FTP Auth Port Setting	*CTL	[0 to 65535 / 3671 / 1/step]
	Specifies the FTP port for getting a distribution server address book that is used in the identification mode.		
094	Encryption Stat	*CTL	[0 to 255 / - / 1/step]
	Shows the status of the encryption function for the address book data.		

5847	[Repository Resolution Reduction] (D158/159)		
	<p>SP5847-1 through SP5847-8 changes the default settings of image data transferred externally by the Net File page reference function.</p> <p>SP5847-21 sets the default for JPEG image quality of image files handled by NetFile.</p> <p>“Net files” are jobs to be printed from the document server using a PC and the DeskTopBinder software.</p> <p>Each section values are following:</p> <p>0: 1x 1: 1/2x 2: 1/3x 3: 1/4x 4: 1/6x 5: 1/8x 6: 2/3x</p>		
002	Rate for Copy B&W Text	*CTL	[0 to 6 / 0 / 1/step]

003	Rate for Copy B&W Other	*CTL	
005	Rate for Printer B&W	*CTL	[0 to 6 / 0 / 1/step]
021	Default Value of JPEG Quality	*CTL	[5 to 95 / 50 / 1/step]
	Sets the default value for the quality of JPEG images sent as NetFile pages. This function is available only with the MLB (Media Link Board) option installed.		

5848	[Web Service] (D158/159)		
	SP5848-2 sets the 4-bit switch assignment for the access control setting. A setting of 0001 has no effect on access and delivery from Scan Router. 5848 100 sets the maximum size allowed for downloaded images. The default is equal to 1 gigabyte.		
002	Access Ctrl: Repository (only Lower 4 bits)	*CTL	[0000, 0001, or 0010 / 0010 / BitSwitch] 0000: access permission 0001: access restriction to DeskTop Binder. 0010: writing restriction
003	Access Contl: Doc.Box Print (only Lower 4 bits)	*CTL	Switches access control on and off. [0000 or 0001 / 0000 / Bit Switch/step] 0000: No access control 0001: Access control
004	Access Contl: udirectory (only Lower 4 bits)	*CTL	
007	Access Ctrl: Comm. Log Fax (Lower 4 bits)	*CTL	
009	Access Ctrl: Job Ctrl (Lower 4 bits)	*CTL	
011	Access Ctrl: Devicemanagement (Lower 4bits)	*CTL	

021	Access Ctrl: Delivery (Lower 4 bits)	*CTL	
022	Access Ctrl: uadministration (Lower 4bits)	*CTL	
099	Repository: Download Image Setting DFU	*CTL	[4bit assign / 0000 / bit switch] 1bit(LSB): for Macintosh 2bit: for Windows 3bit: for others 4bit: unused
100	Repository: max size of Download Image	*CTL	[1 to 2048 / 2048 / 1/step]
	Specifies the max size of the image data that the machine can download.		
210	Setting: LogType: Job1	*CTL	Read only. [0 to 0xFFFFFFFF / 0 / 1/step]
211	Setting: LogType: Job2	*CTL	
212	Setting: LogType: Access	*CTL	
217	Setting: Timing	*CTL	Read only. [0 to 2 / 0 / 1/step]

5849	[Installation Date] (D158/159)		
001	Display	*CTL	[- / - / -]
	The "Counter Clear Day" has been changed to "Installation Date" or "Inst. Date".		
002	Switch to Print	*CTL	[0 or 1 / 1 / 1/step] 0: OFF (No Print) 1: ON (Print)
	Determines whether the installation date is printed on the printout for the total counter.		
003	Total Counter	*CTL	[0 to 99999999 / 0 / 1/step]

5851	[Bluetooth] (D158/159)		
001	Mode	*CTL	[0x00 or 0x01 / 0x00 / 1/step] 0x00:Public 0x01:Private
Sets the operation mode for the Bluetooth Unit. Press either key.			

5853	[Stamp Date Download] (D158/159)		
	<p>Push [Execute] to download the fixed stamp data from the machine ROM onto the hard disk. Then these stamps can be used by the system. If this is not done, the user will not have access to the fixed stamps ("Confidential", "Secret", etc.).</p> <p>You must always execute this SP after replacing the HDD or after formatting the HDD. Always switch the machine off and on after executing this SP.</p>		
001	-	CTL	[- / - / -] [Execute]

5856	[Remote ROM Update] (D158/159)		
	Allows the technician to upgrade the firmware using a local port (IEEE1284) when updating the remote ROM.		
002	Local Port	CTL	[0 or 1 / 0 / 1/step] 0: Disable 1: Enable


5857	[Save Debug Log] (D158/159)		
001	On/Off (1:ON 0:OFF)	*CTL	[0 or 1 / 0 / 1/step] 0: OFF, 1: ON
	Switches the debug log feature on and off. The debug log cannot be captured until this feature is switched on.		
002	Target (2: HDD 3: SD)	*CTL	[2 or 3 / 2 / 1/step] 2: HDD, 3: SD Card
	Selects the storage device to save debug logs information when the conditions set with SP5-858 are satisfied.		
005	Save to HDD	*CTL	[-999999 to 999999 / 0 / 1/step]
	Specifies the decimal key number of the log to be written to the hard disk.		
006	Save to SD Card	*CTL	[-999999 to 999999 / 0 / 1/step]
	Saves the debug log of the input SC number in memory to the SD card.		
009	Copy HDD to SD Card(Latest 4MB)	*CTL	[- / - / -] [Execute]
	<p>Takes the most recent 4 MB of the log written to the hard disk and copies them to the SD Card.</p> <p>A unique file name is generated to avoid overwriting existing file names on the SD Card. Up to 4MB can be copied to an SD Card. 4 MB segments can be copied one by one to each SD Card.</p>		
010	Copy HDD to SD Card(Latest 4MB Any Key)	*CTL	[- / - / -] [Execute]
	<p>Takes the log of the specified key from the log on the hard disk and copies it to the SD Card.</p> <p>A unique file name is generated to avoid overwriting existing file names on the SD Card. Up to 4 MB can be copied to an SD Card. 4 MB segments can be copied one by one to each SD Card. This SP does not execute if there is no log on the HDD with no key specified.</p>		

011	Erase HDD Debug Data	*CTL	[- / - / -] [Execute]
	Erases all debug logs on the HDD		
012	Erase SD Card Debug Data	*CTL	[- / - / -] [Execute]
	Erases all debug logs on the SD Card. If the card contains only debugging files generated by an event specified by SP5858, the files are erased when SP5857 010 or 011 is executed. To enable this SP, the machine must be cycled off and on.		
013	Free Space on SD Card	*CTL	[- / - / -] [Execute]
	Displays the amount of space available on the SD card.		
014	Copy SD to SD(Latest 4MB)	*CTL	[- / - / -] [Execute]
	Copies the last 4MB of the log (written directly to the card from shared memory) onto an SD card.		
015	Copy SD to SD(Latest 4MB Any Key)	*CTL	[-999999 to 999999 / 0 / 1/step]
	This SP copies the log on an SD card (the file that contains the information written directly from shared memory) to a log specified by key number.		
016	Make HDD Debug	*CTL	[- / - / -] [Execute]
	This SP creates a 32 MB file to store a log on the HDD.		
017	Make SD Debug	*CTL	[- / - / -] [Execute]
	This SP creates a 4 MB file to store a log on an SD card.		

5858	[Debug Save When] (D158/159)		
	These SPs select the content of the debugging information to be saved to the destination selected by SP5857-002. SP5858-3 stores one SC specified by number. Refer to Section 4 for a list of SC error codes.		
001	Engine SC Error	*CTL	[0 or 1 / 0 / 1/step] 0: OFF, 1: ON
	Turns on/off the debug save for SC codes generated by printer engine errors.		
002	Controller SC Error	*CTL	[0 or 1 / 0 / 1/step] 0: OFF, 1: ON
	Turns on/off the debug save for SC codes generated by GW controller errors.		
003	Any SC Error	*CTL	[0 to 65535 / 0 / 1/step]
004	Jam	*CTL	[0 or 1 / 0 / 1/step] 0: OFF, 1: ON
	Turns on/off the debug save for jam errors.		

5859	[Debug Save Key No.] (D158/159)		
	These SPs allow you to set up to 10 keys for log files for functions that use common memory on the controller board.		
001	Key 1	*CTL	[-9999999 to 9999999 / 0 / 1/step]
002	Key 2	*CTL	
003	Key 3	*CTL	
004	Key 4	*CTL	
005	Key 5	*CTL	
006	Key 6	*CTL	
007	Key 7	*CTL	

008	Key 8	*CTL	
009	Key 9	*CTL	
010	Key 10	*CTL	

5860	[SMTP/POP3/IMAP4] (D158/159)		
	Partial Mail Receive Timeout	*CTL	[1 to 168 / 72 / 1hour/step]
020	Sets the amount of time to wait before saving a mail that breaks up during reception. The received mail is discarded if the remaining portion of the mail is not received during this prescribed time.		
	MDN Response RFC2298 Compliance	*CTL	[0 or 1 / 1 / 1/step] 0: No, 1: Yes
021	Determines whether RFC2298 compliance is switched on for MDN reply mail.		
	SMTP Auth. From Field Replacement	*CTL	[0 or 1 / 0 / 1/step] 0: No. "From" item not switched. 1: Yes. "From" item switched.
022	Determines whether the FROM item of the mail header is switched to the validated account after the SMTP server is validated.		
	SMTP Auth. Direct Setting	*CTL	[0 to 255 / - / x2/step]
025	<p>Selects the authentication method for SMPT.</p> <p>Bit switch:</p> <ul style="list-style-type: none"> ▪ Bit 0: LOGIN ▪ Bit 1: PLAIN ▪ Bit 2: CRAM MD5 ▪ Bit 3: DIGEST MD5 ▪ Bit 4 to 7: Not used <p> Note</p> <ul style="list-style-type: none"> ▪ This SP is activated only when SMTP authorization is enabled by UP mode. 		

026	S/MIME: MIME Header Setting	*CTL	[0 to 2 / 0 / 1/step] 0: Microsoft Outlook Express standard 1: Internet Draft standard 2: RFC standard
	Selects the MIME header type of an E-mail sent by S/MIME.		
028	S/MIME: Authentication Check	*CTL	[0 to 1 / 0 / 1/step] 0: No (not check), 1: Yes (check)

5869	[RAM Disk Setting] (D158/159)		
001	Mail Function	*CTL	[0 or 1 / 0 / 1/step] 0: Use, 1: Not use
	Set whether the RAM disk is used or not used when using the mail functions.		

5870	[Common keyInfo Writing] (D158/159)		
001	Writing	CTL	[- / - / -] [Execute]
	Writes to flash ROM the common proof for validating the device for @Remote specifications.		
003	Initialize	CTL	[- / - / -] [Execute]
	Initializes the data area of the common proof for validating.		
004	Writing:2048bit	CTL	[- / - / -] [Execute]

5873	[SDCardAppliMove] (D158/159)		
001	MoveExec	CTL	[- / - / -] [Execute]
	This SP copies the application programs from the original SD card in SD card slot 2 to an SD card in SD card slot 1.		
002	UndoExec	CTL	[- / - / -] [Execute]
	This SP copies back the application programs from an SD card in SD Card Slot 2 to the original SD card in SD card slot 1. Use this menu when you have mistakenly copied some programs by using "Move Exec" (SP5873-1).		

5875	[SC Auto Reboot] (D158/159)		
001	Reboot Setting	*CTL	[0 or 1 / 0 / 1/step]
	Enables or disables the automatic reboot function when an SC error occurs. 0: The machine reboots automatically when the machine issues an SC error and logs the SC error code. If the same SC occurs again, the machine does not reboot. 1: The machine does not reboot when an SC error occurs. The reboot is not executed for Type A or C SC codes.		
002	Reboot Type	*CTL	[0 or 1 / 0 / 1/step] 0: Manual reboot 1: Automatic reboot
	Selects the reboot method for SC.		

5878	[Option Setup] (D158/159)		
001	Data Overwrite Security	CTL	[- / - / -] [Execute]
	Enables the Data Overwrite Security unit. Press "EXECUTE" on the operation panel. Then turn the machine off and on.		
002	HDD Encryption	*CTL	[- / - / -] [Execute]
	Installs the HDD Encryption unit.		

5885	[Set WIM Function] (D158/159) Web Image Monitor Settings		
	Close or disclose the functions of web image monitor.		
020	DocSvr Acc Ctrl	*CTL	[8bit assign / 00000000 / bit switch] 0: OFF, 1: ON Bit Meaning 0: Forbid all document server access (1) 1: Forbid user mode access (1) 2: Forbid print function (1) 3: Forbid fax TX (1) 4: Forbid scan sending (1) 5: Forbid downloading (1) 6: Forbid delete (1) 7: Forbid guest user
050	DocSvr Format	*CTL	[0 to 2 / 0 / 1/step] 0: Thumbnail, 1: Icon, 2: Details
	Selects the display type for the document box list.		
051	DocSvr Trans	*CTL	[5 to 20 / 10 / 1/step]
	Sets the number of documents to be displayed in the document box list.		

100	Set Signature	*CTL	[0 to 2 / 0 / 1/step] 0: Setting for each e-mail 1: Signature for all 2: No signature
	Selects whether the signature is added to the scanned documents with the WIM when they are transmitted by an e-mail.		
101	Set Encryption	*CTL	[0 or 1 / 0 / 1/step] 0: Not encrypted, 1:Encryption
	Determines whether the scanned documents with the WIM are encrypted when they are transmitted by an e-mail.		

5887	[SD GetCounter] (D158/159)		
001	SD GetCounter	CTL	[- / - / -] [Execute]
	<p>This SP sends a text file to an SD card inserted in SD card Slot 2 (lower slot). The operation stores.</p> <p>The file is stored in a folder created in the root directory of the SD card called SD_COUNTER.</p> <p>The file is saved as a text file (*.txt) prefixed with the number of the machine.</p> <ol style="list-style-type: none"> 1. Insert the SD card in SD card Slot 2 (lower slot). 2. Select SP5887 then touch [EXECUTE]. <p>Touch [Execute] in the message when you are prompted.</p> <p>Note</p> <ul style="list-style-type: none"> ▪ “SD_COUNTER” folder must be created under the root directory of the SC card before this SP is executed. 		

5888	[Personal Information Protect] (D158/159)		
	Personal Information Protect	*CTL	[0 or 1 / 0 / 1/step]
001	Selects the protection level for logs. 0: No authentication, No protection for logs 1: No authentication, Protected logs (only an administrator can see the logs)		

5893	[SDK Application Counter] (D158/159)		
	Displays the counter name of each SDK application.		
001	SDK-1	CTL	[- / - / -]
002	SDK-2	CTL	
003	SDK-3	CTL	
004	SDK-4	CTL	
005	SDK-5	CTL	
006	SDK-6	CTL	


5894	[External Counter Setting] (D158/159)		
001	Switch Charge Mode	*ENG	[0 to 2 / 0 / 1/step]



5900	[ID Card Copy Mode]		
	ID Card Copy Mode.		
001	0: Original size depends on print paper size. 1: Original size is fixed (Main-scan: 55 mm, Sub-scan: 87 mm)		[0 or 1 / 0]

5901	[Printer Free Run] (D160/D161/D170)		
	Executes the free run. Press "ON" to start; press "OFF" to stop.		
001	Printer Free Run	ENG	[0 or 1 / 0 / 1 / step]

Appendix: Service Program Mode Tables

5902	[Test Pattern] (D160/D161/D170)		
	<p> Note</p> <ul style="list-style-type: none"> ▪ Do not operate the machine until the test pattern is printed out completely. Otherwise, an SC occurs. <ol style="list-style-type: none"> 1. Enter the SP mode and select SP5-902-001. 2. Enter the number for the test pattern that you want to print and press [#]. 3. When you are prompted to confirm your selection, touch "Yes" to select the test pattern for printing. 4. Touch "Copy Window" to open the copy window, then select the settings for the test print (paper size etc.). 5. Press the "Start" key to start the test print. 6. After checking the test pattern, touch "SP Mode" on the LCD to return to the SP mode display. 7. Reset SP5-902-001 to "0". 8. Touch "Exit" twice to exit SP mode. 		
001	Test Pattern	*ENG	[0 to 255 / 0 / 1 / step]
No.	Pattern	No.	Pattern
0	None	11	Independent Pattern (1dot)
1	Vertical Line (1dot)	12	Independent Pattern (2dot)
2	Vertical Line (2dot)	13	Independent Pattern (4dot)
3	Horizontal Line (1dot)	14	Trimming Area
4	Horizontal Line (2dot)	15	Black Band (Horizontal)
5	Grid Vertical Line	16	Black Band (Vertical)
6	Grid Horizontal Line	17	Checker Flag Pattern
7	Grid Pattern Small	18	Grayscale (Vertical)
8	Grid Pattern Large	19	Grayscale (Horizontal)
9	Argyle Pattern Small	20	Full Dot Pattern
10	Argyle Pattern Large	21	All White Pattern

5907	[Plug & Play Maker/Model Name] (D158/159)		
	Plug & Play Maker/Model/Name	*CTL	See detail below
001	<p>Selects the brand name and the production name for Windows Plug & Play. This information is stored in the NVRAM. If the NVRAM is defective, these names should be registered again.</p> <p>After selecting, press the "Original Type" key and "#" key at the same time. When the setting is completed, the beeper sounds five times.</p>		

	[Plug & Play] (D160/D161/D170)		
5907	<p>Selects the brand name and production name for the Plug and Play function. These names are stored in the NVRAM. When the NVRAM data is corrupted, select these names once again. Use the right-arrow or left-arrow key to scroll through the list of brand names. To select a brand name, press the OK key. An asterisk (*) indicates which manufacture is currently selected.</p>		
001	Plug & Play	*ENG	[0 to 19 / 0 / 0 / step]

5908	[LCT Paper Size] (D158/159)		
	0: A4 1: LT	*CTL	[0 or 1 / 1 / 1 / step]
001	Specifies the paper size in the LCT.		

5913	[Switchover Permission Time] (D158/159)		
	Print Application Timer	*CTL	[3 to 30 / 3 / 1sec/step]
002	Sets the amount of time to elapse while the machine is in standby mode (and the operation panel keys have not been used) before another application can gain control of the display.		

5919	[State Of Encryption] (D158/159)		
			[0 or 1 / 0 / 1/step]
001	State Of Encryption	*CTL	0: OFF (Not working) 1: ON (Working)

5967	[Copy Server Set Function] (D158/159)		
	(0:ON 1:OFF)	*CTL	[0 or 1 / 0 / 1/step] 0: ON, 1: OFF
001	Enables and disables the document server. This is a security measure that prevents image data from being left in the temporary area of the HDD. After changing this setting, you must switch the main switch off and on to enable the new setting.		

5973	[User Stamp Registration] (D158/159)		
	-		
101	Frame deletion setting	*CTL	[0 to 3 / 0 / 1mm/step]

5974	[Cherry Server] (D158/159)		
	Specifies which version of ScanRouter, "Light" or "Full", is installed.		
001	(0:Light 1:Full)	*CTL	[0 or 1 / 0 / 1/step] 0:Light 1:Full

5985	[Device Setting] (D158/159)		
	Enables/disables the on-board device.		
001	On Board NIC	CTL	[0 to 2 / 0 / 1/step] 0: Disable, 1: Enable, 2: Function limitation
	<p>When the "Function limitation" is set, "On board NIC" is limited only for the NRS or LDAP/NT authentication.</p> <p>Note</p> <ul style="list-style-type: none"> Other network applications than NRS or LDAP/NT authentication are not available when this SP is set to "2". Even though you can change the initial settings of those network applications, the settings do not work. 		
002	On Board USB	CTL	[0 or 1 / 0 / 1/step] 0: Disable, 1: Enable

5987	[Mech. Counter]		
	This SP detects that a mechanical counter device is removed. If it is detected, SC610 occurs.		
001	0: OFF., 1: ON:	*ENG	[0 or 1 / 0 / 1/step]

5990	[SP Print Mode] (D158/159)		
	[SMC Print] (D160/D161/D170)		
Prints out the SMC sheets.			
001	All(Data List) (All)	CTL	Press "Execute" key to start printing the SMC sheets. [- / - / -] [Execute]
002	SP(Mode Data List) (SP)	CTL	
003	User Program	CTL	
004	Logging Data	CTL	

Main SP Tables-5

005	Diagnostic Report (Big Font)	CTL	
006	Non-Default (D158/159)	CTL	
007	NIB Summary (D158/159)	CTL	
008	Capture Log (D158/159)	CTL	
021	Copier User Program (D158/159)	CTL	
022	Scanner SP (D158/159)	CTL	
023	Scanner User Program (D158/159)	CTL	
024	SDK/J Summary (D158/159)	CTL	
025	SDK/J Application Info (D158/159)	CTL	
026	Printer SP (D158/159)	CTL	

5992	[SP Text Mode] (D158/159)		
	Exports the SMC sheet data to the SD Card.		
001	All(Data List)	CTL	Press "Execute" key to start exporting the SMC data in the SP mode display. [- / - / -] [Execute]
002	SP(Mode Data List)	CTL	
003	User Program	CTL	
004	Logging Data	CTL	
005	Diagnostic Report	CTL	
006	Non-Default	CTL	
007	NIB Summary	CTL	
008	Capture Log	CTL	
021	Copier User Program	CTL	
022	Scanner SP	CTL	
023	Scanner User Program	CTL	
024	SDK/J Summary	CTL	
025	SDK/J Application Info	CTL	
026	Printer SP	CTL	

3.6 MAIN SP TABLES-6

3.6.1 SP6-XXX (PERIPHERALS)

6006	[ADF Adjustment] (D158/159)		
	Adjusts the side-to-side and leading edge registration for simplex and duplex original feeding in ARDF mode. SP6006-5 sets the maximum setting allowed for rear edge erase.		
001	Side-to-Side Regist: Front	*ENG	[-3.0 to 3.0 / 0.0 / 0.1 mm / step]
002	Side-to-Side Regist: Rear	*ENG	[-3.0 to 3.0 / 0.0 / 0.1 mm / step]
003	Leading Edge Registration	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 mm / step]
005	Buckle: Duplex Front	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 mm / step]
006	Buckle: Duplex Rear	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 mm / step]
007	Rear Edge Erase	*ENG	[-10.0 to 10.0 / 0.0 / 0.1 mm / step]

6006	[ADF Adjustment] (D160/D161/D170)		
	-		
001	StoS Regist	*ENG	[-3.0 to 3.0 / 0.0 / 0.1 mm / step]
	Adjusts the side-to-side registration for the front side of the original, for ARDF mode.		
002	Leading Regist	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 mm / step]
	Adjusts the leading edge registration for both front and rear.		
003	Rear Edge Erase	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 mm / step]
	Adjusts the trailing edge erase margin for ARDF mode.		
005	Magnification	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 % / step]
	Adjusts the sub-scan magnification for the ARDF.		
006	Buckle: Front	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 mm / step]

007	Buckle: Rear	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 mm / step]
-----	--------------	------	--

6007	[ADF INPUT Check] (D158/159)		
	Displays ADF sensor information.		
001	Original Length 1(B5 Detection Sensor)	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
002	Original Length 2 (A4 Detection Sensor)	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
003	Original Length3 (LG Detection Sensor)	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
004	Original Width 1	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
005	Original Width 2	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
006	Original Width 3	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
007	Original Width 4	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
008	Original Width 5	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
009	Original Detection	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected

011	Skew Correction	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
013	Registration Sensor	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
014	Exit Sensor	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
015	Feed Cover Sensor	ENG	[0 or 1 / 0 / 1 / step] 0: Close 1: Open
016	Lift Up Sensor	ENG	[0 or 1 / 0 / 1 / step] 0: Not lifted 1: Lifted
023	Rear Edge Detection	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected

6008	[ADF OUTPUT Check] (D158/159)		
	-		
003	Feed Motor Forward	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Rotates the paper feed motor to check the operation of ADF.		
004	Feed Motor Reverse	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Reverses the paper feed motor to check the operation of the load on the ADF.		

005	Relay Motor Forward	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Rotates the relay motor to check the operation of ADF.		
006	Relay Motor Reverse	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Reverse the relay motor to check the operation of ADF.		
011	Inverter Solenoid	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Drives the inverter Solenoid to check the operation of ADF.		
012	Stamp	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Drives the stamp to check the operation of ADF.		
013	Fan Motor	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Drives the fan motor to check the operation of ADF.		
014	Feed Clutch	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Drives the paper feed clutch to checks the operation of ADF.		
015	Feed Solenoid	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Drives the paper feed solenoid to check the operation of ADF.		
6009	[ADF Free Run] (D158/159)		

	-		
001	Free Run Simplex Motion	ENG	[- / - / -] [Execute]
	Executes an ARDF free run in simplex motion.		
002	Free Run Duplex Motion	ENG	[- / - / -] [Execute]
	Executes an ARDF free run in duplex motion.		
003	Free Run Stamp Motion	ENG	[- / - / -] [Execute]
	Executes an ARDF free run in stamp motion.		
004	Free Run Simplex Motion(low speed)	ENG	[- / - / -] [Execute]
	Executes an ARDF free run in simplex motion by low linear velocity.		
005	Free Run Simplex Motion(high speed)	ENG	[- / - / -] [Execute]
	Executes an ARDF free run in simplex motion by high linear velocity.		
006	Free Run Duplex Motion(low speed)	ENG	[- / - / -] [Execute]
	Executes an ARDF free run in duplex motion by low linear velocity.		
007	Free Run Simplex Motion(high speed)	ENG	[- / - / -] [Execute]
	Executes an ARDF free run in duplex motion by high linear velocity.		

6009	[ADF Free Run] (D160/161/D170)		
	Executes an ARDF free run in duplex motion.		
002	Duplex Motion	ENG	[- / - / -] [Execute]

6010	[Stamp Positon Adj.] (D158/159)		
	Adjusts the stamp position.		
001	-	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 mm / step]

6016	[Original Size Detect Setting] (D158/159)		
	[ADF Size Detect] (D160/D161/D170)		
Specifies the original size for a size detected by the original sensor, since original sensors cannot recognize all sizes.			
001	-	*ENG	[0 to 255 / 0 / 1 / step]

6017	[DF Magnification Adj.] (D158/159)		
	-		
001	-	*ENG	[-5.0 to 5.0 / 0.0 / 0.1 % / step]

6020	[Skew Correction Moving Setting] (D158/159)		
	Sets whether or not to skew correction operation.		
001	-	*ENG	[0 or 1 / 0 / 1 / step]

6154	[INPUT Check] (D158/159)		
001	1 bin:Set Detection	ENG	[0 or 1 / 0 / 1 / step]
003	1BIN: Paper Remain	ENG	[0 or 1 / 0 / 1 / step]
004	1BIN: Cover Open	ENG	[0 or 1 / 0 / 1 / step]

6155	[OUTPUT Check] (D158/159)		
002	1BIN SOL	ENG	[0 or 1 / 1 / 1 / step]
	Drives the 1 bin solenoid to check the operation. Turns off automatically in 10 seconds after turned on.		

Main SP Tables-6

003	1BIN Motor: HOLD	ENG	[0 or 1 / 1 / 1 / step]
	Rotates the 1 bin motor to check the operation. Turns off automatically in 10 seconds after turned on.		
004	1BIN Motor: CW:High	ENG	[0 or 1 / 1 / 1 / step]
	Turns on after holding 50ms.		
005	1BIN Motor: CW:Low	ENG	[0 or 1 / 1 / 1 / step]
	Turns on after holding 50ms.		

6800	[Sheet Conversion (Thick Paper)] (D158/159)		
	Permits punching, including tab sheets. Note <ul style="list-style-type: none"> ▪ Do not change this setting. 		
001	-	CTL	[1 to 3 / 3 / 1 / step] 1: 1 pages 2: 2 pages 3: 3 pages

6810	[] (D158/159)		
	-		
001	-	CTL	[1 to 3 / 3 / 1 / step] 1: 1 pages 2: 2 pages 3: 3 pages

6830	[Extra Staples] (D158/159)		
------	-----------------------------------	--	--

	<p>More than the standard number of sheets can be stapled. This SP sets the additional number of sheets (This Setting + Standard Number = maximum number of sheets).</p> <ul style="list-style-type: none"> ▪ If the number of the maximum for staples is increased, and the mechanical warranty of the unit can be guaranteed, then the setting can take effect without changing the controller software. ▪ However, assurance that mechanical performance can be guaranteed is required before changing the setting to increase the staple load for more than the maximum in the feed/exit specifications. Raising this setting without quality assurance could damage the machine. 		
001	Staple positions other than booklet stapling	*CTL	[0 to 50 / 0 / 1 / step]
002	2 Booklet stapling	*CTL	[0 to 50 / 0 / 1 / step]

6890	[Permits punching] (D158/159)		
001	-	CTL	[1 or 0 / 0 / 1 / step] 0: Disable, 1: Enable
	Permits punching, including tab sheets.		

3.7 MAIN SP TABLES-7

3.7.1 SP7-XXX (DATA LOG)


7001	[Total Operation] (D160/D161/D170)		
	Displays the total operation time.		
001	SC Counter	*CTL	[0 to 9999999 / - / 1 min / step]

7401	[Total SC Counter] (D158/D159)		
	Displays the number of SC codes detected.		
001	SC Counter	*CTL	[0 to 65535 / - / 1 / step]
002	Total SC Counter	*CTL	[0 to 65535 / - / 1 / step]

7401	[Counter-SC Total] (D160/D161/D170)		
	Displays the number of SC codes detected.		
002	Counter-SC Total	*CTL	[0 to 9999 / - / 1 / step]

7403	[SC History]		
	<p>Logs and displays the SC codes detected.</p> <p>The 10 most recently detected SC Codes are displayed on the screen, and also can be seen on the SMC (logging) outputs.</p> <p>Note</p> <ul style="list-style-type: none"> If the same SC codes are detected continuously and total counter is not increasing, it only logs once in case of deleting other SC code logs. 		
	001	Latest	*CTL
	002	Latest 1	*CTL
	003	Latest 2	*CTL
004	Latest 3	*CTL	[- / - / -]

005	Latest 4	*CTL	
006	Latest 5	*CTL	
007	Latest 6	*CTL	
008	Latest 7	*CTL	
009	Latest 8	*CTL	
010	Latest 9	*CTL	

7404	[SC990 / SC991 History] (D158/D159)		
	<p>Logs and displays the SC990 / SC991 detected. The 10 most recently detected SC.</p> <p> Note</p> <ul style="list-style-type: none"> If the same SC codes are detected continuously and total counter is not increasing, it only logs once in case of deleting other SC code logs. 		
001	Latest	*CTL	[- / - / -]
002	Latest 1	*CTL	
003	Latest 2	*CTL	
004	Latest 3	*CTL	
005	Latest 4	*CTL	
006	Latest 5	*CTL	
007	Latest 6	*CTL	
008	Latest 7	*CTL	
009	Latest 8	*CTL	
010	Latest 9	*CTL	

7502	[Total Paper Jam] (D158/D159)		
	Displays the total number of jams detected.		
001	Jam Counter	*CTL	[00000 to 65535 / - / 1 sheet / step]

Main SP Tables-7

	If the JAM occurred in multiple places, it logs as one SC.		
002	Total Jam Counter	*CTL	[00000 to 65535 / - / 1sheet / step]

7502	[Counter-Paper Jam] (D160/D161/D170)		
	Displays the total number of jams detected.		
001	Counter-Paper Jam	*CTL	[0000 to 9999 / - / 1sheet / step]

7503	[Df Jam] (D158/D159)		
	Counts when Document Feeder Jam occurred.		
001	Total	*CTL	[00000 to 65535 / - / 1 sheet / step]
002	TotalSave	*CTL	[00000 to 65535 / - / 1 sheet/step]

7503	[Counter-Orgn Jam] (D160/D161/D170)		
	Counts when Document Feeder Jam occurred.		
001	Counter-Orgn Jam	*CTL	[0000 to 9999 / - / 1 sheet / step]

7504	[Paper Jam Loc] Paper Jam Location (D158/D159)		
	Displays the number of jams according to the location where jams were detected.		
001	At Power On	*CTL	Paper is not fed at power on. [0000 to 9999 / - / 1 / step]
003	Tray1: On	*CTL	[0000 to 9999 / - / 1 / step]
004	Tray2: On	*CTL	[0000 to 9999 / - / 1 / step]
005	Tray3: On	*CTL	[0000 to 9999 / - / 1 / step]
006	Tray4: On	*CTL	[0000 to 9999 / - / 1 / step]
008	Bypass: On	*CTL	[0000 to 9999 / - / 1 / step]
009	Duplex: On	*CTL	[0000 to 9999 / - / 1 / step]

018	PFU1: On	*CTL	[0000 to 9999 / - / 1 / step]
019	PFU2:On	*CTL	[0000 to 9999 / - / 1 / step]
020	PFU3: On	*CTL	[0000 to 9999 / - / 1 / step]
024	Fusing Entrance: On	*CTL	[0000 to 9999 / - / 1 / step]
032	Paper Exit On	*CTL	[0000 to 9999 / - / 1 / step]
038	Duplex On	*CTL	Paper stays on the duplex sensor. [0000 to 9999 / - / 1 / step]
087	Resistration: Off	*CTL	[0000 to 9999 / - / 1 / step]
096	Paper Exit: Off	*CTL	[0000 to 9999 / - / 1 / step]
102	Duplex Off	*CTL	Paper does not reach the duplex sensor. [0000 to 9999 / - / 1 / step]

7504	[Count-Each P Jam] (D160/D161/D170)		
	Displays the number of jams according to the location where jams were detected.		
001	At Power On	*CTL	Paper is not fed at power on. [000 to 999 / - / 1 / step]
010	Off-Regist NoFeed	*CTL	[000 to 999 / - / 1 / step]
	Paper does not reach the registration sensor (from a paper tray).		
011	Off-1 Vertical SN	*CTL	[000 to 999 / - / 1 / step]
	Paper does not reach the relay sensor.		
012	On-1 Vertical SN	*CTL	[000 to 999 / - / 1 / step]
	Paper is caught at the relay sensor.		
021	Off-2 Vertical SN	*CTL	[000 to 999 / - / 1 / step]
	Paper does not reach the vertical transport sensor.		

022	On-2 Vertical SN	*CTL	[000 to 999 / - / 1 / step]
	Paper is caught at the vertical transport sensor.		
031	Off-3 Vertical SN	*CTL	[000 to 999 / - / 1 / step]
032	On-3 Vertical SN	*CTL	[000 to 999 / - / 1 / step]
050	Off-Regist Bypass	*CTL	[000 to 999 / - / 1 / step]
	Paper does not reach the registration sensor (from the by-pass tray).		
060	Off-Regist Duplex	*CTL	[000 to 999 / - / 1 / step]
	Paper does not reach the registration sensor during reverse-side printing (for duplex printing).		
070	On-Regist SN	*CTL	[000 to 999 / - / 1 / step]
	Paper is caught at the registration sensor.		
120	On-Exit SN	*CTL	[000 to 999 / - / 1 / step]
	Paper is caught at the exit sensor (previous page).		
121	Off-Exit SN	*CTL	[000 to 999 / - / 1 / step]
	Paper does not reach the exit sensor.		
122	On-Exit SN	*CTL	[000 to 999 / - / 1 / step]
	Paper is caught at the exit sensor.		
123	Off-Dup Inverter	*CTL	[000 to 999 / - / 1 / step]
	Paper does not reach the duplex inverter sensor (from the registration roller).		
125	Off-Dup Inverter	*CTL	[000 to 999 / - / 1 / step]
	Paper is caught at the duplex inverter sensor.		
126	Off-Dup Entrance	*CTL	[000 to 999 / - / 1 / step]
127	On-Dup Entrance	*CTL	[000 to 999 / - / 1 / step]
128	Off-Duplex Exit	*CTL	[000 to 999 / - / 1 / step]
129	On-Duplex Exit	*CTL	[000 to 999 / - / 1 / step]

130	Off-1Bin Exit	*CTL	[000 to 999 / - / 1 / step]
131	On-1Bin Exit	*CTL	[000 to 999 / - / 1 / step]
210	Off-Buckle SN	*CTL	[000 to 999 / - / 1 / step]
211	On-Buckle SN	*CTL	[000 to 999 / - / 1 / step]
212	Off-Regist SN	*CTL	[000 to 999 / - / 1 / step]
213	On-Regist SN	*CTL	[000 to 999 / - / 1 / step]
214	Off-Exit SN	*CTL	[000 to 999 / - / 1 / step]
215	On-Exit SN	*CTL	[000 to 999 / - / 1 / step]

7506	[Paper Jam/Size]		
005	A4 LEF	*CTL	Displays the number of jams according to the paper size. [0 to 9999 / 0 / 1 sheet / step]
006	A5 LEF	*CTL	
014	B5 LEF	*CTL	
038	LT LEF	*CTL	
044	HLT LEF	*CTL	
132	A3 SEF	*CTL	
133	A4 SEF	*CTL	
134	A5 SEF	*CTL	
141	B4 SEF	*CTL	
142	B5 SEF	*CTL	
160	DLT SEF	*CTL	
164	LG SEF	*CTL	
166	LT SEF	*CTL	
172	HLT SEF	*CTL	
255	Others	*CTL	

7507	[Dspl-P Jam Hist] (D158/D159) [Dsply-P Jam Hist] (D160/D161/D170) Paper Jam History Display		
	Logs and displays the 10 most recently detected paper jams. (CODE, SIZE, TOTAL, DATE)		
001	Latest	*CTL	[- / - / -]
002	Latest 1	*CTL	
003	Latest 2	*CTL	
004	Latest 3	*CTL	
005	Latest 4	*CTL	
006	Latest 5	*CTL	
007	Latest 6	*CTL	
008	Latest 7	*CTL	
009	Latest 8	*CTL	
010	Latest 9	*CTL	

7508	[Original Jam History] (D158/D159) [Dsply-O Jam Hist] (D160/D161/D170)		
	Logs and displays the 10 most recently detected Original document jams. (CODE, SIZE, TOTAL, DATE)		
001	Latest	*CTL	[- / - / -]
002	Latest 1	*CTL	
003	Latest 2	*CTL	
004	Latest 3	*CTL	
005	Latest 4	*CTL	
006	Latest 5	*CTL	
007	Latest 6	*CTL	

008	Latest 7	*CTL	
009	Latest 8	*CTL	
010	Latest 9	*CTL	

7624	[Parts PM Use Setting] (D158/D159)		
	Part Replacement Operation ON/OFF Selects the PM maintenance for each part.		
001	Drum unit: Bk	*CTL	
002	Drum unit: M	*CTL	
003	Drum unit: C	*CTL	
004	Drum unit: Y	*CTL	
005	Development unit: Bk	*CTL	
006	Development unit: M	*CTL	[0 or 1 / 1 / 1 / step]
007	Development unit: C	*CTL	0: Not PM maintenance
008	Development unit: Y	*CTL	1: PM maintenance
009	Developer: Bk	*CTL	
010	Developer:M	*CTL	
011	Developer:C	*CTL	
012	Developer:Y	*CTL	
013	Image Transfer Belt	*CTL	
014	Image Transfer Cleaning Unit	*CTL	
015	Fusing Unit	*CTL	[0 or 1 / 1 / 1 / step]
016	Paper Transfer Roller Unit	*CTL	0: Not PM maintenance
017	Waste Toner bottle	*CTL	1: PM maintenance
018	Fusing Roller	*CTL	
019	Pressure Roller	*CTL	


7801	[ROM Info] (D158/D159)		
	Displays ROM numbers in the machine.		
002	Engine	ENG	[- / - / -]
005	ADF	ENG	
009	Bank	ENG	
102	Firmware Version Engine	ENG	
105	Firmware Version ADF	ENG	
109	Firmware Version Bank	ENG	
255	Rom_Version	CTL	Displays the part number and version of all ROMs in the machine.

7801	[Memory/Version/PN] (D160/D161/D170)		
	Displays ROM numbers in the machine.		
002	BICU	ENG	[- / - / -]
005	ADF	ENG	
009	BANK	ENG	
015	Printer/Scanner	ENG	

7803	[Display-PM Count]		
	Displays the PM counter for each unit.		
001	Paper	*CTL	-
002	Sheets 60k part	*ENG	Displays the number of pages printed. [0 to 9999999 / - / 1 sheet / step]
003	Sheets 120k part	*ENG	
004	Distance(mm)60k	*ENG	Displays the rotation distance. [0 to 999999999 / - / 1 mm/step]
005	Distance(mm)120k	*ENG	

006	Distance60k	*ENG	[0 to 255/ - / 1 /step]
007	Distance120k	*ENG	

7804	[Reset-PM Count]		
	<p>Clears the PM counter. Press the Enter key after the machine asks "Execute?", which will store the PM counter value in SP7-906 (PM Counter - Previous) and reset the value of the current PM counter (SP7-803) to "0".</p>		
001	Paper	CTL	[- / - / -] [Execute]
002	60k part	ENG	Clears the unit counter for each unit.
003	120k part	ENG	[- / - / -] [Execute]

7807	[Reset-SC/Jam]		
	<p>Resets the SC, paper, original, and total jam counters. When the program ends normally, the message "Completed" is displayed.</p> <p> Note</p> <ul style="list-style-type: none"> SP7-807-1 does not reset the following logs: SP7-507 (Display-Paper Jam History) and SP7-508 (Display-Original Jam History). 		
001	Reset-SC/Jam	CTL	[- / - / -] [Execute]

7808	[Reset-Counters] (D160/D161/D170)		
	Clears the all counters. Note <ul style="list-style-type: none"> ▪ Clears all counters below. ▪ SP7-001-001 (Basic model only) ▪ SP7-804-001 ▪ SP7-807-001 ▪ SP7-992-004 (Basic model only) ▪ SP8-192-001 ▪ SP8-422 ▪ SP8-442 ▪ SP8-451 ▪ SP8-462 ▪ SP8-522-001 		
001	Reset-SC/Jam	CTL	[- / - / -] [Execute]

7810	[Reset-Key Op Code] (D160/D161/D170)		
	Clears the access code.		
001	Reset-Key Op Code	CTL	[- / - / -] [Execute]

7826	[MF Error Counter] (D158/D159)		
	Displays the counter that couldn't send count command to the MF charging device.		
001	Error Staple	*CTL	[0 to 9999999 / - / 1 / step]
002	Error Total	*CTL	[0 to 9999999 / - / 1 / step]

7826	[Dsply-KeyCard Err] (D160/D161/D170)		
	Displays the counter that couldn't send count command to the MF charging device.		
001	Error Total	*CTL	[0 to 9999999 / - / 1 / step]

7827	[MF Error Counter Clear] (D158/D159)		
	[Reset KeyCard Err] (D160/D161/D170)		
Clears MF Error Counter (SP7-826).			
001	-	ENG	[- / - / -] [Execute]

7832	[Display-Self-Diag]		
001	Display-Self-Diag	CTL	Displays the result of the diagnostics. To scroll the return codes, press the up-arrow key or the down-arrow key.

7836	[Resident Memory] (D158/D159)		
001	Resident Memory	CTL	Displays the memory capacity of the controller system.

7851	[-] (D158/D159)		
	-		
001	-	*ENG	[0 to 255 / 0 / 1 / step]

7852	[DF Glass Dust Check Dust Detection] (D158/D159)		
	Dust detection counter of reading glass unit in document feeder		
001	Counter	*ENG	[0 to 65535 / - / 1 / step]
002	Clear Counter	*ENG	[0 to 65535 / 0 / 1 / step]

7856	[Zero cross] (D158/D159)		
001	count value	*ENG	[0 to 255/ 0 / 1 / step]
	Records the count value at the time of frequency detection.		

7901	[Assert Info.] (D158/D159)		
001	File Name	*CTL	Records the location where a problem is detected in the program. The data stored in this SP is used for problem analysis.
002	Number of Lines	*CTL	
003	Location	*CTL	

7906	[Last PM Count] Previous Unit Counter Display		
	Copies the life counter to this sp as a previous counter when the life counter is cleared.		
002	Sheets 60k part	*ENG	Displays the number of pages printed with the previous unit counter. [0 to 9999999 / - / 1 sheet / step]
003	Sheets 120k part	*ENG	
004	Distance(mm)60k	*ENG	[0 to 999999999 / - /1 mm / step]
005	Distance(mm)120k	*ENG	
006	Distance60k	*ENG	[0 to 255 / - / 1 / step]
007	Distance 120k	*ENG	

7907	[Before 2 PM Count]		
002	Sheets 60k part	*ENG	[0 to 9999999/ - / 1 mm/step]
003	Sheets 120k part	*ENG	
004	Distance(mm) 60k	*ENG	
005	Distance(mm) 120k	*ENG	
006	Distance60k	*ENG	[0 to 255 / - / 1 / step]
007	Distance120k	*ENG	

7908	[Before 3 PM Count]		
002	Sheets 60k part	*ENG	[0 to 9999999/ - / 1 sheet / step]
003	Sheets 120k part	*ENG	
004	Distance(mm) 60k	*ENG	[0 to 9999999/ - / 1 mm / step]
005	Distance(mm) 120k	*ENG	
006	Distance60k	*ENG	[0 to 255 / - / 1 / step]
007	Distance120k	*ENG	

7935	[Toner Bottle Log 1: Bk] (D158/D159)		
001	SerialNo.	*ENG	Displays the current serial numbers and installation date.
002	Attachment Date	*ENG	
7935	[Toner Bottle Log 2: Bk] (D158/D159)		
005	SerialNo.	*ENG	Displays the previous serial numbers and installation date.
006	Attachment Date	*ENG	
7935	[Toner Bottle Log 3: Bk] (D158/D159)		
009	SerialNo.	*ENG	Displays the serial numbers and installation date the past 2 times before.
010	Attachment Date	*ENG	

7935	[Toner Bottle Log 4: Bk] (D158/D159)		
013	SerialNo.	*ENG	Displays the serial numbers and installation date the past 3 times before.
014	Attachment Date	*ENG	
7935	[Toner Bottle Log 5: Bk] (D158/D159)		
017	SerialNo.	*ENG	Displays the serial numbers and installation date the past 4 times before.
018	Attachment Date	*ENG	
7935	[Toner Bottle Log 6: Bk]		
021	SerialNo.	*ENG	Displays the serial numbers and installation date the past 5 times before.
022	Attachment Date	*ENG	
7935	[Toner Bottle Log 7: Bk] (D158/D159)		
025	SerialNo.	*ENG	Displays the serial numbers and installation date the past 6 times before.
026	Attachment Date	*ENG	
7935	[Toner Bottle Log 8: Bk] (D158/D159)		
029	SerialNo.	*ENG	Displays the serial numbers and installation date the past 7 times before.
030	Attachment Date	*ENG	
7935	[Toner Bottle Log 9: Bk] (D158/D159)		
033	SerialNo.	*ENG	Displays the serial numbers and installation date the past 8 times before.
034	Attachment Date	*ENG	
7935	[Toner Bottle Log 10: Bk] (D158/D159)		
037	SerialNo.	*ENG	Displays the serial numbers and installation date the past 9 times before.
038	Attachment Date	*ENG	

7991	[Dsply-Info Count] (D160/D161/D170)		
	Displays the total operating time or the total number of operations. The time is displayed in the following format: day: hour: minute: second.		
001	Dsply-Timer Count	ENG	Displays the total time while machine is on.
002	Dsply-APS Working	ENG	Displays the total time while APS is working. [0 to 9999999 / - / 1 min / step]
003	Dsply-ID S Work	ENG	Displays the ID sensor operating time. [0 to 9999999 / - / 1 sec / step]
004	Dsply-Dev Counter	ENG	Developer counter. [0 to 9999999 / - / 1 mm / step]
005	Dsply-ID Er Count	ENG	ID sensor error detected counter. [0 to 255 / - / 1 / step]

7992	[Reset-Info Count] (D160/D161/D170)		
001	Reset-Timer Count	ENG	Resets the total time (SP7-991-001) [- / - / -] [Execute]
005	Reset-ID Er Count	ENG	Resets ID sensor error detected counter. (SP7-991-005) [- / - / -] [Execute]

3.8 SYSTEM SP TABLES-8

3.8.1 SP8-XXX: DATA LOG 2

Many of these counters are provided for features that are currently not available, such as sending color faxes, and so on. However, here are some Group 8codes that when used in combination with others, can provide useful information.

SP Numbers	What They Do
SP8211 to SP8216	The number of pages scanned to the document server.
SP8401 to SP8406	The number of pages printed from the document server.
SP8691 to SP8696	The number of pages sent from the document server.

Specifically, the following questions can be answered:

How is the document server actually being used?

What application is using the document server most frequently?

What data in the document server is being reused?

Most of the SPs in this group are prefixed with a letter that indicates the mode of operation (the mode of operation is referred to as an 'application'). Before reading the Group 8 Service Table, make sure that you understand what these prefixes mean.

Prefixes	What It Means	
T:	Total: (Grand Total).	Grand total of the items counted for all applications (C, F, P, etc.).
C:	Copy application.	Totals (pages, jobs, etc.) executed for each application when the job was not stored on the document server.
F:	Fax application.	
P:	Print application.	
S:	Scan application.	

L:	Local storage (document server)	Totals (jobs, pages, etc.) for the document server. The L: counters work differently case by case. Sometimes, they count jobs/pages stored on the document server; this can be in document server mode (from the document server window), or from another mode, such as from a printer driver or by pressing the Store File button in the Copy mode window. Sometimes, they include occasions when the user uses a file that is already on the document server. Each counter will be discussed case by case.
O:	Other applications (external network applications, for example)	Refers to network applications such as Web Image Monitor. Utilities developed with the SDK (Software Development Kit) will also be counted with this group in the future.

The Group 8 SP codes are limited to 17 characters, forced by the necessity of displaying them on the small LCDs of printers and faxes that also use these SPs. Read over the list of abbreviations below and refer to it again if you see the name of an SP that you do not understand.

Key for Abbreviations

Abbreviation	What It Means
/	"By", e.g. "T:Jobs/Apl" = Total Jobs "by" Application
>	More (2> "2 or more", 4> "4 or more")
AddBook	Address Book
Apl	Application
B/W	Black & White
Bk	Black
C	Cyan
ColCr	Color Create
ColMode	Color Mode
Comb	Combine

Abbreviation	What It Means
Comp	Compression
Deliv	Delivery
DesApl	Designated Application. The application (Copy, Fax, Scan, Print) used to store the job on the document server, for example.
Dev Counter	Development Count, no. of pages developed.
Dup, Duplex	Duplex, printing on both sides
Emul	Emulation
FC	Full Color
FIN	Post-print processing, i.e. finishing (punching, stapling, etc.)
Full Bleed	No Margins
GenCopy	Generation Copy Mode
GPC	Get Print Counter. For jobs 10 pages or less, this counter does not count up. For jobs larger than 10 pages, this counter counts up by the number that is in excess of 10 (e.g., for an 11-page job, the counter counts up $11-10 = 1$)
IFax	Internet Fax
ImgEdt	Image Edit performed on the original with the copier GUI, e.g. border removal, adding stamps, page numbers, etc.
K	Black (YMCK)
LS	Local Storage. Refers to the document server.
LSize	Large (paper) Size
Mag	Magnification
MC	One color (monochrome)
NRS	New Remote Service, which allows a service center to monitor machines remotely. "NRS" is used overseas, "CSS" is used in Japan.

Abbreviation	What It Means
Org	Original for scanning
OrgJam	Original Jam
Palm 2	Print Job Manager/Desk Top Editor: A pair of utilities that allows print jobs to be distributed evenly among the printers on the network, and allows files to moved around, combined, and converted to different formats.
PC	Personal Computer
PGS	Pages. A page is the total scanned surface of the original. Duplex pages count as two pages, and A3 simplex count as two pages if the A3/DLT counter SP is switched ON.
PJob	Print Jobs
Ppr	Paper
PrtJam	Printer (plotter) Jam
PrtPGS	Print Pages
R	Red (Toner Remaining). Applies to the wide format model A2 only. This machine is under development and currently not available.
Rez	Resolution
SC	Service Code (Error SC code displayed)
Scn	Scan
Sim, Simplex	Simplex, printing on 1 side.
S-to-Email	Scan-to-E-mail
SMC	SMC report printed with SP5990. All of the Group 8counters are recorded in the SMC report.
Svr	Server
TonEnd	Toner End
TonSave	Toner Save

Abbreviation	What It Means
TXJob	Send, Transmission
YMC	Yellow, Magenta, Cyan
YMCK	Yellow, Magenta, Cyan, Black

Note

- All of the Group 8 SPs are reset with SP5 801-1 Memory All Clear.

8191	T:Total Scan PGS	*CTL	<p>These SPs count the pages scanned by each application that uses the scanner to scan images.</p> <p>[0 to 9999999 / 0 / 1]</p>
8192	C:Total Scan PGS	*CTL	
8193	F:Total Scan PGS (D158/D159)	*CTL	
8195	S:Total Scan PGS	*CTL	
8196	L:Total Scan PGS (D158/D159)	*CTL	

- SP 8191 to 8196 count the number of scanned sides of pages, not the number of physical pages.
- These counters do not count reading user stamp data, or reading color charts to adjust color.
- Previews done with a scanner driver are not counted.
- A count is done only after all images of a job have been scanned.
- Scans made in SP mode are not counted.

Examples

- If 3 B5 pages and 1 A3 page are scanned with the scanner application but not stored, the S: count is 4.
- If both sides of 3 A4 sheets are copied and stored to the document server using the Store File button in the Copy mode window, the C: count is 6 and the L: count is 6.
- If both sides of 3 A4 sheets are copied but not stored, the C: count is 6.
- If you enter document server mode then scan 6 pages, the L: count is 6.

8201	T:LSize Scan PGS (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
8203	F Lsize Scan PGS (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
8205	S:LSize Scan PGS (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	<p>These SP codes count the total number of large pages input with the scanner for scan jobs only. Large size paper (A3/DLT) scanned for fax transmission are not counted.</p> <p>Note: These counters are displayed in the SMC Report, and in the User Tools display..</p>		

8221	ADF Org Feeds	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count the number of pages fed through the ADF for front and back side scanning.		
001	Front	<p>Number of front sides fed for scanning: With an ADF that can scan both sides simultaneously, the Front side count is the same as the number of pages fed for either simplex or duplex scanning.</p> <p>With an ADF that cannot scan both sides simultaneously, the Front side count is the same as the number of pages fed for duplex front side scanning. (The front side is determined by which side the user loads face up.)</p>	
002	Back	<p>Number of rear sides fed for scanning: With an ADF that can scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex scanning.</p> <p>With an ADF that cannot scan both sides simultaneously, the Back count is the same as the number of pages fed for duplex rear-side scanning.</p>	

System SP Tables-8

- When 1 sheet is fed for duplex scanning the Front count is 1 and the Back count is 1.
- If a jam occurs during the job, recovery processing is not counted to avoid double counting. Also, the pages are not counted if the jam occurs before the first sheet is output.

8281	T:Scan PGS/TWAIN (D158/D159)	*CTL	These SPs count the number of pages scanned using a TWAIN driver. These counters reveal how the TWAIN driver is used for delivery functions. [0 to 9999999 / 0 / 1] Note: At the present time, these counters perform identical counts.
8285	S:Scan PGS/TWAIN (D158/D159)	*CTL	

8291	T:Scan PGS/Stamp (D158/D159)	*CTL	These SPs count the number of pages stamped with the stamp in the ADF unit. [0 to 9999999 / 0 / 1] The L: counter counts the number of pages stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen
8293	F:Scan PGS/Stamp (D158/D159)	*CTL	
8295	S:Scan PGS/Stamp (D158/D159)	*CTL	

8301	T:Scan PGS/Size (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by size the total number of pages scanned by all applications. Use these totals to compare original page size (scanning) and output (printing) page size [SP 8-441].		
8302	C:Scan PGS/Size (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by size the total number of pages scanned by the Copy application. Use these totals to compare original page size (scanning) and output (printing) page size [SP 8-442].		
8303	F:Scan PGS/Size (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]

	These SPs count by size the total number of pages scanned by the Fax application. Use these totals to compare original page size (scanning) and output page size [SP 8-443].		
8305	S:Scan PGS/Size (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by size the total number of pages scanned by the Scan application. Use these totals to compare original page size (scanning) and output page size [SP 8-445].		
8306	L:Scan PGS/Size (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by size the total number of pages scanned and stored from within the document server mode screen at the operation panel, and with the Store File button from within the Copy mode screen. Use these totals to compare original page size (scanning) and output page size [SP 8-446].		
001	A3		
002	A4		
003	A5		
004	B4		
005	B5		
006	DLT		
007	LG		
008	LT		
009	HLT		
010	Full Bleed		
254	Other (Standard)		
255	Other (Custom)		

Appendix:
Service
Program
Mode Tables

8381	T:Total PrtPGS	*CTL	<p>These SPs count the number of pages printed by the customer. The counter for the application used for storing the pages increments.</p> <p>[0 to 9999999 / 0 / 1]</p> <p>The L: counter counts the number of pages stored from within the document server mode screen at the operation panel. Pages stored with the Store File button from within the Copy mode screen go to the C: counter.</p>
8382	C:Total PrtPGS	*CTL	
8383	F:Total PrtPGS (D158/D159)	*CTL	
8384	P:Total PrtPGS	*CTL	
8385	S:Total PrtPGS (D158/D159)	*CTL	
8386	L:Total PrtPGS (D158/D159)	*CTL	
8387	O:Total PrtPGS (D158/D159)	*CTL	

- When the A3/DLT double count function is switched on with SP5104, 1 A3/DLT page is counted as 2.
- When several documents are merged for a print job, the number of pages stored are counted for the application that stored them.
- These counters are used primarily to calculate charges on use of the machine, so the following pages are not counted as printed pages: the following pages are not counted as printed pages:
 - Blank pages in a duplex printing job.
 - Blank pages inserted as document covers, chapter title sheets, and slip sheets.
 - Reports printed to confirm counts.
 - All reports done in the service mode (service summaries, engine maintenance reports, etc.)
 - Test prints for machine image adjustment.
 - Error notification reports.
 - Partially printed pages as the result of a copier jam.

8391	LSize PrtPGS	*CTL	[0 to 99999999 / 0 / 1]
	<p>These SPs count pages printed on paper sizes A3/DLT and larger.</p> <p>Note: In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine.</p>		

8411	Prints/Duplex	*CTL	<p>This SP counts the amount of paper (front/back counted as 1 page) used for duplex printing. Last pages printed only on one side are not counted.</p> <p>[0 to 99999999 / 0 / 1]</p>
-------------	---------------	------	--

8421	T:PrtPGS/Dup Comb (D158/D159)	*CTL	[0 to 99999999 / 0 / 1]
	<p>These SPs count by binding and combine, and n-Up settings the number of pages processed for printing. This is the total for all applications.</p>		
8422	C:PrtPGS/Dup Comb	*CTL	[0 to 99999999 / 0 / 1]
	<p>These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the copier application.</p>		
8423	F:PrtPGS/Dup Comb (D158/D159)	*CTL	[0 to 99999999 / 0 / 1]
	<p>These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the fax application.</p>		
8424	P:PrtPGS/Dup Comb (D158/D159)	*CTL	[0 to 99999999 / 0 / 1]
	<p>These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the printer application.</p>		
8425	S:PrtPGS/Dup Comb (D158/D159)	*CTL	[0 to 99999999 / 0 / 1]
	<p>These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by the scanner application.</p>		

8426	L:PrtPGS/Dup Comb (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing from within the document server mode window at the operation panel.		
8427	O:PrtPGS/Dup Comb (D158/D159)	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count by binding and combine, and n-Up settings the number of pages processed for printing by Other applications.		
001	Simplex> Duplex		
002	Duplex> Duplex		
003	Book> Duplex (D158/D159)		
004	Simplex Combine		
005	Duplex Combine		
006	2in1	2 pages on 1 side (2-Up)	
007	4in1	4 pages on 1 side (4-Up)	
008	6in1 (D158/D159)	6 pages on 1 side (6-Up)	
009	8in1 (D158/D159)	8pages on 1 side (8-Up)	
010	9in1 (D158/D159)	9 pages on 1 side (9-Up)	
011	16in1 (D158/D159)	16 pages on 1 side (16-Up)	
012	Booklet (D158/D159)		
013	Magazine (D158/D159)		
014	2in1 + Booklet (D158/D159)		
015	4in1 + Booklet (D158/D159)		
016	6in1 + Booklet (D158/D159)		
017	8in1 + Booklet (D158/D159)		
018	9in1 + Booklet (D158/D159)		

019	2in1 + Magazine (D158/D159)	
020	4in1 + Magazine (D158/D159)	
021	6in1 + Magazine (D158/D159)	
022	8in1 + Magazine (D158/D159)	
023	9in1 + Magazine (D158/D159)	
024	16in1 + Magazine (D158/D159)	

- These counts (SP8421 to SP8427) are especially useful for customers who need to improve their compliance with ISO standards for the reduction of paper consumption.
- Pages that are only partially printed with the n-Up functions are counted as 1 page.
- Here is a summary of how the counters work for Booklet and Magazine modes:

Booklet		Magazine	
Original Pages	Count	Original Pages	Count
1	1	1	1
2	2	2	2
3	2	3	2
4	2	4	2
5	3	5	4
6	4	6	4
7	4	7	4
8	4	8	4

8441	T:PrtPGS/Ppr Size	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by print paper size the number of pages printed by all applications.		
8442	C:PrtPGS/Ppr Size	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by print paper size the number of pages printed by the copy application.		
8443	F:PrtPGS/Ppr Size (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by print paper size the number of pages printed by the fax application.		
8444	P:PrtPGS/Ppr Size	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by print paper size the number of pages printed by the printer application.		
8445	S:PrtPGS/Ppr Size (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by print paper size the number of pages printed by the scanner application.		
8446	L:PrtPGS/Ppr Size (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by print paper size the number of pages printed from within the document server mode window at the operation panel.		

8447	O:PrtPGS/Ppr Size (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by print paper size the number of pages printed by Other applications.		
001	A3		
002	A4		
003	A5		
004	B4		
005	B5		
006	DLT		
007	LG		
008	LT		
009	HLT		
010	Full Bleed (D158/D159)		
254	Other (Standard)		
255	Other (Custom)		

Appendix:
Service
Program
Mode Tables

- These counters do not distinguish between LEF and SEF.

8451	PrtPGS/Ppr Tray	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count the number of sheets fed from each paper feed station.		
001	Bypass Tray	Bypass Tray	
002	Tray 1	Copier	
003	Tray 2	Copier	
004	Tray 3	Paper Tray Unit (Option)	
005	Tray 4	Paper Tray Unit (Option)	
006	Tray 5 (D158/D159)	LCT (Option)	
007	Tray 6 (D158/D159)	Currently not used.	
008	Tray 7 (D158/D159)	Currently not used.	
009	Tray 8 (D158/D159)	Currently not used.	
010	Tray 9 (D158/D159)	Currently not used.	
011	Tray 10 (D158/D159)	Currently not used.	
012	Tray 11 (D158/D159)	Currently not used.	
013	Tray 12 (D158/D159)	Currently not used.	
014	Tray 13 (D158/D159)	Currently not used.	
015	Tray 14 (D158/D159)	Currently not used.	
016	Tray 15 (D158/D159)	Currently not used.	

8461	T:PrtPGS/Ppr Type	*CTL	[0 to 9999999 / 0 / 1]
	<p>These SPs count by paper type the number pages printed by all applications. These counters are not the same as the PM counter. The PM counter is based on feed timing to accurately measure the service life of the feed rollers. However, these counts are based on output timing. Blank sheets (covers, chapter covers, slip sheets) are also counted. During duplex printing, pages printed on both sides count as 1, and a page printed on one side counts as 1.</p>		
8462	C:PrtPGS/Ppr Type	*CTL	[0 to 9999999 / 0 / 1]
	<p>These SPs count by paper type the number pages printed by the copy application.</p>		
8463	F:PrtPGS/Ppr Type (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	<p>These SPs count by paper type the number pages printed by the fax application.</p>		
8464	P:PrtPGS/Ppr Type	*CTL	[0 to 9999999 / 0 / 1]
	<p>These SPs count by paper type the number pages printed by the printer application.</p>		
8466	L:PrtPGS/Ppr Type (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	<p>These SPs count by paper type the number pages printed from within the document server mode window at the operation panel.</p>		
001	Normal		
002	Recycled (D158/D159)		
003	Special (D158/D159)		
004	Thick		
005	Normal (Back) (D158/D159)		
006	Thick (Back) (D158/D159)		

007	OHP
008	Other

8511	T:PrtPGS/Emul (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by printer emulation mode the total number of pages printed.		
8514	P:PrtPGS/Emul (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by printer emulation mode the total number of pages printed.		
001	RPCS		
002	RPDL	Japan Only	
003	PS3		
004	R98	Japan Only	
005	R16		
006	GL/GL2		
007	R55		
008	RTIFF		
009	PDF		
010	PCL5e/5c		
011	PCL XL		
012	IPDL-C		
013	BM-Links	Japan Only	
014	Other		
015	IPDS		

- SP8511 and SP8514 return the same results as they are both limited to the Print application.
- Print jobs output to the document server are not counted.

8521	T:PrtPGS/FIN (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by all applications.		
8522	C:PrtPGS/FIN	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Copy application.		
8523	F:PrtPGS/FIN (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Fax application. Note: Print finishing options for received faxes are currently not available.		
8524	P:PrtPGS/FIN (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Print application.		
8525	S:PrtPGS/FIN (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed by the Scanner application.		
8526	L:PrtPGS/FIN (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
	These SPs count by finishing mode the total number of pages printed from within the document server mode window at the operation panel.		
001	Sort		
002	Stack (D158/D159)		
003	Staple (D158/D159)		
004	Booklet (D158/D159)		

System SP Tables-8

005	Z-Fold (D158/D159)
006	Punch (D158/D159)
007	Other (D158/D159)
008	Inside-Fold (D158/D159)
009	Three-IN-Fold (D158/D159)
010	Three-OUT-Fold (D158/D159)
011	Four-Fold (D158/D159)
012	KANNON-Fold (D158/D159)
013	Perfect-Bind (D158/D159)
014	Ring-Bind (D158/D159)

Note

- If stapling is selected for finishing and the stack is too large for stapling, the unstapled pages are still counted.
- The counts for staple finishing are based on output to the staple tray, so jam recoveries are counted.

8531	Staples (D158/D159)	*CTL	This SP counts the amount of staples used by the machine. [0 to 9999999 / 0 / 1]
-------------	---------------------	------	---

8551	T:PrtBooks/FIN (D158/D159)		
8552	C:PrtBooks/FIN (D158/D159)		
8554	P:PrtBooks/FIN (D158/D159)		
8556	L:PrtBooks/FIN (D158/D159)		
001	Perfect-Bind	*CTL	Not Used
002	Ring-Bind	*CTL	Not Used

8581	T: Counter (D158/D159)	*CTL	[0 to 9999999 / 0 / 1]
-------------	------------------------	------	------------------------

	<p>These SPs count the total output broken down by color output, regardless of the application used. In addition to being displayed in the SMC Report, these counters are also displayed in the User Tools display on the copy machine.</p> <p>Note: This SP is expanded for color MFP and color LP machines. For this machine, the count is done for black only.</p>
--	--

8561	T:A Sheet Of Paper (D158/D159)		
8562	C:A Sheet Of Paper (D158/D159)		
8563	F:A Sheet Of Paper (D158/D159)		
8564	P:A Sheet Of Paper (D158/D159)		
8566	L:A Sheet Of Paper (D158/D159)		
8567	O:A Sheet Of Paper (D158/D159)		
	These SPs count the totals number of duplex pages printed.		
001	Total: Over A3/DLT	*CTL	[0 to 9999999 / 0 / 1]
002	Total: Under A3/DLT	*CTL	
003	Duplex: Over A3/DLT	*CTL	
004	Duplex: Under A3/DLT	*CTL	

8591	O: Counter (D158/D159)		
	These SPs count the totals for A3/DLT paper use, number of duplex pages printed, and the number of staples used. These totals are for Other (O:) applications only.		
001	A3/DLT	*CTL	[0 to 9999999 / 0 / 1]
002	Duplex	*CTL	

Appendix:
Service
Program
Mode Tables

8601	T:Coverage Counter (D158/D159)		
	These SPs count the total coverage for each color and printout pages.		
001	B/W	*CTL	[0 to 2147483647 / 0 / 1]
011	B/W Printing Pages	*CTL	[0 to 9999999 / 0 / 1]

8602	C:Coverage Counter (D158/D159)	*CTL	[0 to 2147483647 / 0 / 1]
	These SPs count the total coverage for B/W.		
8603	F:Coverage Counter (D158/D159)	*CTL	[0 to 2147483647 / 0 / 1]
	These SPs count the total coverage for B/W.		
8604	P:Coverage Counter (D158/D159)	*CTL	[0 to 2147483647 / 0 / 1]
	These SPs count the total coverage for B/W.		
8606	L:Coverage Counter (D158/D159)	*CTL	[0 to 2147483647 / 0 / 1]
	These SPs count the total coverage for B/W.		

8617	SDK Apli Counter (D158/D159)		
	These SPs count the total printout pages for each SDK applicaion.		
001	SDK-1	*CTL	[0 to 9999999 / 0 / 1]
002	SDK-2	*CTL	
003	SDK-3	*CTL	
004	SDK-4	*CTL	
005	SDK-5	*CTL	
006	SDK-6	*CTL	

8621	Func Use Counter (D158/D159)		
	-		
001	Function-001	*CTL	[0 to 99999999 / 0 / 1]
002	Function-002	*CTL	
003	Function-003	*CTL	
004	Function-004	*CTL	
005	Function-005	*CTL	
006	Function-006	*CTL	[0 to 99999999 / 0 / 1]
007	Function-007	*CTL	
008	Function-008	*CTL	
009	Function-009	*CTL	
010	Function-010	*CTL	
011	Function-011	*CTL	[0 to 99999999 / 0 / 1]
012	Function-012	*CTL	
013	Function-013	*CTL	
014	Function-014	*CTL	
015	Function-015	*CTL	
016	Function-016	*CTL	[0 to 99999999 / 0 / 1]
017	Function-017	*CTL	
018	Function-018	*CTL	
019	Function-019	*CTL	
020	Function-020	*CTL	
021	Function-021	*CTL	[0 to 99999999 / 0 / 1]
022	Function-022	*CTL	
023	Function-023	*CTL	

System SP Tables-8

024	Function-024	*CTL	
025	Function-025	*CTL	
026	Function-026	*CTL	
027	Function-027	*CTL	[0 to 99999999 / 0 / 1]
028	Function-028	*CTL	
029	Function-029	*CTL	
030	Function-030	*CTL	
031	Function-031	*CTL	
032	Function-032	*CTL	[0 to 99999999 / 0 / 1]
033	Function-033	*CTL	
034	Function-034	*CTL	
035	Function-035	*CTL	
036	Function-036	*CTL	
037	Function-037	*CTL	
038	Function-038	*CTL	
039	Function-039	*CTL	
040	Function-040	*CTL	
041	Function-041	*CTL	
042	Function-042	*CTL	
043	Function-043	*CTL	
044	Function-044	*CTL	
045	Function-045	*CTL	
046	Function-046	*CTL	
047	Function-047	*CTL	
048	Function-048	*CTL	

049	Function-049	*CTL	[0 to 99999999 / 0 / 1]
050	Function-050	*CTL	
051	Function-051	*CTL	
052	Function-052	*CTL	
053	Function-053	*CTL	
054	Function-054	*CTL	
055	Function-055	*CTL	
056	Function-056	*CTL	
057	Function-057	*CTL	
058	Function-058	*CTL	
059	Function-059	*CTL	[0 to 99999999 / 0 / 1]
060	Function-060	*CTL	
061	Function-061	*CTL	
062	Function-062	*CTL	
063	Function-063	*CTL	
064	Function-064	*CTL	

Appendix:
Service
Program
Mode Tables

8631	T:FAX TX PGS (D158/D159)		
	These SPs count by color mode the number of pages sent by fax to a telephone number.		
8633	F:FAX TX PGS (D158/D159)		
	These SPs count by color mode the number of pages sent by fax to a telephone number.		
001	B/W	*CTL	Black TX [0 to 9999999 / 0 / 1]

- If a document has color and black-and-white pages mixed, the pages are counted separately as B/W or Color.
- At the present time, this feature is provided for the Fax application only so SP8631 and SP8633 are the same.
- The counts include error pages.
- If a document is sent to more than one destination with a Group transmission, the count is done for each destination.
- Polling transmissions are counted but polling RX are not.
- Relay, memory, and confidential mailbox transmissions and are counted for each destination.

8641	T:FAX TX PGS (D158/D159)		
	These SPs count by color mode the number of pages sent by fax to as fax images using I-Fax.		
8643	F:FAX TX PGS (D158/D159)		
	These SPs count by color mode the number of pages sent by Fax as fax images using I-Fax.		
001	B/W	*CTL	Black TX [0 to 9999999 / 0 / 1]

- If a document has color and black-and-white pages mixed, the pages are counted separately as B/W or Color.
- At the present time, this feature is provided for the Fax application only so SP8641 and SP8643 are the same.

- The counts include error pages.
- If a document is sent to more than one destination with a Group transmission, the count is done for each destination.
- Polling transmissions are counted but polling RX are not.
- Relay, memory, and confidential mailbox transmissions and are counted for each destination.

8651	T:S-to-Email PGS (D158/D159)		
	These SPs count by color mode the total number of pages attached to an e-mail for both the Scan and document server applications.		
8655	S:S-to-Email PGS (D158/D159)		
	These SPs count by color mode the total number of pages attached to an e-mail for the Scan application only.		
001	B/W	*CTL	[0 to 9999999 / 0 / 1]
002	Color	*CTL	

Note

- The count for B/W and Color pages is done after the document is stored on the HDD. If the job is cancelled before it is stored, the pages are not counted.
- If Scan-to-Email is used to send a 10-page document to 5 addresses, the count is 10 (the pages are sent to the same SMTP server together).
- If Scan-to-PC is used to send a 10-page document to 5 folders, the count is 50 (the document is sent to each destination of the SMB/FTP server).
- Due to restrictions on some devices, if Scan-to-Email is used to send a 10-page document to a large number of destinations, the count may be divided and counted separately. For example, if a 10-page document is sent to 200 addresses, the count is 10 for the first 100 destinations and the count is also 10 for the second 100 destinations, for a total of 20).

8661	T:Deliv PGS/Svr (D158/D159)		
	These SPs count by color mode the total number of pages sent to a Scan Router server by both Scan and LS applications.		
8665	S:Deliv PGS/Svr (D158/D159)		
	These SPs count by color mode the total number of pages sent to a Scan Router server by the Scan application.		
001	B/W	*CTL	[0 to 9999999 / 0 / 1]
002	Color	*CTL	

Note

- The B/W and Color counts are done after the document is stored on the HDD of the Scan Router server.
- If the job is canceled before storage on the Scan Router server finishes, the counts are not done.
- The count is executed even if regardless of confirmation of the arrival at the Scan Router server.

8671	T: Deliv PGS/PC (D158/D159)		
	These SPs count by color mode the total number of pages sent to a folder on a PC (Scan-to-PC) with the Scan and LS applications.		
8675	S: Deliv PGS/PC (D158/D159)		
	These SPs count by color mode the total number of pages sent with Scan-to-PC with the Scan application.		
001	B/W	*CTL	[0 to 9999999 / 0 / 1]
002	Color	*CTL	

8681	T:PCFAX TXPGS (D158/D159)	*CTL	These SPs count the number of pages sent by PC Fax. These SPs are provided for the Fax application only, so the counts for SP8681 and SP8683 are the same. [0 to 9999999 / 0 / 1]
8683	F:PCFAX TXPGS (D158/D159)	*CTL	

- This counts pages sent from a PC using a PC fax application, from the PC through the copier to the destination.
- When sending the same message to more than one place using broadcasting, the pages are only counted once. (For example, a 10-page fax is sent to location A and location B. The counter goes up by 10, not 20.)

8701	TX PGS/Port (D158/D159)		[0 to 9999999 / 0 / 1]
	These SPs count the number of pages sent by the physical port used to send them. For example, if a 3-page original is sent to 4 destinations via ISDN G4, the count for ISDN (G3, G4) is 12.		
001	PSTN-1	*CTL	
002	PSTN-2	*CTL	
003	PSTN-3	*CTL	
004	ISDN (G3,G4)	*CTL	
005	Network	*CTL	

8711	T:Scan PGS/Comp (D158/D159)		[0 to 9999999 / 0 / 1]
	These SPs count the number of compressed pages scanned into the document server, counted by the formats listed below.		
001	JPEG/JPEG2000	*CTL	
002	TIFF (Multi/Single)	*CTL	
003	PDF	*CTL	
004	Other	*CTL	

Appendix:
Service
Program
Mode Tables

System SP Tables-8

005	PDF/Comp	*CTL	
006	PDF/A	*CTL	

8715	S:Scan PGS/Comp (D158/D159)		
	These SPs count the number of compressed pages scanned by the scan application, counted by the formats listed below.		
001	JPEG/JPEG2000	*CTL	[0 to 9999999 / 0 / 1]
002	TIFF (Multi/Single)	*CTL	
003	PDF	*CTL	
004	Other	*CTL	
005	PDF/Comp	*CTL	
006	PDF/A	*CTL	

8721	T:Deliv PGS/WSD (D158/D159)		
8725	S:Deliv PGS/WSD (D158/D159)		
	These SPs count the number of pages scanned by each scanner mode.		
001	B/W	*CTL	[0 to 9999999 / 0 / 1]
002	Color	*CTL	

8731	T:Scan PGS/Media (D158/D159)		
8735	S:Scan PGS/Media (D158/D159)		
	These SPs count the number of pages scanned and saved in a media by each scanner mode.		
001	B/W	*CTL	[0 to 9999999 / 0 / 1]
002	Color	*CTL	

8741	RX PGS/Port (D158/D159)		
	These SPs count the number of pages received by the physical port used to receive them.		
001	PSTN-1	*CTL	[0to9999999 / 0 / 1]
002	PSTN-2	*CTL	
003	PSTN-3	*CTL	
004	ISDN (G3,G4)	*CTL	
005	Network	*CTL	

8781	Toner_Botol_Info. (D158/D159)	*ENG	[0 to 9999999 / 0 / 1]
	This SP displays the number of toner bottles used. The count is done based on the equivalent of 1,000 pages per bottle.		



8801	Toner Remain (D158/D159)	*CTL	[0 to 100 / 0 / 1]
	These SPs enable the display of the amount of toner remaining in steps of 10%. Note: In actuality, the controller is capable of detecting changes in steps of 1%. However, this SP relies on the detection data from the Engine (system), which is limited to a detection resolution of 10% increments.		
001	K		
002	Y		
003	M		
004	C		

8811	Eco Counter (D158/D159)		
001	Eco Total	*CTL	[0 to 99999999 / 0 / 1]
	Displays the number of pages reduced by using the duplex and the combine function.		
004	Duplex	*CTL	[0 to 99999999 / 0 / 1]
	Displays the number of pages reduced by using the duplex function.		
005	Combine	*CTL	[0 to 99999999 / 0 / 1]
	Displays the number of pages reduced by using the combine function.		
008	Duplex(%)	*CTL	[0 to 100 / 0 / 1%]
	Displays the utilization ratio of the duplex function.		
009	Combine(%)	*CTL	[0 to 100 / 0 / 1%]
	Displays the utilization ratio of the duplex function.		
010	Paper Cut(%)	*CTL	[0 to 100 / 0 / 1%]
	Displays the paper reduction ratio.		
101	Eco Total>Last	*CTL	[0 to 99999999 / 0 / 1]
	-		
104	Duplex>Last	*CTL	[0 to 99999999 / 0 / 1]
	-		
105	Combine>Last	*CTL	[0 to 99999999 / 0 / 1]
	-		
108	Duplex(%):Last	*CTL	[0 to 100 / 0 / 1%]
	-		

109	Combine(%):Last	*CTL	[0 to 100 / 0 / 1%]
	-		
110	Paper Cut(%):Last	*CTL	[0 to 100 / 0 / 1%]
	-		

8851	Cvr Cnt:0-10% (D158/D159)		
	These SPs display the number of scanned sheets on which the coverage of black is from 0% to 10%.		
011	0 to 2%: BK	*ENG	[0 to 99999999 / 0 / 1]
021	3 to 4%: BK	*ENG	
031	5 to 7%: BK	*ENG	
041	8 to 10%: BK	*ENG	

8861	Cvr Cnt:11-20% (D158/D159)		
	These SPs display the number of scanned sheets on which the coverage of black is from 11% to 20%.		
001	BK	*ENG	[0 to 99999999 / 0 / 1]

8871	Cvr Cnt:21-30% (D158/D159)		
	These SPs display the number of scanned sheets on which the coverage of black is from 21% to 30%.		
001	BK	*ENG	[0 to 99999999 / 0 / 1]

Appendix:
Service
Program
Mode Tables

System SP Tables-8

8881	Cvr Cnt:31%- (D158/D159)		
	These SPs display the number of scanned sheets on which the coverage of black is 30% or higher.		
001	BK	*ENG	[0 to 99999999 / 0 / 1]

8891	Page/Toner Bottle (D158/D159)		
	These SPs display the amount of the remaining current toner for black.		
001	BK	*ENG	[0 to 99999999 / 0 / 1]

8901	Page/Toner_Prev1 (D158/D159)		
	These SPs display the amount of the remaining previous toner.		
001	BK	*ENG	Black toner [0 to 99999999 / 0 / 1]

8911	Page/Toner_Prev2 (D158/D159)		
	These SPs display the amount of the remaining 2nd previous toner.		
001	BK	*ENG	Black toner [0 to 99999999 / 0 / 1]

8921	Cvr Cnt/Total (D158/D159)		
	Displays the total coverage and total printout number for each color.		
001	Coverage (%) BK	*CTL	[0 to 2147483647 / 0 / 1%]
011	Coverage/P:BK	*CTL	[0 to 99999999 / 0 / 1]

8941	Machine Status (D158/D159)	*CTL	[0 to 99999999 / 0 / 1]
	These SPs count the amount of time the machine spends in each operation mode. These SPs are useful for customers who need to investigate machine operation for improvement in their compliance with ISO Standards.		
001	Operation Time	Engine operation time. Does not include time while controller is saving data to HDD (while engine is not operating).	
002	Standby Time	Engine not operating. Includes time while controller saves data to HDD. Does not include time spent in Energy Save, Low Power, or Off modes.	
003	Energy Save Time	Includes time while the machine is performing background printing.	
004	Low Power Time	Includes time in Energy Save mode with Engine on. Includes time while machine is performing background printing.	
005	Off Mode Time	Includes time while machine is performing background printing. Does not include time machine remains powered off with the power switches.	
006	SC	Total time when SC errors have been staying.	
007	PrtJam	Total time when paper jams have been staying during printing.	
008	OrgJam	Total time when original jams have been staying during scanning.	
009	Supply PM Unit End	Total time when toner end has been staying	

8961	Electricity Status (D158/D159)		
	-		
001	Ctrl Standby Time	*CTL	[0 to 99999999 / 0 / 1]
002	STR Time	*CTL	
003	Main Power Off Time	*CTL	
004	Reading and Printing Time	*CTL	
005	Printing Time	*CTL	[0 to 99999999 / 0 / 1]
006	Reading Time	*CTL	
007	Eng Waiting Time	*CTL	
008	Low Power State Time	*CTL	
009	Silent State Time	*CTL	

8999	AdminCounter (D158/D159)		
	Display the total coverage and total printout number for each color.		
003	Copy: BW	-	[0 to 999999999 / 0 / 1]
007	Printer: BW	-	
010	Fax Print: BW	-	
012	A3/DLT	-	
013	Duplex	-	
023	Copy: BW (%)	-	
027	Printer: BW (%)	-	
030	Fax Print: BW (%)	-	[0 to 2147483647 / 0 / 1]
101	Transmission Total: Color	-	
102	Transmission Total: BW	-	
103	Fax Transmission	-	
104	Scanner Transmission: Color	-	[0 to 999999999 / 0 / 1]
103	Fax Transmission	-	[0 to 999999999 / 0 / 1]
104	Scanner Transmission: Color	-	[0 to 999999999 / 0 / 1]
105	Scanner Transmission: BW	-	[0 to 999999999 / 0 / 1]

3.9 INPUT AND OUTPUT CHECK

3.9.1 INPUT CHEK

5803	[Input Check] (D160/D161/D170)		
001	Safety SW	ENG	[0x00 to 0xFF / 0 / 1/step] 0:OFF 1:ON
002	Safety SW-LD5V	ENG	[0x00 to 0xFF / 0 / 1/step] 0:OFF 1:ON
003	Right Cover SW	ENG	[0x00 to 0xFF / 0 / 1/step] 0:CLOSE 1:OPEN
004	Right LowCover SW	ENG	[0x00 to 0xFF / 0 / 1/step] 0:CLOSE 1:OPEN
006	Upper Relay S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
007	Lower Relay S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
009	Regist Sensor	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
010	Exit Sensor	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected

011	Duplex Inverter S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
012	Duplex Entrance S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
013	Duplex Exit S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
014	Bypass PE S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
015	Bypass P Size S	ENG	[0x00 to 0xFF / 0 / 1/step] Refer to *5
016	Upper PE S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
017	Lower PE S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not detected 1:Paper detected
018	Upper P Size SW	ENG	[0x00 to 0xFF / 0 / 1/step] Refer to *5
019	Lower P Size SW	ENG	[0x00 to 0xFF / 0 / 1/step] Refer to *5
032	Main M Lock	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not locked 1:Locked
033	Polygon M Lock	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not locked 1:Locked

Input and Output Check

035	Total CO Install	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Unconnected 1:Connected
036	Key CO Install	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Unconnected 1:Connected
037	L-Synchronization	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Undetected 1:Detected
045	Platen Cover S	ENG	[0x00 to 0xFF / 0 / 1/step] 0:CLOSE 1:OPEN
050	Fan Motor Lock	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*6Lock 1:Unlocked
051	2 Tray BK Install	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Connected 1:Connected
053	HP Sensor	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Detected
054	Duplex Fan M Lock	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*6Lock 1:Unlocked
055	Tray1: Tray Set	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Unset 1:Set
056	Tray2: Tray Set	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Unset 1:Set

057	Tray1: Paper Lift	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Maximum 1:Maximum
058	Tray2: Paper Lift	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Maximum 1:Maximum
059	Bypass: Length	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Paper Detected
060	Bypass: HP	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Lifted 1:Lifted
061	Key Card Install	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Unconnected 1:Connected
071	Bank:CPU-Port2	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*7 1:
072	Bank:CPU-Port3	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*8 1:
073	Bank:CPU-PortA	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*9 1:
074	Bank:CPU-PortB	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*10 1:
080	ADF Lift Up	ENG	[0x00 to 0xFF / 0 / 1/step] 0:CLOSE 1:OPEN

Input and Output Check

081	ADF Feed Cover	ENG	[0x00 to 0xFF / 0 / 1/step] 0:CLOSE 1:OPEN
082	ADF Original Set	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Paper Detected
083	ADF Registration	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Paper Detected
084	ADF Exit Sensor	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Paper Detected
085	ADF Rear Edge	ENG	[0x00 to 0xFF / 0 / 1/step] 0:No Paper Detected 1:Paper Detected
086	ADF Org Length1	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
087	ADF Org Length2	ENG	[0x00 to 0xFF / 0 / 1/step] *11
088	ADF Org Length3	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
089	ADF Org Width1	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
090	ADF Org Width2	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
091	ADF Org Width3	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:

092	ADF Org Width4	ENG	[0x00 to 0xFF / 0 / 1/step] 0:*11 1:
093	ADF Skew Correct	ENG	[0x00 to 0xFF / 0 / 1/step] 0:Not Detected 1:Paper Detected

*5 Size code for PFU (Paper feed unit) / By-pass tray

PFU	00	01	02	03	04	05	06	07
EU	LTT	B5T	HLTY	A3T	A4T	B5Y	A4Y	B4T
NA	LTT	B5T	A5Y	DLTT	A4T	Exe	LTY	LGT

Appendix:
Service
Program
Mode Tables

By-pass Tray	00	01	02	03	04	05	06	07	08	09	0C	0 D	10	11	18	19
EU	A5 T	A5 T	B5T	B5Y	B4 Y	B4 T	A5Y	A4T	A5 T	A5 T	A4 Y	A3 T	A5 T	A5 T	B6 T	B6 T
NA	HL TT	HL TT	LTS/ LG	LTS /G	LT Y	DL T	LTS/ LG	LTS/ LG	HL TT	HL TT	LT Y	DL T	HL TT	HL TT	HL TT	HL TT

*6 Fan motor lock

Only available with High speed revolution.

(Can not refer with Low speed or Stop)

*7 Bank:CPU-Port2

Display CPU port infos "***" of [80 **H] from Bank with 8bit.

*8 Bank:CPU-Port3

Display CPU port infos "***" of [81 **H] from Bank with 8bit.

*9 Bank:CPU-PortA

Display CPU port infos "***" of [82 **H] from Bank with 8bit.

*10 Bank:CPU-PortB

Display CPU port infos "***" of [83 **H] from Bank with 8bit.

*11 ADF: Combination of detect sensor for Org Length/ Org Width.

Input and Output Check

Size (W*L)	Width detect sensor				On table sensor		
	1	2	3	4	B5	A4	LG
A3 vertical (297*420)	YES	YES	YES	YES	YES	YES	YES
B4 vertical (257*364)	YES	YES	-	-	YES	YES	YES
A4 vertical (210/297)	YES	-	-	-	YES	YES	-
A4 landscape (297*210)	YES	YES	YES	YES	-	-	-
B5 vertical (182*257)	-	-	-	-	YES	-	-
B5 landscape (257*182)	YES	YES	-	-	-	-	-
A5 vertical (148*210)	-	-	-	-	-	-	-
A5 landscape (210*148)	YES	-	-	-	-	-	-
11"*17" (DLT) vertical	YES	YES	YES	-	YES	YES	YES
11"*15" vertical	YES	YES	YES	-	YES	YES	YES
10"*14" vertical	YES	YES	-	-	YES	YES	YES
8 1/2"*14"(LG) vertical	YES	-	-	-	YES	YES	YES
8 1/2"*13" (F4) *2 vertical	YES	-	-	-	YES	YES	YES
8 1/4"*13" vertical *	YES	-	-	-	YES	YES	YES
8"*13" (F) * Vertical	YES	-	-	-	YES	YES	YES
8 1/2"*11" (LT) vertical	YES	-	-	-	YES	-	-
11"*8 1/2" (LT) Landscape	YES	YES	YES	-	-	-	-
7 1/4"*10 1/2" (US EXE) vertical	YES	-	-	-	YES	-	-

10 1/2"*7 1/4" (US EXE) landscape	YES	YES	YES	-	-	-	-
8"*10" vertical	YES	-	-	-	YES	-	-
5 1/2"*8 1/2" (HLT) vertical	-	-	-	-	-	-	-
8 1/2"*5 1/2" (HLT) landscape	YES	-	-	-	-	-	-
8K vertical (267*390)	YES	YES	YES	-	YES	YES	YES
16K vertical (195*267)	YES	-	-	-	YES	-	-
16K landscape(267*195)	YES	YES	YES	-	-	-	-

Appendix:
Service
Program
Mode Tables

6007	[ADF INPUT Check] (D158/159)		
	Displays ADF sensor information.		
001	Original Length 1(B5 Detection Sensor)	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
002	Original Length 2 (A4 Detection Sensor)	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
003	Original Length3 (LG Detection Sensor)	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
004	Original Width 1	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
005	Original Width 2	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected

Input and Output Check

006	Original Width 3	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
007	Original Width 4	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
008	Original Width 5	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
009	Original Detection	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
011	Skew Correction	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
013	Registration Sensor	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
014	Exit Sensor	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected
015	Feed Cover Sensor	ENG	[0 or 1 / 0 / 1 / step] 0: Close 1: Open
016	Lift Up Sensor	ENG	[0 or 1 / 0 / 1 / step] 0: Not lifted 1: Lifted
023	Rear Edge Detection	ENG	[0 or 1 / 0 / 1 / step] 0: No paper detected 1: Paper Detected

6154	[INPUT Check] (D158/159)		
001	1 bin:Set Detection	ENG	[0 or 1 / 0 / 1 / step]
003	1BIN: Paper Remain	ENG	[0 or 1 / 0 / 1 / step]
004	1BIN: Cover Open	ENG	[0 or 1 / 0 / 1 / step]

3.9.2 OUTPUT CHECK

5804	[OUTPUT Check] (D158/D159)		
001	Main Motor: CW: High	ENG	[0 or 1 / 0 / 1/step]
002	Main Motor: CW: Low	ENG	[0 or 1 / 0 / 1/step]
003	Main Motor: CCW: High	ENG	[0 or 1 / 0 / 1/step]
004	Main Motor: CCW: Low	ENG	[0 or 1 / 0 / 1/step]
005	Duplex Motor: HOLD	ENG	[0 or 1 / 0 / 1/step]
006	Duplex Motor: CCW: 582.4	ENG	[0 or 1 / 0 / 1/step]
007	Duplex Motor: CCW: 636.6	ENG	[0 or 1 / 0 / 1/step]
008	Duplex Motor: CCW: 708.5	ENG	[0 or 1 / 0 / 1/step]
009	Duplex Motor: CCW: 774.8	ENG	[0 or 1 / 0 / 1/step]
010	Interchange Motor: HOLD	ENG	[0 or 1 / 0 / 1/step]
011	Interchange Motor: CW:430.1	ENG	[0 or 1 / 0 / 1/step]
012	Interchange Motor: CW:524.5	ENG	[0 or 1 / 0 / 1/step]
013	Interchange Motor: CCW:430.1	ENG	[0 or 1 / 0 / 1/step]
014	Interchange Motor: CCW:474.3	ENG	[0 or 1 / 0 / 1/step]

Input and Output Check

015	Interchange Motor: CCW:524.5	ENG	[0 or 1 / 0 / 1/step]
016	Interchange Motor: CCW:577.3	ENG	[0 or 1 / 0 / 1/step]
020	Toner Bottle Motor	ENG	[0 or 1 / 0 / 1/step]
021	1st Tray Up	ENG	[0 or 1 / 0 / 1/step]
022	1st Tray Down	ENG	[0 or 1 / 0 / 1/step]
023	2nd Tray Up	ENG	[0 or 1 / 0 / 1/step]
024	2nd Tray Down	ENG	[0 or 1 / 0 / 1/step]
025	Exhaust Fan Motor: High	ENG	[0 or 1 / 0 / 1/step]
026	Exhaust Fan Motor: Low	ENG	[0 or 1 / 1 / 1/step]
027	Duplex Fan	ENG	[0 or 1 / 0 / 1/step]
032	Registration CL	ENG	[0 or 1 / 0 / 1/step]
033	1st Paper Feed CL	ENG	[0 or 1 / 0 / 1/step]
034	2nd Paper Feed CL	ENG	[0 or 1 / 0 / 1/step]
035	Paper Tranort CL1	ENG	[0 or 1 / 0 / 1/step]
039	Interchange SOL	ENG	[0 or 1 / 0 / 1/step]
040	Fusing SOL	ENG	[0 or 1 / 0 / 1/step]
041	Dehumidification Heater	ENG	[0 or 1 / 0 / 1/step]
042	PP:Image Transfer: -	ENG	[0 or 1 / 0 / 1/step]
043	PP:Image Transfer: +	ENG	[0 or 1 / 0 / 1/step]
044	Separation Voltage	ENG	[0 or 1 / 0 / 1/step]
045	PP:Developement	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
046	PP:Charge	ENG	[0 or 1 / 0 / 1/step]
047	P Sensor	ENG	[0 or 1 / 0 / 1/step]

048	Anti-static LED	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
049	Polygon Motor: High	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
050	Polygon Motor: Low	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
051	LD On	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
055	By-pass CL	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
056	By-pass Tray CL	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
071	Bank: Motor	ENG	[0 or 1 / 0 / 1/step]
072	Bank: Feed Clutch1	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
073	Bank: Feed Clutch2	ENG	[0 or 1 / 0 / 1/step] 0:OFF, 1:ON
074	Bank:Trans Clutch	ENG	[0 or 1 / 0 / 1/step]
202	Scanner Lamp	ENG	[0 or 1 / 0 / 1/step]

5804	[OUTPUT Check] (D160/D161/D170)		
001	Main M-Fwd	ENG	[0 or 1 / 0 / 1 / step]
002	Main M-Rev	ENG	[0 or 1 / 0 / 1 / step]
003	Quenching Lamp	ENG	[0 or 1 / 0 / 1 / step]
004	Toner Sup M-Fwd	ENG	[0 or 1 / 0 / 1 / step]
005	Fan M-High	ENG	[0 or 1 / 0 / 1 / step]
006	Fan M-Low	ENG	[0 or 1 / 0 / 1 / step]
007	Registration CL	ENG	[0 or 1 / 0 / 1 / step]

Input and Output Check

008	Bypass Feed CL	ENG	[0 or 1 / 0 / 1 / step]
009	Upper Feed CL	ENG	[0 or 1 / 0 / 1 / step]
010	Lower Feed CL	ENG	[0 or 1 / 0 / 1 / step]
011	BK-Low Lift M-Up	ENG	[0 or 1 / 0 / 1 / step]
012	BK-Low Lift M-Dw	ENG	[0 or 1 / 0 / 1 / step]
013	Relay CL	ENG	[0 or 1 / 0 / 1 / step]
014	BK-Relay CL	ENG	[0 or 1 / 0 / 1 / step]
015	BK-Upper Feed CL	ENG	[0 or 1 / 0 / 1 / step]
016	BK-Lower Feed CL	ENG	[0 or 1 / 0 / 1 / step]
017	BK-Lift M	ENG	[0 or 1 / 0 / 1 / step]
018	BK-Up Lift M-Up	ENG	[0 or 1 / 0 / 1 / step]
019	BK-Up Lift M-Dw	ENG	[0 or 1 / 0 / 1 / step]
020	Duplex Inv M-Rev	ENG	[0 or 1 / 0 / 1 / step]
021	Duplex Inv M-Fwd	ENG	[0 or 1 / 0 / 1 / step]
022	Duplex Trans M	ENG	[0 or 1 / 0 / 1 / step]
023	Duplex Gate SOL	ENG	[0 or 1 / 0 / 1 / step]
024	Duplex Inv M-Hold	ENG	[0 or 1 / 0 / 1 / step]
025	Dup Trans M-Hold	ENG	[0 or 1 / 0 / 1 / step]
026	Polygon M	ENG	[0 or 1 / 0 / 1 / step]
027	Polygon M/LD	ENG	[0 or 1 / 0 / 1 / step]
038	Fusing SOL	ENG	[0 or 1 / 0 / 1 / step]
040	Duplex Fan M-High	ENG	[0 or 1 / 0 / 1 / step]
041	Duplex Fan M-Low	ENG	[0 or 1 / 0 / 1 / step]
042	1st Tray Up	ENG	[0 or 1 / 0 / 1 / step]
043	1st Tray Down	ENG	[0 or 1 / 0 / 1 / step]

044	2nd Tray Up	ENG	[0 or 1 / 0 / 1 / step]
045	2nd Tray Down	ENG	[0 or 1 / 0 / 1 / step]
046	Bypass Tray CL	ENG	[0 or 1 / 0 / 1 / step]
071	Bank:Motor	ENG	[0 or 1 / 0 / 1 / step]
072	Bank:Feed Clutch1	ENG	[0 or 1 / 0 / 1 / step]
073	Bank:Feed Clutch2	ENG	[0 or 1 / 0 / 1 / step]
074	Bank:Trans Clutch	ENG	[0 or 1 / 0 / 1 / step]
080	ADF Feed Motor F	ENG	[0 or 1 / 0 / 1 / step]
081	ADF Relay Motor F	ENG	[0 or 1 / 0 / 1 / step]
082	ADF Feed Clutch	ENG	[0 or 1 / 0 / 1 / step]
083	ADF Inverter Sol	ENG	[0 or 1 / 0 / 1 / step]
084	ADF Feed Motor R	ENG	[0 or 1 / 0 / 1 / step]
085	ADF Relay Motor R	ENG	[0 or 1 / 0 / 1 / step]
086	ADF Feed Solenoid	ENG	[0 or 1 / 0 / 1 / step]
087	ADF Stamp	ENG	[0 or 1 / 0 / 1 / step]
202	Scanner Light:C	ENG	[0 or 1 / 0 / 1 / step]
203	Scanner Light:BW	ENG	[0 or 1 / 0 / 1 / step]

Input and Output Check

6008	[ADF OUTPUT Check] (D158/159)		
	-		
003	Feed Motor Forward	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Rotates the paper feed motor to check the operation of ADF.		
004	Feed Motor Reverse	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Reverses the paper feed motor to check the operation of the load on the ADF.		
005	Relay Motor Forward	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Rotates the relay motor to check the operation of ADF.		
006	Relay Motor Reverse	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Reverse the relay motor to check the operation of ADF.		
011	Inverter Solenoid	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Drives the inverter Solenoid to check the operation of ADF.		
012	Stamp	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Drives the stamp to check the operation of ADF.		

013	Fan Motor	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Drives the fan motor to check the operation of ADF.		
014	Feed Clutch	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Drives the paper feed clutch to checks the operation of ADF.		
015	Feed Solenoid	ENG	[0 or 1 / 0 / 1 / step] 0:Off 1:On
	Drives the paper feed solenoid to check the operation of ADF.		

Appendix:
Service
Program
Mode Tables

6155	[OUTPUT Check] (D158/159)		
002	1BIN SOL	ENG	[0 or 1 / 1 / 1 / step]
	Drives the 1 bin solenoid to check the operation. Turns off automatically in 10 seconds after turned on.		
003	1BIN Motor: HOLD	ENG	[0 or 1 / 1 / 1 / step]
	Rotates the 1 bin motor to check the operation. Turns off automatically in 10 seconds after turned on.		
004	1BIN Motor: CW:High	ENG	[0 or 1 / 1 / 1 / step]
	Turns on after holding 50ms.		
005	1BIN Motor: CW:Low	ENG	[0 or 1 / 1 / 1 / step]
	Turns on after holding 50ms.		

3.10 PRINTER SP TABLES

3.10.1 SP1-XXX (SERVICE MODE)

D158/D159

1001	[Bit Switch]			
001	Bit Switch 1		0	1
	bit 0	Not Used	-	-
	bit 1	Not Used	-	-
	bit 2	Not Used	-	-
	bit 3	No I/O Timeout	Disabled	Enabled
		Enables/Disables MFP I/O Timeouts. If enabled, the MFP I/O Timeout setting will have no affect. I/O Timeouts will never occur.		
	bit 4	SD Card Save Mode	Disabled	Enabled
		If this bit switch is enabled, print jobs will be saved to the GW SD slot and not output to paper.		
	bit 5	Not Used	-	-
	bit 6	Not Used	-	-
bit 7	[RPCS,PCL]: Printable area frame border	Disabled	Enabled	
	Prints all RPCS and PCL jobs with a border around the printable area.			

1001	[Bit Switch]			
002	Bit Switch 2		0	1
	bit 0	Not Used	-	-
	bit 1	Not Used	-	-
	bit 2	Applying a Collate Type	Shift Collate	Normal Collate
		A collate type (shift or normal) will be applied to all jobs that do not explicitly define a collate type. Note: If #5-0 is enabled, this BitSwitch has no effect.		
	bit 3	[PCL5e/c,PS]: PDL Auto Switching	Enabled	Disabled
	bit 4	Not Used	-	-
	bit 5	Not Used	-	-
	bit 6	DFU	-	-
	bit 7	Not Used	-	-

Appendix:
 Service
 Program
 Mode Tables

1001		[Bit Switch]		
003	Bit Switch 3		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	[PCL5e/c]: Legacy HP compatibility	Disabled	Enabled
		Uses the same left margin as older HP models such as HP4000/HP8000. In other words, the left margin defined in the job (usually "<ESC>*r0A") will be changed to "<ESC>*r1A".		
	bit 3	Not Used	-	-
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	-	-
bit 7	Not Used	-	-	

1001		[Bit Switch]		
004	Bit Switch 4		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	DFU	-	-
	bit 4	DFU	-	-
	bit 5	DFU	-	-
	bit 6	DFU	-	-
	bit 7	DFU	-	-

1001	[Bit Switch]			
005	Bit Switch 5	0	1	
	bit 0	Show "Collate Type", "Staple Type" and "Punch Type" buttons on the operation panel.	Disabled	Enabled
		<p>If enabled, users will be able to configure a Collate Type, Staple Type, and Punch Type from the operation panel. The available Types will depend on the device and configured options.</p> <p>After enabling this BitSw, the settings will appear under: "User Tools > Printer Features > System"</p>		
	bit 1	Multiple copies if a paper size or type mismatch occurs	Disabled (single copy)	Enabled (multiple)
		<p>If a paper size or type mismatch occurs during the printing of multiple copies, only a single copy is output by default. Using this BitSw, the device can be configured to print all copies even if a paper mismatch occurs.</p>		
	bit 2	Prevent SDK applications from altering the contents of a job.	Disabled	Enabled
		<p>If this BitSw is enabled, SDK applications will not be able to alter print data. This is achieved by preventing SDK applications from accessing a module called the "GPS Filter".</p> <p>Note: The main purpose of this BitSw is for troubleshooting the effects of SDK applications on data.</p>		

Appendix:
Service
Program
Mode Tables

	bit 3	[PS] PS Criteria	Pattern 3 (2 to 4): The larger the pattern number, the greater the number of criterion used. Pattern 4 includes most PS commands	Pattern1: A small number of PS tags and headers
	Change the number of PS criterion used by the PS interpreter to determine whether a job is PS data or not.			
	bit 4	Increase max number of the stored jobs.	Disabled (100)	Enabled (750)
	Changes the maximum number of jobs that can be stored on the HDD. The default (disabled) is 100. If this is enabled, the max. will be raised to 750.			
	bit 5	DFU	-	-
	bit 6	Method for determining the image rotation for the edge to bind on.	Disabled	Enabled
	If enabled, the image rotation will be performed as they were in the specifications of older models for the binding of pages of mixed orientation jobs. The old models are below: - PCL: Pre-04A models - PS/PDF/RPCS:Pre-05S models			

	bit 7	Letterhead mode printing	Disabled	Enabled (Duplex)
	<p>Routes all pages through the duplex unit. If this is disabled, simplex pages or the last page of an odd-paged duplex job, are not routed through the duplex unit. This could result in problems with letterhead/pre-printed pages. Only affects pages specified as Letterhead paper.</p>			

1001	[Bit Switch]			
006	Bit Switch 6		0	1
	bit 0	DFU	-	-
	bit 1	Not used	-	-
	bit 2	Not used	-	-
	bit 3	Not used	-	-
	bit 4	Not used	-	-
	bit 5	Not used	-	-
	bit 6	DFU	-	-
	bit 7	Not used	-	-

1001	[Bit Switch]			
007	Bit Switch 7		0	1
		Print path	Disabled	Enabled
	bit 0	<p>If enabled, simplex pages (in mixed simplex/duplex PS/PCL5 jobs only) and the last page of an odd paged duplex job (PS, PCL5, PCL6), are always routed through the duplex unit. Not having to switch paper paths increases the print speed slightly.</p>		
	bit 1	Not Used	-	-
	bit 2	Not Used	-	-

Appendix:
Service
Program
Mode Tables

Printer SP Tables

	bit 3	DFU	-	-
	bit 4	DFU	-	-
	bit 5	Not Used	-	-
	bit 6	Not Used	-	-
	bit 7	DFU	-	-

1001	[Bit Switch]			
008	Bit Switch 8		0	1
	bit 0	Not Used	-	-
	bit 1	Not Used	-	-
	bit 2	Not Used	-	-
	bit 3	DFU	-	-
	bit 4	Not Used	-	-
	bit 5	Not Used	-	-
	bit 6	Not Used	-	-
	bit 7	RTIFF(TIFFDP): Switches the rotation angle of the image	Disabled	Enabled

1001	[Bit Switch]			
009	Bit Switch 9		0	1
	bit 0	PDL Auto Detection timeout of jobs submitted via USB or Parallel Port (IEEE 1284).	Disabled (Immediately)	Enabled (10 seconds)
		To be used if PDL auto-detection fails. A failure of PDL autodetection doesn't necessarily mean that the job can't be printed. This bit switch tells the device whether to time-out immediately (default) upon failure or to wait 10 seconds.		
	bit 1	DFU	-	-

	bit 2	Job Cancel	Disabled (Not cancelled)	Enabled (Cancelled)
	<p>If this bit switch is enabled, all jobs will be cancelled after a jam occurs. Note: If this bitsw is enabled, printing under the following conditions might result in problems: - Job submission via USB or Parallel Port - Spool printing (WIM >Configuration > Device Settings > System)</p>			
	bit 3	PCL/PS bypass tray paper rotation (SEF/LEF)	Disabled	Enabled
	<p>This bitsw causes the device to revert to the behavior of previous generations. It only takes effect if "Bypass Tray Setting Priority" = "Driver/Command". Previous spec (bitsw=1): If a standard sized paper mismatch occurred in the bypass tray, the MFP always prompted for SEF paper. If this bitsw=0 (default) then in the event of a standard sized paper mismatch, the MFP will always prompt for paper of the rotation (SEF/LEF) determined by the MFP bypass tray paper setting or by the bypass tray sensor.</p>			
	bit 4	Timing of the PjL Status ReadBack (JOB END) when printing multiple collated copies.	Disabled	Enabled
	<p>This bitsw determines the timing of the PjL USTATUS JOB END sent when multiple collated copies are being printed. 0 (default): JOB END is sent by the device to the client after the first copy has completed printing. This causes the page counter to be incremented after the first copy and then again at the end of the job. 1: JOB END is sent by the device to the client after the last copy has finished printing. This causes the page counter to be incremented at the end of each job.</p>			

Appendix:
Service
Program
Mode Tables

	bit 5	Display UTF-8 text in the operation panel	Enabled	Disabled
		Enabled (=0): Text composed of UTF-8 characters can be displayed in the operation panel. Disabled (=1): UTF-8 characters cannot be displayed in the operation panel. For example, job names are sometimes stored in the MIB using UTF-8 encoded characters. When these are displayed on the operation panel, they will be garbled unless this BitSw is enabled (=0).		
	bit 6	DFU	-	-
	bit 7	Enable/Disable Print from USB/SD's Preview function	Enabled	Disabled
		Determines whether Print from USB/SD will have the Preview function. Enabled (=0): Print from USB/SD will have the Preview function. Disabled (=1): Print from USB/SD will not have the Preview function.		

1001	[Bit Switch]			
010	Bit Switch A		0	1
	bit 0	DFU	-	-
	bit 1	DFU	-	-
	bit 2	DFU	-	-
	bit 3	DFU	-	-
	bit 4	Not Used	-	-
	bit 5	Auto Job Promotion locks the queue	Queue is not locked after AJP	Queue locked after AJP
		If this is 1, then after a job is stored using Auto Job Promotion, new jobs cannot be added to the queue until the stored job has been completely printed.		

	bit 6	Allow use of Auto Job Promotion if connected to an external charge device.	Does not allow AJP with ECD	Allows AJP with ECD
	If this is 0, Auto Job Promotion will be automatically disabled if an external charge device is connected. Note: We do not officially support enabling this switch (1). Use it at your own risk.			
	bit 7	DFU	-	-

1001	[Bit Switch]				
011	Bit Switch B		0	1	
	bit 0	DFU	-	-	
	bit 1	DFU	-	-	
	bit 2	Not Used	-	-	
	bit 3	Not Used	-	-	
	bit 4	Not Used	-	-	
	bit 5	Not Used	-	-	
	bit 6	Not Used	-	-	
	bit 7	Not Used	-	-	

1001	[Bit Switch]				
012	Bit Switch C		0	1	
	bit 0	DFU	-	-	
	bit 1	Not Used	-	-	
	bit 2	Not Used	-	-	
	bit 3	Not Used	-	-	
	bit 4	Not Used	-	-	

Appendix:
Service
Program
Mode Tables

Printer SP Tables

	bit 5	Not Used	-	-
	bit 6	Not Used	-	-
	bit 7	Not Used	-	-

1003	[Clear Setting]			
001	Initialize System	*CTL	[- / - / -] [Execute]	
	Initializes settings in the "System" menu of the user mode.			
003	Delete Program	*CTL	[- / - / -] [Execute]	

1004	[Print Summary]			
	Prints the service summary sheet (a summary of all the controller settings).			
001	Service Summary	CTL	[- / - / -] [Execute]	
002	Service Summary 2	CTL	[- / - / -] [Execute]	

1005	[Display Version]			
001	Printer Version	CTL	[- / - / -]	
	Displays the version of the controller firmware.			

1006	[Sample / Proof Print]			
001	-	*CTL	[0 or 1 / 0 / 1 / step]	
	-			

1110	[Media Print Device Setting]		
	Selects the setting for the media print device.		
002	0: Disable 1: Enable	*CTL	[0 or 1 / 1 / 1 / step]

1111	[All Job Delete Mode]		
001	-	*CTL	[0 or 1 / 0 / 1 / step] 0: Excluding New Job 1: Including New Job
	Selects whether to include an image processing job in jobs subject to full cancellation from the SCS job list.		

Appendix:
Service
Program
Mode Tables

Printer SP Tables

7910	[PDL]		
	-	CTL	[- / NULL / -]
001	RPCS 150 PS 151 RPDL 152 R98 153 R16 154 RPGL 155 R55 156 RTIFF 157 PCL 158 PCLXL 159 MSIS 160 MSIS(OPT) 161 PDF 162 BMLinkS 163 PICTBRIDGE 164 PJL 165 IPDS 166 MediaPrint:JPEG 167 MediaPrint:TIF 168 FONT 180 FONT1 181 FONT2 182 FONT3 183 FONT4 184 FONT5 185		

7911	[PDL Version]		
	-	CTL	[- / NULL / -]
001	RPCS 150 PS 151 RPDL 152 R98 153 R16 154 RPGL 155 R55 156 RTIFF 157 PCL 158 PCLXL 159 MSIS 160 MSIS(OPT) 161 PDF 162 BMLinkS 163 PICTBRIDGE 164 PJL 165 IPDS 166 MediaPrint:JPEG 167 MediaPrint:TIFF 168 FONT 180 FONT1 181 FONT2 182 FONT3 183 FONT4 184 FONT5 185		

Appendix:
Service
Program
Mode Tables

3.11 SCANNER SP TABLES

3.11.1 SP1-XXX (SYSTEM AND OTHERS)

D158/159

1001	[Scan Nv Version]		
	Displays the version of the scanner NV.		
005	-	*CTL	[- / - / -]

1005	[Erase Margin(Remote scan)]		
	Creates an erase margin for all edges of the scanned image. If the machine has scanned the edge of the original, create a margin. This SP is activated only when the machine uses TWAIN scanning.		
001	Range from 0 to 5 mm	*CTL	[0 to 5 / 0 / 1 mm / step]

1009	[Remote scan disable]	*CTL	[0 or 1 / 0 / 1 / step] 0: enable, 1: disable
001	Enable or disable remote scan.		

1010	[Non Display Clear Light PDF]	*CTL	[0 or 1 / 0 / 1 / step] 0: Display, 1: No display
001	Display or Nondisplay remote scan.		

1011	[Org Count Disp]	*CTL	[0 or 1 / 0 / 1 / step] 0:OFF, 1: ON
001	This SP codes switches the original count display on/off.		

1012	[User Info Release]	*CTL	[0 or 1 / 1 / 1 / step] 0: No, 1: Yes
001	<p>This SP code sets the machine to release or not release the following items at job end.</p> <ul style="list-style-type: none"> ▪ Destination (E-mail/Folder/CS) ▪ Sender name ▪ Mail Text ▪ Subject line ▪ File name 		
1013	[Scan to Media Device Setting]	*CTL	[0 or 1 / 1 / 1 / step] 0:OFF, 1:ON
002	<p>This SP code enables/disables the multi-media function option (USB 2.0/SD Slot) mounted on the front of the machine. Operators can scan documents to either an SD card or a USB memory device inserted into this unit. This SP must be enabled (set to "1") in order for the device to function.</p>		
1015	[Time Stamp to File Name]	*CTL	[0 or 1 / 1 / 1 / step] 0: Disable, 1: Enable
001	<p>This SP code enables/disables to give a file name consisting of time and date of scanning when sending scanned file by E-mail, or sending to a folder.</p>		

3.11.2 SP2-XXX (SCANNING-IMAGE QUALITY)

D158/D159

2021	[Compression Level (Gray-scale)]		
	Selects the compression ratio for grayscale processing mode (JPEG) for the five settings that can be selected at the operation panel.		
001	Comp1:5-95	*CTL	[5 to 95 / 20 / 1 / step]
002	Comp2:5-95		[5 to 95 / 40 / 1 / step]
003	Comp3:5-95		[5 to 95 / 65 / 1 / step]
004	Comp4:5-95		[5 to 95 / 80 / 1 / step]
005	Comp5:5-95		[5 to 95 / 95 / 1 / step]

2024	[Compression ratio of ClearLight PDF]		
	Selects the compression ratio for clearlight PDF for the two settings that can be selected at the operation panel.		
001	Compression Ratio (Normal image)	*CTL	[5 to 95 / 25 / 1 / step]
002	Compression Ratio (High)		[5 to 95 / 20 / 1 / step]

2025	[Compression ratio of ClearLightPDF JPEG2000]		
	Selects the compression ratio for clearlight PDF for the two settings that can be selected at the operation panel.		
001	Compression Ratio (Normal) JPEG2000	*CTL	[5 to 95 / 25 / 1 / step]
002	Compression Ratio (High) JPEG2000		[5 to 95 / 20 / 1 / step]

3.12 TEST PATTERN PRINTING

3.12.1 D158/D159

Printing Test pattern: SP2-109

Some of these test patterns are used for copy image adjustments but most are used primarily for design testing.

Note

- Do not operate the machine until the test pattern is printed out completely. Otherwise, an SC occurs.
1. Enter the SP mode and select **SP2-109-001**.
 2. Enter the number for the test pattern that you want to print and press [#].
 3. When you want to change the density of printing a test pattern, select the density with SP2-109-002.
 4. When you are prompted to confirm your selection, touch "Yes" to select the test pattern for printing.
 5. Touch "Copy Window" to open the copy window, then select the settings for the test print (paper size etc.).
 6. Press the "Start" key to start the test print.
 7. After checking the test pattern, touch "SP Mode" on the LCD to return to the SP mode display.
 8. Reset all settings to the default values.
 9. Touch "Exit" twice to exit SP mode.

No.	Pattern	No.	Pattern
0	(No print)	10	Trimming Area
1	Vertical Lines (Single Dot)	11	Argyle Pattern (Single Dot)
2	Horizontal Lines (Single Dot)	12	Grayscales (Horizontal)
3	Vertical Lines (Double Dot)	13	Grayscales (Vertical)
4	Horizontal Lines (Double Dot)	14	Grayscales (Vertical/Horizontal)
5	Grid Pattern (Single Dot)	15	Grayscales (Vertical/Horizontal Overlay)
6	Grid Pattern (Double Dot)	16	Grayscales With White Lines (Horizontal)

Test Pattern Printing

7	Alternating Dot Pattern	17	Grayscales with White Lines (Vertical)
8	Isolated one dot	18	Grayscales with White Lines (Vertical/Horizontal)
9	Black Band (Horizontal)	-	-

3.12.2 D160/D161/D170

Printing Test pattern: SP5-902

Some of these test patterns are used for copy image adjustments but most are used primarily for design testing.

Note

- Do not operate the machine until the test pattern is printed out completely. Otherwise, an SC occurs.
1. Enter the SP mode and select **SP5-902-001**.
 2. Enter the number for the test pattern that you want to print and press [#].
 3. When you are prompted to confirm your selection, touch "Yes" to select the test pattern for printing.
 4. Touch "Copy Window" to open the copy window, then select the settings for the test print (paper size etc.).
 5. Press the "Start" key to start the test print.
 6. After checking the test pattern, touch "SP Mode" on the LCD to return to the SP mode display.
 7. Reset all settings to the default values.
 8. Touch "Exit" twice to exit SP mode.

No.	Pattern	No.	Pattern
0	None	11	Independent Pattern (1dot)
1	Vertical Line (1dot)	12	Independent Pattern (2dot)
2	Vertical Line (2dot)	13	Independent Pattern (4dot)
3	Horizontal Line (1dot)	14	Trimming Area
4	Horizontal Line (2dot)	15	Black Band (Horizontal)
5	Grid Vertical Line	16	Black Band (Vertical)

6	Grid Horizontal Line	17	Checker Flag Pattern
7	Grid Pattern Small	18	Grayscale (Vertical)
8	Grid Pattern Large	19	Grayscale (Horizontal)
9	Argyle Pattern Small	20	Full Dot Pattern
10	Argyle Pattern Large	21	All White Pattern

D684
ARDF DF2020

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

ARDF DF2020 (D684)

TABLE OF CONTENTS

1. ARDF DF2020 (D684)	1
1.1 COVERS AND TRAY	1
1.1.1 REAR COVER	1
1.1.2 FRONT COVER AND ORIGINAL TRAY	2
1.2 DOCUMENT FEED COMPONENTS	3
1.2.1 ORIGINAL FEED UNIT	3
1.2.2 PICK-UP ROLLER	3
1.2.3 FEED BELT	4
1.2.4 SEPARATION ROLLER	5
1.3 ELECTRICAL COMPONENTS	6
1.3.1 ARDF DRIVE BOARD AND DF POSITION SENSOR	6
1.3.2 ORIGINAL LENGTH SENSORS AND ORIGINAL SENSOR	7
1.3.3 ORIGINAL SET SENSOR	8
1.3.4 ORIGINAL SIZE SENSORS AND SKEW CORRECTION SENSOR ..	10
1.3.5 STAMP SOLENOID	12
1.3.6 ORIGINAL EXIT SENSOR	14
1.3.7 REGISTRATION SENSOR	15
1.3.8 ARDF COVER SWITCH	15
1.4 ORIGINAL FEED DRIVE	16
1.4.1 FEED MOTOR	16
1.4.2 PICK-UP SOLENOID	18
1.4.3 INVERTER SOLENOID	18
1.4.4 FEED CLUTCH	19
1.4.5 TRANSPORT MOTOR	20


1. ARDF DF2020 (D684)

ARDF
DF2020
(D684)



1.1 COVERS AND TRAY

1.1.1 REAR COVER

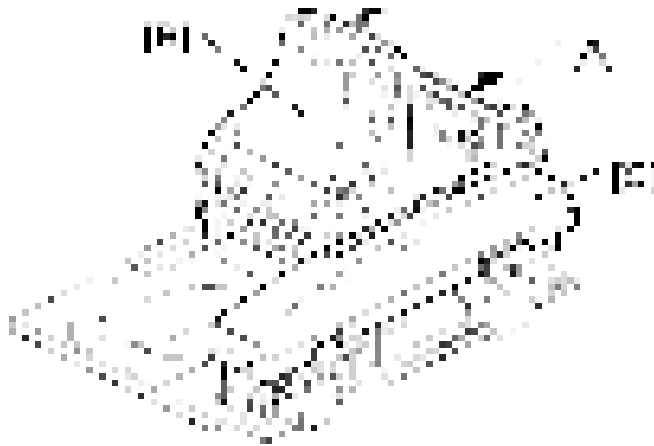1. Open the left cover [A].
2. Open the original tray [B].
3. Rear cover [C] (■ x 1, hook x 6)





1.1.2 FRONT COVER AND ORIGINAL TRAY

1. Open the left cover.
2. Rear cover ( p.1 "Rear Cover")
3. Front cover [A] ( x 1)



 **Note**

- Keep the original tray open when you remove the front cover.

4. Original tray [B] ( x 1,  x 1)



1.2 DOCUMENT FEED COMPONENTS

1.2.1 ORIGINAL FEED UNIT

1. Open the left cover.
2. Original feed unit [A].




1.2.2 PICK-UP ROLLER

1. Open the left cover.
2. Original feed unit (p.3 "Original Feed Unit")
3. Pick-up roller [A] (x 1)



1.2.3 FEED BELT


1. Open the left cover.
2. Original feed unit (p.3 "Original Feed Unit")
3. Feed belt cover [A] (spring x 1)

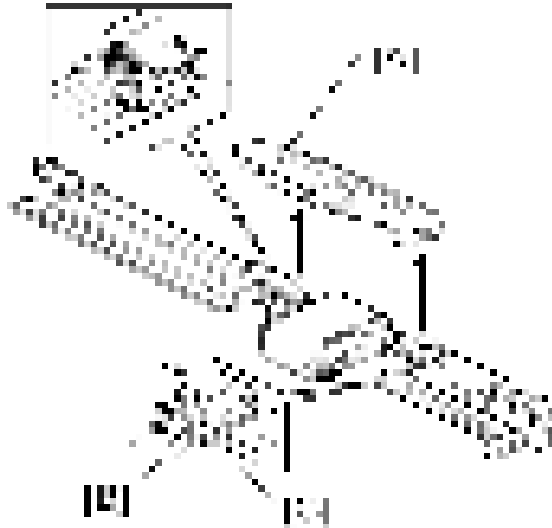

Note

- When reassembling the feed belt cover, make sure that the projection [B] of the feed belt cover is on the guide plate rear [C].

4. Belt tension unit [D]

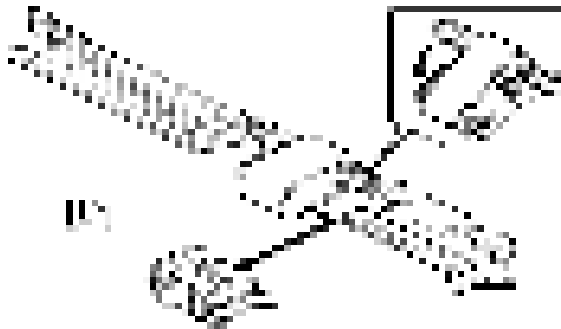

5. Feed belt [E].



1.2.4 SEPARATION ROLLER

1. Original Feed Unit (see p.3 "Original Feed Unit")
2. Separation roller cover [A].




3. Separation roller [B] (⊗ x 1)



1.3 ELECTRICAL COMPONENTS

1.3.1 ARDF DRIVE BOARD AND DF POSITION SENSOR


1. Rear cover (p.1 "Rear Cover")
2. ARDF drive board [A] (x 3, all s)

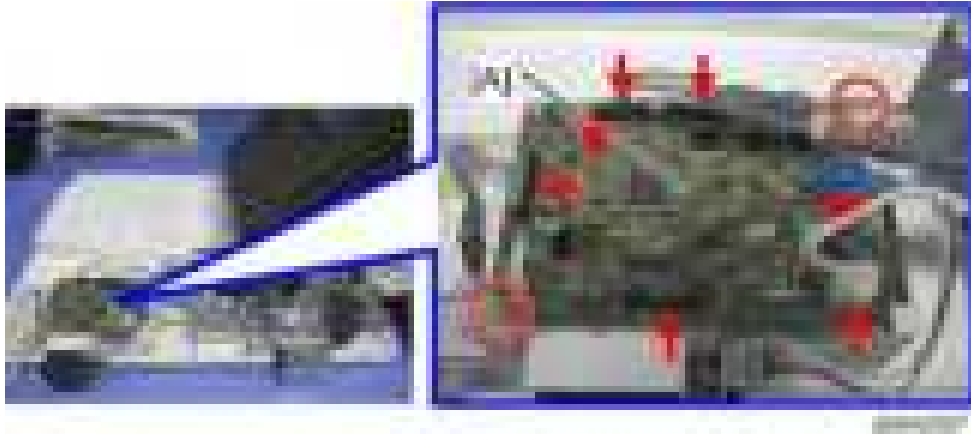

3. DF position sensor with bracket [B] (x 1, x 1)



4. DF position sensor [C] (hook x 2)

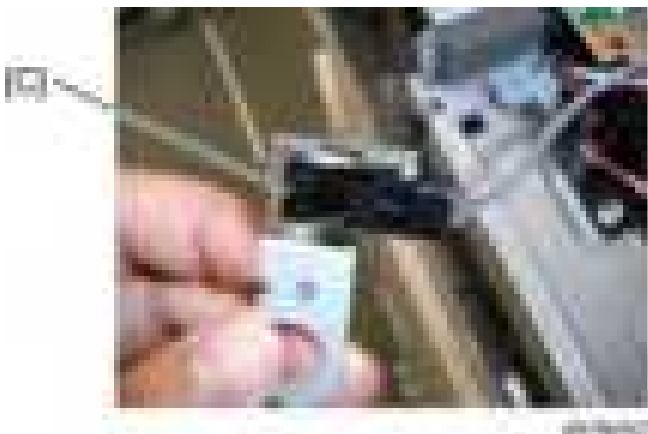


1.3.2 ORIGINAL LENGTH SENSORS AND ORIGINAL SENSOR

1. Original Tray (p.2 "Front Cover and Original Tray")
2. Tray cover [A] (x 3)



3. Original sensor [B] (x 1)
4. Original length sensors [C] (x 1 each)

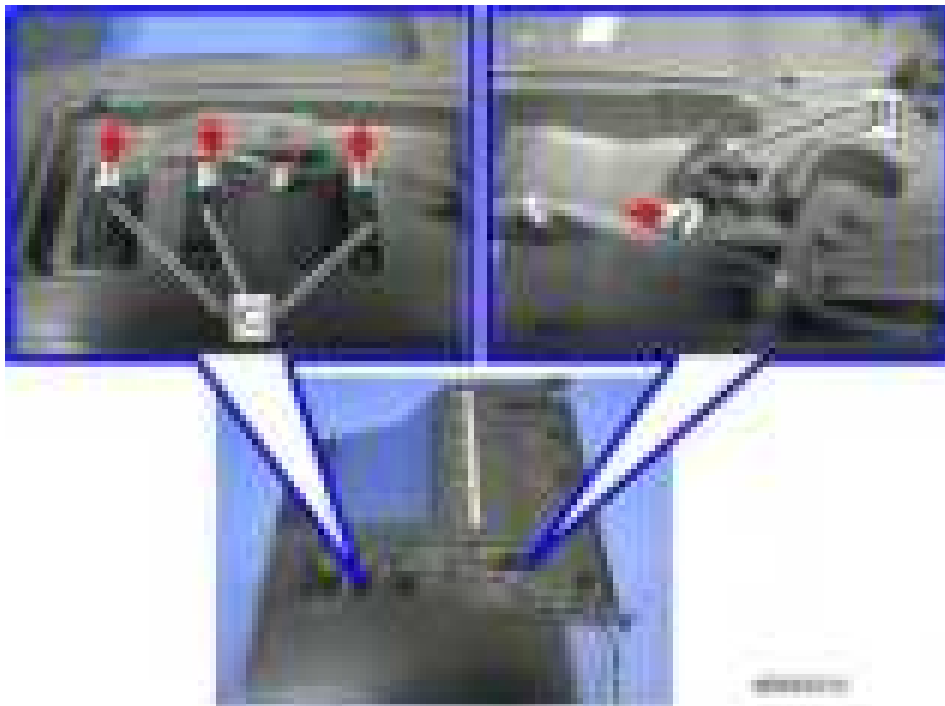

1.3.3 ORIGINAL SET SENSOR


1. Open the left cover.
2. Original feed unit (p.3 "Original Feed Unit")
3. Original tray (p.2 "Front Cover and Original Tray")
4. Original feed-in guide plate [A] (x 3).




5. Feed guide [A]



6. Original turn guide plate [A] (hook x 1).

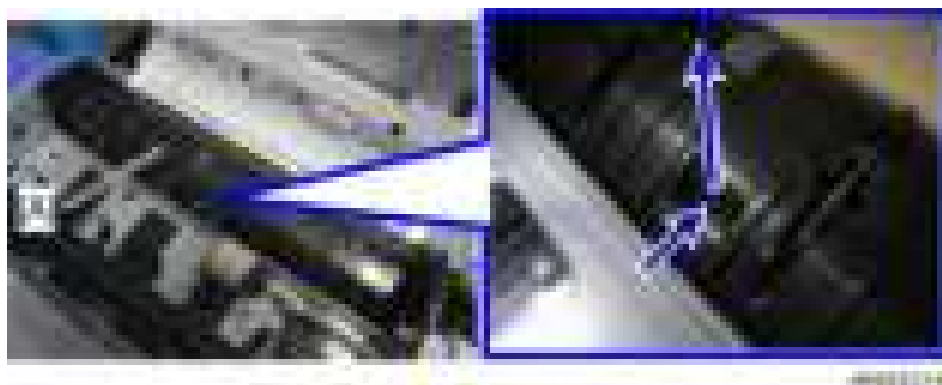

ARDF
DF2020
(D684)

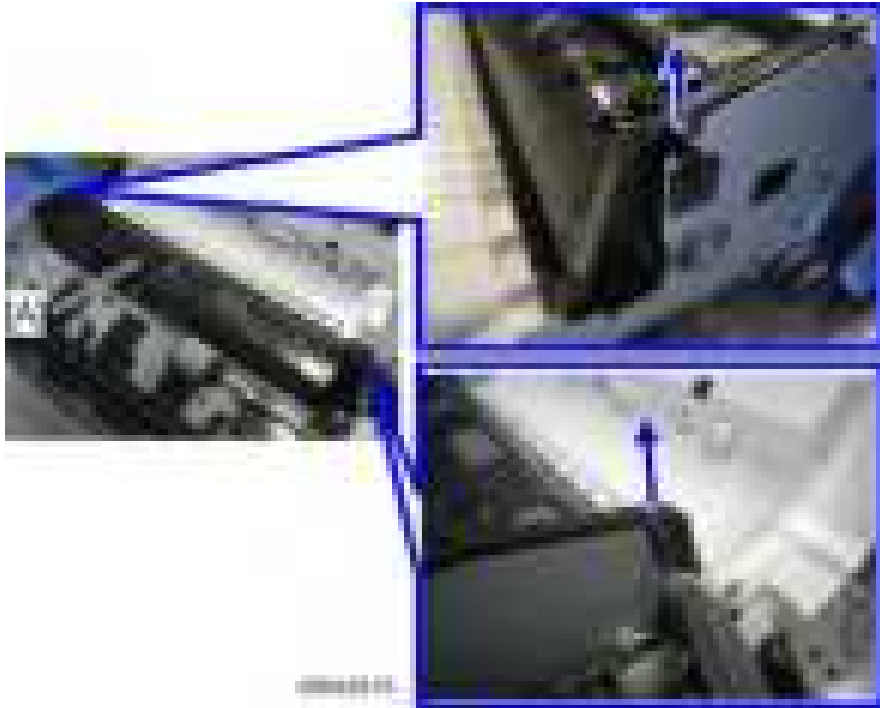

7. Original set sensor bracket [A] (x 1)



8. Original set sensor [A]



1.3.4 ORIGINAL SIZE SENSORS AND SKEW CORRECTION SENSOR


1. Open the left cover.
2. Original feed unit (p.3 "Original Feed Unit")
3. Original tray (p.2 "Front Cover and Original Tray")
4. Original feed-in guide plate [A] (x 3).




5. Feed guide [A]




6. Original turn guide plate [A] (hook x 1).

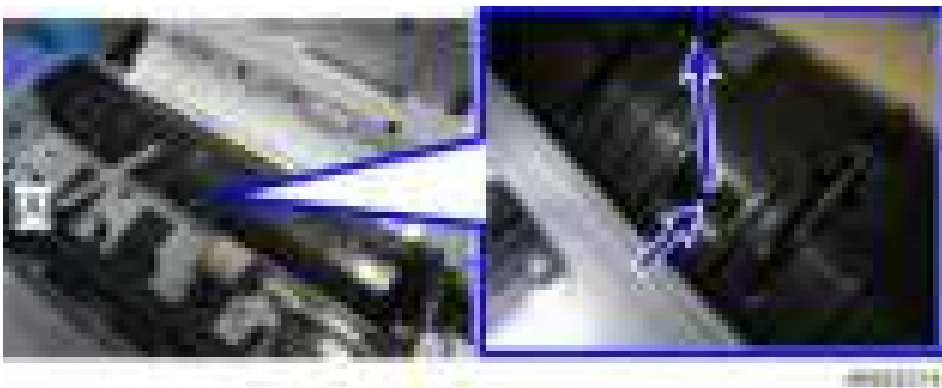

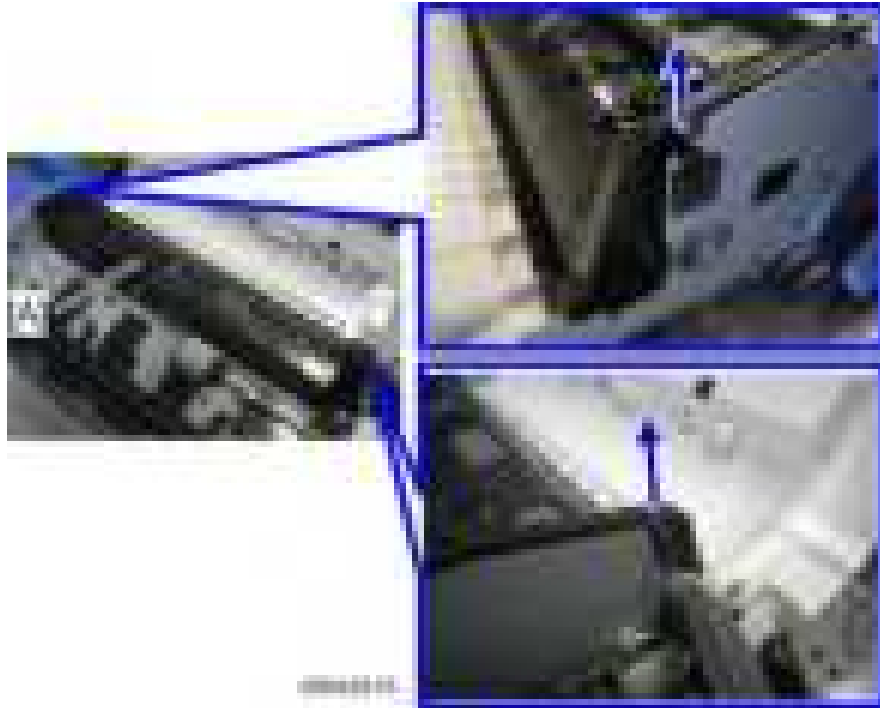

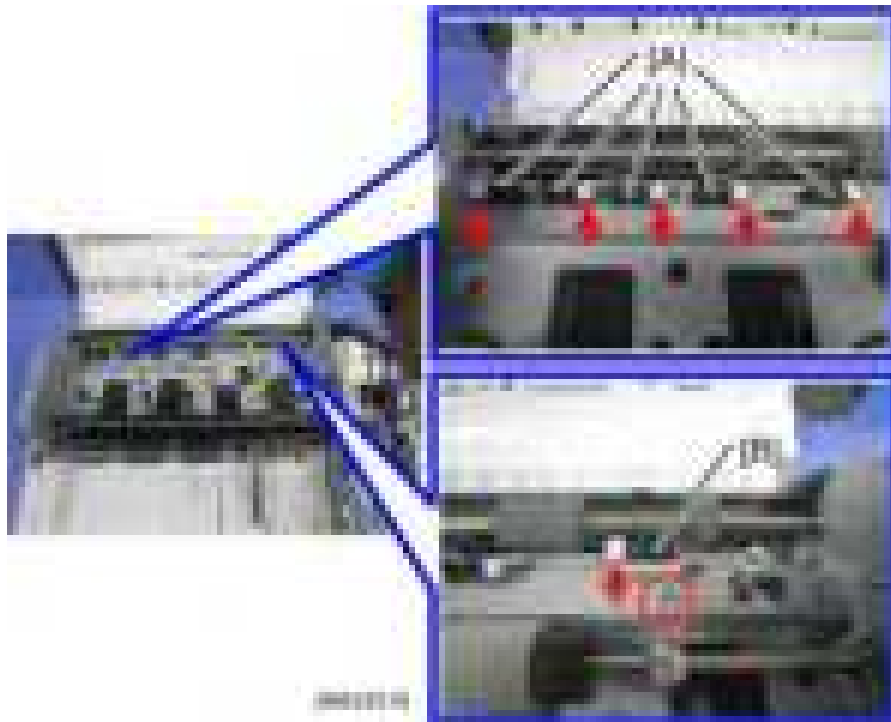


7. Original width sensors [A] (📷 x 1 each) and skew correction sensor [B] with bracket (📷 x 1, 📷 x 1)




1.3.5 STAMP SOLENOID

1. Rear cover ( p.1 "Rear Cover")
2. Stamp solenoid harness [A] ( x 1,  x 1)



3. Open the ARDF.
4. Remove the platen sheet [A].



5. Stamp solenoid cover [A] ( x 1)



6. Stamp solenoid [A] ( x 1)



7. Pull out the harness [A].




1.3.6 ORIGINAL EXIT SENSOR

1. Open the left cover.
2. Original feed unit (p.3 "Original Feed Unit")
3. Original tray (p.2 "Front Cover and Original Tray")
4. Original feed-in guide plate (p.8 "Original Set Sensor")
5. The Original Exit Sensor is located in the ARDF mainframe [A].



6. Original exit sensor bracket [A]

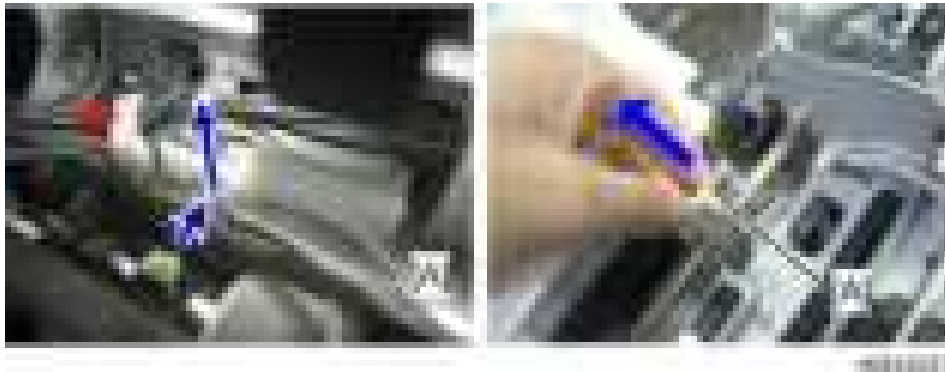

7. Original exit sensor [A]



1.3.7 REGISTRATION SENSOR

1. Open the left cover.
2. Original feed unit (p.3 "Original Feed Unit")
3. Original tray (p.2 "Front Cover and Original Tray")
4. Original feed-in guide plate (p.8 "Original Set Sensor")
5. Registration sensor [A] (x 1)





1.3.8 ARDF COVER SWITCH

1. Rear cover (p.1 "Rear Cover")
2. ARDF Cover Switch [A] (x 2)




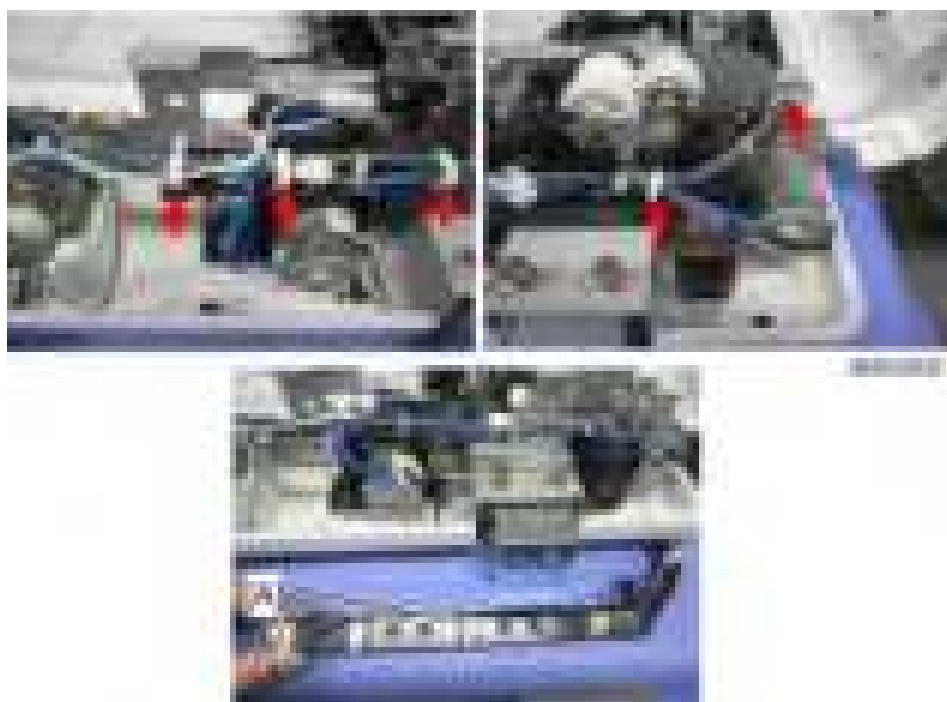
1.4 ORIGINAL FEED DRIVE

1.4.1 FEED MOTOR

1. Rear cover ( p.1 "Rear Cover")
2. Feed motor harness [A] ( x 1)



3. Harness guide [A] ( x 5)




4. Feed motor with bracket [A] ( x 2, spring [B] x 1)

ARDF
DF2020
(D684)



5. Feed motor [A] (x 2)

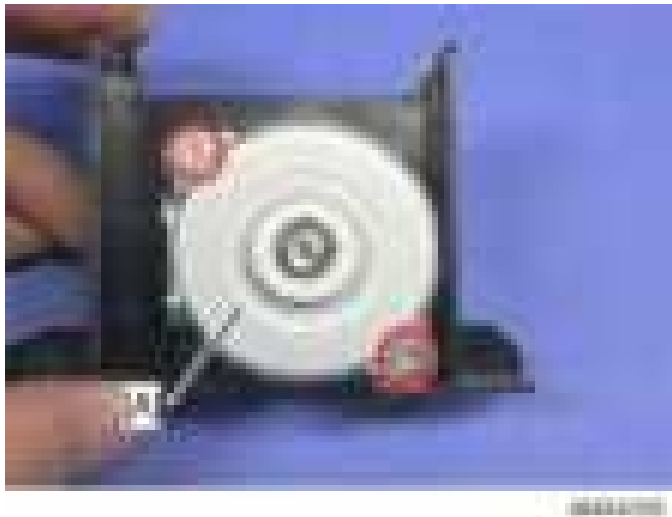

1.4.2 PICK-UP SOLENOID

1. Rear cover (p.1 "Rear Cover")
2. Harness guide (p.16 "Feed Motor")
3. Pick-up solenoid [B] (x 2, x 1)



1.4.3 INVERTER SOLENOID


1. Rear cover (p.1 "Rear Cover")
2. Harness guide (p.16 "Feed Motor")
3. Inverter solenoid [A] (x 2, x 1, x 1, gear x 1, gear cover x 1)



ARDF
DF2020
(D684)

1.4.4 FEED CLUTCH

- 1. Rear cover (p.1 "Rear Cover")
- 2. Harness guide (p.16 "Feed Motor")
- 3. Bracket [A] (x 2, x 3, x 1, bushing x 1, spring x 1)

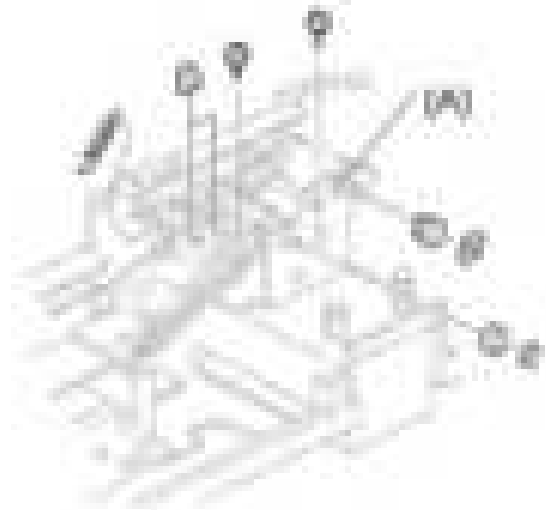


- 4. Slide the bracket.
- 5. Feed clutch [B] (x 1)



1.4.5 TRANSPORT MOTOR

1. Rear cover (p.1 "Rear Cover")
2. Harness guide (p.16 "Feed Motor")
3. Transport motor [A] (x 2, x 1)

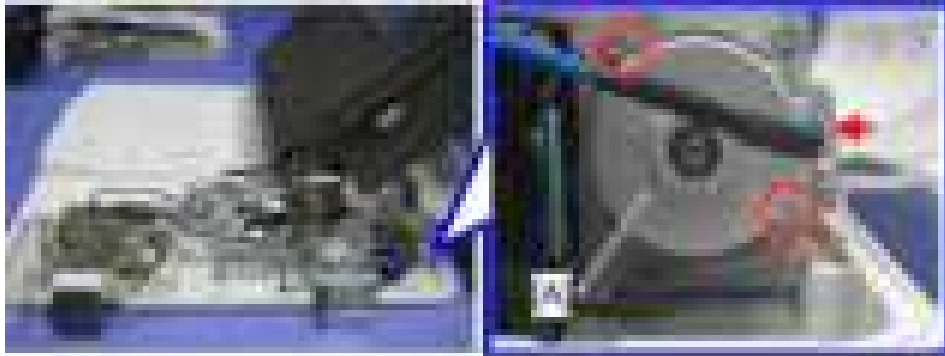

D724
ARDF DF2030

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

ARDF DF2030 (D724)

TABLE OF CONTENTS

1. ARDF DF2030 (D724)	1
1.1 COVERS AND TRAY	1
1.1.1 REAR COVER	1
1.1.2 FRONT COVER AND ORIGINAL TRAY	2
1.2 DOCUMENT FEED COMPONENTS	3
1.2.1 ORIGINAL FEED UNIT	3
1.2.2 PICK-UP ROLLER	3
1.2.3 FEED BELT	4
1.2.4 SEPARATION ROLLER	5
1.3 ELECTRICAL COMPONENTS	6
1.3.1 ARDF DRIVE BOARD AND DF POSITION SENSOR	6
1.3.2 ORIGINAL LENGTH SENSORS AND ORIGINAL SENSOR	7
1.3.3 ORIGINAL SET SENSOR	8
1.3.4 ORIGINAL SIZE SENSORS AND SKEW CORRECTION SENSOR	9
1.3.5 STAMP SOLENOID AND ORIGINAL EXIT SENSOR	10
1.3.6 REGISTRATION SENSOR	11
1.4 ORIGINAL FEED DRIVE	12
1.4.1 FEED MOTOR	12
1.4.2 PICK-UP SOLENOID	13
1.4.3 INVERTER SOLENOID	14
1.4.4 FEED CLUTCH	15
1.4.5 TRANSPORT MOTOR	16

1. ARDF DF2030 (D724)

ARDF
DF2030
(D724)



1.1 COVERS AND TRAY

1.1.1 REAR COVER

1. Open the left cover [A].
2. Open the original tray [B].
3. Rear cover [C] (■ x 1, hook x 6)





1.1.2 FRONT COVER AND ORIGINAL TRAY

1. Open the left cover.
2. Rear cover ( p.1 "Rear Cover")
3. Front cover [A] ( x 1)



 **Note**

- Keep the original tray open when you remove the front cover.

4. Original tray [B] ( x 1,  x 1)



1.2 DOCUMENT FEED COMPONENTS

1.2.1 ORIGINAL FEED UNIT

1. Open the left cover.
2. Original feed unit [A].




1.2.2 PICK-UP ROLLER

1. Open the left cover.
2. Original feed unit (see p.3 "Original Feed Unit")
3. Pick-up roller [A] (④ x 1)



1.2.3 FEED BELT


1. Open the left cover.
2. Original feed unit (p.3 "Original Feed Unit")
3. Feed belt cover [A] (spring x 1)

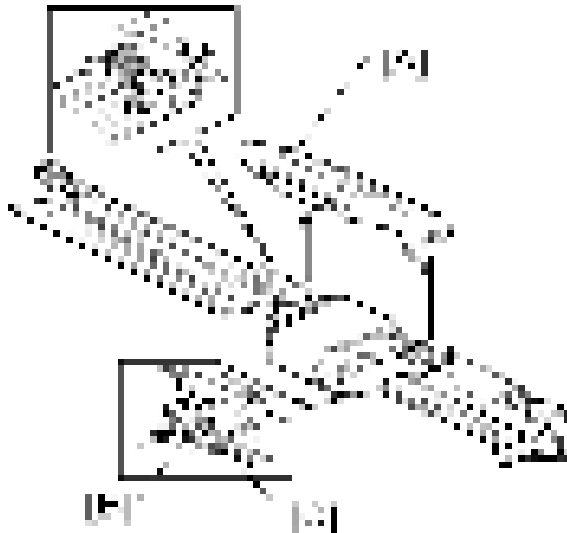

Note

- When reassembling the feed belt cover, make sure that the projection [B] of the feed belt cover is on the guide plate rear [C].

4. Belt tension unit [D]

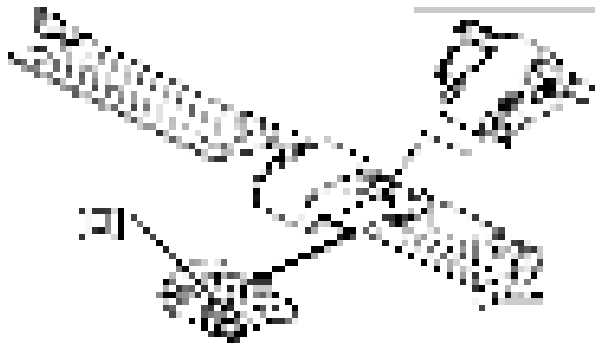

5. Feed belt [E].



1.2.4 SEPARATION ROLLER

1. Original Feed Unit (see p.3 "Original Feed Unit").
2. Separation roller cover [A].




3. Separation roller [B] (see icon x 1)



1.3 ELECTRICAL COMPONENTS

1.3.1 ARDF DRIVE BOARD AND DF POSITION SENSOR

1. Rear cover (p.1 "Rear Cover")
2. ARDF drive board [A] (x 3, all s)

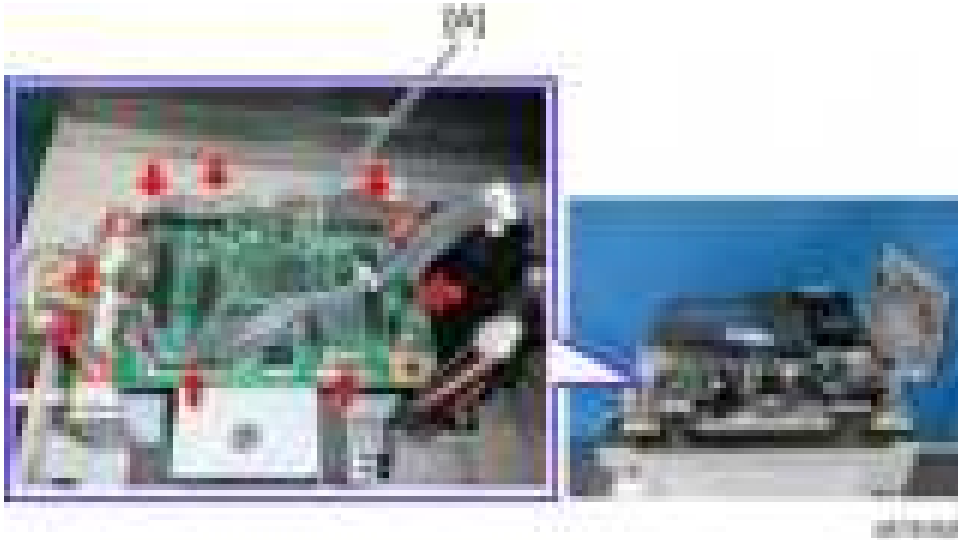

3. DF position sensor with bracket [B] (x 1, x 1)




4. DF position sensor [C] (hook x 2)



1.3.2 ORIGINAL LENGTH SENSORS AND ORIGINAL SENSOR

1. Original Tray (p.2 "Front Cover and Original Tray")
2. Tray cover [A] (x 3)
3. Original sensor [B] (x 1)
4. Original length sensors [C] (x 1 each)

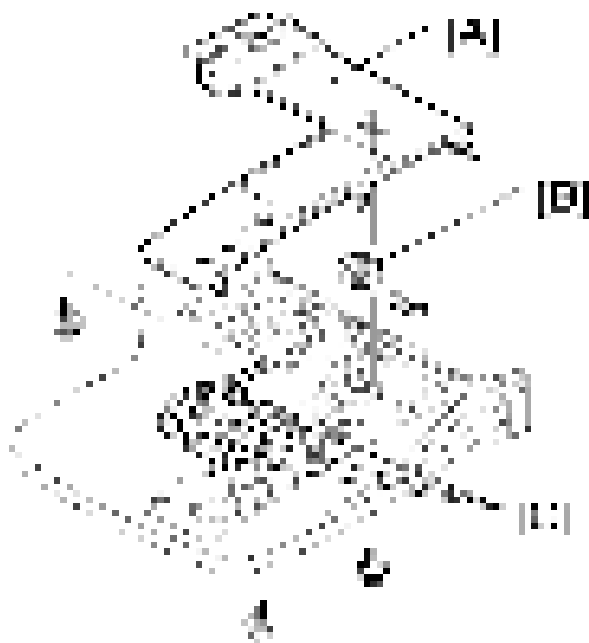


1.3.3 ORIGINAL SET SENSOR

1. Open the left cover.
2. Original feed unit (p.3 "Original Feed Unit")
3. Original tray (p.2 "Front Cover and Original Tray")
4. Original feed-in guide plate [A] (x 3).
5. Original set sensor bracket [B] (x 1)
6. Original set sensor [C]




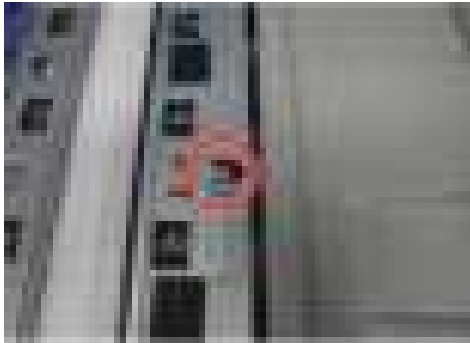
1.3.4 ORIGINAL SIZE SENSORS AND SKEW CORRECTION SENSOR

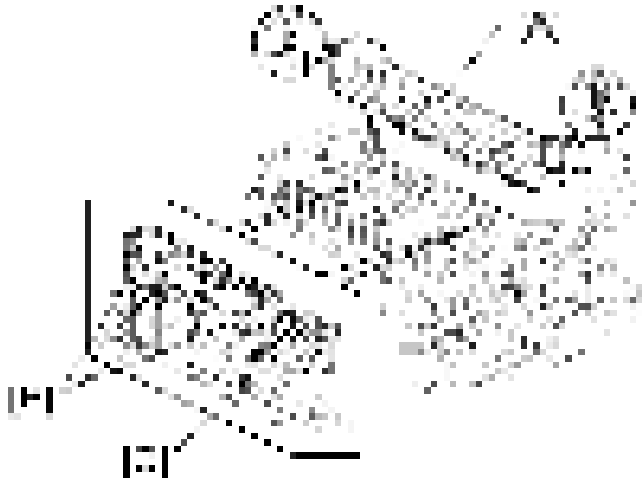


1. Original feed-in guide plate (p.3 "Original Feed Unit")
2. Original turn guide plate [A] (hook x 1).
3. Original width sensors [B] (x 1 each) and skew correction sensor [C] with bracket (x 1, x 1)



1.3.5 STAMP SOLENOID AND ORIGINAL EXIT SENSOR

1. Open the ARDF.
2. Remove the left edge of the platen sheet.
3. Remove the screw ( x 1).



4. Release the hook [A].
5. Open the original exit guide plate [B]
6. Stamp solenoid [C] ( x 1,  x 1)
7. Original exit sensor [D] ( x 1, hook x 1)



1.3.6 REGISTRATION SENSOR

1. Open the left cover.
2. Original feed unit (p.3 "Original Feed Unit")
3. Original tray (p.2 "Front Cover and Original Tray")
4. Original feed-in guide plate (p.8 "Original Set Sensor")
5. Registration sensor [A] (x 1)



1.4 ORIGINAL FEED DRIVE

1.4.1 FEED MOTOR

1. Rear cover (p.1 "Rear Cover")
2. Feed motor with bracket [A] (x 2, x 1, spring x 1)
3. Feed motor [B] (x 2)




ARDF
DF2030
(D724)

1.4.2 PICK-UP SOLENOID

1. Rear cover (p.1 "Rear Cover")
2. Harness guide [A] (all s)



3. Pick-up solenoid [B] (x 2, x 1)

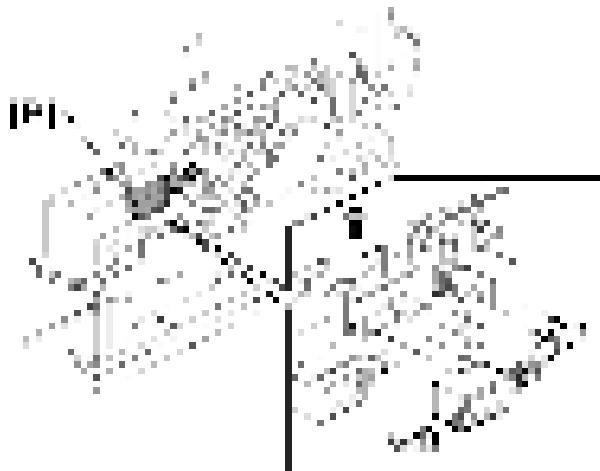






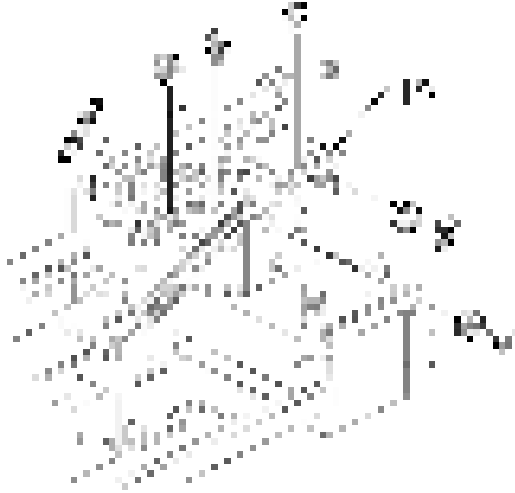
1.4.3 INVERTER SOLENOID


1. Rear cover (p.1 "Rear Cover")
2. Harness guide (p.13 "Pick-up Solenoid")
3. Inverter solenoid [A] (x 2, x 1, x 1, gear x 1, gear cover x 1)




1.4.4 FEED CLUTCH

1. Rear cover ( p.1 "Rear Cover")
2. Harness guide ( p.13 "Pick-up Solenoid")
3. Bracket [A] ( x 2,  x 3,  x 1, bushing x 1, spring x 1)



4. Slide the bracket.
5. Feed clutch [B] ( x 1)

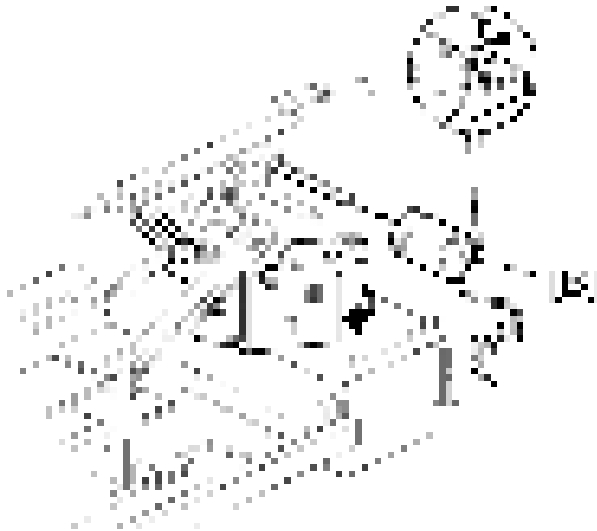

1.4.5 TRANSPORT MOTOR

1. Rear cover (p.1 "Rear Cover")
2. Harness guide (p.13 "Pick-up Solenoid")
3. Left cover sensor with bracket [A] (x 1, x 1)
4. Transport motor with bracket [B] (x 2, x 1, spring x 1)
5. Transport motor [C] (x 2)



D697

1 BIN TRAY BN2010

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

1 BIN TRAY BN2010 (D697)

TABLE OF CONTENTS

1. REPLACEMENT AND ADJUSTMENTS.....	1
1.1 ELECTRICAL COMPONENTS	1
1.1.1 LED LAMP	1
1.1.2 DOOR OPEN SWITCH.....	2
1.1.3 PAPER SENSOR.....	3
1.1.4 MAIN BOARD	4
1.1.5 TRANSPORT MOTOR	5

SAFETY AND SYMBOLS


Replacement Procedure Safety

CAUTION

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.

Symbols Used in this Manual


This manual uses the following symbols.

: See or Refer to

: Screws

: Connector


: Clip ring


: E-ring



1. REPLACEMENT AND ADJUSTMENTS


1.1 ELECTRICAL COMPONENTS

1.1.1 LED LAMP

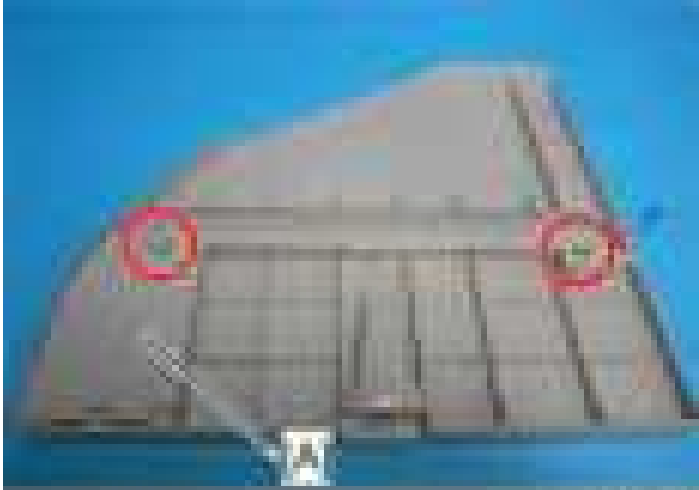1. Sensor cover [A] ( x 2)



2. Pull out the plastic board [B] from the LED lamp [A] ( x 1,  x 1).

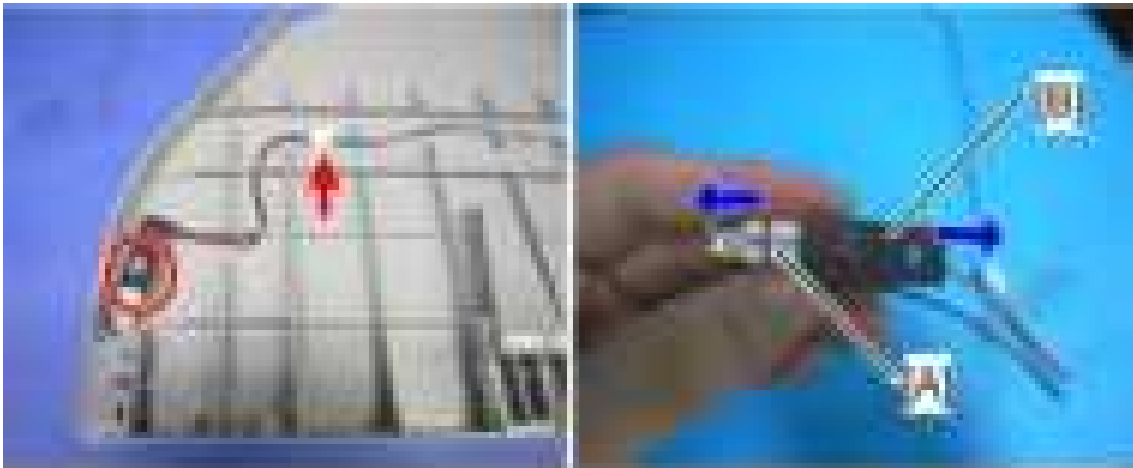



1.1.2 DOOR OPEN SWITCH

1. Open the 1-bin tray.



2. 1-bin top cover [A] ( x 3)

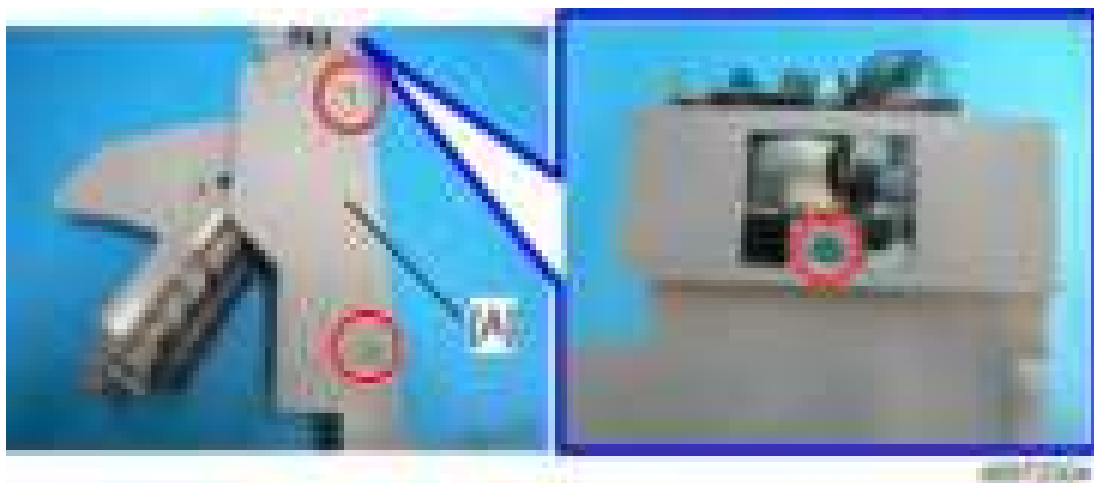

3. Door open switch [A] ( x 1)



1.1.3 PAPER SENSOR


1. Open the 1-bin tray.





2. Push the tab [A] as shown by the arrow in the picture below and open the 1-bin lower cover.

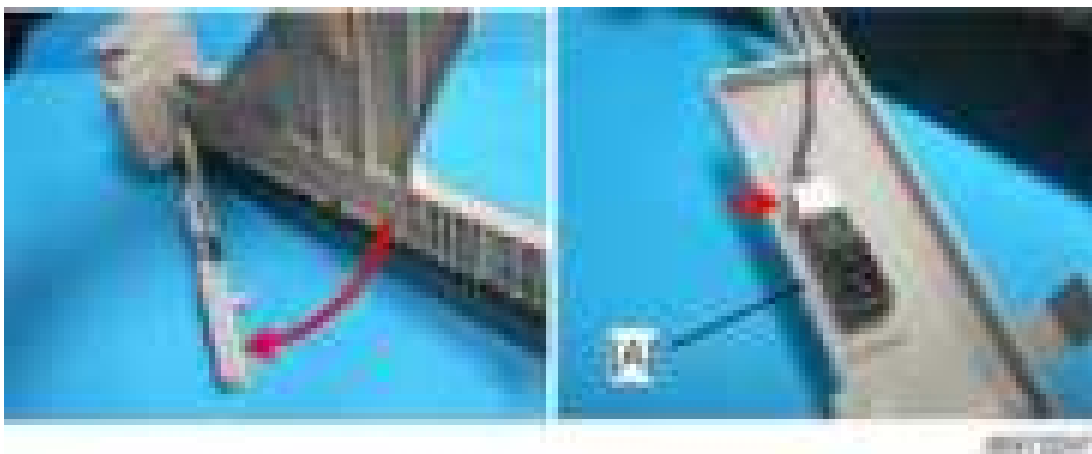


3. Paper sensor [A] (x 1)



1.1.4 MAIN BOARD


1. Main board [A] ( x 4,  x 3)

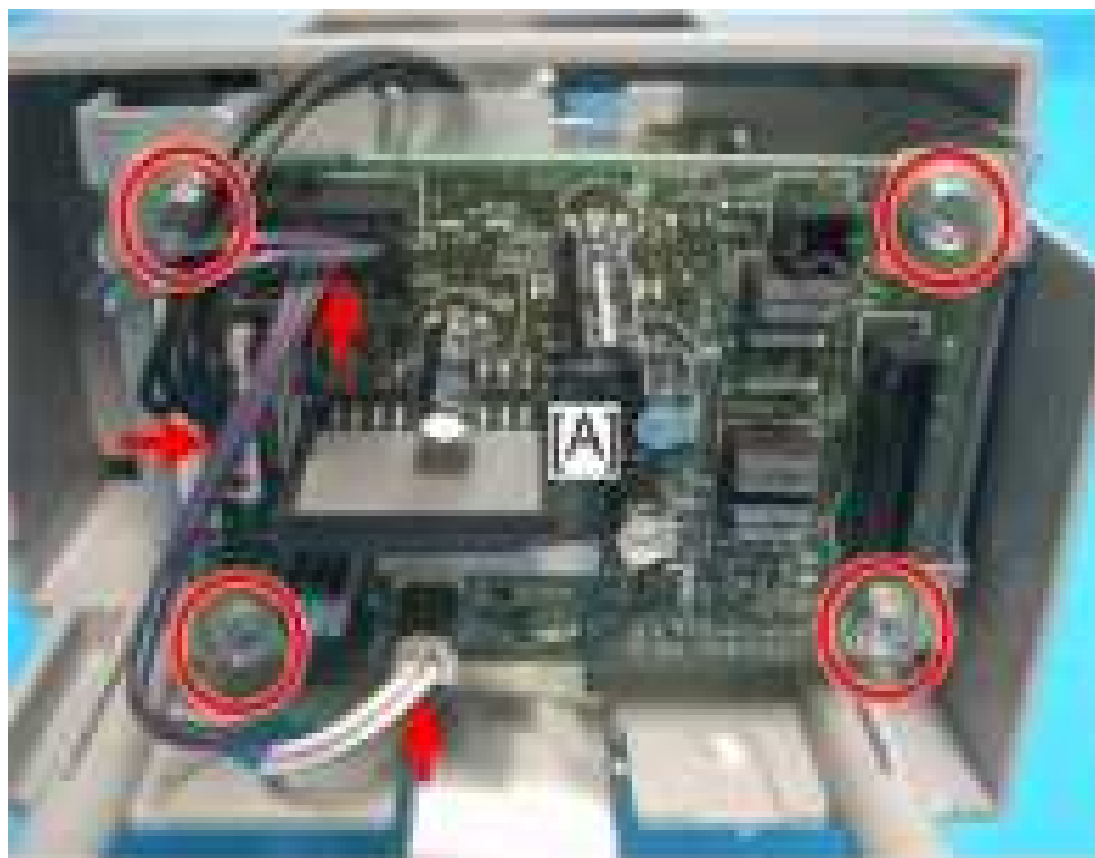



©6972008


1.1.5 TRANSPORT MOTOR

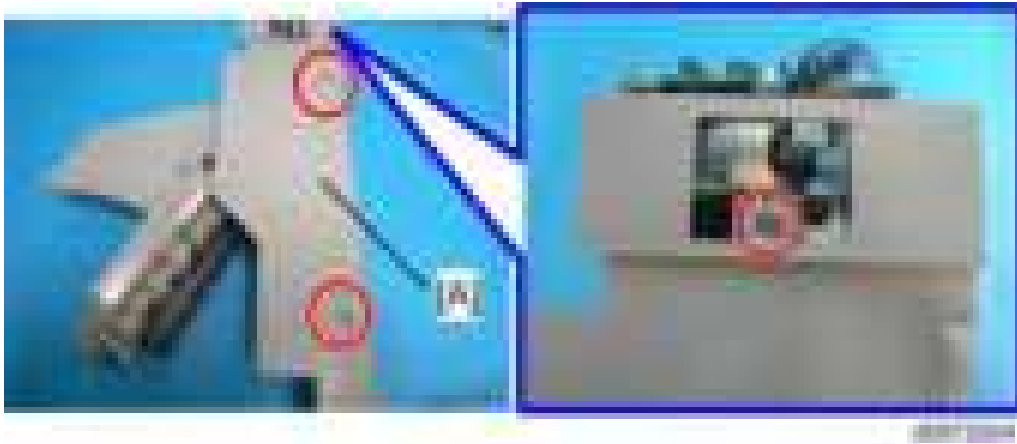1. 1-bin top cover [A] ( x 3)



1. Main board [A] ( x 4,  x 3)



2. Transport motor [A] ( x 2)



D698

ONE TRAY PAPER FEED UNIT PB2000

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

ONE TRAY PAPER FEED UNIT PB2000 (D698)

TABLE OF CONTENTS

1. REPLACEMENT AND ADJUSTMENTS.....	1
1.1 COVERS AND ROLLER.....	1
1.1.1 COVERS.....	1
1.1.2 FEED ROLLER.....	1
1.2 MOTORS AND CLUTCH.....	2
1.2.1 TRAY LIFT MOTOR.....	2
1.2.2 TRANSPORT MOTOR.....	4
1.2.3 PAPER FEED CLUTCH.....	6
1.2.4 MAIN BOARD.....	6
1.3 SENSORS AND BOARD.....	7
1.3.1 PAPER END SENSOR.....	7
1.3.2 PAPER SIZE SENSORS.....	8
1.3.3 TRAY MAIN BOARD.....	8

SAFETY AND SYMBOLS

Replacement Procedure Safety

CAUTION

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.


Symbols Used in this Manual


This manual uses the following symbols.

: Clip ring

: Screws

: Connector


: Clamp

: E-ring

1. REPLACEMENT AND ADJUSTMENTS


1.1 COVERS AND ROLLER

1.1.1 COVERS

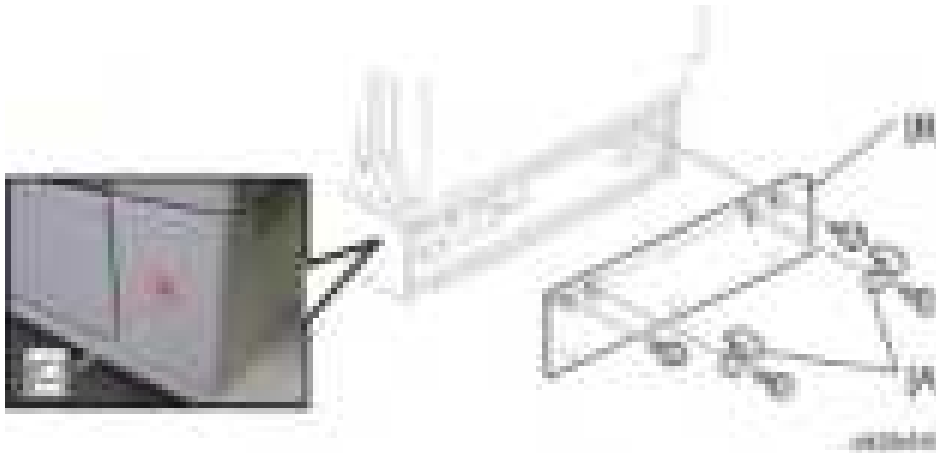

1. Securing brackets [A] (☞ x 1 each)
2. Rear cover [B] (☞ x 2)
3. Rear right cover [C] (☞ x 1)

1.1.2 FEED ROLLER

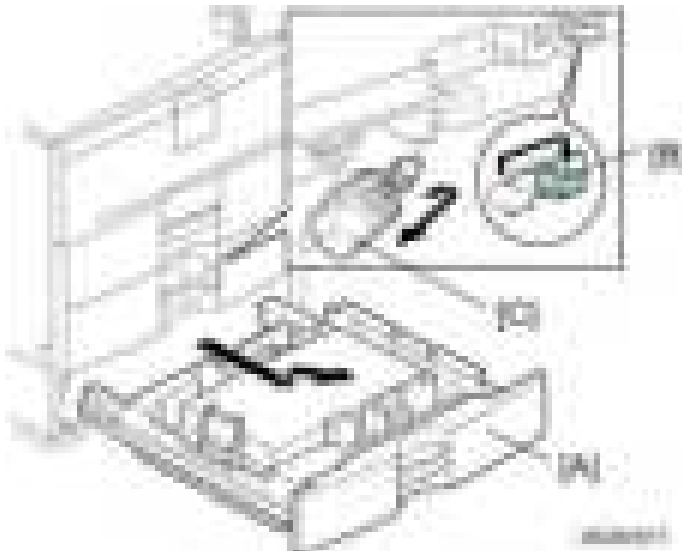

1. Pull out the tray [A]
2. Release the lock lever [B]
3. Feed roller [C]


1.2 MOTORS AND CLUTCH

⚠ CAUTION

- Turn off the main power switch and unplug the machine before beginning any of the procedures in this section.

1.2.1 TRAY LIFT MOTOR

1. Rear Cover (p.1 "Covers")
2. Tray lift motor with the bracket [A] (x 3, x 2, x 1)

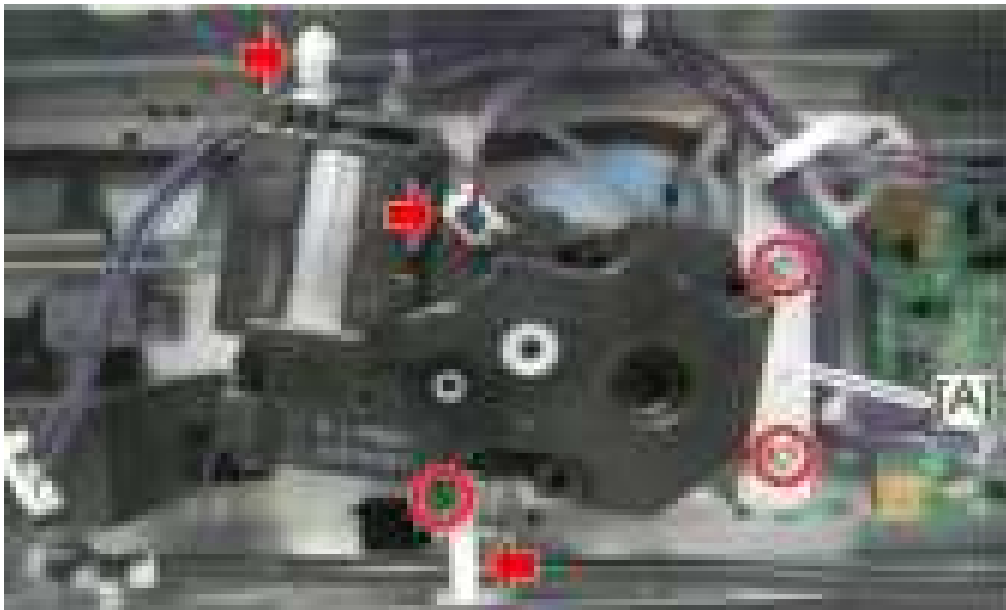

4811648-903209

↓ Note

- Move the lever [B] in the red circle as shown above when removing the tray lift motor with the bracket.



4811648-903209

3. Tray lift motor bracket [A] (x 3)
4. Tray lift motor [B]




One Tray
Paper Feed
Unit PB2000
(D698)

1.2.2 TRANSPORT MOTOR

1. Pull out the Tray.
2. Rear cover ([A] p.1 "Covers")
3. Rear right cover ([A] p.1 "Covers")
4. Stay [A] ([A] x 2)



5. Rear right bracket [A] ([A] x 1)
6. Tray end cover [B] ([A] x 1, [B] x 2)

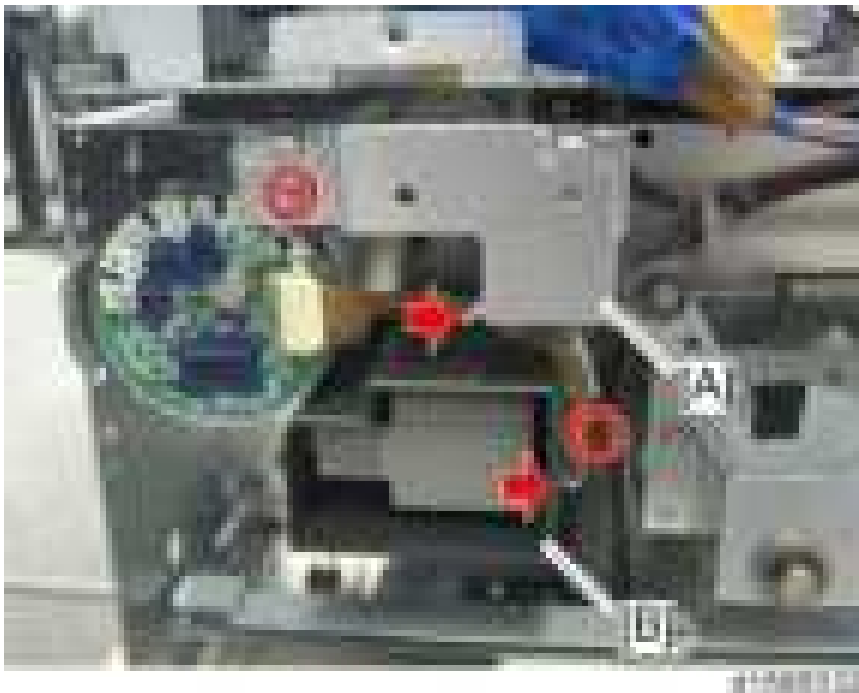

7. Transport motor [A] ([A] x 3, [B] x 1)



One Tray
Paper Feed
Unit PB2000
(D698)


1.2.3 PAPER FEED CLUTCH

1. Rear Cover (p.1 "Covers")
2. Rear right bracket (p.4 "Transport Motor")
3. Paper feed clutch [A] (x 1, x 1, x 1)



1.2.4 MAIN BOARD

1. Rear cover (p.1 "Covers")
2. Main board [A] (All s, x 8)

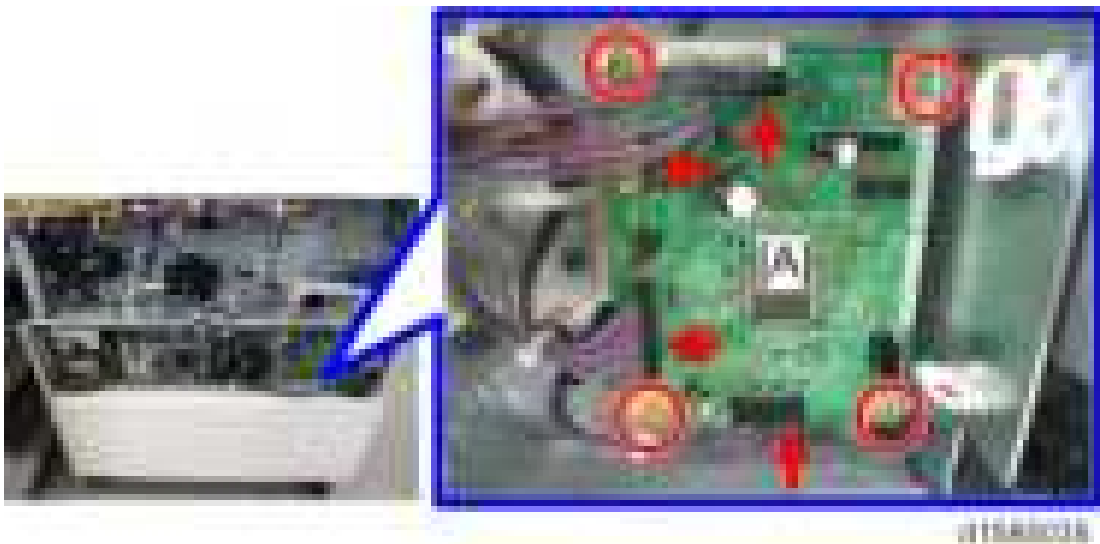


1.3 SENSORS AND BOARD

⚠ CAUTION

- Turn off the main power switch and unplug the machine before beginning any of the procedures in this section.


1.3.1 PAPER END SENSOR

1. Pull out the tray [A]
2. Sensor bracket [B] (🔧 x 1, 📌 x 1)
3. Paper end sensor [C] (hooks)

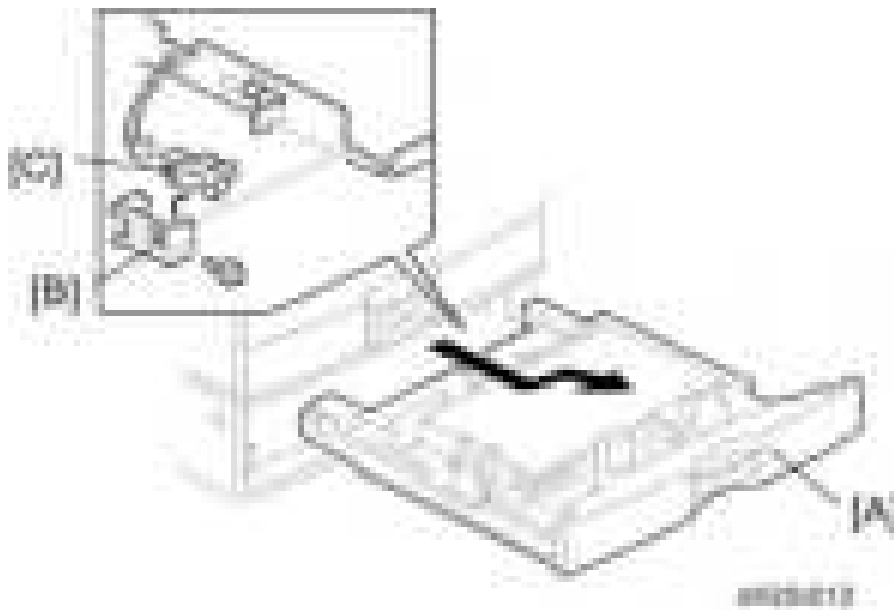


1.3.2 PAPER SIZE SENSORS

1. Pull out the tray.
2. Sensor bracket cover [A] (■ x 1)
3. Sensor bracket [B] (□ x 3, ■ x 2)
4. Paper size sensor (hooks)

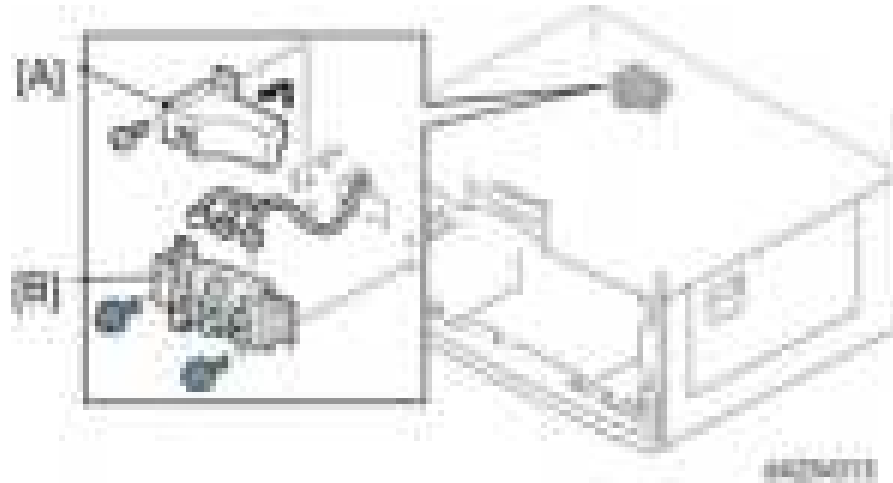

1.3.3 TRAY MAIN BOARD

1. Rear cover (■ p.1 "Covers")
2. Tray main board [A] (All □s, ■ x 4)

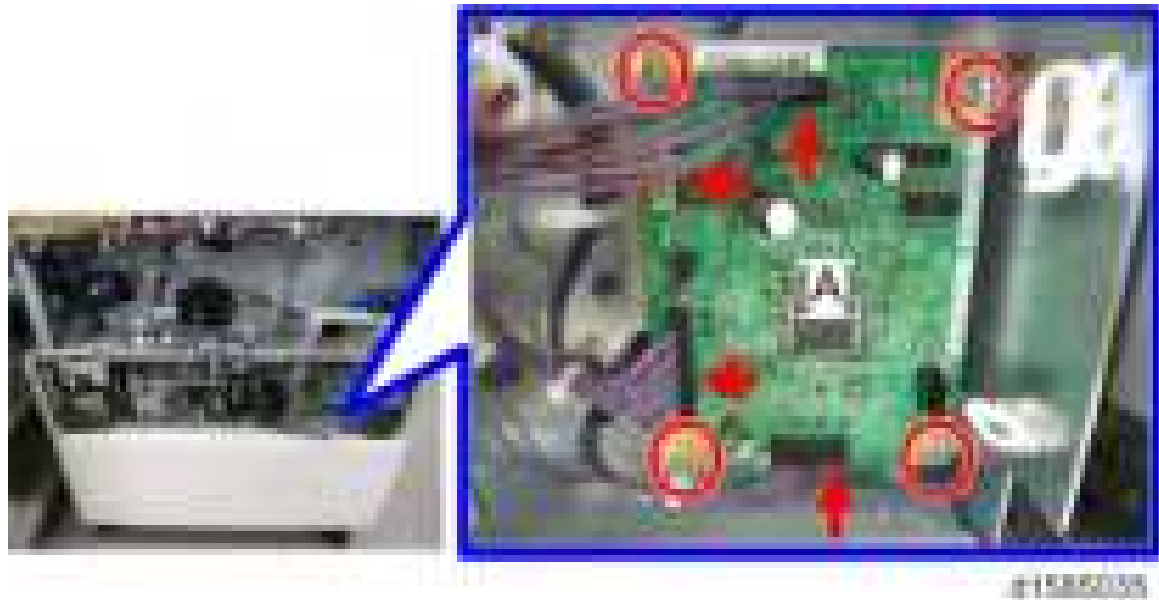

D699

TWO TRAY PAPER FEED UNIT PB2010

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

TWO TRAY PAPER FEED UNIT PB2010 (D699)

TABLE OF CONTENTS

1. REPLACEMENT AND ADJUSTMENT	1
1.1 COVERS AND ROLLER.....	1
1.1.1 COVERS.....	1
Rear Cover.....	1
Right Cover	1
1.1.2 FEED ROLLER.....	2
1.2 DRIVE COMPONENTS	3
1.2.1 UPPER FEED CLUTCH	3
1.2.2 LOWER FEED CLUTCH.....	3
1.2.3 RELAY CLUTCH	4
1.2.4 PAPER FEED MOTOR.....	4
1.2.5 LIFT MOTORS.....	5
Upper Lift Motor.....	5
Lower Lift Motor.....	5
1.3 ELECTRICAL COMPONENTS	6
1.3.1 VERTICAL TRANSPORT SENSOR	6
1.3.2 PAPER END SENSOR.....	6
1.3.3 PAPER SIZE SENSORS	7
1.3.4 TRAY MAIN BOARD.....	8
2. DETAILED SECTION DESCRIPTIONS.....	9
2.1 COMPONENT LAYOUT	9
2.1.1 MECHANICAL COMPONENT LAYOUT	9
2.1.2 ELECTRICAL COMPONENT LAYOUT	10
2.1.3 ELECTRICAL COMPONENT DESCRIPTION	12
2.1.4 DRIVE LAYOUT	13
2.2 PAPER FEED AND SEPARATION MECHANISM.....	14
2.3 PAPER LIFT MECHANISM.....	15
2.4 PAPER END DETECTION.....	16
2.5 PAPER HEIGHT DETECTION.....	17

2.6 PAPER SIZE DETECTION18
2.7 SIDE AND END FENCES20
 2.7.1 SIDE FENCES20
 2.7.2 END FENCE20

SAFETY AND SYMBOLS

Replacement Procedure Safety

CAUTION

- Turn off the main power switch and unplug the machine before beginning any of the replacement procedures in this manual.


Symbols Used in this Manual


This manual uses the following symbols.

: Clip ring

: Screws

: Connector

: Clamp

: E-ring


1. REPLACEMENT AND ADJUSTMENT

1.1 COVERS AND ROLLER

1.1.1 COVERS


Rear Cover

1. Hold brackets [A] (☞ x 1 each)
2. Rear cover [B] (☞ x 3)

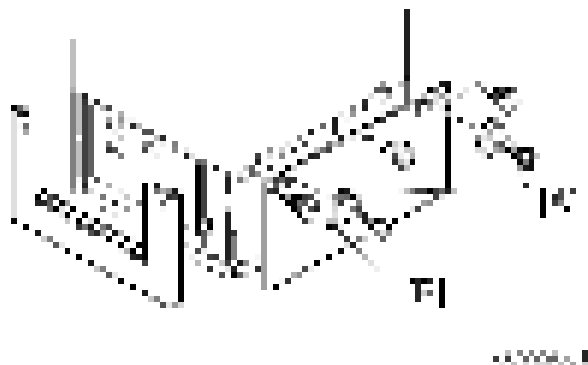

Right Cover

1. Right cover [A] (☞ x 2)

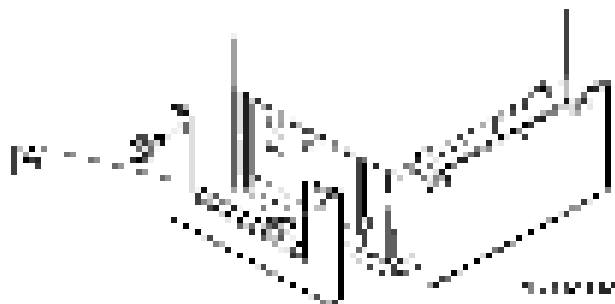


Note

- Do not remove the anti-tip components [A] at the bottom of the unit.



1.1.2 FEED ROLLER

1. Pull out the tray [A].
2. Release the lock lever [B].
3. Feed roller [C]

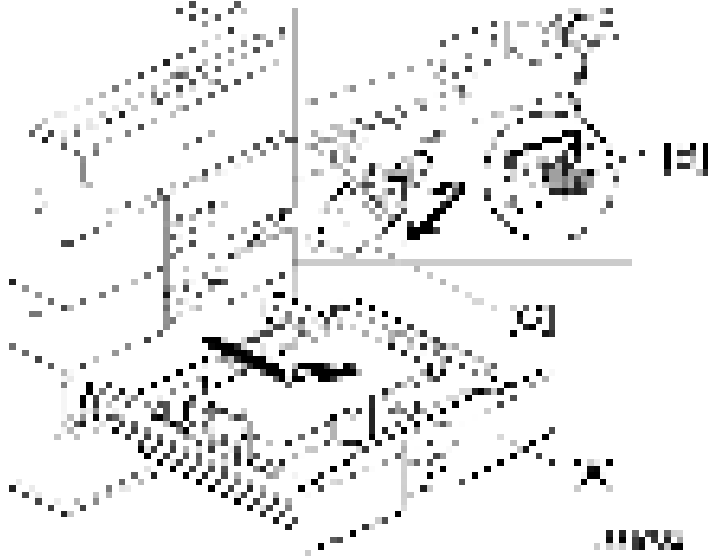

1.2 DRIVE COMPONENTS

⚠ CAUTION

- Turn off the main power switch and unplug the machine before beginning any of the procedures in this section.


1.2.1 UPPER FEED CLUTCH

1. Rear cover (p.1 "Covers")
2. Bracket [A] (x 2)
3. Hold bracket [B] (x 1, bushing x 1)
4. Upper feed clutch [C] (x 1)




1.2.2 LOWER FEED CLUTCH

1. Rear cover (p.1 "Covers")
2. Lower feed clutch [A] (x 1, x 1, x 1)

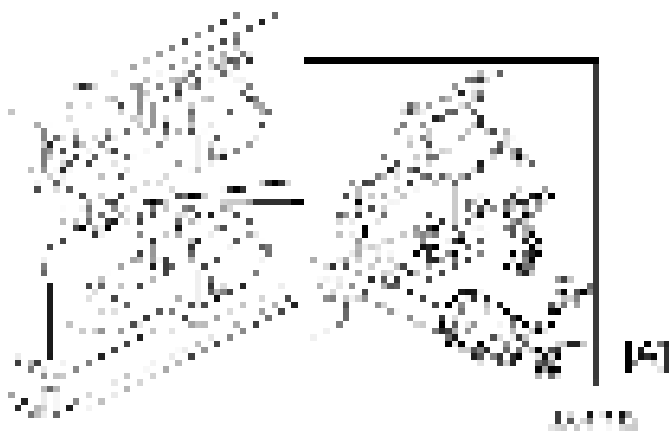


1.2.3 RELAY CLUTCH

1. Rear cover (p.1 "Covers")
2. Relay clutch [A] (x 1, x 1)

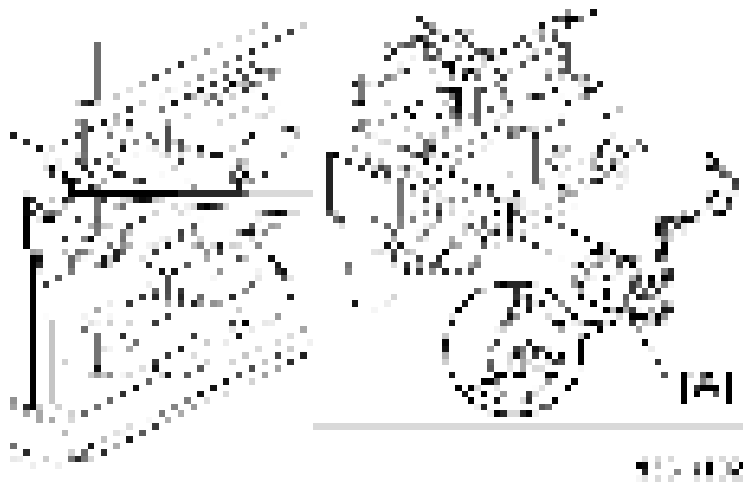


1.2.4 PAPER FEED MOTOR

1. Rear cover (p.1 "Cover")
2. Tray main board (p.8 "Tray Main Board")
3. Gear [A] (x 1)
4. Paper feed motor bracket [B] (x 5)
5. Paper feed motor [C] (x 2)

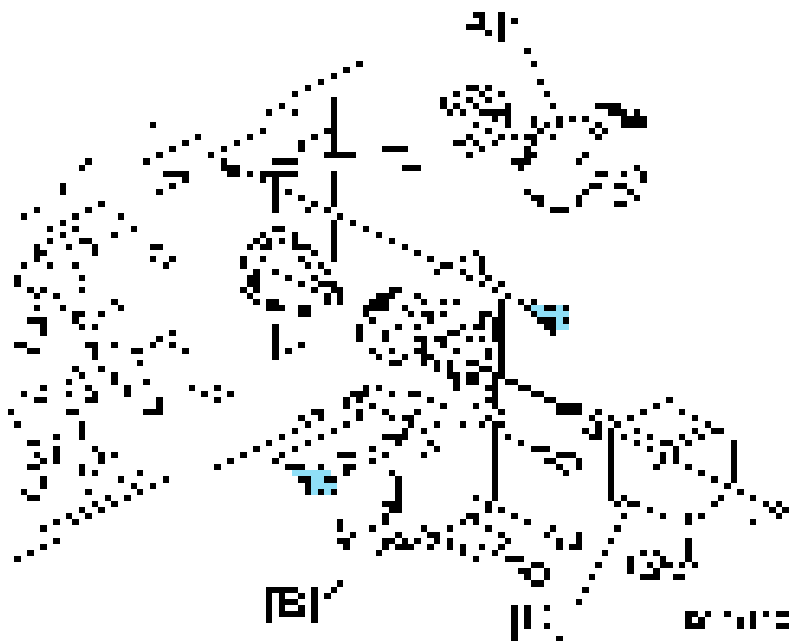

1.2.5 LIFT MOTORS

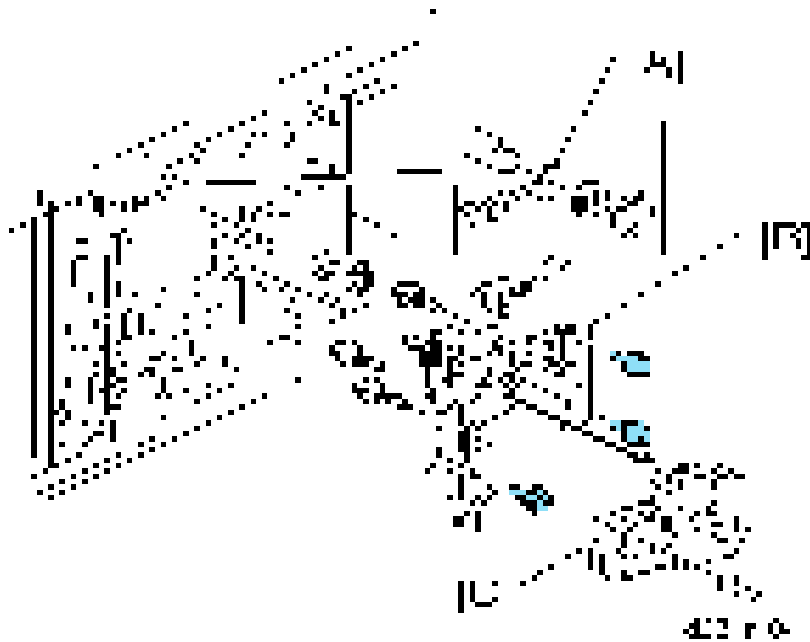

Upper Lift Motor

1. Rear cover (p.1 "Covers")
2. Spring [A] (snap ring x 1, spacer x 1)
3. Lift motor bracket [B] (x 3, x 1)
4. Upper lift motor [C] (x 3)

Lower Lift Motor

1. Rear cover (p.1 "Covers")
2. Spring (snap ring x 1, spacer x 1)
3. Lift motor bracket (x 4, x 1)
4. Lower lift motor (x 3)


1.3 ELECTRICAL COMPONENTS

⚠ CAUTION

- Turn off the main power switch and unplug the machine before beginning any of the procedures in this section.


1.3.1 VERTICAL TRANSPORT SENSOR

1. Open the tray cover [A].
2. Guide plate [B] (📐 x 2)
3. Sensor bracket [C] (📐 x 1, 📐 x 1)
4. Vertical transport sensor [D] (hooks)

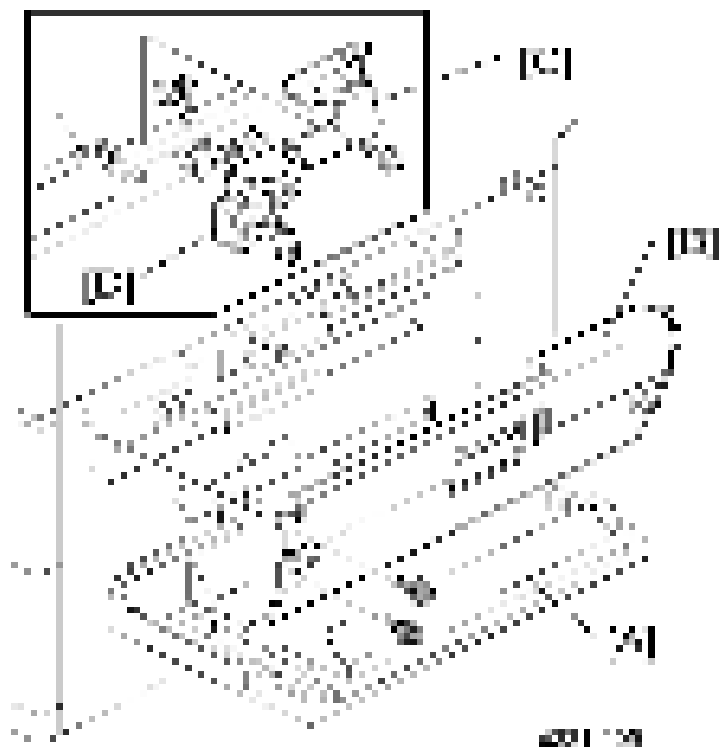


1.3.2 PAPER END SENSOR

1. Pull out the tray [A].
2. Sensor bracket [B] (📐 x 1, 📐 x 1)
3. Paper end sensor [C] (hooks)

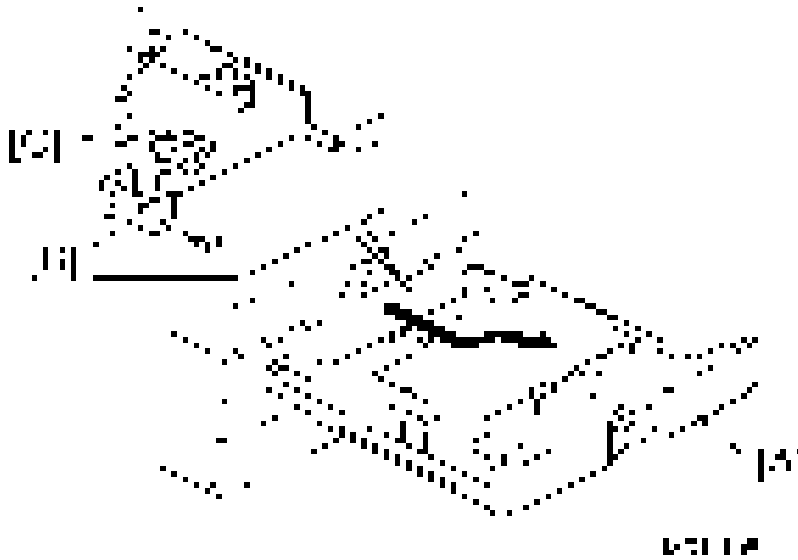


1.3.3 PAPER SIZE SENSORS

1. Pull out the two trays.
2. Sensor bracket cover [A] (x 1)
3. Sensor bracket [B] (x 3, x 2)
4. Paper size sensors (hooks)

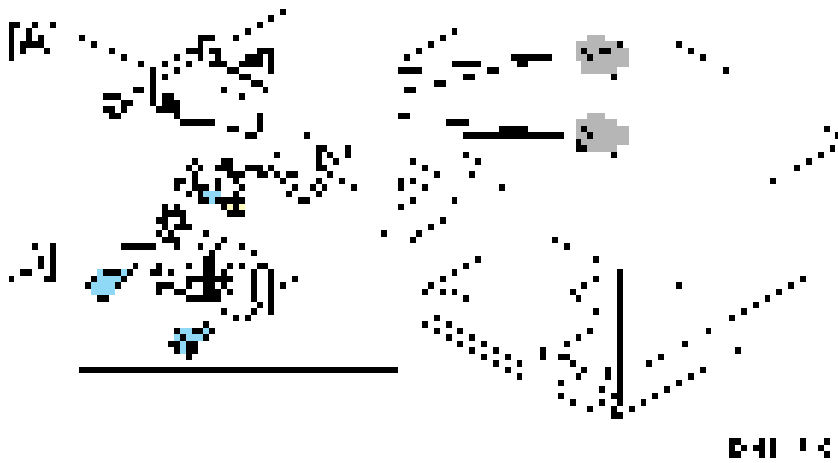

1.3.4 TRAY MAIN BOARD


1. Rear cover (p.1 "Covers")
2. Tray main board [A] (x 4, all s)

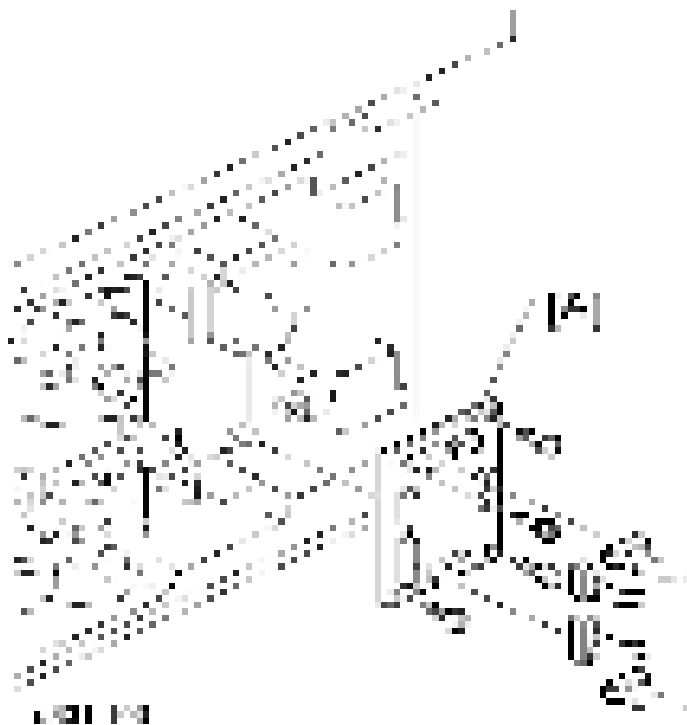

2. DETAILED SECTION DESCRIPTIONS


2.1 COMPONENT LAYOUT

2.1.1 MECHANICAL COMPONENT LAYOUT

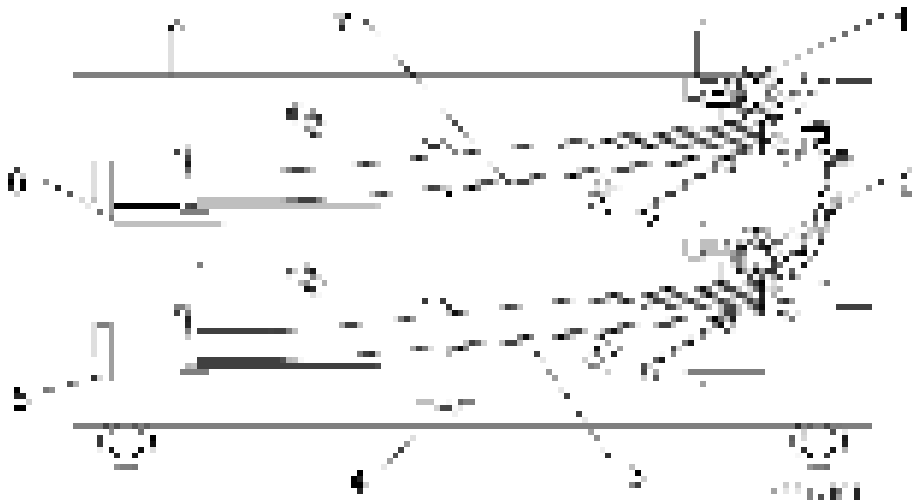

- | | |
|----------------------------|-----------------------|
| 1. Upper paper feed roller | 5. Lower tray |
| 2. Lower paper feed roller | 6. Upper tray |
| 3. Lower bottom plate | 7. Upper bottom plate |
| 4. Optional tray heater | |

2.1.2 ELECTRICAL COMPONENT LAYOUT

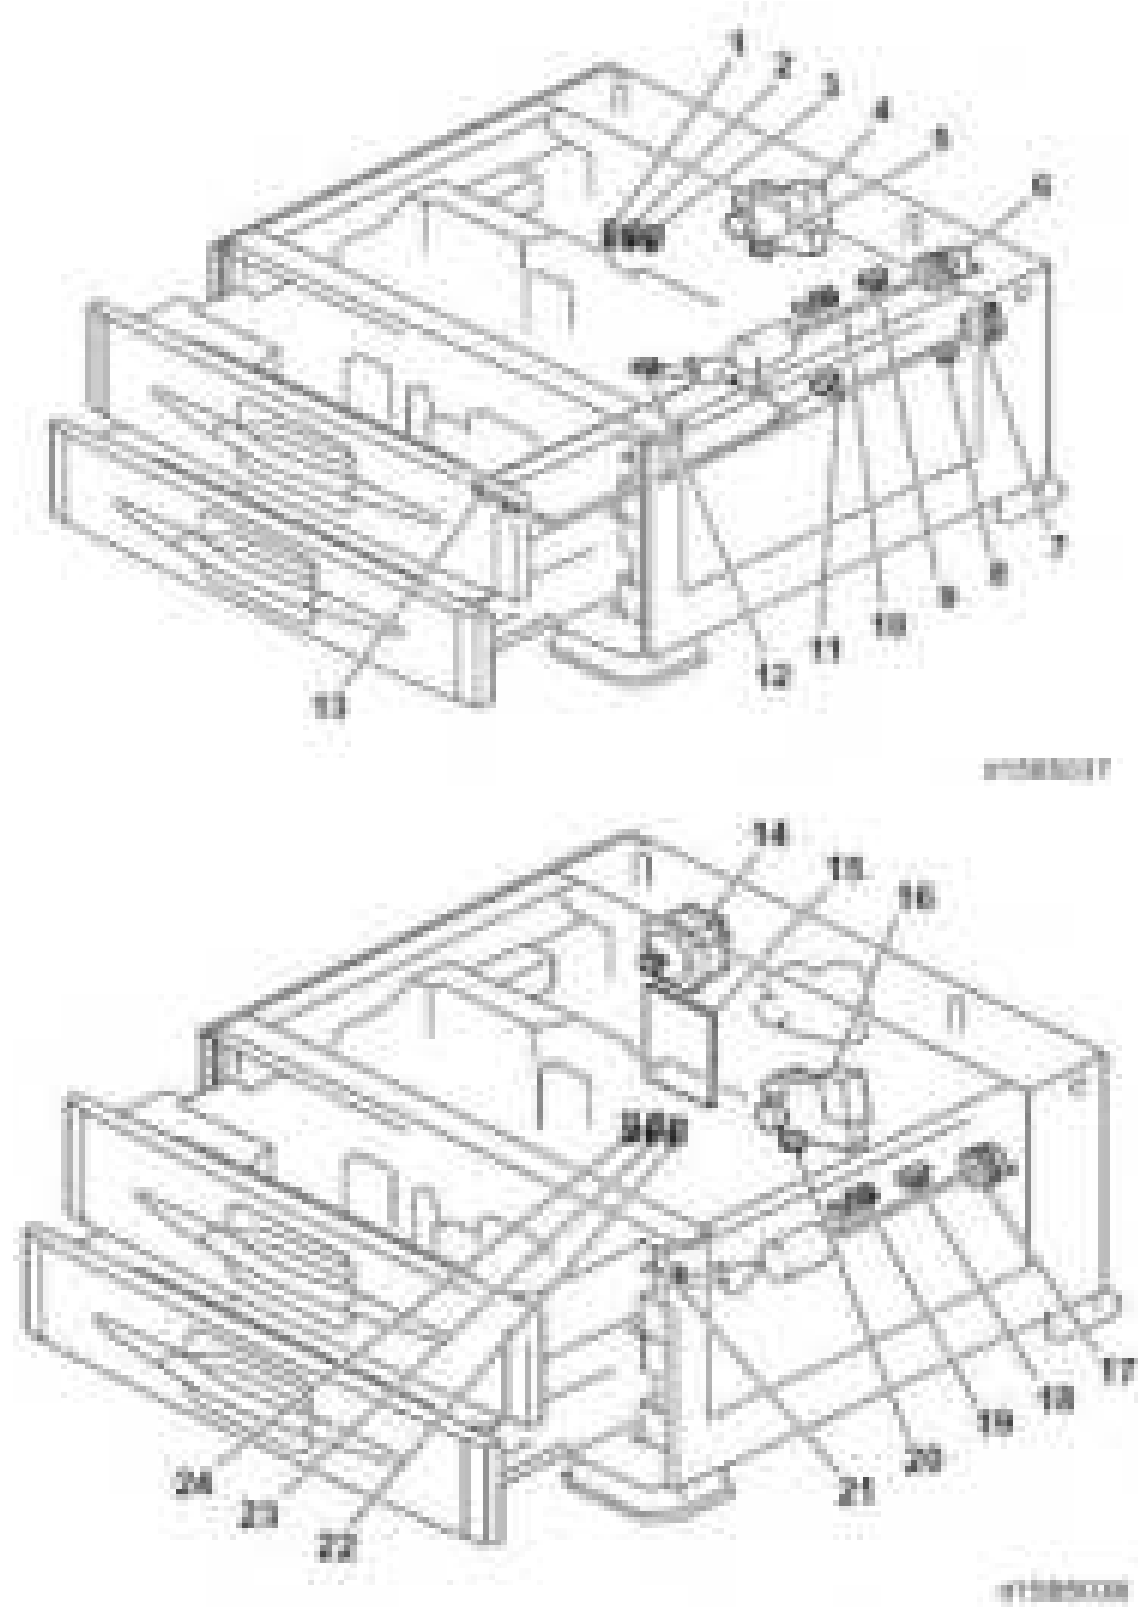

1. Paper size sensor
2. Paper size sensor
3. Paper size sensor
4. Tray lift motor
5. Tray set switch
6. Paper feed clutch
7. Relay clutch
8. Right door switch
9. Paper pressure revision sensor
10. Tray lift sensor
11. Relay sensor
12. Paper end sensor
13. Tray heater (Option)
14. Transport motor
15. Main board
16. Tray lift motor
17. Paper feed clutch
18. Paper pressure revision sensor
19. Tray lift sensor
20. Tray set switch
21. Paper end sensor
22. Paper size sensor
23. Paper size sensor
24. Paper size sensor 2

2.1.3 ELECTRICAL COMPONENT DESCRIPTION

Symbol	Name	Function	Index No.
Motors			
M1	Transport Motor	Drives all rollers.	14
M2	Tray Lift Motor	Lifts the upper tray bottom plate.	4
M3	Tray Lift Motor	Lifts the lower tray bottom plate.	16
Sensors			
S1	Paper Pressure Revision Sensor	Detects when the paper in the upper tray is at the correct feed height.	9
S2	Paper Pressure Revision Sensor	Detects when the paper in the lower tray is at the correct feed height.	18
S3	Paper End Sensor	Informs the copier/printer when the upper tray runs out of paper.	12
S4	Tray Lift Sensor	Detects the amount of paper in the upper tray.	10
S5	Paper End Sensor	Informs the copier/printer when the lower tray runs out of paper.	21
S6	Tray Lift Sensor	Detects the amount of paper in the lower tray.	19
S7	Relay Sensor	Detects misfeeds.	11
S8	Paper Size Sensor	Determines what paper size is in the upper tray.	1
S9	Paper Size Sensor	Determines what paper size is in the upper tray.	2
S10	Paper Size Sensor	Determines what paper size is in the upper tray.	3
S11	Paper Size Sensor	Determines what paper size is in the lower tray.	24
S12	Paper Size Sensor	Determines what paper size is in the lower tray.	23
S13	Paper Size Sensor	Determines what paper size is in the lower tray.	22
Switches			
SW1	Right Door Switch	Detects whether the right door is opened or not.	8
SW2	Tray Set Switch	Detects whether the upper tray is opened or not.	5


SW3	Tray Set Switch	Detects whether the lower tray is opened or not.	20
Magnetic Clutches			
MC1	Paper Feed Clutch	Starts paper feed from the upper tray.	6
MC2	Paper Feed Clutch	Starts paper feed from the lower tray.	17
MC3	Relay Clutch	Drives the relay rollers.	7
PCBs			
PCB1	Main Board	Controls the paper tray unit and communicates with the copier/printer.	15
Others			
H1	Optional Tray Heater	Removes humidity from the paper in the trays.	13

2.1.4 DRIVE LAYOUT




- | | |
|----------------------------|----------------------------|
| 1. Paper feed motor | 5. Lower paper feed clutch |
| 2. Drive belt | 6. Upper paper feed roller |
| 3. Upper paper feed clutch | 7. Relay roller |
| 4. Relay clutch | 8. Lower paper feed roller |

2.2 PAPER FEED AND SEPARATION MECHANISM

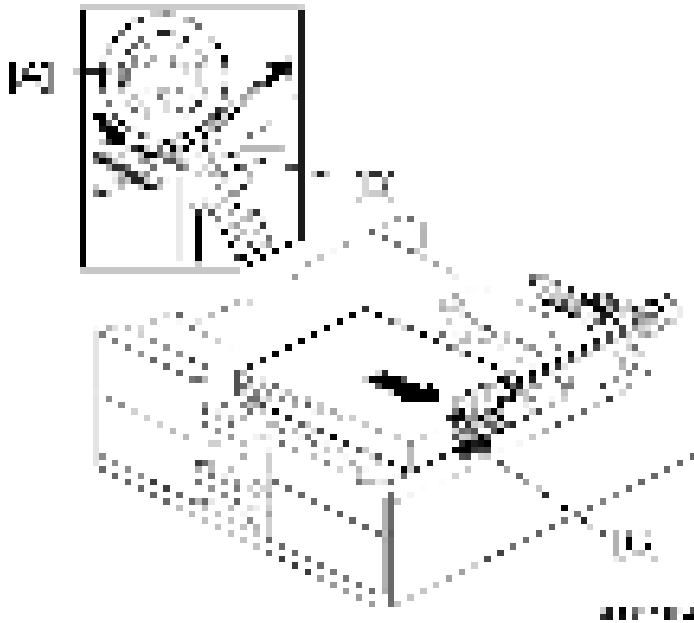

The paper tray holds 500 sheets. The paper feed roller [A] drives the top sheet of paper from the paper tray to the copier/printer. The friction pad [B] allows only one sheet to feed at a time. The friction pad applies pressure to the feed roller with a spring [C].

2.3 PAPER LIFT MECHANISM

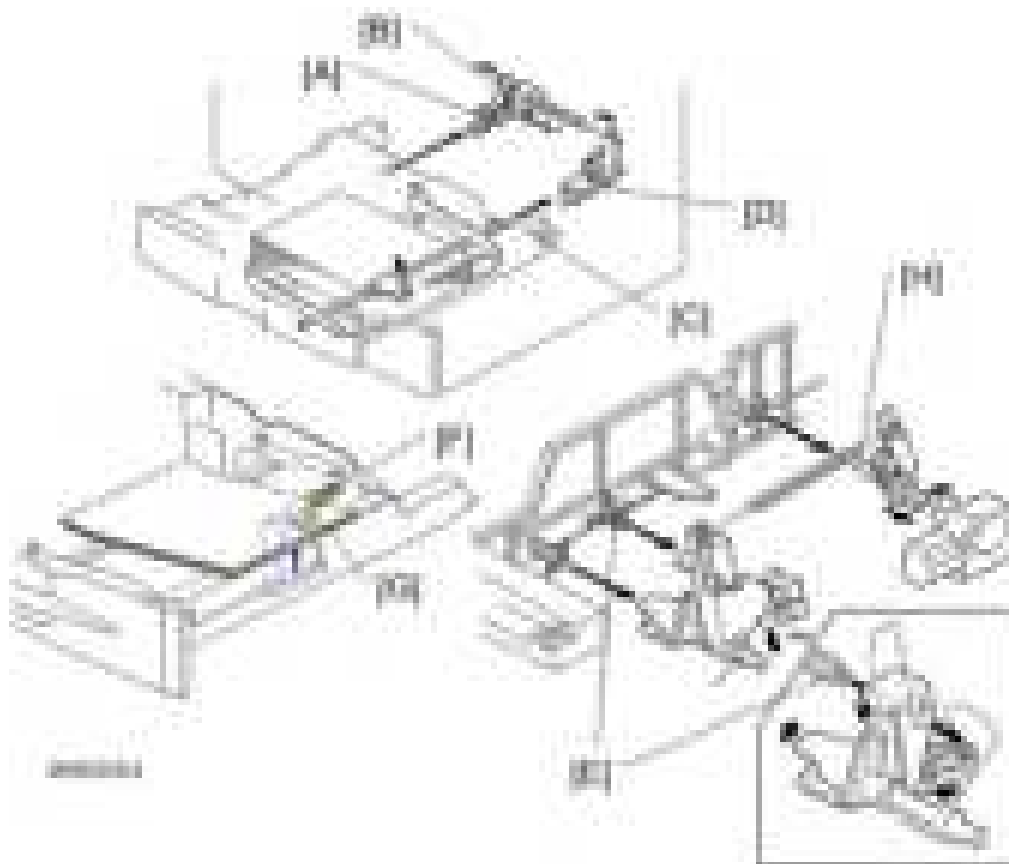

The paper size switch detects when the tray is pushed in.

When the paper tray is pushed into the machine, the pin [A] for the lift motor pressure shaft engages the lift motor coupling [B] and the pin [C] for the bottom plate lift shaft in the tray engages the bottom plate pressure lever coupling [D]. The pin [E] on the rear of the tray pushes the lock lever so that the lift motor can lift the bottom plate pressure lever.


The lift motor turns on, and turns clockwise as viewed on the diagram. The main pressure spring [H] pulls the bottom plate pressure lever, and this lifts the tray bottom plate.

When the top of the stack touches the feed roller, the motor cannot pull up the plate any more, so it pulls the actuator [G] into the tray lift sensor [F].

The pressure of the feed roller on the paper is now too high, so the lift motor reverses to reduce this pressure. It reverses for 300 ms or 600 ms, depending on the paper size. For smaller paper, it reverses the larger amount (600 ms) to reduce the pressure more.

When the paper tray is pulled out, the pins [A, C] disengage from the couplings [B, D], and the bottom plate drops. To make it easier to push the tray in, the lift motor rotates backwards 1.7 seconds to return the bottom plate pressure lever coupling [D] to the original position.

2.4 PAPER END DETECTION

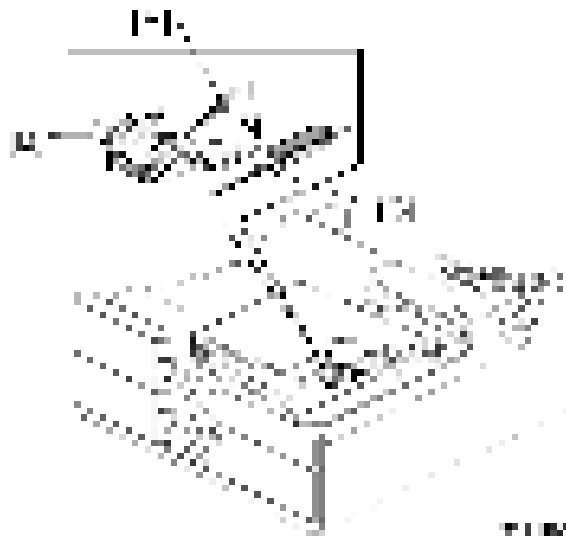


If there is some paper in the paper tray, the paper stack raises the paper end feeler [A] and the paper end sensor [B] is deactivated.

When the paper tray runs out of paper, the paper end feeler drops into the cutout [C] in the tray bottom plate and the paper end sensor is activated.

When the paper tray is drawn out with no paper in the tray, the shape of the paper end feeler causes it to lift up.

2.5 PAPER HEIGHT DETECTION

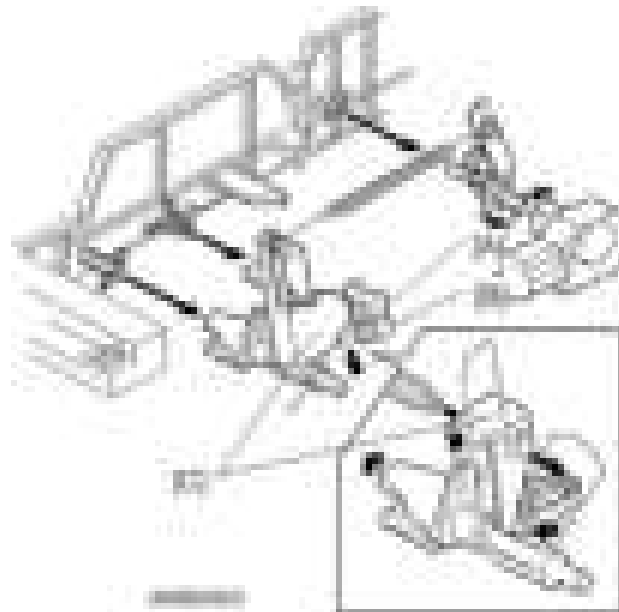

The amount of paper in the tray is detected by the combination of on/off signals from two paper height sensors [A] and [B].


When the amount of paper decreases, the bottom plate pressure lever [C] moves the actuator up.

The following combination of sensor signals is sent to the copier/printer.

Amount of Paper	Paper Height Sensor 1	Paper Height Sensor 2
Near End	OFF	ON
30%	ON	ON
70%	ON	OFF
100%	OFF	OFF

When the tray contains paper of a small width, the paper feed pressure may become too low when the thickness of the remaining stack of paper has decreased. The lift motor rotates forward 300 ms after the sensor detects a certain amount of paper remaining in the tray to increase paper feed pressure, simulating the pressure generated by a full tray.

2.6 PAPER SIZE DETECTION

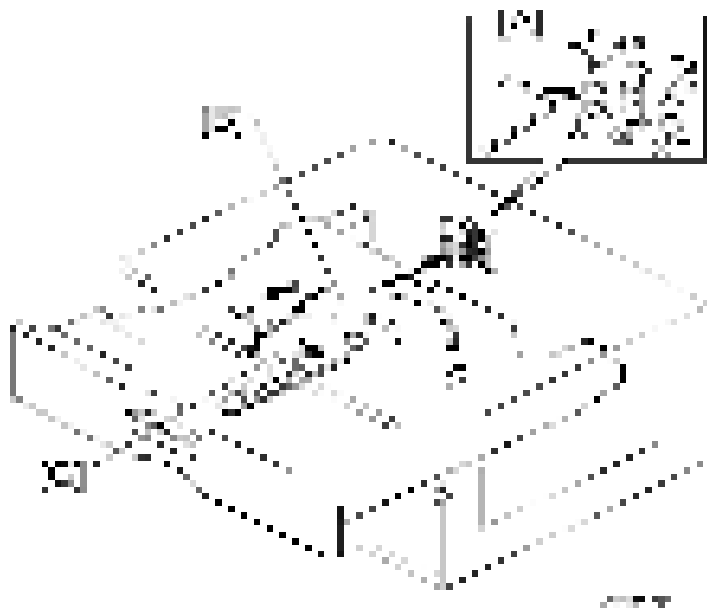

There are three paper size sensors [A] (SN1, SN2 and SN3) on the paper tray unit. Each paper tray has its own actuator [B], with a unique combination of notches. This actuator is moved when the paper end fence [C] is adjusted for the installed paper. To determine which size has been installed, the CPU reads which paper size sensors the actuator has switched off. Refer to the size detection lists as shown below.


EU/ ASIA Size		SN1	SN2	SN3
A3 LEF	297 x 420	ON	OFF	OFF
DLT LEF*	11" x 17"	ON	ON	OFF
B4 LEF	257 x 364	ON	ON	ON
LG LEF*	8 ¹ / ₂ " x 14"	ON	ON	ON
A4 LEF	210 x 297	OFF	OFF	ON
LT LEF	8 ¹ / ₂ " x 11"	OFF	OFF	OFF
B5 LEF	182 x 257	ON	OFF	OFF
A4 SEF	297 x 210	OFF	ON	ON
LT SEF*	11" x 8 ¹ / ₂ "	OFF	ON	ON
B5 SEF	257 x 182	ON	OFF	ON
EXE SEF*	10 ¹ / ₂ " x 7 ¹ / ₄ "	ON	OFF	ON
A5 SEF	210 x 148	OFF	ON	OFF
NA Size		SN1	SN2	SN3
A3 LEF*	297 x 420	ON	ON	OFF

DLT LEF	11" x 17"	ON	ON	OFF
B4 LEF*	257 x 364	ON	ON	ON
LG LEF	8 ¹ / ₂ " x 14"	ON	ON	ON
A4 LEF	210 x 297	OFF	OFF	ON
LT LEF	8 ¹ / ₂ " x 11"	OFF	OFF	OFF
B5 LEF	182 x 257	ON	OFF	OFF
A4 SEF*	297 x 210	OFF	ON	ON
LT SEF	11" x 8 ¹ / ₂ "	OFF	ON	ON
B5 SEF*	257 x 182	ON	OFF	ON
EXE SEF	10 ¹ / ₂ " x 7 ¹ / ₄ "	ON	OFF	ON
A5 SEF	210 x 148	OFF	ON	OFF

* You can select the paper size using the user tools menu.

The CPU disables paper feed from a tray if the paper size cannot be detected. If the paper size actuator is broken, or if there is no tray installed, the Add Paper indicator will light.

2.7 SIDE AND END FENCES

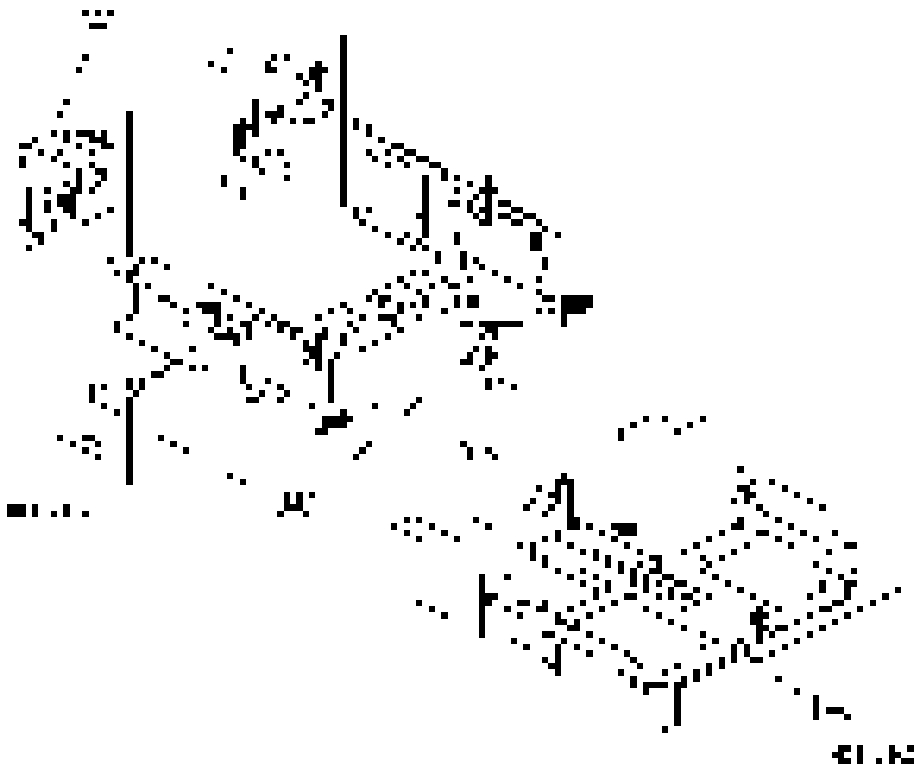

2.7.1 SIDE FENCES

If the tray is full of paper and it is pushed in strongly, the fences may deform or bend. This may cause the paper to skew or the side-to-side registration to be incorrect. To correct this, each side fence has a stopper [A] attached to it. Each side fence can be secured with a screw [B], for customers who do not want to change the paper size.

2.7.2 END FENCE

As the amount of paper in the tray decreases, the bottom plate [C] lifts up gradually. The end fence [D] is connected to the bottom plate. When the tray bottom plate rises, the end fence moves forward and pushes the back of the paper stack to keep it squared up.

D702

FAX OPTION TYPE M1

REVISION HISTORY		
Page	Date	Added/Updated/New
		None

FAX OPTION TYPE M1 (D702)

TABLE OF CONTENTS

1. INSTALLATION	1
1.1 FAX OPTION INSTALLATION.....	1
1.1.1 COMPONENT CHECK.....	1
1.1.2 FAX OPTION INSTALLATION PROCEDURE.....	2
1.1.3 FAX SETTINGS.....	7
1.2 FAX UNIT OPTIONS.....	8
1.2.1 HANDSET (D645).....	8
2. REPLACEMENT AND ADJUSTMENT	10
2.1 FCU.....	10
2.1.1 SRAM DATA TRANSFER PROCEDURE.....	10
3. TROUBLESHOOTING	18
3.1 ERROR CODES.....	18
3.2 IFAX TROUBLESHOOTING.....	40
3.3 IP-FAX TROUBLESHOOTING.....	43
3.3.1 IP-FAX TRANSMISSION.....	43
Cannot send by IP Address/Host Name.....	43
Cannot send via VoIP Gateway.....	44
Cannot send by Alias Fax number.....	45
3.3.2 IP-FAX RECEPTION.....	46
Cannot receive via IP Address/Host Name.....	46
Cannot receive by VoIP Gateway.....	47
Cannot receive by Alias Fax number.....	48
4. SERVICE TABLES	50
4.1 CAUTIONS.....	50
4.2 SERVICE PROGRAM TABLES.....	51
4.2.1 SP1-XXX (BIT SWITCHES).....	51
4.2.2 SP2-XXX (RAM DATA).....	52
4.2.3 SP3-XXX (TEL LINE SETTINGS).....	53
4.2.4 SP4-XXX (ROM VERSIONS).....	54
4.2.5 SP5-XXX (RAM CLEAR).....	54

4.2.6 SP6-XXX (REPORTS)	55
4.2.7 SP7-XXX (TESTS).....	56
4.3 BIT SWITCHES - 1	57
4.3.1 SYSTEM SWITCHES	57
4.4 BIT SWITCHES - 2	71
4.4.1 I-FAX SWITCHES.....	71
4.4.2 PRINTER SWITCHES	78
4.5 BIT SWITCHES - 3	84
4.5.1 COMMUNICATION SWITCHES.....	84
4.6 BIT SWITCHES - 4	92
4.6.1 G3 SWITCHES	92
4.7 BIT SWITCHES - 6	100
4.7.1 IP FAX SWITCHES.....	100
4.8 NCU PARAMETERS	108
4.9 DEDICATED TRANSMISSION PARAMETERS	121
4.9.1 PROGRAMMING PROCEDURE	121
4.9.2 PARAMETERS	122
Fax Parameters.....	122
E-mail Parameters.....	126
5. SPECIFICATIONS	130
5.1 GENERAL SPECIFICATIONS	130
5.1.1 FCU	130
5.1.2 CAPABILITIES OF PROGRAMMABLE ITEMS	132
5.2 IFAX SPECIFICATIONS	133
5.3 IP-FAX SPECIFICATIONS.....	134

READ THIS FIRST

Important Safety Notices

WARNING

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning. Do not use a telephone or cellular phone to report a gas leak in the vicinity of the leak.

CAUTION

- Before installing the fax unit, switch off the main switch, and disconnect the power cord.
- The fax unit contains a lithium battery. The danger of explosion exists if a battery of this type is incorrectly replaced. Replace only with the same or an equivalent type recommended by the manufacturer. Discard batteries in accordance with the manufacturer's instructions and local regulations.

Note

- **Note for Australia:**
- Unit must be connected to Telecommunication Network through a line cord which meets the requirements of ACA Technical Standard TS008.

Symbols and Abbreviations

Conventions Used in this Manual

This manual uses several symbols.

Symbol	What it means
--------	---------------



See or Refer to



Screws



Connector



E-ring



Clip ring



Clamp



[A] Short Edge Feed (SEF)

[B] Long Edge Feed (LEF)

Cautions, Notes, etc.

The following headings provide special information:

WARNING

- Failure to obey warning information could result in serious injury or death.

CAUTION

- Obey these guidelines to ensure safe operation and prevent minor injuries.

Important

- **Obey these guidelines to avoid problems such as misfeeds, damage to originals, loss of valuable data and to prevent damage to the machine.**
- **Always obey these guidelines to avoid serious problems such as misfeeds, damage to originals, loss of valuable data and to prevent damage to the machine. bold is added for emphasis.**

Note

- This document provides tips and advice about how to best service the machine.

1. INSTALLATION

1.1 FAX OPTION INSTALLATION

1.1.1 COMPONENT CHECK

Check the quantity and condition of the components against the following list.

No.	Description	Q'ty
1	FCU	1
2	Telephone Cable (NA only)	1
3	Screw	6
4	Fax Decal for Operation Panel	1
5	Board Cover	1
6	Grounding Plate (2-tip)	1
7	Grounding Plate (3-tip)	1
8	EMC Address (EU only)	1
9	Serial Number Decal	1
10	FCC Decal (NA only)	1
-	Installation Procedure (NA only)	1
-	RoHS Decal (China only)	1
-	RoHS Date Decal (China only)	1




1.1.2 FAX OPTION INSTALLATION PROCEDURE


★ Important

- Before installation:
- If there is a printer option in the machine, print out all data in the printer buffer.
- Turn the main switch on to put the machine in standby mode. Make sure the power LED is off, turn the main switch off, and then disconnect the power cord and the network cable.
- The copier must be connected to a properly grounded socket outlet.

1. Rear cover [A] (☐ x 9)

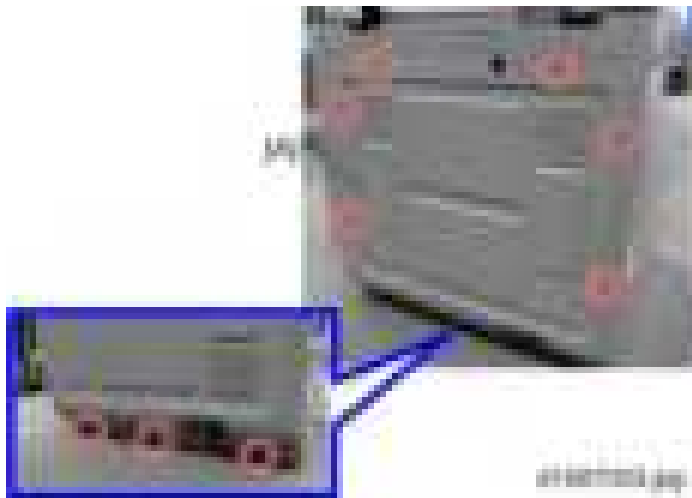

2. Five screws

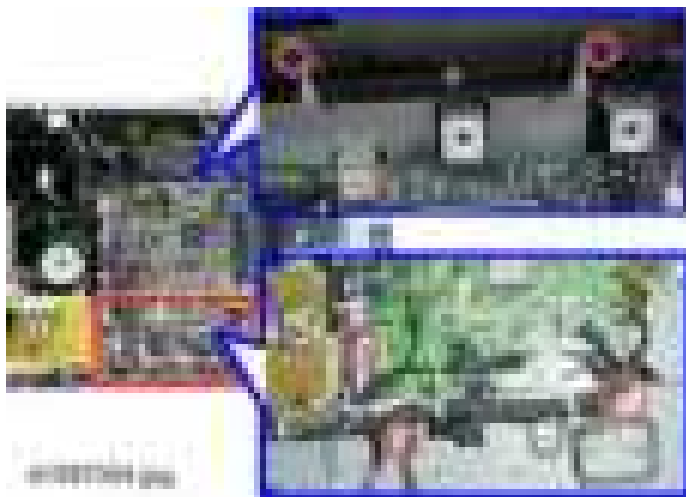


↓ Note

- Small arrows carved in the frame indicate the screws to remove.
1. Slide the engine board [A] to the left as shown, to detach it from the controller board [B].



2. Controller slot cover [A] (x1)
3. Four screws [B]

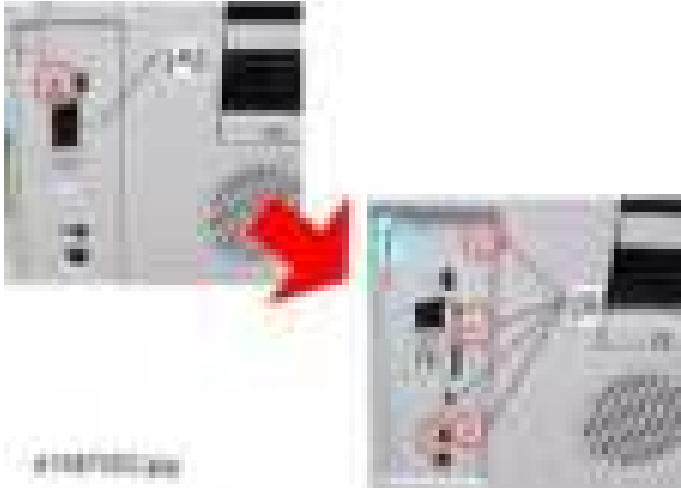

4. Three screws



Note

- Small arrows carved in the frame indicate the screws to remove.

1. Slide the controller board [A] to the left and pull as shown.

Fax Option Installation



2. Detach the FCU from the speaker bracket (Ⓜ x 3)
3. Insert the grounding plate (3-tip) [A] between the bracket and the FCU.
4. Reattach the FCU.



5. Attach the grounding plate (2-tip) [A] on the back of the FCU (Ⓜ x1).




6. Attach the FCU to the controller board as shown.



⏴ Note


- Make sure that the **FCU** is seated correctly. If not, SC672 occurs.
1. Remove the jumper [A] (set to OFF) and set it to ON.

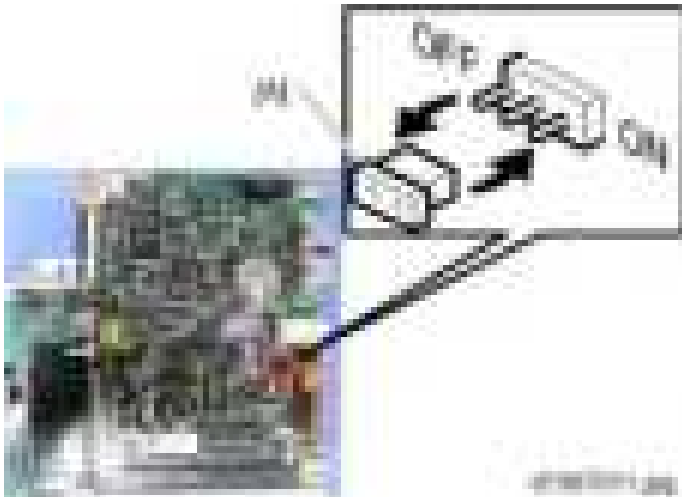

⏴ Note

- The machine may issue SC819 or SC820 if the jumper is not set to "ON" correctly.
1. **For installation in Brazil**, move the jumper switch (CN613) from "3" to "1".
 2. Cut away the knockouts for LINE and TEL from the controller slot cover.

Fax Option Installation

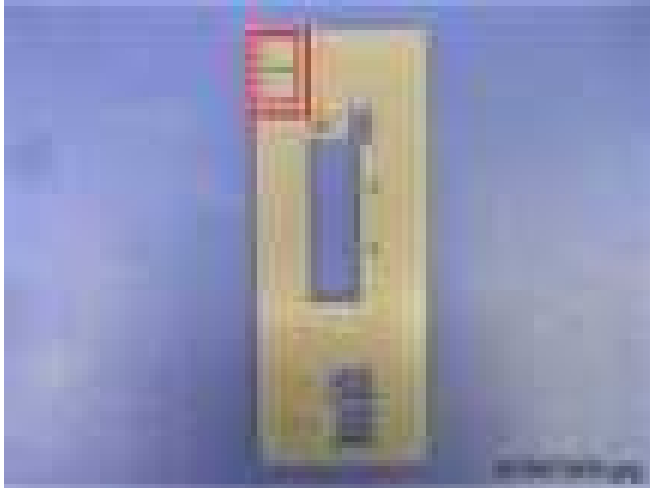

3. Install the controller board in the machine
4. Fasten the five circled screws.



Note

- The arrow in the picture above indicates the screw that is added to fasten the FCU.
1. Attach the board cover [A] as shown below. (▲ x 4)



2. Connect the telephone cord to the LINE jack.
3. Attach the Fax decal near the function key on the operation panel.

1.1.3 FAX SETTINGS

Initializing the Fax unit

When you press the Fax key for the first time after installation, the error "SRAM problem occurred / SRAM was formatted" will show on the LCD for initializing the program of the fax unit. Turn the main power switch off/on to clear the error display.

Note

- If another error occurs after initialization, this can be a functional problem.
1. Select fax SP1-101-016 and specify the country code.
 2. Select fax SP3-101-001 and specify the service station.
 - **For Fax option only (without printer/scanner option)**
 1. Turn the main switch on.
 2. Start the SP mode.
 3. Select SP5-985-001 (NIC setting) and change the setting value to "0" (OFF).
 4. Select SP5-985-002 (USB setting) and change the setting value to "0" (OFF).
- Turn the main switch off and on.

1.2 FAX UNIT OPTIONS

1.2.1 HANDSET (D645)

Note

- The optional handset is available for the U.S. version only.

1. Make two screw holes in the upper left cover.



2. Install the bracket [A].



3. Install the cradle.



4. Install the handset.

<Illustration>

5. Cut away the knockout for TEL and insert the TEL cable.



**FAX OPTION
TYPE M1
(D702)**

2. REPLACEMENT AND ADJUSTMENT

2.1 FCU


2.1.1 SRAM DATA TRANSFER PROCEDURE

When you replace the FCU board, transfer the SRAM data from the old FCU board to the new FCU board. Do the following procedure to back up the SRAM data.

Note

- The following data can be transferred: TTI, RTI, CSI, Fax bit switch settings, RAM address settings, NCU parameter settings

1. Rear cover [A] ( x 9)

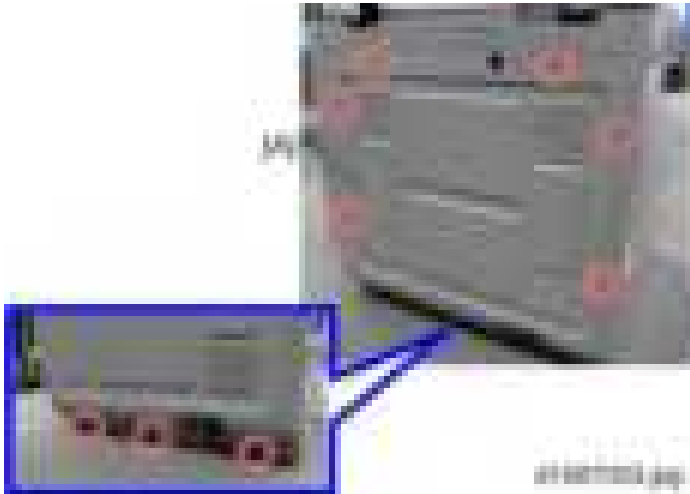

2. Board cover [A] ( x 4)



3. Five screws




↓ Note

- Small arrows carved in the frame indicate the screws to remove.
1. Slide the engine board [A] to the left as shown, to detach it from the controller board [B].



2. Controller slot cover [A] (x1)
3. Four screws [B]

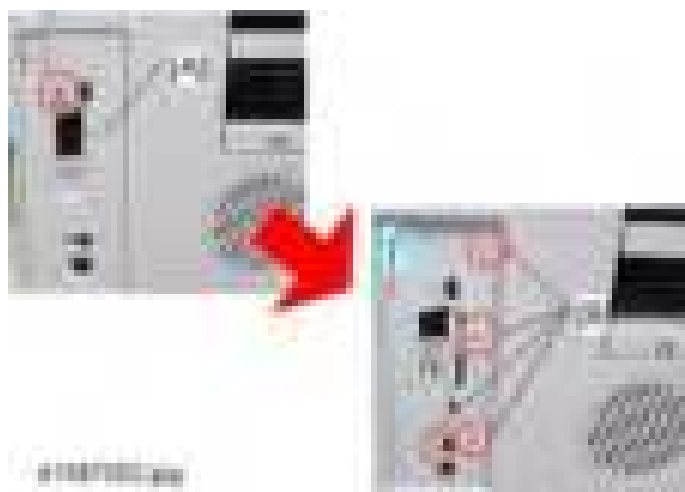

FCU

4. Three screws




Note

- Small arrows carved in the frame indicate the screws to remove.


1. Slide the controller board [A] to the left and pull as shown.



2. Detach the FCU board.
3. Speaker bracket [A] (🔊 x 3, 🗣️ x 1).

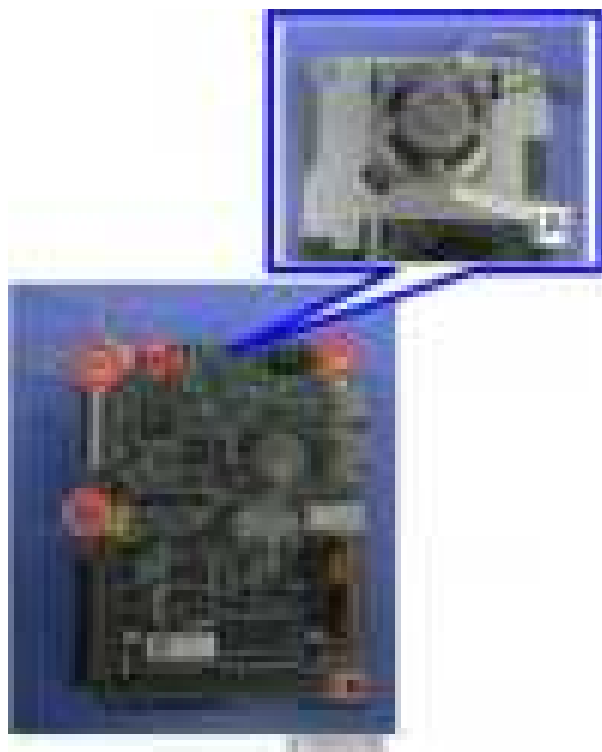

4. Grounding plate (3-tip) [A].

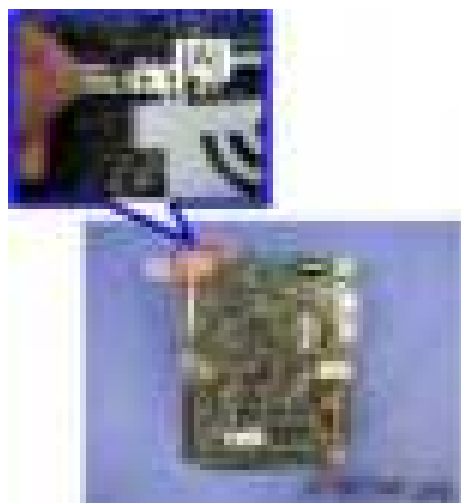


5. Grounding plate (2-tip) [A] on the back of the FCU (x 1).

FCU



6. Attach the speaker bracket, Grounding plate (3-tip), and Grounding plate (2-tip) to the new FCU (x 3, x 1) (removed in steps 10-12).
7. Move the jumper switch [A] of the new FCU board from "OFF" to "ON".

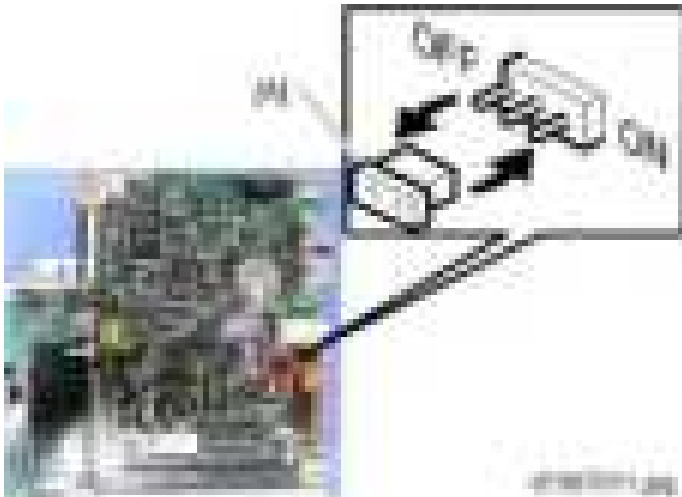

8. Connect a flat flexible cable [A] to the new FCU board. This cable is shipped with the new FCU board.



★ Important

- The green side [B] of the flat flexible cable must face outwards as shown above.

9. Attach the FCU to the controller board as shown.




↓ Note

- Make sure that the FCU is seated correctly. If not, SC672 occurs.

10. Install the controller board in the machine.

11. Attach the jumper switch [A] to the old FCU board to turn it on.

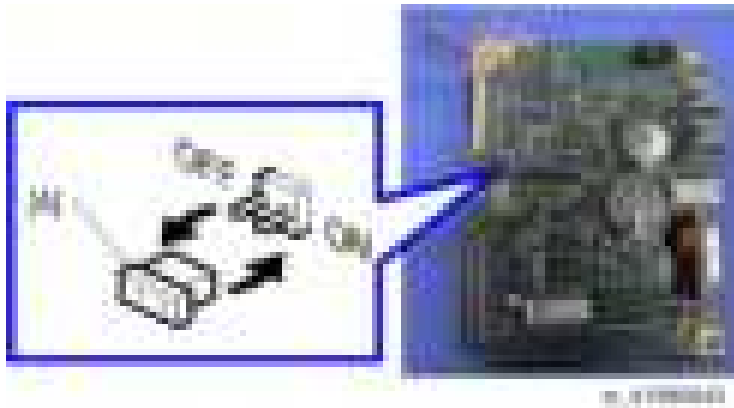


12. Connect the flat flexible cable to the old FCU board [A].



13. Turn on the main power switch.
 14. SRAM data transmission starts. When the transmission is completed, you will hear a beeper sound.

Note

- The beeper sound is the same volume as the speaker sound.
 - The beeper sounds even if the speaker sound is turned off.
 - If the beeper does not sound, turn the main power switch on and off repeatedly and do the transmission procedure 2 or 3 times.
 - If the beeper does not sound after turning the main switch on and off 3 times, you need to input the settings stored in SRAM memory manually.
15. When “Ready” appears on the copy display, turn off the main power switch, and then disconnect the flat flexible cable from the old FCU board.
 16. Disconnect the flat flexible cable from the new FCU board.
 17. Reattach the controller slot cover (x 6).

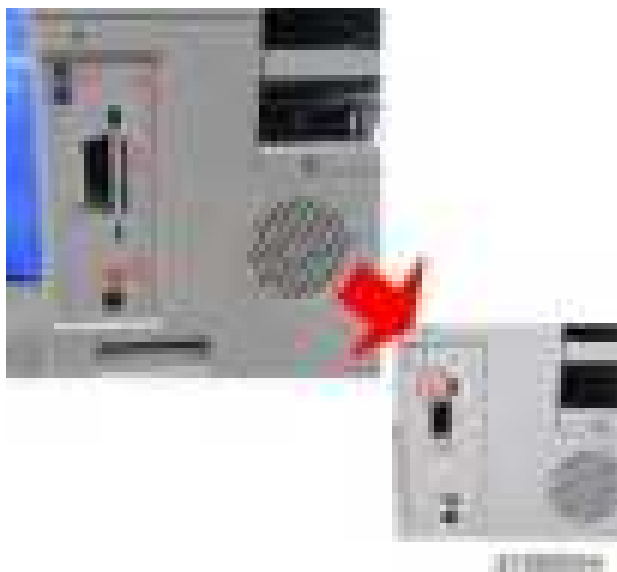

18. Attach the board cover [A] as shown below. (x 4)



19. Turn on the main power switch, then do SP6-101 to print the system parameter list.
20. Check the system parameter list to make sure that the data was transferred correctly.
21. Set the correct date and time with the User Tools: User Tools > System Settings > Timer Settings > Set Date/Set Time.

Note

- If any of the SRAM data was not transferred, input those settings manually.

3. TROUBLESHOOTING

3.1 ERROR CODES

If an error code occurs, retry the communication. If the same problem occurs, try to fix the problem as suggested below. Note that some error codes appear only in the error code display and on the service report.

Code	Meaning	Suggested Cause/Action
0-00	DIS/NSF not detected within 40 s of Start being pressed	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ The machine at the other end may be incompatible. ▪ Replace the FCU. ▪ Check for DIS/NSF with an oscilloscope. ▪ If the rx signal is weak, there may be a bad line.
0-01	DCN received unexpectedly	<ul style="list-style-type: none"> ▪ The other party is out of paper or has a jammed printer. ▪ The other party pressed Stop during communication.
0-03	Incompatible modem at the other end	The other terminal is incompatible.
0-04	CFR or FTT not received after modem training	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Try changing the tx level and/or cable equalizer settings. ▪ Replace the FCU. ▪ The other terminal may be faulty; try sending to another machine. ▪ If the rx signal is weak or defective, there may be a bad line.
<p>Cross reference</p> <p>Tx level - NCU Parameter 01 (PSTN) Cable equalizer - G3 Switch 07 (PSTN) Dedicated Tx parameters in Service Program Mode</p>		

Code	Meaning	Suggested Cause/Action
0-05	Modem training fails even G3 shifts down to 2400 bps.	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Try adjusting the tx level and/or cable equalizer. ▪ Replace the FCU. ▪ Check for line problems. <p>Cross reference See error code 0-04.</p>
0-06	The other terminal did not reply to DCS	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Try adjusting the tx level and/or cable equalizer settings. ▪ Replace the FCU. ▪ The other end may be defective or incompatible; try sending to another machine. ▪ Check for line problems. <p>Cross reference See error code 0-04.</p>
0-07	No post-message response from the other end after a page was sent	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Replace the FCU. ▪ The other end may have jammed or run out of paper. ▪ The other end user may have disconnected the call. ▪ Check for a bad line. ▪ The other end may be defective; try sending to another machine.

Code	Meaning	Suggested Cause/Action
0-08	The other end sent RTN or PIN after receiving a page, because there were too many errors	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Replace the FCU. ▪ The other end may have jammed, or run out of paper or memory space. ▪ Try adjusting the tx level and/or cable equalizer settings. ▪ The other end may have a defective modem/FCU; try sending to another machine. ▪ Check for line problems and noise. <p>Cross reference</p> <ul style="list-style-type: none"> ▪ Tx level - NCU Parameter 01 (PSTN) ▪ Cable equalizer - G3 Switch 07 (PSTN) ▪ Dedicated Tx parameters in Service Program Mode
0-14	Non-standard post message response code received	<ul style="list-style-type: none"> ▪ Incompatible or defective remote terminal; try sending to another machine. ▪ Noisy line: resend. ▪ Try adjusting the tx level and/or cable equalizer settings. ▪ Replace the FCU. <p>Cross reference</p> <p>See error code 0-08.</p>
0-15	The other terminal is not capable of specific functions.	<p>The other terminal is not capable of accepting the following functions, or the other terminal's memory is full.</p> <ul style="list-style-type: none"> ▪ Confidential rx ▪ Transfer function ▪ SEP/SUB/PWD/SID

Code	Meaning	Suggested Cause/Action
0-16	CFR or FTT not detected after modem training in confidential or transfer mode	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Replace the FCU. ▪ Try adjusting the tx level and/or cable equalizer settings. ▪ The other end may have disconnected, or it may be defective; try calling another machine. ▪ If the rx signal level is too low, there may be a line problem. <p>Cross reference See error code 0-08.</p>
0-17	Communication was interrupted by pressing the Stop key	If the Stop key was not pressed and this error keeps occurring, replace the operation panel or the operation panel drive board.
0-20	Facsimile data not received within 6 s of retraining	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Replace the FCU. ▪ Check for line problems. ▪ Try calling another fax machine. ▪ Try adjusting the reconstruction time for the first line and/or rx cable equalizer setting. <p>Cross reference Reconstruction time - G3 Switch 0A, bit 6 Rx cable equalizer - G3 Switch 07 (PSTN)</p>
0-21	EOL signal (end-of-line) from the other end not received within 5 s of the previous EOL signal	<ul style="list-style-type: none"> ▪ Check the connections between the FCU and line. ▪ Check for line noise or other line problems. ▪ Replace the FCU. ▪ The remote machine may be defective or may have disconnected. <p>Cross reference Maximum interval between EOLs and between ECM frames - G3 Bit Switch 0A, bit 4</p>

Code	Meaning	Suggested Cause/Action
0-22	The signal from the other end was interrupted for more than the acceptable modem carrier drop time (default: 200 ms)	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Replace the FCU. ▪ Defective remote terminal. ▪ Check for line noise or other line problems. ▪ Try adjusting the acceptable modem carrier drop time. <p>Cross reference Acceptable modem carrier drop time - G3 Switch 0A, bits 0 and 1</p>
0-23	Too many errors during reception	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Replace the FCU. ▪ Defective remote terminal ▪ Check for line noise or other line problems. ▪ Try asking the other end to adjust their tx level. ▪ Try adjusting the rx cable equalizer setting and/or rx error criteria. <p>Cross reference Rx cable equalizer - G3 Switch 07 (PSTN) Rx error criteria - Communication Switch 02, bits 0 and 1</p>
0-29	Data block format failure in ECM reception	<ul style="list-style-type: none"> ▪ Check for line noise or other line problems. ▪ Check the FCU - NCU connectors. ▪ Replace the NCU or FCU.
0-30	The other terminal did not reply to NSS(A) in AI short protocol mode	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Try adjusting the tx level and/or cable equalizer settings. ▪ The other terminal may not be compatible. <p>Cross reference Dedicated tx parameters - Section 4</p>
0-32	The other terminal sent a DCS, which contained functions that the receiving machine cannot handle.	<ul style="list-style-type: none"> ▪ Check the protocol dump list. ▪ Ask the other party to contact the manufacturer.

Code	Meaning	Suggested Cause/Action
0-33	The data reception (not ECM) is not completed within 10 minutes.	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ The other terminal may have a defective modem/FCU.
0-52	Polarity changed during communication	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Retry communication.
0-55	FCU does not detect the SG3.	<ul style="list-style-type: none"> ▪ FCU firmware or board defective. ▪ SG3 firmware or board defective.
0-56	The stored message data exceeds the capacity of the mailbox in the SG3.	SG3 firmware or board defective.
0-70	The communication mode specified in CM/JM was not available (V.8 calling and called terminal)	<ul style="list-style-type: none"> ▪ The other terminal did not have a compatible communication mode (e.g., the other terminal was a V.34 data modem and not a fax modem.) ▪ A polling tx file was not ready at the other terminal when polling rx was initiated from the calling terminal.
0-74	The calling terminal fell back to T.30 mode, because it could not detect ANSam after sending CI.	<ul style="list-style-type: none"> ▪ The calling terminal could not detect ANSam due to noise, etc. ▪ ANSam was too short to detect. ▪ Check the line connection and condition. ▪ Try making a call to another V.8/V.34 fax.
0-75	The called terminal fell back to T.30 mode, because it could not detect a CM in response to ANSam (ANSam timeout).	<ul style="list-style-type: none"> ▪ The terminal could not detect ANSam. ▪ Check the line connection and condition. ▪ Try receiving a call from another V.8/V.34 fax.
0-76	The calling terminal fell back to T.30 mode, because it could not detect a JM in response to CM (CM timeout).	<ul style="list-style-type: none"> ▪ The called terminal could not detect a CM due to noise, etc. ▪ Check the line connection and condition. ▪ Try making a call to another V.8/V.34 fax.

Code	Meaning	Suggested Cause/Action
0-77	The called terminal fell back to T.30 mode, because it could not detect a CJ in response to JM (JM timeout).	<ul style="list-style-type: none"> ▪ The calling terminal could not detect a JM due to noise, etc. ▪ A network that has narrow bandwidth cannot pass JM to the other end. ▪ Check the line connection and condition. ▪ Try receiving a call from another V.8/V.34 fax.
0-79	The called terminal detected CI while waiting for a V.21 signal.	<ul style="list-style-type: none"> ▪ Check for line noise or other line problems. ▪ If this error occurs, the called terminal falls back to T.30 mode.
0-80	The line was disconnected due to a timeout in V.34 phase 2 – line probing.	<ul style="list-style-type: none"> ▪ The guard timer expired while starting these phases. Serious noise, narrow bandwidth, or low signal level can cause these errors.
0-81	The line was disconnected due to a timeout in V.34 phase 3 – equalizer training.	If these errors happen at the transmitting terminal:
0-82	The line was disconnected due to a timeout in the V.34 phase 4 – control channel start-up.	<ul style="list-style-type: none"> ▪ Try making a call at a later time. ▪ Try using V.17 or a slower modem using dedicated tx parameters. ▪ Try increasing the tx level.
0-83	The line was disconnected due to a timeout in the V.34 control channel restart sequence.	<ul style="list-style-type: none"> ▪ Try adjusting the tx cable equalizer setting. <p>If these errors happen at the receiving terminal:</p> <ul style="list-style-type: none"> ▪ Try adjusting the rx cable equalizer setting. ▪ Try increasing the tx level. ▪ Try using V.17 or a slower modem if the same error is frequent when receiving from multiple senders.
0-84	The line was disconnected due to abnormal signaling in V.34 phase 4 – control channel start-up.	<ul style="list-style-type: none"> ▪ The signal did not stop within 10 s. ▪ Turn off the main power switch, then turn it back on. ▪ If the same error is frequent, replace the FCU.

Code	Meaning	Suggested Cause/Action
0-85	The line was disconnected due to abnormal signaling in V.34 control channel restart.	<ul style="list-style-type: none"> ▪ The signal did not stop within 10 s. ▪ Turn off the main power switch, then turn it back on. ▪ If the same error is frequent, replace the FCU.
0-86	The line was disconnected because the other terminal requested a data rate using MPh that was not available in the currently selected symbol rate.	<ul style="list-style-type: none"> ▪ The other terminal was incompatible. ▪ Ask the other party to contact the manufacturer.
0-87	The control channel started after an unsuccessful primary channel.	<ul style="list-style-type: none"> ▪ The receiving terminal restarted the control channel because data reception in the primary channel was not successful. ▪ This does not result in an error communication.
0-88	The line was disconnected because PPR was transmitted/received 9 (default) times within the same ECM frame.	<ul style="list-style-type: none"> ▪ Try using a lower data rate at the start. ▪ Try adjusting the cable equalizer setting.
2-11	Only one V.21 connection flag was received	<ul style="list-style-type: none"> ▪ Replace the FCU.
2-12	Modem clock irregularity	<ul style="list-style-type: none"> ▪ Replace the FCU.
2-13	Modem initialization error	<ul style="list-style-type: none"> ▪ Turn off the machine, then turn it back on. ▪ Update the modem ROM. ▪ Replace the FCU.
2-22	Counter overflow error of JBIG chip	If error occurs frequently, change the settings for resolution, paper size, compression type.
2-23	JBIG compression or reconstruction error	Turn off the machine, then turn it back on.
2-24	JBIG ASIC error	<ul style="list-style-type: none"> ▪ Turn off the machine, then turn it back on.
2-25	JBIG data reconstruction error (BIH error)	<ul style="list-style-type: none"> ▪ JBIG data error ▪ Check the sender's JBIG function.
2-26	JBIG data reconstruction error (Float marker error)	<ul style="list-style-type: none"> ▪ Update the FCU ROM.

Error Codes

Code	Meaning	Suggested Cause/Action
2-27	JBIG data reconstruction error (End marker error)	
2-28	JBIG data reconstruction error (Timeout)	
2-29	JBIG trailing edge maker error	<ul style="list-style-type: none"> ▪ FCU defective ▪ Check the destination device.
2-50	The machine resets itself for a fatal FCU system error	<ul style="list-style-type: none"> ▪ If this is frequent, update the ROM, or replace the FCU.
2-51	The machine resets itself because of a fatal communication error	<ul style="list-style-type: none"> ▪ If this is frequent, update the ROM, or replace the FCU.
2-53	Snd msg() in the manual task is an error because the mailbox for the operation task is full.	<ul style="list-style-type: none"> ▪ The user did the same operation many times, and this gave too much load to the machine.
4-01	Line current was cut	<ul style="list-style-type: none"> ▪ Check the line connector. ▪ Check for line problems. ▪ Replace the FCU.
4-10	Communication failed because of an ID Code mismatch (Closed Network) or Tel. No./CSI mismatch (Protection against Wrong Connections)	<ul style="list-style-type: none"> ▪ Get the ID Codes the same and/or the CSIs programmed correctly, then resend. ▪ The machine at the other end may be defective.
5-00	Data reconstruction not possible	Replace the FCU.
5-10	DCR timer expired	<ul style="list-style-type: none"> ▪ Replace the FCU.
5-20	Storage impossible because of a lack of memory	<ul style="list-style-type: none"> ▪ Temporary memory shortage. ▪ Test the SAF memory.
5-21	Memory overflow	
5-23	Print data error when printing a substitute rx or confidential rx message	<ul style="list-style-type: none"> ▪ Test the SAF memory. ▪ Ask the other end to resend the message.
5-25	SAF file access error	<ul style="list-style-type: none"> ▪ Replace an SD card or HDD. ▪ Replace the FCU.
6-00	G3 ECM - T1 time out during reception of facsimile data	<ul style="list-style-type: none"> ▪ Try adjusting the rx cable equalizer. ▪ Replace the FCU.

Code	Meaning	Suggested Cause/Action
6-01	G3 ECM - no V.21 signal was received	
6-02	G3 ECM - EOR was received	
6-04	G3 ECM - RTC not detected	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Check for a bad line or defective remote terminal. ▪ Replace the FCU.
6-05	G3 ECM - facsimile data frame not received within 18 s of CFR, but there was no line fail	<ul style="list-style-type: none"> ▪ Check the line connection. ▪ Check for a bad line or defective remote terminal. ▪ Replace the FCU. ▪ Try adjusting the rx cable equalizer <p>Cross reference</p> <ul style="list-style-type: none"> ▪ Rx cable equalizer - G3 Switch 07 (PSTN)
6-06	G3 ECM - coding/decoding error	<ul style="list-style-type: none"> ▪ Defective FCU. ▪ The other terminal may be defective.
6-08	G3 ECM - PIP/PIN received in reply to PPS.NULL	<ul style="list-style-type: none"> ▪ The other end pressed Stop during communication. ▪ The other terminal may be defective.
6-09	G3 ECM - ERR received	<ul style="list-style-type: none"> ▪ Check for a noisy line. ▪ Adjust the tx levels of the communicating machines. ▪ See code 6-05.
6-10	G3 ECM - error frames still received at the other end after all communication attempts at 2400 bps	<ul style="list-style-type: none"> ▪ Check for line noise. ▪ Adjust the tx level (use NCU parameter 01 or the dedicated tx parameter for that address). ▪ Check the line connection. ▪ Defective remote terminal.
6-21	V.21 flag detected during high speed modem communication	<ul style="list-style-type: none"> ▪ The other terminal may be defective or incompatible.
6-22	The machine resets the sequence because of an abnormal handshake in the V.34 control channel	<ul style="list-style-type: none"> ▪ Check for line noise. ▪ If the same error occurs frequently, replace the FCU. ▪ Defective remote terminal.

Error Codes

Code	Meaning	Suggested Cause/Action
6-99	V.21 signal not stopped within 6 s	Replace the FCU.
13-17	SIP user name registration error	<ul style="list-style-type: none"> ▪ Double registration of the SIP user name. ▪ Capacity for user-name registration in the SIP server is not sufficient.
13-18	SIP server access error	<ul style="list-style-type: none"> ▪ Incorrect initial setting for the SIP server. ▪ Defective SIP server.
13-24	SIP authentication error	<ul style="list-style-type: none"> ▪ Registered password in the device does not match the password in the SIP server.
13-25	Network I/F setting error	<ul style="list-style-type: none"> ▪ IPV4 is not active in the active protocol setting. ▪ IP address of the device is not registered.
13-26	Network I/F setting error at power on	<ul style="list-style-type: none"> ▪ Active protocol setting does not match the I/F setting for SIP server. ▪ IP address of the device is not registered.
13-27	IP address setting error	<ul style="list-style-type: none"> ▪ IP address of the device is not registered.
13-28	Failed to obtain the HGW extension number	<ul style="list-style-type: none"> ▪ Check the HGW setting, and then remove extension numbers not being used, to make available space for obtaining extension numbers.
13-29	HGW access error	<ul style="list-style-type: none"> ▪ Check the HGW IP address and LAN cable connection and solve any problem.
13-30	HGW error for not being registered	<ul style="list-style-type: none"> ▪ Check the user settings.
13-31	An error due to lack of communication resources	
13-32	An error due to disconnected communication	<ul style="list-style-type: none"> ▪ Check the user settings.
13-33	Capability exchange failure	<ul style="list-style-type: none"> ▪ The connected device may not be guaranteed by Ricoh to support connection.
13-34	An error due to connecting to a non-IP Fax device	<ul style="list-style-type: none"> ▪ The machine at the other end does not support IP-FAX.
13-35	A temporary error at the connected device	<ul style="list-style-type: none"> ▪ Check the destination device.
13-36	An error due to congestion	<ul style="list-style-type: none"> ▪ Contact your phone service representative.
13-37	Network error	

Code	Meaning	Suggested Cause/Action
13-38	An error due to NGN being temporarily unavailable	
13-39	Failed to receive a response from the connected device	<ul style="list-style-type: none"> ▪ Check the LAN cable connection. ▪ Check the user's connection environment and solve any problem.
13-40	Other errors	<ul style="list-style-type: none"> ▪ Received other SIP-related error
13-41	Fax session connection error	<ul style="list-style-type: none"> ▪ The connected device may not be guaranteed by Ricoh to support connection.
14-00	SMTP Send Error	<ul style="list-style-type: none"> ▪ Error occurred during sending to the SMTP server. Occurs for any error other than 14-01 to 16. For example, the mail address of the system administrator is not registered.
14-01	SMTP Connection Failed	<ul style="list-style-type: none"> ▪ Failed to connect to the SMTP server (timeout) because the server could not be found. ▪ The PC is not ready to transfer files. ▪ SMTP server not functioning correctly. ▪ The DNS IP address is not registered. ▪ Network not operating correctly. ▪ Destination folder selection not correct.
14-02	No Service by SMTP Service (421)	<ul style="list-style-type: none"> ▪ SMTP server operating incorrectly, or the destination for direct SMTP sending is not correct. ▪ Contact the system administrator and check that the SMTP server has the correct settings and operates correctly. ▪ Contact the system administrator for direct SMTP sending and check the sending destination.

Error Codes

Code	Meaning	Suggested Cause/Action
14-03	Access to SMTP Server Denied (450)	<ul style="list-style-type: none">Failed to access the SMTP server because the access is denied.SMTP server operating incorrectly. Contact the system administrator to determine if there is a problem with the SMTP server and to check that the SMTP server settings are correct.Folder send destination is incorrect. Contact the system administrator to determine that the SMTP server settings and path to the server are correct.Device settings incorrect. Confirm that the user name and password settings are correct.Direct SMTP destination incorrect. Contact the system administrator to determine if there is a problem at the destination at that the settings at the destination are correct.
14-04	Access to SMTP Server Denied (550)	<ul style="list-style-type: none">SMTP server operating incorrectlyDirect SMTP sending not operating correctly

Code	Meaning	Suggested Cause/Action
14-05	SMTP Server HDD Full (452)	<ul style="list-style-type: none"> ▪ Failed to access the SMTP server because the HDD on the server is full. ▪ Insufficient free space on the HDD of the SMTP server. Contact the system administrator and check the amount of space remaining on the SMTP server HDD. ▪ Insufficient free space on the HDD where the destination folder is located. Contact the system administrator and check the amount of space remaining on the HDD where the target folder is located. ▪ Insufficient free space on the HDD at the target destination for SMTP direct sending. Contact the system administrator and check the amount of space remaining on the target HDD.
14-06	User Not Found on SMTP Server (551)	<ul style="list-style-type: none"> ▪ The designated user does not exist. ▪ The designated user does not exist on the SMTP server. ▪ The designated address is not for use with direct SMTP sending.
14-07	Data Send to SMTP Server Failed (4XX)	<ul style="list-style-type: none"> ▪ Failed to access the SMTP server because the transmission failed. ▪ PC not operating correctly. ▪ SMTP server operating incorrectly ▪ Network not operating correctly. ▪ Destination folder setting incorrect. ▪ Direct SMTP sending not operating correctly.
14-08	Data Send to SMTP Server Failed (5XX)	<ul style="list-style-type: none"> ▪ Failed to access the SMTP server because the transmission failed. ▪ SMTP server operating incorrectly ▪ Destination folder setting incorrect. ▪ Direct SMTP sending not operating correctly. ▪ Software application error.

Error Codes

Code	Meaning	Suggested Cause/Action
14-09	Authorization Failed for Sending to SMTP Server	<ul style="list-style-type: none"> POP-Before-SMTP or SMTP authorization failed. Incorrect setting for file transfer
14-10	Addresses Exceeded	<ul style="list-style-type: none"> Number of broadcast addresses exceeded the limit for the SMTP server.
14-11	Buffer Full	<ul style="list-style-type: none"> The send buffer is full so the transmission could not be completed. Buffer is full due to using Scan-to-Email while the buffer is being used send mail at the same time.
14-12	Data Size Too Large	<ul style="list-style-type: none"> Transmission was cancelled because the detected size of the file was too large.
14-13	Send Cancelled	<ul style="list-style-type: none"> Processing is interrupted because the user pressed Stop.
14-14	Security Locked File Error	<ul style="list-style-type: none"> Update the software because of the defective software.
14-15	Mail Data Error	<ul style="list-style-type: none"> The transmitting a mail is interrupted via DCS due to the incorrect data. Update the software because of the defective software.
14-16	Maximum Division Number Error	<ul style="list-style-type: none"> When a mail is divided for the mail transmission and the division number of a mail are more than the specified number, the mail transmission is interrupted. Update the software because of the defective software.
14-17	Incorrect Ticket	<ul style="list-style-type: none"> Update the software because of the defective software.
14-18	Access to MCS File Error	<ul style="list-style-type: none"> The access to MCS file is denied due to the no permission of access. Update the software because of the defective software.
14-20	SMTP Authentication error	Make sure the administrator's e-mail address is same as the SMTP authentication address or POP before SMTP address.
14-21	Transmission error of S/MIME	Register the correct user certificate and device certificate.

Code	Meaning	Suggested Cause/Action
14-22	Destination certificate is invalid in S/MIME transmission	<ul style="list-style-type: none"> Register the correct destination certificate.
14-23	Device certificate is invalid in S/MIME transmission	<ul style="list-style-type: none"> Register the correct device certificate.
14-24	Destination and device certificate is invalid in S/MIME	<ul style="list-style-type: none"> Register the correct user certificate and device certificate.
14-30	MCS File Creation Failed	<p>Failed to create the MCS file because:</p> <ul style="list-style-type: none"> The number of files created with other applications on the Document Server has exceeded the limit. HDD is full or not operating correctly. Software error.
14-31	UFS File Creation Failed	<p>UFS file could not be created:</p> <ul style="list-style-type: none"> Not enough space in UFS area to handle both Scan-to-Email and IFAX transmission. HDD full or not operating correctly. Software error.
14-32	Cancelled the Mail Due to Error Detected by NFAX	<ul style="list-style-type: none"> Error detected with NFAX and send was cancelled due to a software error.
14-33	No Mail Address For the Machine	<ul style="list-style-type: none"> Neither the mail address of the machine nor the mail address of the network administrator is registered.
14-34	Address designated in the domain for SMTP sending does not exist	<ul style="list-style-type: none"> Operational error in normal mail sending or direct SMTP sending. Check the address selected in the address book for SMTP sending. Check the domain selection.
14-50	Mail Job Task Error	<p>Due to an FCU mail job task error, the send was cancelled:</p> <ul style="list-style-type: none"> Address book was being edited during creation of the notification mail. Software error.

Error Codes

Code	Meaning	Suggested Cause/Action
14-51	UCS Destination Download Error	Not even one return notification can be downloaded: <ul style="list-style-type: none"> ▪ The address book was being edited. ▪ The number for the specified destination does not exist (it was deleted or edited after the job was created).
14-60	Send Cancel Failed	<ul style="list-style-type: none"> ▪ The cancel operation by the user failed to cancel the send operation.
14-61	Notification Mail Send Failed for All Destinations	<ul style="list-style-type: none"> ▪ All addresses for return notification mail failed.
14-62	Transmission Error due to the existence of zero line page	<ul style="list-style-type: none"> ▪ When the 0 line page exists in received pages with G3 communication, the transmission is interrupted.
15-01	POP3/IMAP4 Server Not Registered	<ul style="list-style-type: none"> ▪ At startup, the system detected that the IP address of the POP3/IMAP4 server has not been registered in the machine.
15-02	POP3/IMAP4 Mail Account Information Not Registered	<ul style="list-style-type: none"> ▪ The POP3/IMAP4 mail account has not been registered.
15-03	Mail Address Not Registered	<ul style="list-style-type: none"> ▪ The mail address has not been registered.
15-10	DCS Mail Receive Error	<ul style="list-style-type: none"> ▪ Error other than 15-11 to 15-18.
15-11	Connection Error	The DNS or POP3/IMAP4 server could not be found: <ul style="list-style-type: none"> ▪ The IP address for DNS or POP3/IMAP4 server is not stored in the machine. ▪ The DNS IP address is not registered. ▪ Network not operating correctly.
15-12	Authorization Error	POP3/IMAP4 send authorization failed: <ul style="list-style-type: none"> ▪ Incorrect IFAX user name or password. ▪ Access was attempted by another device, such as the PC. ▪ POP3/IMAP4 settings incorrect.
15-13	Receive Buffer Full	<ul style="list-style-type: none"> ▪ Occurs only during manual reception. Transmission cannot be received due to insufficient buffer space. The buffer is being used for mail send or Scan-to-Email.

Code	Meaning	Suggested Cause/Action
15-14	Mail Header Format Error	<ul style="list-style-type: none"> The mail header is not standard format. For example, the Date line description is incorrect.
15-15	Mail Divide Error	<ul style="list-style-type: none"> The e-mail is not in standard format. There is no boundary between parts of the e-mail, including the header.
15-16	Mail Size Receive Error	<ul style="list-style-type: none"> The mail cannot be received because it is too large.
15-17	Receive Timeout	<ul style="list-style-type: none"> May occur during manual receiving only because the network is not operating correctly.
15-18	Incomplete Mail Received	<ul style="list-style-type: none"> Only one portion of the mail was received.
15-31	Final Destination for Transfer Request Reception Format Error	<ul style="list-style-type: none"> The format of the final destination for the transfer request was incorrect.
15-39	Send/Delivery Destination Error	<p>The transmission cannot be delivered to the final destination:</p> <ul style="list-style-type: none"> Destination file format is incorrect. Could not create the destination for the file transmission.
15-41	SMTP Receive Error	<ul style="list-style-type: none"> Reception rejected because the transaction exceeded the limit for the "Auth. E-mail RX" setting.
15-42	Off Ramp Gateway Error	<ul style="list-style-type: none"> The delivery destination address was specified with Off Ramp Gateway OFF.
15-43	Address Format Error	<ul style="list-style-type: none"> Format error in the address of the Off Ramp Gateway.
15-44	Addresses Over	<ul style="list-style-type: none"> The number of addresses for the Off Ramp Gateway exceeded the limit of 30.
15-50	NFAX: Text part-related error	<ul style="list-style-type: none"> Check the received mail. Update the software.
15-60	NFAX: FIFF file-related error	<ul style="list-style-type: none"> Check the TIFF file attached to the mail Update the software.
15-61	Attachment File Format Error	<ul style="list-style-type: none"> The attached file is not TIFF format.

Error Codes

Code	Meaning	Suggested Cause/Action
15-62	TIFF File Compatibility Error	Could not receive transmission due to: <ul style="list-style-type: none">▪ Resolution error▪ Image of resolution greater than 200 dpi without extended memory.▪ Resolution is not supported.▪ Page size error▪ The page size was larger than A3.▪ Compression error▪ File was compressed with other than MH, MR, or MMR.
15-63	TIFF Parameter Error	The TIFF file sent as the attachment could not be received because the TIFF header is incorrect: <ul style="list-style-type: none">▪ The TIFF file attachment is a type not supported.▪ The TIFF file attachment is corrupted.▪ Software error.
15-64	TIFF Decompression Error	The file received as an attachment caused the TIFF decompression error: <ul style="list-style-type: none">▪ The TIFF format of the attachment is corrupted.▪ Software error.
15-71	Not Binary Image Data	<ul style="list-style-type: none">▪ The file could not be received because the attachment was not binary image data.
15-73	MDN Status Error	<ul style="list-style-type: none">▪ Could not find the Disposition line in the header of the Return Receipt, or there is a problem with the firmware.
15-74	MDN Message ID Error	<ul style="list-style-type: none">▪ Could not find the Original Message ID line in the header of the Return Receipt, or there is a problem with the firmware.
15-80	Mail Job Task Read Error	<ul style="list-style-type: none">▪ Could not receive the transmission because the destination buffer is full and the destination could not be created (this error may occur when receiving a transfer request or a request for notification of reception).

Code	Meaning	Suggested Cause/Action
15-81	Repeated Destination Registration Error	<ul style="list-style-type: none"> Could not repeat receive the transmission because the destination buffer is full and the destination could not be created (this error may occur when receiving a transfer request or a request for notification of reception).
15-91	Send Registration Error	<p>Could not receive the file for transfer to the final destination:</p> <ul style="list-style-type: none"> The format of the final destination or the transfer destination is incorrect. Destinations are full so the final and transfer destinations could not be created.
15-92	Memory Overflow	<ul style="list-style-type: none"> Transmission could not be received because memory overflowed during the transaction.
15-93	Memory Access Error	<ul style="list-style-type: none"> Transaction could not complete due to a malfunction of SAF memory.
15-94	Incorrect ID Code	<ul style="list-style-type: none"> The machine rejected an incoming e-mail for transfer request, because the ID code in the incoming e-mail did not match the ID code registered in the machine.
15-95	Transfer Station Function	<ul style="list-style-type: none"> The machine rejected an incoming e-mail for transfer because the transfer function was unavailable.
16-00	NCS: A network error to a device with an option to connect to a fax machine.	<ul style="list-style-type: none"> Register the IP address Connect to a network.
22-00	Original length exceeded the maximum scan length	<ul style="list-style-type: none"> Divide the original into more than one page. Check the resolution used for scanning. Lower the scan resolution if possible. Add optional page memory.

Error Codes

Code	Meaning	Suggested Cause/Action
22-01	Memory overflow while receiving	<ul style="list-style-type: none"> ▪ Wait for the files in the queue to be sent. ▪ Delete unnecessary files from memory. ▪ Transfer the substitute reception files to an another fax machine, if the machine's printer is busy or out of order. ▪ Add an optional SAF memory card or hard disk.
22-02	Tx or rx job stalled due to line disconnection at the other end	<ul style="list-style-type: none"> ▪ The job started normally but did not finish normally; data may or may not have been received fully. ▪ Restart the machine.
22-03	The hard disk for cache is full during fax reception.	<ul style="list-style-type: none"> ▪ Replace the HDD. ▪ Replace the FCU.
22-04	The machine cannot store received data in the SAF	<ul style="list-style-type: none"> ▪ Update the ROM ▪ Replace the FCU.
22-05	No G3 parameter confirmation answer	<ul style="list-style-type: none"> ▪ Defective FCU board or firmware.
23-00	Data read timeout during construction	<ul style="list-style-type: none"> ▪ Restart the machine. ▪ Replace the FCU.
25-00	The machine software resets itself after a fatal transmission error occurred	<ul style="list-style-type: none"> ▪ Update the ROM ▪ Replace the FCU.
31-00	Remote printer capacity (transfer mode) not matching	<ul style="list-style-type: none"> ▪ The other terminal is incompatible. ▪ Capability mismatch
31-01	Remote printer capacity (compression format) not matching	
31-02	Remote printer capacity (page memory capacity) not matching	
31-03	Remote printer capacity (resolution) not matching	
31-04	Remote printer capacity (paper size) not matching	
31-05	Remote printer capacity (emulation) not matching	

Code	Meaning	Suggested Cause/Action
31-06	RP-A header error	<ul style="list-style-type: none"> ▪ BFT file format error ▪ BFT file accumulation error ▪ A bug detected in the RP-A1 header-search algorithm for BFT files ▪ Check the FCU board/Printer board/Driver
31-07	Remote printer capacity (RPCS language version connection criteria) not matching	<ul style="list-style-type: none"> ▪ The other terminal is incompatible. ▪ Capability mismatch
31-20	Memory has run out during PC fax storage.	<ul style="list-style-type: none"> ▪ Check the memory capacity. ▪ Wait for the file in the queue to be sent. ▪ Add an optional SAF memory (if available for this model).
31-21	Operation cancelled during PC fax storage	-
31-22	FCU error during PC fax storage	<ul style="list-style-type: none"> ▪ Replace the FCU. ▪ Replace the controller board.
31-23	Other errors during PC fax storage	
31-24	Check sum error during PC fax storage	<ul style="list-style-type: none"> ▪ Retry. ▪ Replace the FCU.
32-00	Merged reception data error	<ul style="list-style-type: none"> ▪ The other terminal is incompatible. ▪ Check the memory capacity.
F0-xx	V.34 modem error	<ul style="list-style-type: none"> ▪ Replace the FCU.
F6-xx	SG3 modem error	<ul style="list-style-type: none"> ▪ Update the SG3 modem ROM. ▪ Replace the SG3 board. ▪ Check for line noise or other line problems. ▪ Try communicating with another V.8/V.34 fax machine.

3.2 IFAX TROUBLESHOOTING

Use the following procedures to determine whether the machine or another part of the network is causing the problem.

Communication Route	Item	Action [Remarks]
General LAN	1. Connection with the LAN	<ul style="list-style-type: none"> ▪ Check that the LAN cable is connected to the machine. ▪ Check that the LEDs on the hub are lit.
	2. LAN activity	Check that other devices connected to the LAN can communicate through the LAN.
Between IFAX and PC	1. Network settings on the PC	<ul style="list-style-type: none"> ▪ Check the network settings on the PC. [Is the IP address registered in the TCP/IP properties in the network setup correct? Check the IP address with the administrator of the network.]
	2. Check that PC can connect with the machine	<ul style="list-style-type: none"> ▪ Use the “ping” command on the PC to contact the machine. [At the MS-DOS prompt, type ping then the IP address of the machine, then press Enter.]
	3. LAN settings in the machine	<ul style="list-style-type: none"> ▪ Check the LAN parameters ▪ Check if there is an IP address conflict with other PCs. [Use the “Network” function in the User Tools. If there is an IP address conflict, inform the administrator.]
Between machine and e-mail server	1. LAN settings in the machine	<ul style="list-style-type: none"> ▪ Check the LAN parameters ▪ Check if there is an IP address conflict with other PCs. [Use the “Network” function in the User Tools. If there is an IP address conflict, inform the administrator.]

Communication Route	Item	Action [Remarks]
	2. E-mail account on the server	<ul style="list-style-type: none"> ▪ Make sure that the machine can log into the e-mail server. ▪ Check that the account and password stored in the server are the same as in the machine. <p>[Ask the administrator to check.]</p>
	3. E-mail server	<ul style="list-style-type: none"> ▪ Make sure that the client devices which have an account in the server can send/receive e-mail. <p>[Ask the administrator to check.] Send a test e-mail with the machine's own number as the destination. The machine receives the returned e-mail if the communication is performed successfully.]</p>
Between e-mail server and internet	1. E-mail account on the Server	<ul style="list-style-type: none"> ▪ Make sure that the PC can log into the e-mail server. ▪ Check that the account and password stored in the server are the same as in the machine. <p>[Ask the administrator to check.]</p>
	2. E-mail server	<ul style="list-style-type: none"> ▪ Make sure that the client devices which have an account in the server can send/receive e-mail. <p>[Ask the administrator to check.] Send a test e-mail with the machine's own number as the destination. The machine receives the returned e-mail if the communication is performed successfully.]</p>
	3. Destination e-mail address	<ul style="list-style-type: none"> ▪ Make sure that the e-mail address is actually used. ▪ Check that the e-mail address contains no incorrect characters such as spaces.

Communication Route	Item	Action [Remarks]
	4. Router settings	<ul style="list-style-type: none"> ▪ Use the “ping” command to contact the router. ▪ Check that other devices connected to the router can send data over the router. <p>[Ask the administrator of the server to check.]</p>
	5. Error message by e-mail from the network of the destination.	<ul style="list-style-type: none"> ▪ Check whether e-mail can be sent to another address on the same network, using the application e-mail software. ▪ Check the error e-mail message. <p>[Inform the administrator of the LAN.]</p>

3.3 IP-FAX TROUBLESHOOTING

3.3.1 IP-FAX TRANSMISSION

Cannot send by IP Address/Host Name

Check Point	Action
1 LAN cable connected?	Check the LAN cable connection.
2 Specified IP address/host name correct?	Check the IP address/host name. Cannot breach the firewall. Send by using another method (Fax, Internet Fax)
3 Firewall/NAT is installed?	Manual sending not supported.
4 Transmission sent manually?	Register the IP address.
5 IP address of local machine registered? Remote terminal port number setting	Send by specifying the port number.
6 other than 1720 (when using H.323) or 5060 (when using SIP)?	Confirm the port number of the remote fax.
7 Specified port number correct?	Contact the network administrator.
8 DNS server registered when host name specified?	Check whether the remote fax is a T38 terminal.
9 Remote fax a T.38 terminal?	Check that the remote fax is switched on. Request the network administrator to increase the bandwidth. Raise the delay level.
10 Remote fax switched off or busy?	IPFAX SW 01 Bit 0 to 3 IP-Fax bandwidth is the same as the DCS speed. Set IP-Fax SW00 Bit 6 to 1.
11 Network bandwidth too narrow?	Check whether the remote fax cancelled the transmission.
12 Remote fax cancelled transmission?	

Cannot send via VoIP Gateway


Check Point	Action
1 LAN cable connected?	Check the LAN cable connection.
2 VoIP Gateway T.38 standard?	Contact the network administrator.
3 VoIP Gateway installed correctly?	Contact the network administrator.
4 VoIP Gateway power switched on?	Contact the network administrator.
5 Is the IP address/host name of the specified Gateway correct?	Check the IP address/host name.
6 Number of the specified fax correct?	Check the remote fax number.
7 Firewall/NAT is installed?	Cannot breach the firewall. Send by using another method (Fax, Internet Fax)
8 Transmission sent manually?	Manual sending not supported.
9 IP address of local fax registered?	Register the IP address.
10 DNS registered when host name specified?	Contact the network administrator.
11 Remote fax a G3 fax?	Check that the remote fax is a G3 fax.
12 G3 fax is connected to VoIP gateway?	Check that G3 fax is connected.
13 Remote G3 fax turned on?	Check that G3 fax is switched on.
14 Network bandwidth too narrow?	Request the network administrator to increase the bandwidth. Raise the network delay level. IPFAX SW 01 Bit 0 to 3 IP-Fax bandwidth is the same as the DCS speed. Set IP-Fax SW00 Bit 6 to 1.

Cannot send by Alias Fax number.

Check Point	Action
1 LAN cable connected?	Check the LAN cable connection.
2 Number of specified Alias fax correct?	Confirm the Alias of the remote fax. Error Code: 13-14
3 Firewall/NAT installed?	Cannot breach the firewall. Send by using another method (Fax, Internet Fax)
4 Transmission sent manually?	Manual sending not supported.
5 Gatekeeper/SIP server installed correctly?	Contact the network administrator.
6 Gatekeeper/SIP server power switched on?	Contact the network administrator.
7 IP address/host name of Gatekeeper/SIP server correct?	Check the IP address/host name.
8 Gatekeeper/SIP server host name specified?	Contact the network administrator.
9 Enable H.323/Enable SIP SW is set to on?	Check the settings. See User Parameter SW 34 Bit 0/SW 34 Bit 1
10 IP address of local fax registered?	Register the IP address of the local fax.
11 Alias number of local fax registered?	Register the Alias number of the local fax.
12 Remote fax registered in Gatekeeper?	Contact the network administrator.
13 Remote fax a T.38 terminal?	Check whether the remote fax is a T38 terminal.
14 Remote fax switched off or busy?	Contact the network administrator. Request the system administrator to increase the bandwidth. Raise the delay level.
15 Network bandwidth too narrow?	IPFAX SW 01 Bit 0 to 3 Lower the modem transmission baud rate. IPFAX SW 05
16 Remote fax cancelled transmission?	Check whether the remote fax cancelled the transmission.

3.3.2 IP-FAX RECEPTION

Cannot receive via IP Address/Host Name.

	Check Point	Action
1	LAN cable connected?	Check the LAN cable connection.
2	Firewall/NAT is installed?	Cannot breach the firewall. Send by using another method (Fax, Internet Fax)
3	IP address of local fax registered?	Register the IP address.
4	Port number specified at remote sender fax (if required)?	Request the sender to specify the port number.
5	Specified port number correct (if required)?	Request the sender to check the port number. Contact the network administrator.
6	DNS server registered when host name specified on sender side?	<div data-bbox="767 871 938 902" style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> <li data-bbox="820 920 1286 1041">▪ The sender machine displays this error code if the sender fax is a Ricoh model. Request the system administrator to increase the bandwidth.
7	Network bandwidth too narrow?	Lower the start modem reception baud rate on the receiving side. IPFAX SW06
8	Remote fax cancelled transmission?	Check whether the remote fax cancelled the transmission.

Cannot receive by VoIP Gateway.

Check Point	Action
1 LAN cable connected?	Check the LAN cable connection.
2 Firewall/NAT is installed?	Cannot breach the firewall. Request the remote fax to send by using another method (Fax, Internet Fax)
3 VoIP Gateway installed correctly?	Contact the network administrator.
4 VoIP Gateway power switched on?	Contact the network administrator.
5 IP address/host name of specified VoIP Gateway correct on sender's side?	Request the remote fax to check the IP address/host name.
6 DNS server registered when host name specified on sender side?	Contact the network administrator.
7 Network bandwidth too narrow?	Request the network administrator to increase the bandwidth.
8 G3 fax connected?	Check that G3 fax is connected.
9 G3 fax power switched on?	Check that G3 fax is switched on.

Cannot receive by Alias Fax number.

	Check Point	Action
1	LAN cable connected?	Check the LAN cable connection.
2	Firewall/NAT is installed?	Cannot the breach firewall. Request the remote fax to send by using another method (Fax, Internet Fax) Contact the network administrator.
3	Gatekeeper/SIP server installed correctly?	<p data-bbox="758 631 932 658">↓ Note</p> <ul data-bbox="810 683 1283 804" style="list-style-type: none"> <li data-bbox="810 683 1283 804">▪ The sender machine displays this error code when the sender fax is a Ricoh model. <p data-bbox="758 824 1182 853">Contact the network administrator.</p>
4	Power to Gatekeeper/SIP server switched on?	<p data-bbox="758 873 932 900">↓ Note</p> <ul data-bbox="810 922 1283 1043" style="list-style-type: none"> <li data-bbox="810 922 1283 1043">▪ The sender machine displays this error code when the sender fax is a Ricoh model. <p data-bbox="758 1064 1197 1137">Request the sender to check the IP address/host name.</p>
5	IP address/host name of Gatekeeper/SIP server correct on the sender's side?	<p data-bbox="758 1160 932 1187">↓ Note</p> <ul data-bbox="810 1209 1283 1330" style="list-style-type: none"> <li data-bbox="810 1209 1283 1330">▪ The sender machine displays this error code when the sender fax is a Ricoh model. <p data-bbox="758 1350 1182 1382">Contact the network administrator.</p>
6	DNS server registered when Gatekeeper/SIP server host name specified on sender's side?	<p data-bbox="758 1402 932 1429">↓ Note</p> <ul data-bbox="810 1451 1283 1572" style="list-style-type: none"> <li data-bbox="810 1451 1283 1572">▪ The sender machine displays this error code when the sender fax is a Ricoh model. <p data-bbox="758 1592 1275 1624">Request the sender to check the settings.</p>
7	Enable H.323/Enable SIP SW is set to on?	<p data-bbox="758 1644 932 1671">↓ Note</p> <ul data-bbox="810 1693 1283 1814" style="list-style-type: none"> <li data-bbox="810 1693 1283 1814">▪ Only if the remote sender fax is a Ricoh fax. <p data-bbox="758 1644 1267 1671">User Parameter SW 34 Bit 0/SW 34 Bit 1</p>
8	Local fax IP address registered?	Register the IP address.
9	Local fax Alias number registered?	Register the Alias number.
10	Network bandwidth too narrow?	Request the system administrator to increase the bandwidth.

- 11 Remote fax cancelled transmission?
- Lower the start modem reception baud rate on the receiving side.
IPFAX SW06
Check whether the remote fax cancelled the transmission.
Contact the network administrator.
- 12 Local fax registered in Gatekeeper/SIP server?
- Note**
- The sender machine displays this error code when the sender fax is a Ricoh model.

4. SERVICE TABLES

4.1 CAUTIONS

Important

- Never turn off the main power switch when the power LED is lit or flashing. To avoid damaging the hard disk or memory, press the operation power switch to switch the power off, wait for the power LED to go off, and then switch the main power switch off.

Note

- The main power LED lights or flashes while the platen cover or ARDF is open, while the main machine is communicating with a facsimile or the network server, or while the machine is accessing the hard disk or memory for reading or writing data.

4.2 SERVICE PROGRAM TABLES

4.2.1 SP1-XXX (BIT SWITCHES)

1	Mode No.	Function
	System Switch	
101	001 – 032 00 – 1F	Change the bit switches for system settings for the fax option ■ p.57 "Bit Switches - 1"
	I-fax Switch	
102	001 – 016 00 – 0F	Change the bit switches for internet fax settings for the fax option ■ p.71 "I-Fax Switches"
	Printer Switch	
103	001 – 016 00 – 0F	Change the bit switches for printer settings for the fax option ■ p.78 "Printer Switches"
	Communication Switch	
104	001 – 032 00 – 1F	Change the bit switches for communication settings for the fax option ■ p.84 "Bit Switches - 3"
	G3-1 Switch	
105	001 – 016 00 – 0F	Change the bit switches for the protocol settings of the standard G3 board ■ p.92 "Bit Switches - 4"
	IP fax Switch	
111	001 – 016 00 – 0F	Change the bit switches for optional IP fax parameters ■ p.100 "Bit Switches - 6"

4.2.2 SP2-XXX (RAM DATA)

2	Mode No.	Function
101	RAM Read/Write 001	Change RAM data for the fax board directly.
102	Memory Dump 001 G3-1 Memory Dump	Print out RAM data for the fax board.
103	G3-1 NCU Parameters 001 – 023 CC, 01 – 22	NCU parameter settings for the standard G3 board. ■ p.108 "NCU Parameters"

4.2.3 SP3-XXX (TEL LINE SETTINGS)

3	Mode No.		Function
		Service Station	
101	001	Fax Number	Enter the fax number of the service station.
		Serial Number	
102	000		Enter the fax unit's serial number.
		PSTN-1 Port Settings	
	001	Select Line	Select the line type setting for the G3-1 line. If the machine is installed on a PABX line, select "PABX", "PABX(GND)" or "PABX(FLASH)".
103	002	PSTN Access Number	Enter the PSTN access number for the G3-1 line.
	003	Memory Lock Disabled	Not used
		IPFAX Port Settings	
	001	H323 Port	Sets the H323 port number.
	002	SIP Port	Sets the SIP port number.
	003	RAS Port	Sets the RAS port number.
107	004	Gatekeeper port	Sets the Gatekeeper port number.
	005	T.38 Port	Sets the T.38 port number.
	006	SIP Server Port	Sets the SIP port number.
	007	IPFAX Protocol Priority	Select "H323" or "SIP".
201		FAX SW	
	001 – 032	00 – 1F	

4.2.4 SP4-XXX (ROM VERSIONS)

4	Mode No.		Function
101	001	FCU ROM Version	Displays the FCU ROM version.
102	001	Error Codes	Displays the latest 64 fax error codes.
103	001	G3-1 ROM Version	Displays the G3-1 modem version.

4.2.5 SP5-XXX (RAM CLEAR)

5	Mode No.	Function
		Initialize SRAM (Except Secure)
101	000	Initializes the bit switches and user parameters, user data in the SRAM, files in the SAF memory, and clock.
		Erase All Files
102	000	Erases all files stored in the SAF memory.
		Reset Bit Switches (Except Secure)
103	000	Resets the bit switches and user parameters.
		Factory Setting
104	000	Resets the bit switches and user parameters, user data in the SRAM and files in the SAF memory.
		Reset All Bit Switches
105	000	Resets all the current bit switch settings.
		Reset Security Bit Switches
106	000	Resets only the security bit switches. If you select automatic output/display for the user parameter switches, the security settings are initialized.

4.2.6 SP6-XXX (REPORTS)

6	Mode No.	Function
	System Parameter List	
101	000 -	Touch the "ON" button to print the system parameter list.
	Service Monitor Report	
102	000 -	Touch the "ON" button to print the service monitor report.
	G3 Protocol Dump List	
103	002 G3-1 (All Communications)	Prints the protocol dump list of all communications for the G3-1 line.
	003 G3-1 (1 Communication)	Prints the protocol dump list of the last communication for the G3-1 line.
	All Files print out	
		Prints out all the user files in the SAF memory, including confidential messages.
		Note
105	000 -	<ul style="list-style-type: none"> Do not use this function, unless the customer is having trouble printing confidential messages or recovering files stored using the memory lock feature.
	Journal Print out	
106	001 All Journals	The machine prints all the communication records on the report.
	002 Specified Date	The machine prints all communication records after the specified date.
	Log List Print out	
	001 All log files	
	002 Printer	
	003 SC/TRAP Stored	
107	004 Decompression	These log print out functions are for designer use only.
	005 Scanner	
	006 JOB/SAF	
	007 Reconstruction	
	008 JBIG	

Service Program Tables

	009	Fax Driver	
	010	G3CCU	
	011	Fax Job	
	012	CCU	
	013	Scanner Condition	
	IP Protocol Dump List		
108	001	All Communications	Prints the protocol dump list of all communications for the IP fax line.
	002	1 Communication	Prints the protocol dump list of the last communication for the IP fax line.

4.2.7 SP7-XXX (TESTS)

These are the test modes for PTT approval.

7	Function
101	G3-1 Modem Tests
102	G3-1 DTMF Tests
103	Ringer Test
104	G3-1 V34 (S2400baud)
105	G3-1 V34 (S2800baud)
106	G3-1 V34 (S3000baud)
107	G3-1 V34 (S3200baud)
108	G3-1 V34 (S3429baud)
109	Recorded Message Test

4.3 BIT SWITCHES - 1

Note

- Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

4.3.1 SYSTEM SWITCHES

System Switch 00 (SP No. 1-101-001)

No	Function	Comments
0	Dedicated transmission parameter programming 0: Disabled 1: Enabled	Set this bit to 1 before changing any dedicated transmission parameters. This setting is automatically reset to "0" after turning off and on.
2	Technical data printout on the Journal 0: Disabled 1: Enabled	1: Instead of the personal name, the following data are listed on the Journal for each G3 communication.

Example:

```
0000 2700 282000 1010000000
  17 2000 21 22 23 24 25
```

- (1): EQM value (Line quality data). A larger number means more errors.
- (2): Symbol rate (V.34 only)
- (3): Final modem type used
- (4): Starting data rate (for example, 288 means 28.8 kbps)
- (5): Final data rate
- (6): Rx revel (see below for how to read the rx level)
- (7): Total number of error lines that occurred during non-ECM reception.
- (8): Total number of burst error lines that occurred during non-ECM reception.

Note

- EQM and rx level are fixed at "FFFF" in tx mode.
- The seventh and eighth numbers are fixed at "00" for transmission records and ECM reception records.

Rx level calculation

Example:

```

0000 0000 0000 0000 0000 0000
  L  0000 0000 0000 0000
  
```

The four-digit hexadecimal value (N) after "L" indicates the rx level.

The **high** byte is given first, followed by the **low** byte. Divide the decimal value of N by -16 to get the rx level.

In the above example, the decimal value of N (= 0100 [H]) is 256.

So, the actual rx level is 256/-16 = -16 dB

4	<p>Line error mark print 0: OFF, 1: ON (print)</p>	<p>When "1" is selected, a line error mark is printed on the printout if a line error occurs during reception. This shows error locations when ECM is turned off.</p> <p>This is a fault-finding aid. The LCD shows the key parameters (see "G3 Communication Parameters" below this table). This is normally disabled because it cancels the CSI display for the user.</p>
5	<p>G3/G4 communication parameter display 0: Disabled 1: Enabled</p>	<p>Be sure to reset this bit to "0" after testing.</p> <p>This is only used for communication troubleshooting. It shows the content of the transmitted facsimile protocol signals. Always reset this bit to 0 after finishing testing.</p>
6	<p>Protocol dump list output after each communication 0: Off 1: On</p>	<p>If system switch 09 bit 6 is at "1", the list is only printed if there was an error during the communication.</p>

G3 Communication Parameters

	336: 33600 bps	168: 16800 bps
	312: 31200 bps	144: 14400 bps
	288: 28800 bps	120: 12000 bps
Modem rate	264: 26400 bps	96: 9600 bps
	240: 24000 bps	72: 7200 bps
	216: 21600 bps	48: 4800 bps
	192: 19200 bps	24: 2400 bps
	S: Standard (8 x 3.85 dots/mm)	
	D: Detail (8 x 7.7 dots/mm)	
Resolution	21: Standard (200 x 100 dpi)	
	22: Detail (200 x 200 dpi)	
	MMR: MMR compression	
	MR: MR compression	
Compression mode	MH: MH compression	
	JBO: JBIG compression (Optional mode)	
	JBB: JBIG compression (Basic mode)	
Communication mode	ECM: With ECM	
	NML: With no ECM	
Width and reduction	A4: A4 (8.3"), no reduction	
	B4: B4 (10.1"), no reduction	
	A3: A3 (11.7"), no reduction	
	0: 0 ms/line	
	5: 5 ms/line	
	10: 10 ms/line	
	20: 20 ms/line	
I/O rate	40: 40 ms/line	

 **Note**

- "40" is displayed while receiving a fax message using AI short protocol.

System Switch 02 (SP No. 1-101-003)

No	Function			Comments
2	Forced reset after transmission stalls			With this setting on, the machine resets itself automatically if a transmission stalls and fails to complete the job.
	0: Off 1: On			
4	File retention time			1: A file that had a communication error will not be erased unless the communication is successful.
	0: Depends on User Parameter 24 [18(H)] 1: No limit			
6-7	Memory read/write by RDS			(0,0): All RDS systems are always locked out.
	Bit 7	Bit 6	Setting	(0,1), (1,0): Normally, RDS systems are locked out, but the user can temporarily switch RDS on to allow RDS operations to take place. RDS will automatically be locked out again after a certain time, which is stored in System Switch 03. Note that if an RDS operation takes place, RDS will not switch off until this time limit has expired.
	0	0	Always disabled	
	0	1	User selectable	
	1	0	User selectable	
	1	1	Always enabled	(1,1): At any time, an RDS system can access the machine.

System Switch 03 (SP No. 1-101-004)

No	Function			Comments
0 to 7	Length of time that RDS is temporarily switched on when bits 6 and 7 of System Switch 02 are set to "User selectable"			00 - 99 hours (BCD). This setting is only valid if bits 6 and 7 of System Switch 02 are set to "User selectable". The default setting is 24 hours.

System Switch 04 (SP No. 1-101-005)

No	Function	Comments
3	Printing dedicated tx parameters on Quick/Speed Dial Lists 0: Disabled 1: Enabled	1: Each Quick/Speed dial number on the list is printed with the dedicated tx parameters (10 bytes each). The first 10 bytes of data are the programmed dedicated tx parameters; 34 bytes of data are printed (the other 24 bytes have no use for service technicians).

**FAX OPTION
TYPE M1
(D702)**

System Switch 09 (SP No. 1-101-010)

No	Function	Comments
0	Addition of image data from confidential transmissions on the transmission result report 0: Disabled 1: Enabled	If this feature is enabled, the top half of the first page of confidential messages will be printed on transmission result reports.
1	Print timing of communication reports on the Journal when no image data was exchanged. 0: After DCS/NSS communication (default), 1: After polling	0: The Journal is printed only when image data is sent. 1: The Journal is printed when any data is sent.
2	Automatic error report printout 0: Disabled 1: Enabled	0: Error reports will not be printed. 1: Error reports will be printed automatically after failed communications.
3	Printing of the error code on the error report 0: No 1: Yes	1: Error codes are printed on the error reports. This can be used for detecting an error which occurs rarely.
4	Not used	Do not change this setting. 1: A power failure report will be automatically printed after the power is switched on if a fax message disappeared from the memory when the power was turned off last.
5	Power failure report 0: Disabled 1: Enabled (default)	<div data-bbox="708 1352 882 1377" style="border: 1px solid blue; border-radius: 10px; padding: 2px;"> ↓ Note </div> <ul style="list-style-type: none"> ▪ If "0" is selected, no reports are printed and no one may recognize that fax data is gone due to a power failure. This switch becomes effective only when system switch 00 bit 6 is set to 1.
6	Conditions for printing the protocol dump list 0: Print for all communications 1: Print only when there is a communication error	1: Set this bit to 1 when you wish to print a protocol dump list only for communications with errors. <div data-bbox="708 1827 882 1852" style="border: 1px solid blue; border-radius: 10px; padding: 2px;"> ↓ Note </div> <ul style="list-style-type: none"> ▪ The memory size is limited. Use this bit switch only when some log reports are necessary.

7	Priority given to various types of remote terminal ID when printing reports 0: RTI > CSI > Dial label > Tel. number 1: Dial label > Tel. number > RTI > CSI	This bit determines which set of priorities the machine uses when listing remote terminal names on reports. Dial Label: The name stored, by the user, for the Quick/Speed Dial number.
---	---	---

System Switch 0A (SP No. 1-101-011)

No	Function	Comments
0	Automatic port selection 0: Disabled, 1: Enabled	When "1" is selected, a suitable port is automatically selected if the selected port is not used. <div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block; margin-top: 10px;"> ↓ Note </div> <ul style="list-style-type: none"> ▪ This bit is useful if all communication lines at a customer site are not the same quality.
4	Dialing on the ten-key pad when the external telephone is off-hook 0: Disabled 1: Enabled	0: Prevents dialing from the ten-key pad while the external telephone is off-hook. Use this setting when the external telephone is not by the machine, or if a wireless telephone is connected as an external telephone. 1: The user can dial on the machine's ten-key pad when the handset is off-hook.
5	On hook dial 0: Disabled 1: Enabled	0: On hook dial is disabled.

System Switch 0E (SP No. 1-101-015)

No	Function	Comments
2	Enable/disable for direct sending selection 0: Direct sending off 1: Direct sending on	Direct sending cannot operate when the capture function is on during sending. Setting this switch to "1" enables direct sending without capture. Setting this switch to "0" masks the direct sending function on the operation panel so direct sending with ScanRouter cannot be selected.
3	Action when the external handset goes off-hook 0: Manual tx and rx operation 1: Memory tx and rx operation (the display remains the same)	0: Manual tx is possible while the external handset is off-hook. However, manual tx during handset off-hook may not be sent to a correct direction. Manual tx is not possible. 1: The display stays in standby mode even when the external handset is used, so that other people can use the machine for memory tx operation. Note that manual tx and rx are not possible with this setting.

System Switch 0F (SP No. 1-101-016)

No	Function	Comments
0 to 7	Country/area code for functional settings (Hex) 00: France 12: Asia 01: Germany 13: Japan 02: UK 14: Hong Kong 03: Italy 15: South Africa 04: Austria 16: Australia 05: Belgium 17: New Zealand 06: Denmark 18: Singapore 07: Finland 19: Malaysia 08: Ireland 1A: China 09: Norway 1B: Taiwan 0A: Sweden 1C: Korea 0B: Switz. 1D: Brazil 0C: Portugal 20: Turkey	This country/area code determines the factory settings of bit switches and RAM addresses. However, it has no effect on the NCU parameter settings and communication parameter RAM addresses. Cross reference NCU country code: SP No. 2-103-001 for G3-1

0D: Holland	21: Greece
0E: Spain	22: Hungary
0F: Israel	23: Czech
10: ---	24: Poland
11: USA	

System Switch 10 (SP No. 1-101-017)

No	Function	Comments
0-7	Threshold memory level for parallel memory transmission	Threshold = N x 128 KB + 256 KB N can be between 00 - FF(H) Default setting: 02(H) = 512 KB

System Switch 11 (SP No. 1-101-018)

No	Function	Comments
0	TTI printing position 0: Superimposed on the page data 1: Printed before the data leading edge	Change this bit to 1 if the TTI overprints information that the customer considers to be important (G3 transmissions). Note ▪ If "1" is selected, it is possible that sent data is printed on two sheets of paper.
1	CIL printing position 0: Superimposed on the page data 1: Printed before the data leading edge	Change this bit to 1 if the CIL overprints information that the customer considers to be important (G3 transmissions).
3	TTI used for broadcasting 0: The TTIs selected for each Quick/Speed dial are used 1: The same TTI is used for all destinations	1: The TTI (TTI_1 or TTI_2) which is selected for all destinations during broadcasting.
7	G4 quick memory data sending 0: Disabled 1: Enabled	Change this bit to 1 when sending G4 quick memory data.

System Switch 12 (SP No. 1-101-019)

No	Function	Comments
0-7	TTI printing position in the main scan direction	<p>TTI: 08 to 92 (BCD) mm</p> <p>Input even numbers only.</p> <p>This setting determines the print start position for the TTI from the left edge of the paper. If the TTI is moved too far to the right, it may overwrite the file number which is on the top right of the page. On an A4 page, if the TTI is moved over by more than 50 mm, it may overwrite the page number.</p>

System Switch 15 (SP No. 1-101-022)

No	Function	Comments															
1	<p>Going into the Energy Saver mode automatically</p> <p>0: Enabled</p> <p>1: Disabled</p>	<p>1: The machine will restart from the Energy Saver mode quickly, because the +5V power supply is active even in the Energy Saver mode. The LED of the operation switch is flashing instead of entering Energy Saver mode.</p> <p>Use this setting if an external telephone has to be used when the machine is in the Energy Saver mode.</p>															
4-5	<p>Interval for preventing the machine from entering Energy Saver mode if there is a pending transmission file.</p> <table border="1"> <thead> <tr> <th>Bit 5</th> <th>Bit 4</th> <th>Setting</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>1 min</td> </tr> <tr> <td>0</td> <td>1</td> <td>30 min</td> </tr> <tr> <td>1</td> <td>0</td> <td>1 hour</td> </tr> <tr> <td>1</td> <td>1</td> <td>24 hours</td> </tr> </tbody> </table>	Bit 5	Bit 4	Setting	0	0	1 min	0	1	30 min	1	0	1 hour	1	1	24 hours	<p>If there is a file waiting for transmission, the machine does not go to Energy Saver mode during the selected period.</p> <p>After transmitting the file, if there is no file waiting for transmission, the machine goes to the Energy Saver mode.</p>
Bit 5	Bit 4	Setting															
0	0	1 min															
0	1	30 min															
1	0	1 hour															
1	1	24 hours															

System Switch 16 (SP No. 1-101-023)

No	Function	Comments
0	Parallel Broadcasting 0: Disabled 1: Enabled	1: The machine sends messages simultaneously using all available ports during broadcasting. <div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block;"> ↓ Note </div> <ul style="list-style-type: none"> ▪ If a customer wants to keep a line available for fax reception or other reasons, select "0" (Disable).
1	Priority setting for the G3 line. 0: PSTN-1 > PSTN-2 or 3 1: PSTN-2 or 3 > PSTN-1	This function allows the user to select the default G3 line type. The optional SG3 units are required to use the PSTN-2 or 3 setting.

System Switch 19 (SP No. 1-101-026)

No	Function	Comments
6	Extended scanner page memory after memory option is installed 0: Disabled 1: Enabled	0: After installing the memory expansion option, the scanner page memory is extended to 4 MB from 2 MB. 1: If this bit is set to 1 after installing the memory expansion option, the scanner page memory is extended to 12 MB. But the SAF memory decreases to 18 MB.
7	Special Original mode 0: Disabled 1: Enabled	1: If the customer frequently wishes to transmit a form or letterhead which has a colored or printed background, change this bit to "1". "Original 1" and "Original 2" can be selected in addition to the "Text", "Text/Photo" and "Photo" modes.

System Switch 1A (SP No. 1-101-027)

No	Function	Comments
0	LS RX memory capacity to threshold setting	Sets the value to x4KB. When the amount of available memory drops below this setting, RX documents are printed to conserve memory. Initial setting 0x80 (512 KB)
7	00-FF (0-1020 Kbyte: Hex)	<p>Note</p> <ul style="list-style-type: none"> If a customer wants available memory size to be larger, decrease this threshold.

System Switch 1D (SP No. 1-101-030)

No	Function	Comments
0	RTI/CSI/CPS code display 0: Enable 1: Disable	0: RTI, CSI, CPS codes are displayed on the top line of the LCD panel during communication. 1: Codes are switched off (no display)

System Switch 1E (SP No. 1-101-031)

No	Function	Comments
0	Communication after the Journal data storage area has become full 0: Impossible 1: Possible	0: When this switch is on and the journal history becomes full, the next report prints. If the journal history is not deleted, the next transmission cannot be received. This prevents overwriting communication records before the machine can print them. 1: If the buffer memory of the communication records for the Journal is full, fax communications are still possible. But the machine will overwrite the oldest communication records.
		<p>Note</p> <ul style="list-style-type: none"> This setting is effective only when Automatic Journal printout is enabled but the machine cannot print the report (e.g., no paper).

1	<p>Action when the SAF memory has become full during scanning</p> <p>0: The current page is erased. 1: The entire file is erased.</p>	<p>0: If the SAF memory becomes full during scanning for a memory transmission, the successfully scanned pages are transmitted.</p> <p>1: If the SAF memory becomes full during scanning for a memory transmission, the file is erased and no pages are transmitted.</p> <p>Note</p> <ul style="list-style-type: none"> ▪ This setting is effective only when Automatic Journal printout is enabled but the machine cannot print the report (e.g., no paper).
2	<p>RTI/CSI display priority</p> <p>0: RTI 1: CSI</p>	<p>This bit determines which identifier, RTI or CSI, is displayed on the LCD while the machine is communicating in G3 non-standard mode.</p> <p>1: File numbers are not printed on any reports.</p> <p>Note</p> <ul style="list-style-type: none"> ▪ The file numbers may not be printed in the sequential order. If a customer does not like this numbering, select "0".
3	<p>File No. printing</p> <p>0: Enabled 1: Disabled</p>	<ul style="list-style-type: none"> ▪ The file numbers may not be printed in the sequential order. If a customer does not like this numbering, select "0".
4	<p>Action when authorized reception is enabled but authorized RTIs/CSIs are not yet programmed</p> <p>0: Faxes can be received if the sender has an RTI or CSI 1: All fax reception is disabled</p>	<p>0: If the user has stored no acceptable sender RTIs or CSIs, the user can select "ON" in the authorized reception setting but the setting becomes invalid ("OFF"). The machine will not be able to receive any fax messages.</p> <p>If the customer wishes to receive messages from any sender that includes an RTI or CSI, and to block messages from senders that do not include an RTI or CSI, change this bit to "0", then enable Authorized Reception. Otherwise, keep this bit at "1 (default setting)".</p>

System Switch 1F (SP No. 1-101-032)

No	Function	Comments
1	Report printout after an original jam during SAF storage or if the SAF memory fills up 0: Enabled 1: Disabled	0: When an original jams, or the SAF memory overflows during scanning, a report will be printed. Change this bit to "1" if the customer does not want to have a report in these cases. Memory tx – Memory storage report Parallel memory tx – Transmission result report
3	Received fax print start timing (G3 reception) 0: After receiving each page 1: After receiving all pages	0: The machine prints each page immediately after the machine receives it. 1: The machine prints the complete message after the machine receives all the pages in the memory.
4	Received fax print start timing (G4 reception) 0: After receiving each page 1: After receiving all pages	0: The machine prints each page immediately after the machine receives it. 1: The machine prints the complete message after the machine receives all the pages in the memory.
7	Action when a fax SC has occurred 0: Automatic reset 1: Fax unit stops	0: When the fax unit detects a fax SC code other than SC1201 and SC1207, the fax unit automatically resets itself. 1: When the fax unit detects any fax SC code, the fax unit stops.

4.4 BIT SWITCHES - 2

Note

- Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

4.4.1 I-FAX SWITCHES

I-fax Switch 00 (SP No. 1-102-001)

No	Function	Comments
	Original Width of TX Attachment File	This setting sets the maximum size of the original that the destination can receive. (Bits 3~7 are reserved for future use or not used.)
0	A4	
1	B4	
2	A3	-
3-6	Reserved	

0: Off (not selected), 1: On (selected)

If more than one of these three bits is set to "1", the larger size has priority. For example, if both Bit 2 and Bit 1 are set to "1" then the maximum size is "A3" (Bit 2).

When mail is sent, there is no negotiation with the receiving machine at the destination, so the sending machine cannot make a selection for the receiving capabilities (original width setting) of the receiving machine. The original width selected with this switch is used as the RX machine's original width setting, and the original is reduced to this size before sending. The default is A4.

If the width selected with this switch is higher than the receiving machine can accept, the machine detects this and this causes an error.

I-fax Switch 01 (SP No. 1-102-002)

No	Function	Comments
	Original Line Resolution of TX Attachment File	These settings set the maximum resolution of the original that the destination can receive.
0	200x100 Standard	0: Not selected
1	200x200 Detail	1: Selected
2	200x400 Fine	If more than one of these three bits is set to "1", the higher resolution has priority. For example, if both Bit 0 and Bit 2 are set to "1" Then The Resolution is set for "Bit 2 200 x 400.
3	300 x 300 Reserve	
4	400 x 400 Super Fine	
5	600 x 600 Reserve	
6	Reserve	
7	mm/inch	

This setting selects mm/inch conversion for mail transmission.

0: Off (No conversion), 1: On (Conversion)

When on (set to "1"), the machine converts millimeters to inches for sending mail.

There is no switch for converting inches to millimeters.

Unlike G3 fax transmissions which can negotiate between sender and receiver to determine the setting, mail cannot negotiate between terminals; the mm/inch selection is determined by the sender fax.

When this switch is Off (0):

- Images scanned in inches are sent in inches.
- Images scanned in mm are sent in mm.
- Images received in inches are transmitted in inches.
- Images received in mm are transmitted in mm.

When this switch is On (1):

- Images scanned in inches are sent in inches.
- Images scanned in mm are converted to inches.
- Images received in inches are transmitted in inches.
- Images received in mm are converted to inches.

I-fax Switch 02 (SP No. 1-102-003)

No	Function	Comments
	RX Text Mail Header Processing	This setting determines whether the header information is printed with text e-mails when they are received.
0	0: Prints only text mail.	1: Prints mail header information attached to text mail.
	When a text mail is received with this switch On (1), the "From" address and "Subject" address are printed as header information.	When a mail with only binary data is received (a TIFF-F file, for example), this setting is ignored and no header is printed.
	Output from Attached Document at E-mail TX Error	This setting determines whether only the first page or all pages of an e-mail attachment are printed at the sending station when a transmission error occurs.
1	This allows the customer to see which documents have not reached their intended destinations if sent to the wrong e-mail addresses, for example.	0: Prints 1st page only.
	1: Prints all pages.	Text String for Return Receipt
	This setting determines the text string output for the Return Receipt that confirms the transmission was received normally at the destination.	00: "Dispatched"
	Sends from PC mail a request for a Return Receipt. Receives the Return Receipt with "dispatched" in the 2nd part:	Disposition: Automatic-action/MDN-send automatically; dispatched
	The "dispatched" string is included in the Subject string.	01: "Displayed"
2-3	Sends from PC mail a request for a Return Receipt. Receives the Return Receipt with "displayed" in the 2nd part:	Disposition: Automatic-action/MDN-send automatically; displayed
	The "displayed" string is included in the Subject string.	10: Reserved
	11: Reserved	A mail requesting a Return Receipt sent from an IFAX with this switch set to "00" (for "dispatched") received by Microsoft Outlook 2000 may cause an error. If any setting other than "displayed" (01) causes a problem, change the setting to "01" to enable normal sending of the Return Receipt.

Media accept feature

This setting adds or does not add the media accept feature to the answer mail to confirm a reception.

- 4 0: Does not add the media accept feature to the answer mail
 1: Adds the media accept feature to the answer mail.

Use this bit switch if a problem occurs when the machine receives an answer mail, which contains the media accept feature field.

Image Resolution of RX Text Mail

This setting determines the image resolution of the received mail.

- 7 0: 200 x 200
 1: 400 x 400

The "1" setting requires installation of the Memory Unit in order to have enough SAF (Store and Forward) memory to receive images at 400 x 400 resolution.

I-fax Switch 04 (SP No. 1-102-005)

No	Function	Comments
0	Subject for Delivery TX/Memory Transfer This setting determines whether the RTI/CSI registered on this machine or the RTI/CSI of the originator is used in the subject lines of transferred documents. 0: Puts the RTI/CSI of the originator in the Subject line. If this is used, either the RTI or CSI is used. Only one of these can be received for use in the subject line. 1: Puts the RTI/CSI registered on this machine in the Subject line.	When this switch is used to transfer and deliver mail to a PC, the information in the Subject line that indicates where the transmission originated can be used to determine automatically the destination folder for each e-mail.

Subject corresponding to mail post database

0: Standard subject

1: Mail post database subject

The standard subject is replaced by the mail post database subject in the following three cases:

1

1) When the service technician sets the service (software) switch.

2) When memory sending or delivery specified by F code is applied by the SMTP server

3) With relay broadcasting (1st stage without the Schmidt 4 function).

Note

- This switch does not apply for condition 3) when the RX system is set up for memory sending, delivery by F-code, sending with SMTP RX and when operators are using FOL (to prevent problems when receiving transmissions).

I-fax Switch 05 (SP No. 1-102-006)

No	Function	Comments
	Mail Addresses of SMTP Broadcast Recipients	
	Determines whether the e-mail addresses of the destinations that receive transmissions broadcasted using SMTP protocol are recorded in the Journal.	
0	For example: "1st destination + Total number of destinations: 9" in the Journal indicates a broadcast to 9 destinations.	
	0: Not recorded	
	1: Recorded	
	IFAXTX Retries	
1	Determines whether the machine retries sending IFAX when connection and transmission fails due to errors.	
	0: Disabled	
	1: Enabled	

I-fax Switch 08 (SP No. 1-102-009)

No	Function	Comments
	Memory Threshold for POP Mail Reception	
0-7	This setting determines the amount of SAF (Store and Forward) memory. (SAF stores fax messages to send later for transmission to more than one location, and also holds incoming messages if they cannot be printed.) When the amount of SAF memory available falls below this setting, mail can no longer be received; received mail is then stored on the mail server.	
	00-FF (0 to 1024 KB: HEX)	
	The hexadecimal number you enter is multiplied by 4 KB to determine the amount of memory.	

I-fax Switch 09 (SP No. 1-102-010)

No	Function	Comments
4-7	Restrict TX Retries	This setting determines the number of retries when connection and transmission fails due to errors.
		01-F (1-15 Hex)

I-fax Switch 0D (SP No. 1-102-014)

No	Function	Comments															
	Set to select the signature when sending mail notification of the send results.																
2-3	<table border="1"> <thead> <tr> <th>Bit 2</th> <th>Bit 3</th> <th>Setting</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>No sign</td> </tr> <tr> <td>0</td> <td>1</td> <td>No setting</td> </tr> <tr> <td>1</td> <td>0</td> <td>Individual setting</td> </tr> <tr> <td>1</td> <td>1</td> <td>Always sign</td> </tr> </tbody> </table>	Bit 2	Bit 3	Setting	0	0	No sign	0	1	No setting	1	0	Individual setting	1	1	Always sign	In response to IEEE2600.1.
Bit 2	Bit 3	Setting															
0	0	No sign															
0	1	No setting															
1	0	Individual setting															
1	1	Always sign															
	Set to select the signature when sending mail.																
4-5	<table border="1"> <thead> <tr> <th>Bit 5</th> <th>Bit 4</th> <th>Setting</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>No sign</td> </tr> <tr> <td>0</td> <td>1</td> <td>No setting</td> </tr> <tr> <td>1</td> <td>0</td> <td>Individual setting</td> </tr> <tr> <td>1</td> <td>1</td> <td>Always sign</td> </tr> </tbody> </table>	Bit 5	Bit 4	Setting	0	0	No sign	0	1	No setting	1	0	Individual setting	1	1	Always sign	In response to IEEE2600.1.
Bit 5	Bit 4	Setting															
0	0	No sign															
0	1	No setting															
1	0	Individual setting															
1	1	Always sign															


I-fax Switch 0F (SP No. 1-102-016)

No	Function	Comments
0	Delivery Method for SMTP RX Files	<p>This setting determines whether files received with SMTP protocol are delivered or output immediately.</p> <p>0: Off. Files received via SMTP are output immediately without delivery.</p> <p>1: On. Files received via SMTP are delivered immediately to their destinations.</p> <p>Set to select the signature when receiving SMTP mail.</p>
1	<p>0: No sign</p> <p>1: Always sign</p>	Set to encrypt the data when receiving SMTP mail.
2	<p>0: No encryption</p> <p>1: Encryption</p>	

**FAX OPTION
TYPE M1
(D702)**

4.4.2 PRINTER SWITCHES

Printer Switch 00 (SP No. 1-103-001)

No	Function	Comments
0	Select page separation marks 0: Off 1: On	<p>0: If a 2 page RX transmission is split, [*] is printed in the bottom right corner of the 1st page and only a [2] is printed in the upper right corner of the 2nd page.</p> <p>1: If a 2 page RX transmission is split into two pages, for example, [*] [2] is printed in the bottom right corner of the 1st page and only a [2] is printed in the upper right corner of the 2nd page.</p> <p> Note</p> <ul style="list-style-type: none"> This helps the user to identify pages that have been split because the size of the paper is smaller than the size of the document received. (When A5 is used to print an A4 size document, for example.)
1	Repetition of data when the received page is longer than the printer paper 0: Off 1: On	<p>1: Default. 10 mm of the trailing edge of the previous page are repeated at the top of the next page.</p> <p>0: The next page continues from where the previous page stopped without any repeated text.</p>
2	Prints the date and time on received fax messages 0: Disabled 1: Enabled	<p>This switch is only effective when user parameter 02 - bit 2 (printing the received date and time on received fax messages) is enabled.</p> <p>1: The machine prints the received and printed date and time at the bottom of each received page.</p>

Printer Switch 01 (SP No. 1-103-002)

	Maximum print width used in the setup protocol			
3-4	Bit 4	Bit 3	Setting	These bits are only effective when bit 7 of printer switch 01 is "1".
	0	0	Not used	
	0	1	A3	
	1	0	B4	
	1	1	A4	
7	Received message width restriction in the protocol signal to the sender			0: Disabled 1: Enabled
				0: The machine informs the transmitting machine of the print width depending on the paper size available from the paper feed stations. Refer to the table on the next page for how the machine chooses the paper width used in the setup protocol (NSF/DIS). 1: The machine informs the transmitting machine of the fixed paper width which is specified by bits 3 and 4 above.

Relationship between available paper sizes and printer width used in the setup protocol

Available Paper Size	Printer width used in the Protocol (NSF/DIS)
A4 or 8.5" x 11"	297 mm width
B5	256 mm width
A5 or 8.5" x 5.5"	216 mm width
No paper available (Paper end)	216 mm width

Printer Switch 02 (SP No. 1-103-003)

No	Function	Comments
0	1st paper feed station usage for fax printing 0: Enabled 1: Disabled	0: The paper feed station can be used to print fax messages and reports. 1: The specified paper feed station will not be used for printing fax messages and reports.
1	2nd paper feed station usage for fax printing 0: Enabled 1: Disabled	<div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block;"> ↓ Note </div> <ul style="list-style-type: none"> ▪ Do not disable usage for a paper feed station which has been specified by User Parameter Switch 0F (15), or

Bit Switches - 2

2	3rd paper feed station usage for fax printing 0: Enabled 1: Disabled	which is used for the Specified Cassette Selection feature.
3	4th paper feed station usage for fax printing 0: Enabled 1: Disabled	
4	LCT usage for fax printing 0: Enabled 1: Disabled	

Printer Switch 03 (SP No. 1-103-004)

No	Function	Comments
0	Length reduction of received data 0: Disabled 1: Enabled	0: Incoming pages are printed without length reduction. (Page separation threshold: Printer Switch 03, bits 4 to 7) 1: Incoming page length is reduced when printing. (Maximum reducible length: Printer Switches 04, bits 0 to 4) Page separation threshold (with reduction disabled with switch 03-0 above).
4 to 7	Page separation setting when sub scan compression is forbidden 00-0F (0-15 mm: Hex) Default: 6 mm	For example, if this setting is set to "10", and A4 is the selected paper size: If the received document is 10 mm or less longer than A4, then the 10 mm are cut and only 1 page prints. If the received document is 10 mm longer than A4, then the document is split into 2 pages.

Printer Switch 04 (SP No. 1-103-005)

No	Function					Comments
	Maximum reducible length when length reduction is enabled with switch 03-0 above.					
	[Maximum reducible length] = [Paper length] + (N x 5mm)					
	"N" is the decimal value of the binary setting of bits 0 to 4.					
0	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Setting
to	0	0	0	0	0	0 mm
4	0	0	0	0	1	5 mm
	0	0	1	0	0	20 mm
	1	1	1	1	1	155 mm

For A5 sideways and B5 sideways paper

$$[\text{Maximum reducible length}] = [\text{Paper length}] + 0.75 \times (N \times 5\text{mm})$$

Length of the duplicated image on the next page, when page separation has taken place.

No	Bit 6	Bit 5	Setting
5	0	0	4 mm
6	0	1	10 mm
	1	0	15 mm
	1	1	Not used

Printer Switch 06 (SP No. 1-103-007)

No	Function	Comments
	Printing while a paper cassette is pulled out, when the Just Size Printing feature is enabled.	
0	0: Printing will not start 1: Printing will start if another cassette has a suitable size of paper, based on the paper size selection priority tables.	Cross reference Just size printing on/off – User switch 05, bit 5

Printer Switch 07 (SP No. 1-103-008)

No	Function	Comments
4	List of destinations in the Communication Failure Report for broadcasting 0: All destinations 1: Only destinations where communication failure occurred	1: Only destinations where communication failure occurred are printed on the Communication Failure Report.

Printer Switch 0E (SP No. 1-103-015)

No	Function	Comments
0	Paper size selection priority 0: Width 1: Length	0: A paper size that has the same width as the received data is selected first. 1: A paper size which has enough length to print all the received lines without reduction is selected first.
1	Paper size selected for printing A4 width fax data 0: 8.5" x 11" size 1: A4 size	This switch determines which paper size is selected for printing A4 width fax data, when the machine has both A4 and 8.5" x 11" size paper.
2	Page separation 0: Enabled 1: Disabled	1: If all paper sizes in the machine require page separation to print a received fax message, the machine does not print the message (Substitute Reception is used). After a larger size of paper is set in a cassette, the machine automatically prints the fax message.
3-4	Printing the sample image on reports Bit 4 Bit 3 Setting 0 0 The upper half only 0 1 50% reduction (sub-scan only) 1 0 Same size 1 1 Not used	"Same size" means the sample image is printed at 100%, even if page separation occurs. User Parameter Switch 19 (13H) bit 4 must be set to "0" to enable this switch. Refer to Detailed Section Descriptions for more on this feature.

- 7 Equalizing the reduction ratio among separated pages
(Page Separation)
0: Enabled
1: Disabled
- 0: When page separation has taken place, all the pages are reduced with the same reduction ratio.
1: Only the last page is reduced to fit the selected paper size when page separation has taken place. Other pages are printed without reduction.

Printer Switch 0F (SP No. 1-103-016)

No	Function		Setting	Comments
	Smoothing feature			
0-1	Bit 1	Bit 0	(0, 0) (0, 1)	Disable smoothing if the machine receives halftone images from other manufacturers fax machines frequently.
	0	0	Disabled	
	0	1	Disabled	
	1	0	Enabled	
	1	1	Not used	
	Duplex printing			
2	0: Disabled 1: Enabled			1: The machine always prints received fax messages in duplex printing mode:
	Binding direction for Duplex printing			
3	0: Left binding 1: Top binding			0: Sets the binding for the left edge of the stack. 1: Sets the binding for the top of the stack.

4.5 BIT SWITCHES - 3

Note

- Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

4.5.1 COMMUNICATION SWITCHES

Communication Switch 00 (SP No. 1-104-001)				
No	Function			Comments
	Compression modes available in receive mode			
	Bit 1	Bit 0	Modes	
0-1	0	0	MH only	These bits determine the compression capabilities to be declared in phase B (handshaking) of the T.30 protocol.
	0	1	MH/MR	
	1	0	MH/MR/MMR	
	1	1	MH/MR/MMR/JBIG	
	Compression modes available in transmit mode			
	Bit 3	Bit 2	Modes	
2-3	0	0	MH only	These bits determine the compression capabilities to be used in the transmission and to be declared in phase B (handshaking) of the T.30 protocol.
	0	1	MH/MR	
	1	0	MH/MR/MMR	
	1	1	MH/MR/MMR/JBIG	
5	JBIG compression method: Reception			Change the setting when communication problems occur using JBIG compression.
	0: Only basic supported 1: Basic and optional both supported			
6	JBIG compression method: Transmission			Change the setting when communication problems occur using JBIG compression.
	0: Basic mode priority 1: Optional mode priority			

7	Closed network (reception) 0: Disabled 1: Enabled	1: Reception will not go ahead if the polling ID code of the remote terminal does not match the polling ID code of the local terminal. This function is only available in NSF/NSS mode.
---	---	---

Communication Switch 01 (SP No. 1-104-002)

No	Function	Comments															
0	ECM 0: Off 1: On	If this bit is set to 0, ECM is switched off for all communications. In addition, V.8 protocol and JBIG compression are switched off automatically.															
2-3	Wrong connection prevention method <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Bit 3</td> <td style="padding-right: 10px;">Bit 2</td> <td>Setting</td> </tr> <tr> <td>0</td> <td>0</td> <td>None</td> </tr> <tr> <td>0</td> <td>1</td> <td>8 digit CSI</td> </tr> <tr> <td>1</td> <td>0</td> <td>4 digit CSI</td> </tr> <tr> <td>1</td> <td>1</td> <td>CSI/RTI</td> </tr> </table>	Bit 3	Bit 2	Setting	0	0	None	0	1	8 digit CSI	1	0	4 digit CSI	1	1	CSI/RTI	(0,1): The machine will disconnect the line without sending a fax message, if the last 8 digits of the received CSI do not match the last 8 digits of the dialed telephone number. This does not work when manually dialed. (1,0): The same as above, except that only the last 4 digits are compared. (1,1): The machine will disconnect the line without sending a fax message, if the other end does not identify itself with an RTI or CSI. (0,0): Nothing is checked; transmission will always go ahead.
Bit 3	Bit 2	Setting															
0	0	None															
0	1	8 digit CSI															
1	0	4 digit CSI															
1	1	CSI/RTI															
<div style="border: 1px solid blue; border-radius: 10px; padding: 2px 5px; display: inline-block;"> ↓ Note </div> <ul style="list-style-type: none"> ▪ This function does not work when dialing is done from the external telephone. 																	
6-7	Maximum printable page length available <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">Bit 7</td> <td style="padding-right: 10px;">Bit 6</td> <td>Setting</td> </tr> <tr> <td>0</td> <td>0</td> <td>No limit</td> </tr> <tr> <td>0</td> <td>1</td> <td>B4 (364 mm)</td> </tr> <tr> <td>1</td> <td>0</td> <td>A4 (297 mm)</td> </tr> <tr> <td>1</td> <td>1</td> <td>Not used</td> </tr> </table>	Bit 7	Bit 6	Setting	0	0	No limit	0	1	B4 (364 mm)	1	0	A4 (297 mm)	1	1	Not used	The setting determined by these bits is informed to the transmitting terminal in the pre-message protocol exchange (in the DIS/NSF frames).
Bit 7	Bit 6	Setting															
0	0	No limit															
0	1	B4 (364 mm)															
1	0	A4 (297 mm)															
1	1	Not used															

Communication Switch 02 (SP No. 1-104-003)

No	Function	Comments
0	G3 Burst error threshold 0: Low 1: High	If there are more consecutive error lines in the received page than the threshold, the machine will send a negative response. The Low and High threshold values depend on the sub-scan resolution, and are as follows. 100 dpi 6(L) →12(H) 200 dpi 12(L) →24(H) 300 dpi 18(L) →36(H) 400 dpi 24(L) →48(H)
1	Acceptable total error line ratio 0: 5% 1: 10%	If the error line ratio for a page exceeds the acceptable ratio, RTN will be sent to the other end.
2	Treatment of pages received with errors during G3 reception 0: Deleted from memory without printing 1: Printed	0: Pages received with errors are not printed.
3	Hang-up decision when a negative code (RTN or PIN) is received during G3 immediate transmission 0: No hang-up, 1: Hang-up	0: The next page will be sent even if RTN or PIN is received. 1: The machine will send DCN and hang up if it receives RTN or PIN. This bit is ignored for memory transmissions or if ECM is being used.

Communication Switch 03 (SP No. 1-104-004)

No	Function	Comments
0-7	Maximum number of page retransmissions in a G3 memory transmission	00 - FF (Hex) times. This setting is not used if ECM is switched on. Default setting - 03(H)

Communication Switch 04 (SP No. 1-104-005)

No	Function	Comments
0	Remote mode switch (TEL mode) 0: Disable 1: Enable (Active)	Set this bit to ON when you wish to switch TEL mode to FAX mode remotely.
1	Remote mode switch (FAX mode) 0: Disable 1: Enable (Active)	Set this bit to ON when you wish to turn on the remote mode switch after automatic reception with FAX mode.
2	Remote mode switch (AUTO mode) 0: Disable 1: Enable (Active)	Set this bit to ON when you wish to turn on the remote mode switch after automatic reception with AUTO mode.

Communication Switch 05 (SP No. 1-104-006)

No	Function	Comments
0-3	Remote mode switch number 00-09 (0-9:HEX)	Enter the number to switch between TEL/FAX modes using the external phone.

Communication Switch 07 (SP No. 1-104-008)

No	Function	Comments
0	G3/G4 auto route selection 0: Disable 1: Enable	Select whether to change the route to G4 to G3 when G4 communication failed.
4	G3/G4 auto route selection (when communication failed) 0: Disable 1: Enable	If there is a switching system error, select whether to switch the route to G4 to G3.

Communication Switch 09 (SP No. 1-104-009)

No	Function	Comments
0-7	Minimum interval between automatic dialing attempts	This value is the minimum time that the machine waits before it dials the next destination.

Communication Switch 0A (SP No. 1-104-011)

No	Function	Comments
0	Point of resumption of memory transmission upon redialing 0: From the error page 1: From page 1	0: The transmission begins from the page where transmission failed the previous time. 1: Transmission begins from the first page, using normal memory transmission.

Communication Switch 0B (SP No. 1-104-012)

No	Function	Comments
4	Printout of the message when acting as a Transfer Station 0: Disabled, 1: Enabled	When the machine is acting as a Transfer Station, this bit determines whether the machine prints the fax message coming in from the Requesting Terminal.

Communication Switch 0D (SP No. 1-104-014)

No	Function	Comments
0-7	The available memory threshold, below which ringing detection (and therefore reception into memory) is disabled	00 to FF (Hex), unit = 4 kbytes (e.g., 06(H) = 24 kbytes) One page is about 24 kbytes. The machine refers to this setting before each fax reception. If the amount of remaining memory is below this threshold, the machine cannot receive any fax messages. If this setting is kept at 0, the machine will detect ringing signals and go into receive mode even if there is no memory available. This will result in communication failure.

Communication Switch 0E (SP No. 1-104-015)

No	Function	Comments
0-7	Minimum interval between automatic dialing attempts	06 to FF (Hex), unit = 2 s (e.g., 06(H) = 12 s) This value is the minimum time that the machine waits before it dials the next destination.

Communication Switch 10 (SP No. 1-104-017)

No	Function	Comments
0-7	Memory transmission: Maximum number of dialing attempts to the same destination	01 – FE (Hex) times

Communication Switch 12 (SP No. 1-104-019)

No	Function	Comments
0-7	Memory transmission: Interval between dialing attempts to the same destination	01 – FF (Hex) minutes

Communication Switch 14 (SP No. 1-104-021)

No	Function	Comments															
0	Inch-to-mm conversion during transmission 0: Disabled, 1: Enabled	<p>0: In immediate transmission, data scanned in inch format are transmitted without conversion.</p> <p>In memory transmission, data stored in the SAF memory in mm format are transmitted without conversion.</p> <p>Note: When storing the scanned data into SAF memory, the fax unit always converts the data into mm format.</p> <p>1: The machine converts the scanned data or stored data in the SAF memory to the format which was specified in the set-up protocol (DIS/NSF) before transmission.</p>															
6-7	Available unit of resolution in which fax messages are received	For the best performance, do not change the factory settings.															
	<table border="1"> <thead> <tr> <th>Bit 7</th> <th>Bit 6</th> <th>Unit</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>mm</td> </tr> <tr> <td>0</td> <td>1</td> <td>inch</td> </tr> <tr> <td>1</td> <td>0</td> <td>mm and inch</td> </tr> <tr> <td>1</td> <td>1</td> <td>Not used</td> </tr> </tbody> </table>	Bit 7	Bit 6	Unit	0	0	mm	0	1	inch	1	0	mm and inch	1	1	Not used	The setting determined by these bits is informed to the transmitting terminal in the pre-message protocol exchange (in the DIS/NSF frames).
Bit 7	Bit 6	Unit															
0	0	mm															
0	1	inch															
1	0	mm and inch															
1	1	Not used															

Communication Switch 17 (SP No. 1-104-024)

No	Function	Comments
0	SEP reception	0: Polling transmission to another maker's machine using the SEP (Selective Polling) signal is disabled.
	0: Disabled 1: Enabled	
1	SUB reception	0: Confidential reception to another maker's machine using the SUB (Sub-address) signal is disabled.
	0: Disabled 1: Enabled	
2	PWD reception	0: Disables features that require PWD (Password) signal reception.
	0: Disabled 1: Enabled	
3-4	Not used	Do not change the settings.
5	PSTN dial-in routing setting	1: The machine sets multiple PSTN dial-in numbers in the PSTN dial-in line and transfers received data from each PSTN dial-in number to each address.
	0: OFF 1: ON	
6	Not used	Do not change the settings.
7	Action when there is no box with an F-code that matches the received SUB code	Change this setting when the customer requires.
	0: Disconnect the line 1: Receive the message (using normal reception mode)	

Communication Switch 18 (SP No. 1-104-025)

No	Function	Comments
5	IP-Fax dial-in routing selection	1: Transfers received data to each IP-Fax dial-in number. IP-Fax dial-in number is a 4-digit number.
	0: Off 1: On	
6	PSTN 2 dial-in routing	Enables or disables dial-in routing for the PSTN 2 connection.
	0: Off 1: On	
7	PSTN 3 dial-in routing	Enables or disables dial-in routing for the PSTN 3 connection.
	0: Off 1: On	

Communication Switch 1B (SP No. 1-104-028)

No	Function	Comments
0-7	Extension access code (0 to 7) to turn V.8 protocol On/Off 0: On 1: Off	If the PABX does not support V.8/V.34 protocol procedure, set this bit to "1" to disable V.8. Example: If "0" is the PSTN access code, set bit 0 to 1. When the machine detects "0" as the first dialed number, it automatically disables V.8 protocol. (Alternatively, if "3" is the PSTN access code, set bit 3 to 1.)

Communication Switch 1C (SP No. 1-104-029)

No	Function	Comments
0-1	Extension access code (8 and 9) to turn V.8 protocol On/Off 0: On 1: Off	Refer to communication switch 1B. Example: If "8" is the PSTN access code, set bit 0 to 1. When the machine detects "8" as the first dialed number, it automatically disables V.8 protocol. (If "9" is the PSTN access code, use bit 1.)

4.6 BIT SWITCHES - 4

Note

- Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

4.6.1 G3 SWITCHES

G3 Switch 00 (SP No. 1-105-001)

No	Function	Comments
2	Monitor speaker during memory transmission 0: Disabled 1: Enabled	1: The monitor speaker is enabled during memory transmission.
6	Dedicated G3 line mode selection 0: OFF 1: ON (Dedicated)	Set this bit to 1 when you wish to dedicate a line for G3.
10	Transmission line monitor 00: OFF 01: ON (as far as the recipients) 10: ON (all transmissions) 11: Reserved	Select the monitorable distance for transmissions.

G3 Switch 01 (SP No. 1-105-002)

No	Function	Comments
4	DIS frame length 0: 10 bytes 1: 4 bytes	1: The bytes in the DIS frame after the 4th byte will not be transmitted (set to 1 if there are communication problems with PC-based faxes which cannot receive the extended DIS frames).
6	Forbid CED/AMsam output 0: Off 1: On (Forbid output)	Do not change this setting (Default: 0: Off), unless communication problem is caused by a CED or ANSam transmission.

G3 Switch 02 (SP No. 1-105-003)

No	Function	Comments
0	G3 protocol mode used 0: Standard and non-standard 1: Standard only	Change this bit to 1 only when the other end can only communicate with machines that send T.30-standard frames only. 1: Disables NSF/NSS signals (these are used in non-standard mode communication)
7	Short preamble 0: Disabled 1: Enabled	Refer to Appendix B in the Group 3 Facsimile Manual for details about Short Preamble.

G3 Switch 03 (SP No. 1-105-004)

No	Function	Comments
0	DIS detection number (Echo countermeasure) 0: 1 1: 2	0: The machine will hang up if it receives the same DIS frame twice. 1: Before sending DCS, the machine will wait for the second DIS which is caused by echo on the line.
2	V.8 protocol 0: Disabled 1: Enabled	0: V.8/V.34 communications will not be possible. Note <ul style="list-style-type: none"> Do not set to 0 unless the line condition is always bad enough to slow down the data rate to 14.4 kbps or lower.
3	ECM frame size 0: 256 bytes 1: 64 bytes	Keep this bit at "0" in most cases.

		0: When using ECM in non-standard (NSF/NSS) mode, the machine sends a CTC to drop back the modem rate after receiving a PPR, if the following condition is met in communications at 14.4, 12.0, 9.6, and 7.2 kbps.
	CTC transmission conditions	
4	0: After one PPR signal received 1: After four PPR signals received (ITU-T standard)	<p>NTxmit- Number of transmitted frames NResend- Number of frames to be retransmitted</p> <p>1: When using ECM, the machine sends a CTC to drop back the modem rate after receiving four PPRs.</p> <p>PPR, CTC: These are ECM protocol signals. This bit is not effective in V.34 communications.</p>
5	Modem rate used for the next page after receiving a negative code (RTN or PIN) 0: No change 1: Fallback	1: The machine's tx modem rate will fall back before sending the next page if a negative code is received. This bit is ignored if ECM is being used.
7	Select detection of reverse polarity in ringing 0: Off 1: On	<p>This switch is used to prevent reverse polarity in ringing on the phone line (applied to PSTN-G3 ringing). Do not change this setting</p> <p>0: No detection 1: Detection (Japan and Korea only)</p>

G3 Switch 04 (SP No. 1-105-005)

No	Function	Comments
0-3	Training error detection threshold	<p>0 - F (Hex); 0 - 15 bits</p> <p>If the number of error bits in the received TCF is below this threshold, the machine informs the sender that training has succeeded.</p>

G3 Switch 05 (SP No. 1-105-006)

No	Function				Comments
Initial Tx modem rate (kbps)					
	Bit 3	Bit 2	Bit 1	Bit 0	kbps
	0	0	0	1	2.4
	0	0	1	0	4.8
	0	0	1	1	7.2
	0	1	0	0	9.6
	0	1	0	1	12.0
	0	1	1	0	14.4
0-3	0	1	1	1	16.8
	1	0	0	0	19.2
	1	0	0	1	21.6
	1	0	1	0	24.0
	1	0	1	1	26.4
	1	1	0	0	28.8
	1	1	0	1	31.2
	0	0	1	1	33.6

These bits set the initial starting modem rate for transmission. Use the dedicated transmission parameters if you need to change this for specific receivers. If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually. Cross reference V.8 protocol on/off - G3 switch 03, bit 2

Other settings - Not used

Initial modem type for 9.6 k or 7.2 kbps.

No	Bit 5	Bit 4	Setting	Comments
4-5	0	0	V.29	These bits set the initial modem type for 9.6 and 7.2 kbps, if the initial modem rate is set at these speeds.
	0	1	V.17	
	1	0	V.34	
	1	1	Not used	

G3 Switch 06 (SP No. 1-105-007)

No	Function				Comments
Initial Rx modem rate(kbps)					
	Bit 3	Bit 2	Bit 1	Bit 0	kbps
	0	0	0	1	2.4
	0	0	1	0	4.8
	0	0	1	1	7.2
	0	1	0	0	9.6
	0	1	0	1	12.0
0-3	0	1	1	0	14.4

These bits set the initial starting modem rate for reception. Use a lower setting if high speeds pose problems during reception. If a modem rate 14.4 kbps or slower is selected, V.8 protocol should be disabled manually. Cross reference

Bit Switches - 4

0	1	1	1	16.8	V.8 protocol on/off - G3 switch 03, bit2
1	0	0	0	19.2	
1	0	0	1	21.6	
1	0	1	0	24.0	
1	0	1	1	26.4	
1	1	0	0	28.8	
1	1	0	1	31.2	

Other settings - Not used

Modem types available for reception

The setting of these bits is used to inform the transmitting terminal of the available modem type for the machine in receive mode.

If V.34 is not selected, V.8 protocol must be disabled manually.

Cross reference

V.8 protocol on/off - G3 switch 03, bit 2

4-7	Bit 7	Bit 6	Bit 5	Bit 4	Types
	0	0	0	1	V.27ter
	0	0	1	0	V.27ter, V.29
	0	0	1	1	V.27ter, V.29, V.33
	0	1	0	0	V.27ter, V.29, V.17/V.33
	0	1	0	1	V.27ter, V.29, V.17/V.33, V.34

Other settings - Not used

G3 Switch 07 (SP No. 1-105-008)

No	Function		Setting	Comments
0-1	PSTN cable equalizer (tx mode: Internal)			Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange. Use the dedicated transmission parameters for specific receivers. Also, try using the cable equalizer if one or more of the following symptoms occurs. Communication error Modem rate fallback occurs frequently.
	Bit 1	Bit 0	Setting	
	0	0	None	
	0	1	Low	
	1	0	Medium	
	1	1	High	
				Note
				<ul style="list-style-type: none"> This setting is not effective in V.34 communications.

	PSTN cable equalizer (rx mode: Internal)			
	Bit 3	Bit 2	Setting	
	0	0	None	Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange.
	0	1	Low	Also, try using the cable equalizer if one or more of the following symptoms occurs.
	1	0	Medium	Communication error with error codes such as 0-20, 0-23, etc.
2-3	1	1	High	Modem rate fallback occurs frequently.
				Note
				<ul style="list-style-type: none"> This setting is not effective in V.34 communications.
4	PSTN cable equalizer (V.8/V.17 rx mode: External)			
	0: Disabled			Keep this bit at "1".
	1: Enabled			
6	Parameter selection for dial tone detection			
	0: Normal parameter			0: This uses the fixed table in the ROM for dial tone detection.
	1: Specific parameter			1: This uses the specific parameter adjusted with SRAM (69ECBEH - 69ECDEH). Select this if the dial tone cannot be detected when the "Normal parameter: 0" is selected.

G3 Switch 0A (SP No. 1-105-011)

No	Function			Comments
	Maximum allowable carrier drop during image data reception			
	Bit 1	Bit 0	Value (ms)	
0-1	0	0	200	These bits set the acceptable modem carrier drop time. Try a longer setting if error code 0-22 is frequent.
	0	1	400	
	1	0	800	
	1	1	Not used	
2	Select cancellation of high-speed RX if carrier signal lost while receiving 0: Off 1: On			This switch setting determines if high-speed receiving ends if the carrier signal is lost when receiving during non-ECM mode
4	Maximum allowable frame interval during image data reception. 0: 5 s 1: 13 s			This bit set the maximum interval between EOL (end-of-line) signals and the maximum interval between ECM frames from the other end. Try using a longer setting if error code 0-21 is frequent.

G3 Switch 0C (SP No. 1-105-013)

No	Function	Comments
	Select detection of DTMF/DP detection when using remote switch.	
4-5	00: DTMF+PSTN (Simultaneous detection) 01: DTMF 10: DP (10PPPS) 11: DP (20PPS)	This setting determines how to detect the signals from the handset when remote switch is active.

G3 Switch 0E (SP No. 1-105-015)

No	Function	Comments
	Set CNG send time interval	
	Some machines on the receiving side may not be able to automatically switch the 3-second CNG interval.	
0-7	High order bit	3000-2250ms: 3000-50xNms 3000 – 50 x Nms 0F (3000 ms) <= N <= FF (2250 ms)
	Low order bit	00-0E(3000-3700ms: 3000+50xNms 3000 – 50 x Nms 0F (3000 ms) <= N <= 0F (3700 ms)

G3 Switch 0F (SP No. 1-105-016)

No	Function	Comments
0	Alarm when an error occurred in Phase C or later	If the customer wants to hear an alarm after each error communication, change this bit to "1".
	0: Disabled	
	1: Enabled	
1	Alarm when the handset is off-hook at the end of communication	If the customer wants to hear an alarm if the handset is off-hook at the end of fax communication, change this bit to "1".
	0: Disabled	
	1: Enabled	
4	Sidaa manual calibration setting	1: manually calibrates for communication with a line whose current change occurs such as an optical fiber line.
	0: Off	
	1: On	

4.7 BIT SWITCHES - 6

Note

- Do not adjust a bit switch or use a setting that is described as "Not used", as this may cause the machine to malfunction or to operate in a manner that is not accepted by local regulations. Such bits are for use only in other areas, such as Japan.

Default settings for bit switches are not listed in this manual. Refer to the System Parameter List printed by the machine.

4.7.1 IP FAX SWITCHES

IP Fax Switch 00 (SP No. 1-111-001)

No.	Function	Comments
0	Not used	Do not change this setting.
1	IP Fax Transport 0: TCP, 1: UDP	Selects TCP or UDP protocol for IP-Fax
2	IP Fax single port selection 0: OFF, 1: ON (enable)	Selects single data port.
3	IP Fax double ports (single data port) selection 0: OFF, 1: ON (enable)	Selects whether IP-Fax uses a double port.
4	IP Fax Gatekeeper 0: OFF, 1: ON (enable)	Enables/disables the gatekeeper for IP-Fax.
5	IP Fax T30 bit signal reverse 0: LSB first, 1: MSB first	Reverses the T30 bit signal.
6	IP Fax max bit rate setting 0: Not affected, 1: Affected	When "0" is selected, the max bit rate does not affect the value of the DIS/DCS. When "1" is selected, the max bit rate affects the value of the DIS/DCS.
7	IP Fax received telephone number confirmation 0: No confirmation, 1: Confirmation	When "0" is selected, fax data is received without checking the telephone number. When "1" is selected, fax data is received only when confirming that the telephone number from the sender matches the registered telephone number in this machine. If this confirmation fails, the line is disconnected.

IP Fax Switch 01 (SP No. 1-111-002)

No.	Function	Comments																									
0-3	<p>IP Fax delay level setting</p> <p>Selects the acceptable delay level.</p> <p>Level 0 is the highest quality</p> <p>Default is "0000" (level 0).</p> <table border="1"> <thead> <tr> <th>Bit 3</th> <th>Bit 2</th> <th>Bit 1</th> <th>Bit 0</th> <th></th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>Level 0</td> </tr> <tr> <td>0</td> <td>0</td> <td>0</td> <td>1</td> <td>Level 1</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>0</td> <td>Level 2</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>1</td> <td>Level 3</td> </tr> </tbody> </table>	Bit 3	Bit 2	Bit 1	Bit 0		0	0	0	0	Level 0	0	0	0	1	Level 1	0	0	1	0	Level 2	0	0	1	1	Level 3	
Bit 3	Bit 2	Bit 1	Bit 0																								
0	0	0	0	Level 0																							
0	0	0	1	Level 1																							
0	0	1	0	Level 2																							
0	0	1	1	Level 3																							
4-7	IP Fax preamble wait time setting	<p>Selects the preamble wait time.</p> <p>[00 to 0f]</p> <p>There are 16 values in this 4-bit binary switch combination.</p> <p>Waiting time: set value level x 100 ms</p> <p>Max: 0f (1500 ms) Min: 00 (No wait time)</p> <p>The default is "0000" (00H).</p>																									

IP Fax Switch 02 (SP No. 1-111-003)

No.	Function	Comments
0	<p>IP Fax bit signal reverse setting</p> <p>0: Maker code setting</p> <p>1: Internal bit switch setting</p>	<p>When "0" is selected, the bit signal reverse method is decided by the maker code.</p> <p>When "1" is selected, the bit signal reverse method is decided by the internal bit switch.</p> <p>(When communicating between IP Fax devices, LSB first is selected.)</p>
1	<p>IP Fax transmission speed setting</p> <p>0: Modem speed</p> <p>1: No limitation</p>	<p>Selects the transmit speed for IP Fax communication.</p>
2	<p>SIP transport setting</p> <p>0: TCP</p> <p>1: UDP</p>	<p>This bit switch sets the transport that has priority for receiving IP Fax data.</p> <p>This function is activated only when the sender has both TCP and UDP.</p>
3	<p>CCM connection</p> <p>0: No CCM connection</p> <p>1: CCM connection</p>	<p>When "1" is selected, only the connection call message with H.323 or no tunneled H.245 is transmitted via CCM.</p>

4	Message reception selection from non-registered SIP server 0: Answer 1: Not answer	0: This answers the INVITE message from the SIP server not registered for the machine. 1: This does not receive the INVITE message from the SIP server not registered for the machine and send a refusal message.
5	ECM communication setting 0: No limit for image compression 1: Limit for image compression	0: This does not limit the type of the image compression with ECM communication. 1: When the other end machine is Cisco, this permits the image compression other than JBIG or MMR with ECM communication.

IP Fax Switch 03 (SP No. 1-111-004)

No.	Function	Comments
0	Effective field limitation for G3 standard function information 0: OFF, 1: 4byte (DIS)	Limits the effective field for standard G3 function information.
1	Switching between G3 standard and G3 non standard 0: Enable switching 1: G3 standard only	Enables/disables switching between G3 standard and G3 non-standard.
3	ECM frame size selection at transmitting 0: 256byte, 1: 64byte	Selects the ECM frame size for sending.
4	DIS detection times for echo prevention 0: 1 time, 1: 2 times	Sets the number of times for DIS to detect echoes.
5	CTC transmission selection 0: PPRx1 1: PPRx4	When "0" is selected, the transmission condition is decided by error frame numbers. When "1" is selected, the transmission condition is based on the ITU-T method.
6	Shift down setting at receiving negative code 0: OFF, 1: ON	Selects whether to shift down when negative codes are received.

IP Fax Switch 04 (SP No. 1-111-005)

No.	Function	Comments
0-3	TCF error threshold	Sets the TCF error threshold level. [00 to 0f] The default is "1111" (0fH).

IP Fax Switch 05 (SP No. 1-111-006)

No.	Function	Comments
	Modem bit rate setting for transmission (kbps)	
	Bit 3 Bit 2 Bit 1 Bit 0 kbps	
	0 0 0 1 2.4	Sets the modem bit rate for transmission. The default is "0110" (14.4K bps).
0-3	0 0 1 1 4.8	
	0 0 1 1 7.2	
	0 1 0 0 9.6	
	0 1 0 1 12.0	
	0 1 1 0 14.4	
	Modem setting for transmission	
	Bit 5 Bit 4 Types	Sets the modem type for transmission. The default is "00" (V29).
	0 0 V29	
4-5	0 1 V17	
	1 0 Not used	
	1 1 Not used	

IP Fax Switch 06 (SP No. 1-111-007)

No.	Function	Comments
0-3	Modem bit rate setting for reception	Sets the modem bit rate for reception. The default is "0110" (14.4K bps).
	Modem setting for reception	
	Sets the modem type for reception. The default is "0100" (V27ter, V29, V17).	
	Bit 7 Bit 6 Bit 5 Bit 4 Types	
	0 0 0 1 V.27ter	
4-7	0 0 1 0 V.27ter, V.29	
	0 0 1 1 V.27ter, V.29, V.33	
	0 1 0 0 V.27ter, V.29, V.17/V.33	
	Other settings - Not used	

IP Fax Switch 07 (SP No. 1-111-008)

No.	Function	Comments
0	TSI information 0: Not added, 1: Added	Adds or does not add TSI information to NSS(S).
1	DCN transmission setting at T1 timeout 0: Not transmitted 1: Transmitted	Transmits or does not transmit DCN at T1 timeout.
2	Not used	Do not change this setting.
3	Hang up setting at DIS reception disabled 0: No hang up 1: Hang up after transmitting DCN	Sets whether the machine disconnects after DIS reception.
4	Number of times for training 0: 1 time, 1: 2 times	Selects the number of times training is done at the same bit rate.
5	Space CSI transmission setting at no CSI registration 0: Not transmitted 1: Transmitted	When "0" is selected, frame data is enabled. When "1" is selected, the transmitted data is all spaces.

IP Fax Switch 08 (SP No. 1-111-009)

No.	Function	Comments	
0-1	T1 timer adjustment		
	Bit 1	Bit 0	
	0	0	35 s
	0	1	40 s
2-3	T4 timer adjustment		
	Bit 3	Bit 2	
	0	0	3 s
	0	1	3.5 s
4-5	T0 timer adjustment		
	Bit 5	Bit 4	
	0	0	75 s
	1	0	4 s
1	1	5 s	

	0	1	120 s	your destination return is late on the
	1	0	180 s	network or G3 fax return is late, adjust the
	1	1	240 s	longer interval timer.
				The default is "00" (75 seconds).
6-7	Not used			Do not change these settings.

IP Fax Switch 09 (SP No. 1-111-010)

No.	Function	Comments
0	Network I/F setting for SIP connection 0: IPv4 1: IPv6.	Selects the connection type (IPv4 or IPv6) to connect to the SIP server.
1	Network I/F setting for Fax communication 0: Same setting as SIP server connection 1: Automatic setting	0: The I/F setting for fax communication follows the setting for SIP server connection. 1: The negotiation between the SIP server and the device decides whether IPv4 or IPv6 is used for the I/F setting for fax communication.
2	Record-route setting 0: Disable 1: Enable	0: Disables the record-route function of the SIP server. 1: Enables the record-route function of the SIP server.
3-4	re-INVITE transmission delay timer setting Bit 4 Bit 3 0 0 No delay 0 1 1 sec 1 0 2 sec 1 1 3 sec	This changes the interval for transmit re-INVITE after receiving the ACK message transmitted by T.38 device.
5	SIP-IPFAX: Adding vender information selection 0: Declare T38VendorInfo=RICOH 1: Not declare T38VendorInfo=RICOH	

IP Fax Switch 0A (SP No. 1-111-011)

No.	Function	Comments
1	Text String for specifying the 1stINVITE t38 media to be declared in SDP (HGW). 0: m=application t38 1: m=image t38	
2-3	Specify the media for 1stINVITE to be declared (no-HGW). 00: audio only 01: audio + t38 10: t38 only	
4	Declare the non-use media information for SDP (when answering SDP) 0: Declare the available port for non-use media information as "0". 0: Delete the non-use media information.	
5	IP-FAX: Declaration for SDP speed (no-HGW). 0: Bandwidth offer 1: No-Bandwidth offer	

IP Fax Switch 0B (SP No. 1-111-012)

No.	Function	Comments
0-7	Maximum sending speed registration - High (HGW) Indicate in 8-bit format Increase in units of 8 kbps	Specify the maximum sending speed (sending bandwidth) for sending IP-FAX.

IP Fax Switch 0C (SP No. 1-111-013)

No.	Function	Comments
0-7	Maximum sending speed registration - Med (HGW) Indicate in 8-bit format Increase in units of 8 kbps	Specify the maximum sending speed (sending bandwidth) for sending IP-FAX.

IP Fax Switch 0D (SP No. 1-111-013)

No.	Function	Comments
0-7	Maximum sending speed registration - Low (HGW) Indicate in 8-bit format Increase in units of 8 kbps	Specify the maximum sending speed (sending bandwidth) for sending IP-FAX.

IP Fax Switch 0E (SP No. 1-111-013)

No.	Function	Comments
0-1	SIP: IP-FAX port mode (UDP) 00: 3 port mode 01: 2 port mode 10: 1 port mode	Switch the port mode for IP-FAX (T38 transport: UDP) at SIP call control.
2-3	SIP: IP-FAX port mode (TCP) 00: 3 port mode 01: 2 port mode 10: 1 port mode	Switch the port mode for IP-FAX (T38 transport: TCP) at SIP call control.

4.8 NCU PARAMETERS

The following tables give the RAM addresses and the parameter calculation units that the machine uses for ringing signal detection and automatic dialing. The factory settings for each country are also given. Most of these must be changed by RAM read/write (SP2-101), but some can be changed using NCU Parameter programming (SP2-103); if SP2-103 can be used, this will be indicated in the Remarks column. The RAM is programmed in hex code unless (BCD) is included in the Unit column.

Note

- The following addresses describe settings for the standard NCU.

Address	Function					
	Country/Area code for NCU parameters					
	Use the Hex value to program the country/area code directly into this address, or use the decimal value to program it using SP2-103-001					
	Country /Area	Decimal	Hex	Country /Area	Decimal	Hex
	France	00	00	Asia	18	12
	Germany	01	01	Japan	19	13
	UK	02	02	Hong Kong	20	14
	Italy	03	03	South Africa	21	15
	Austria	04	04	Australia	22	16
	Belgium	05	05	New Zealand	26	17
680500	Denmark	06	06	Singapore	24	18
	Finland	07	07	Malaysia	25	19
	Ireland	08	08	China	26	1A
	Norway	09	09	Taiwan	27	1B
	Sweden	10	0A	Korea	28	1C
	Switzerland	11	0B	Brazil	29	1D
	Portugal	12	0C	Turkey	32	20
	Holland	13	0D	Greece	33	21
	Spain	14	0E	Hungary	34	22
	Israel	15	0F	Czech	35	23
	USA	17	11	Poland	36	24

Address	Function	Unit	Remarks
680501	Line current detection time		Line current detection is disabled.
680502	Line current wait time	20 ms	Line current is not detected if 680501 contains FF.
680503	Line current drop detect time		
680504	PSTN dial tone frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680505	PSTN dial tone frequency upper limit (low byte)		
680506	PSTN dial tone frequency lower limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680507	PSTN dial tone frequency lower limit (low byte)		
680508	PSTN dial tone detection time		If 680508 contains FF(H), the machine pauses for the pause time (address 68050D / 68050E).
680509	PSTN dial tone reset time (LOW)		
68050A	PSTN dial tone reset time (HIGH)		
68050B	PSTN dial tone continuous tone time	20 ms	
68050C	PSTN dial tone permissible drop time		Italy: See Note 2.
68050D	PSTN wait interval (LOW)		-
68050E	PSTN wait interval (HIGH)		
68050F	PSTN ring-back tone detection time	20 ms	Detection is disabled if this contains FF.
680510	PSTN ring-back tone off detection time	20 ms	-
680511	PSTN detection time for silent period after ring-back tone detected (LOW)	20 ms	-
680512	PSTN detection time for silent period after ring-back tone detected (HIGH)	20 ms	-
680513	PSTN busy tone frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680514	PSTN busy tone frequency upper limit (low byte)		

Address	Function	Unit	Remarks
680515	PSTN busy tone frequency lower limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680516	PSTN busy tone frequency lower limit (low byte)		
680517	PABX dial tone frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680518	PABX dial tone frequency upper limit (low byte)		
680519	PABX dial tone frequency lower limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
68051A	PABX dial tone frequency lower limit (low byte)		
68051B	PABX dial tone detection time	20 ms	If 68051B contains FF, the machine pauses for the pause time (680520 / 680521).
68051C	PABX dial tone reset time (LOW)		
68051D	PABX dial tone reset time (HIGH)		
68051E	PABX dial tone continuous tone time		
68051F	PABX dial tone permissible drop time		
680520	PABX wait interval (LOW)		-
680521	PABX wait interval (HIGH)		
680522	PABX ringback tone detection time	20 ms	If both addresses contain FF(H), tone detection is disabled.
680523	PABX ringback tone off detection time	20 ms	
680524	PABX detection time for silent period after ringback tone detected (LOW)	20 ms	If both addresses contain FF(H), tone detection is disabled.
680525	PABX detection time for silent period after ringback tone detected (HIGH)	20 ms	
680526	PABX busy tone frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680527	PABX busy tone frequency upper limit (low byte)		
680528	PABX busy tone frequency lower limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone

Address	Function	Unit	Remarks
680529	PABX busy tone frequency lower limit (low byte)		detection is disabled.
68052A	Busy tone ON time: range 1		
68052B	Busy tone OFF time: range 1		
68052C	Busy tone ON time: range 2	20 ms	
68052D	Busy tone OFF time: range 2		
68052E	Busy tone ON time: range 3		
68052F	Busy tone OFF time: range 3		-
680530	Busy tone ON time: range 4		
680531	Busy tone OFF time: range 4	20 ms	
680532	Busy tone continuous tone detection time		
	Busy tone signal state time tolerance for all ranges, and number of cycles required for detection (a setting of 4 cycles means that ON-OFF-ON or OFF-ON-OFF must be detected twice).		
	Tolerance (\pm)		
680533	Bit 1: 0, Bit 0: 0 = 75% Bits 2 and 3 must always be kept at 0.		
	Bit 1: 0, Bit 0: 0 = 50% Bits 2 and 3 must always be kept at 0.		
	Bit 1: 0, Bit 0: 0 = 25%		
	Bit 1: 0, Bit 0: 0 = 12.5%		
	Bits 7, 6, 5, 4 - number of cycles required for cadence detection		
680534	International dial tone frequency upper limit (high byte)		If both addresses
680535	International dial tone frequency upper limit (low byte)	Hz (BCD)	contain FF(H), tone detection is disabled.
680536	International dial tone frequency lower limit (high byte)		If both addresses
680537	International dial tone frequency lower limit (low byte)	Hz (BCD)	contain FF(H), tone detection is disabled.
680538	International dial tone detection time		
680539	International dial tone reset time (LOW)		If 680538 contains FF, the machine pauses for the pause time (68053D / 68053E).
68053A	International dial tone reset time (HIGH)	20 ms	
68053B	International dial tone continuous tone time		Belgium: See Note 2.

**FAX OPTION
TYPE M1
(D702)**

NCU Parameters

Address	Function	Unit	Remarks
68053C	International dial tone permissible drop time		
68053D	International dial wait interval (LOW)		
68053E	International dial wait interval (HIGH)		-
68053F	Country dial tone upper frequency limit (HIGH)		If both addresses contain FF(H), tone detection is disabled.
680540	Country dial tone upper frequency limit (LOW)		
680541	Country dial tone lower frequency limit (HIGH)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
680542	Country dial tone lower frequency limit (LOW)		
680543	Country dial tone detection time		If 680543 contains FF, the machine pauses for the pause time (680548 / 680549).
680544	Country dial tone reset time (LOW)	20 ms	
680545	Country dial tone reset time (HIGH)		
680546	Country dial tone continuous tone time	-	-
680547	Country dial tone permissible drop time		
680548	Country dial wait interval (LOW)	20 ms	-
680549	Country dial wait interval (HIGH)		
68054A	Time between opening or closing the DO relay and opening the OHDI relay	1 ms	See Notes 3, 6 and 8. SP2-103-012 (parameter 11). See Note 3.
68054B	Break time for pulse dialing	1 ms	SP2-103-013 (parameter 12). See Note 3.
68054C	Make time for pulse dialing	1 ms	SP2-103-014 (parameter 13).

Address	Function	Unit	Remarks
68054D	Time between final OHDI relay closure and DO relay opening or closing	1 ms	See Notes 3, 6 and 8. SP2-103-015 (parameter 14). This parameter is only valid in Europe.
68054E	Minimum pause between dialed digits (pulse dial mode)	20 ms	See Note 3 and 8. SP2-103-016 (parameter 15). SP2-103-017
68054F	Time waited when a pause is entered at the operation panel		(parameter 16). See Note 3.
680550	DTMF tone on time	1 ms	SP2-103-018 (parameter 17).
680551	DTMF tone off time		SP2-103-019 (parameter 18).
680552	Tone attenuation level of DTMF signals while dialing	-N x 0.5 -3.5 dBm	SP2-103-020 (parameter 19). See Note 5.
680553	Tone attenuation value difference between high frequency tone and low frequency tone in DTMF signals	-dBm x 0.5	SP2-103-021 (parameter 20). The setting must be less than -5dBm, and should not exceed the setting at 680552h above. See Note 5.
680554	PSTN: DTMF tone attenuation level after dialling	-N x 0.5 -3.5 dBm	SP2-103-022 (parameter 21). See Note 5.
680556	Not used	-	Do not change the settings.
680557	Time between 68054Dh (NCU parameter 14) and 68054Eh (NCU parameter 15)	1 ms	This parameter takes effect when the country code is set to France.
680558	Not used	-	Do not change the setting.
680559	Grounding time (ground start mode)	20 ms	The Gs relay is closed for this interval.

Address	Function	Unit	Remarks
68055A	Break time (flash start mode)	1 ms	The OHDI relay is open for this interval.
68055B	International dial access code (High)	BCD	For a code of 100: 68055B - F1 68055C - 00
68055C	International dial access code (Low)		
68055D	PSTN access pause time	20 ms	This time is waited for each pause input after the PSTN access code. If this address contains FF[H], the pause time stored in address 68054F is used. Do not set a number more than 7 in the UK.
68055E	Progress tone detection level, and cadence detection enable flags	Bit 7: 0, Bit 6: 0, Bit 5: 0 = -25.0 dBm Bit 7: 0, Bit 6: 0, Bit 5: 1 = -35.0 dBm Bit 7: 0, Bit 6: 1, Bit 5: 0 = -30.0 dBm Bit 7: 1, Bit 6: 0, Bit 5: 0 = -40.0 dBm Bit 7: 1, Bit 6: 1, Bit 5: 0 = -49.0 dBm Bits 2, 0 - See Note 2.	
68055F To 680564	Not used	-	Do not change the settings.
680565	Long distance call prefix (HIGH)	BCD	For a code of 0: 680565 – FF 680566 - FF
680566	Long distance call prefix (LOW)	BCD	
680567 to 680571	Not used	-	Do not change the settings.
680572	Acceptable ringing signal frequency: range 1, upper limit		SP2-103-003 (parameter 02).
680573	Acceptable ringing signal frequency: range 1, lower limit	1000/ N (Hz).	SP2-103-004 (parameter 03).
680574	Acceptable ringing signal frequency: range 2, upper limit		SP2-103-005 (parameter 04).

Address	Function	Unit	Remarks
680575	Acceptable ringing signal frequency: range 2, lower limit		SP2-103-006 (parameter 05). SP2-103-007
680576	Number of rings until a call is detected	1	(parameter 06). The setting must not be zero.
680577	Minimum required length of the first ring	20 ms	See Note 4. SP2-103-008 (parameter 07).
680578	Minimum required length of the second and subsequent rings	20 ms	SP2-103-009 (parameter 08).
680579	Ringing signal detection reset time (LOW)	20 ms	SP2-103-010 (parameter 09).
68057A	Ringing signal detection reset time (HIGH)		SP2-103-011 (parameter 10).
68057B to 680580	Not used	-	Do not change the settings.
680581	Interval between dialing the last digit and switching the Oh relay over to the external telephone when dialing from the operation panel in handset mode. Bits 0 and 1 - Handset off-hook detection time Bit 1:0, Bit 0: 0 = 200 ms Bit 1:0, Bit 0: 1 = 800 ms Other Not used	20 ms	Factory setting: 500 ms
680582	Bits 2 and 3 - Handset on-hook detection time Bit 3: 0, Bit 2: 0 = 200 ms Bit 3: 0, Bit 2: 1 = 800 ms Other Not used Bits 4 to 7 - Not used		-
680583 To 6805A0	Not used	-	Do not change the settings.
6805A1	Acceptable CED detection frequency upper limit (high byte)	BCD (Hz)	If both addresses contain FF(H), tone

Address	Function	Unit	Remarks
6805A2	Acceptable CED detection frequency upper limit (low byte)		detection is disabled.
6805A3	Acceptable CED detection frequency lower limit (high byte)	BCD (Hz)	If both addresses contain FF(H), tone detection is disabled.
6805A4	Acceptable CED detection frequency lower limit (low byte)		
6805A5	CED detection time	20 ms ± 20 ms	Factory setting: 200 ms
6805A6	Acceptable CNG detection frequency upper limit (high byte)	BCD (Hz)	If both addresses contain FF(H), tone detection is disabled.
6805A7	Acceptable CNG detection frequency upper limit (low byte)		
6805A8	Acceptable CNG detection frequency lower limit (high byte)	BCD (Hz)	If both addresses contain FF(H), tone detection is disabled.
6805A9	Acceptable CNG detection frequency lower limit (low byte)		
6805AA	Not used	-	Do not change the setting.
6805AB	CNG on time	20 ms	Factory setting: 500 ms
6805AC	CNG off time	20 ms	Factory setting: 3000 ms
6805AD	Number of CNG cycles required for detection	-	The data is coded in the same way as address 680533.
6805AE	Not used	-	Do not change the settings.
6805AF	Acceptable AI short protocol tone (800Hz) detection frequency upper limit (high byte)	Hz (BCD)	If both addresses contain FF(H), tone detection is disabled.
6805B0	Acceptable AI short protocol tone (800Hz) detection frequency upper limit (low byte)		
6805B1	Acceptable AI short protocol tone (800Hz) detection frequency lower limit (high byte)	Hz(BCD)	If both addresses contain FF(H), tone detection is disabled.

Address	Function	Unit	Remarks
6805B2	Acceptable AI short protocol tone (800Hz) detection frequency lower limit (low byte)		
6805B3	Detection time for 800 Hz AI short protocol tone	20 ms	Factory setting: 360 ms
6805B4	PSTN: Tx level from the modem	-N – 3 dBm	SP2-103-002 (parameter 01).
6805B5	PSTN: 1100 Hz tone transmission level	- N 6805B4 - 0.5N 6805B5 –3.5 (dB) See Note 7.	
6805B6	PSTN: 2100 Hz tone transmission level	- N6805B4 - 0.5N 6805B6 –3 (dB) See Note 7.	
6805B7	PABX: Tx level from the modem	- dBm	
6805B8	PABX: 1100 Hz tone transmission level	- N 6805B7 - 0.5N 6805B8 (dB)	
6805B9	PABX: 2100 Hz tone transmission level	- N 6805B7 - 0.5N 6805B9 (dB)	
6805BD	Modem turn-on level (incoming signal detection level)	-37-0.5N (dBm)	
6805BE to 6805C6	Not used	-	Do not change the settings.
6805C7	Bits 0 to 3 – Not used Bit 4 = V.34 protocol dump Bits 5 to 7 – Not used.	0: Simple, 1: Detailed (default)	
6805C8 to 6805D9	Not used	-	Do not change the settings.
6805DA	T.30 T1 timer	1 s	
6805E0 bit 3	Maximum wait time for post message	0: 12 s 1: 30 s	1: Maximum wait time for post message (EOP/EOM/MPS) can be changed to 30 s. Change this bit to “1” if communication errors occur frequently during V.17 reception.

Address	Function	Unit	Remarks
	Bits 0 and 1 – DCV (TIP/RING) Voltage		
	Bit 1:0, Bit 0: 0 = 3.1 V		
	Bit 1:0, Bit 0: 1 = 3.2 V		
	Bit 1:1, Bit 0: 0 = 3.35 V		
	Bit 1:1, Bit 0: 1 = 3.5 V		
	Bits 2 and 3 – MINI (minimum loop electric current)		
6805E3	Bit 2:0, Bit 3: 0 = 10 mA		
	Bit 2:0, Bit 2: 1 = 12 mA		
	Bit 2:1, Bit 3: 0 = 14 mA		
	Bit 2:1, Bit 3: 1 = 16 mA		
	Bits 6 and 7 – ACIM (AC impedance)		
	Bit 7:0, Bit 6: 0 Bit 5:0, Bit 4: 0= 600		
	Bit 7:0, Bit 6: 0 Bit 5:1, Bit 4: 0= TBR21		
	Bit 0 – OHS (on hook speed)		
	0: OHS=0		
	1: OHS=1		
	Bit 1 – SQ (spark quench)		
	0: SQ=00		
	1: SQ=11		
	Bit 2 – RZ (call signal Impedance)		
	0: RZ=0 (high)		
	1: RZ=1 (low)		
	Bit 3 – RT (call signal detection level)		
	0: RT=0 (low)		
6805E4	1: RT=1 (high)		
	Bit 4 – ILIM (DC limitation)		
	0: ILIM=0 (CTR 21)		
	1: ILIM=1 (other than CTR 21)		
	Bit 5 –FILTER		
	0: FILTER=0 (around 5Hz)		
	1: FILTER=1 (around 200Hz)		
	Bits 6 to 7 – Calibration in off hook state		
	Bit 6:0, Bit 7: 0 = off hook to ACAL:128 ms, off hook to MCAL: 1000 ms		
	Bit 6:1, Bit 7: 0 = off hook to ACAL:128 ms, off hook to MCAL: 500 ms		
	Bit 6:0, Bit 7: 1 = off hook to ACAL:128 ms (no MCAL)		
	Bit 6:1, Bit 7: 1 = off hook to ACAL:8 ms (no MCAL)		


Address	Function	Unit	Remarks
6805E5	Bits 0 to 6 – Not used		
	Bits 7 – Energy saving for DSP, COMBLK, SiDAA		
	0: Does not save energy		
	1: Saves energy		

FAX OPTION
TYPE M1
(D702)

NOTES

- If a setting is not required, store FF in the address.
- Italy and Belgium only
RAM address 68055E: the lower four bits have the following meaning.
Bit 2 - 1: International dial tone cadence detection enabled (Belgium)
Bit 1 - Not used
Bit 0 - 1: PSTN dial tone cadence detection enabled (Italy)

If bit 0 or bit 2 is set to 1, the functions of the following RAM addresses are changed.
680508 (if bit 0 = 1) or 680538 (if bit 2 = 1): tolerance for on or off state duration (%), and number of cycles required for detection, coded as in address 680533.
68050B (if bit 0 = 1) or 68053B (if bit 2 = 1): on time, hex code (unit = 20 ms)
68050C (if bit 0 = 1) or 68053C (if bit 2 = 1): off time, hex code (unit = 20 ms)
- Pulse dial parameters (addresses 68054A to 68054F) are the values for 10 pps. If 20 pps is used, the machine automatically compensates.
- The first ring may not be detected until 1 to 2.5 wavelengths after the time specified by this parameter.
- The calculated level must be between 0 and 10.
The attenuation levels calculated from RAM data are:
High frequency tone:
 - $-0.5 \times N_{680552/680554} - 3.5$ dBm
 - $-0.5 \times N_{680555}$ dBm
 Low frequency tone:
 - $-0.5 \times (N_{680552/680554} + N_{680553}) - 3.5$ dBm
 - $-0.5 \times (N_{680555} + N_{680553})$ dBm

 **Note**

- N_{680552} , for example, means the value stored in address 680552(H)
6. 68054A: Europe - Between Ds opening and Di opening, France - Between Ds closing and Di opening
68054D: Europe - Between Ds closing and Di closing, France - Between Ds opening and Di closing
 7. Tone signals which frequency is lower than 1500Hz (e.g., 800Hz tone for AI short protocol) refer to the setting at 6805B5h. Tones which frequency is higher than 1500Hz refer to the setting at 6805B6h.
 8. 68054A, 68054D, 68054E: The actual inter-digit pause (pulse dial mode) is the sum of the period specified by the RAM addresses 68054A, 68054D, and 68054E.

4.9 DEDICATED TRANSMISSION PARAMETERS

There are two sets of transmission parameters: Fax and E-mail

Each Quick Dial Key and Speed Dial Code has eight bytes of programmable parameters allocated to it. If transmissions to a particular machine often experience problems, store that terminal's fax number as a Quick Dial or Speed Dial, and adjust the parameters allocated to that number. The programming procedure will be explained first. Then, the eight bytes will be described.

4.9.1 PROGRAMMING PROCEDURE

1. Set the bit 0 of System Bit Switch 00 to 1.
2. Enter Address Book Management mode ([User Tools]> System Settings> Key Operator> Address Book Management).
3. Select the address book that you want to program.
4. For the fax parameter, select "Fax Dest.", for the E-mail parameter, select "E-mail", then press "Start". Make sure that the LED of the Start button lights green.
5. The settings for the switch 00 are now displayed. Press the bit number that you wish to change.
6. To scroll through the parameter switches, either:
7. Select the next switch: press "Next" or Select the previous switch: "Prev." until the correct switch is displayed. Then go back to step 6.
8. After the setting is changed, press "OK".
9. After finishing, reset bit 0 of System Bit Switch 00 to 0.

4.9.2 PARAMETERS

Fax Parameters

The initial settings of the following fax parameters are all FF(H) - all the parameters are disabled.

Switch 00

FUNCTION AND COMMENTS

ITU-T T1 time (for PSTN G3 mode)

If the connection time to a particular terminal is longer than the NCU parameter setting, adjust this byte. The T1 time is the value stored in this byte (in hex code), multiplied by 1 second.

Range:

0 to 120 s (00h to 78h)

FFh - The local NCU parameter factory setting is used.

Do not program a value between 79h and FEh.

Switch 01

No	FUNCTION					COMMENTS
	Tx level					
	Bit4	Bit3	Bit2	Bit1	Bit0	
	0	0	0	0	0	0
	0	0	0	0	1	-1
	0	0	0	1	0	-2
0-4	0	0	0	1	1	-3
	0	0	1	0	0	-4
	↓	↓	↓	↓	↓	↓
	0	1	1	1	1	-15
	1	1	1	1	1	Disabled

If communication with a particular remote terminal often contains errors, the signal level may be inappropriate. Adjust the Tx level for communications with that terminal until the results are better.

If the setting is "Disabled", the NCU parameter 01 setting is used.

Note

- Do not use settings other than listed on the left.

	Cable equalizer
	Bit 7: 0, Bit 6: 0, Bit 5: 0 = None
	Bit 7: 0, Bit 6: 0, Bit 5: 1 = Low
5-7	Bit 7: 0, Bit 6: 1, Bit 5: 0 = Medium
	Bit 7: 0, Bit 6: 1, Bit 5: 1 = High
	Bit 7: 1, Bit 6: 1, Bit 5: 1 = Disabled

Use a higher setting if there is signal loss at higher frequencies because of the length of wire between the modem and the telephone exchange when calling the number stored in this Quick/Speed Dial.

Also, try using the cable equalizer if one or more of the following symptoms occurs.

Communication error with error codes such as 0-20, 0-23, etc.

Modem rate fallback occurs frequently.

 **Note**

- Do not use settings other than listed on the left.

If the setting is "Disabled", the bit switch setting is used.

Dedicated Transmission Parameters

Switch 02

No	FUNCTION				bps	COMMENTS
	Initial Tx modem rate					
	Bit3	Bit2	Bit1	Bit0	bps	
	0	0	0	0	Not used	
	0	0	0	1	2400	
	0	0	1	0	4800	If training with a particular remote terminal always takes too long, the initial modem rate may be too high. Reduce the initial Tx modem rate using these bits.
	0	0	1	1	7200	
	0	1	0	0	9600	
	0	1	0	1	12000	
	0	1	1	0	14400	For the settings 14.4 or kbps slower, Switch 04 bit 4 must be changed to 0.
0-3	0	1	1	1	16800	
	1	0	0	0	19200	<div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block;"> ⬇ Note </div> <ul style="list-style-type: none"> ▪ Do not use settings other than listed on the left. If the setting is "Disabled", the bit switch setting is used.
	1	0	0	1	21600	
	1	0	1	0	24000	
	1	0	1	1	26400	
	1	1	0	0	28800	
	1	1	0	1	31200	
	1	1	1	0	33600	
	1	1	1	1	Disabled	
	Other settings: Not used					
4-7	Not used					Do not change the settings.

Switch 03

No	FUNCTION	COMMENTS
0-1	Inch-mm conversion before tx Bit 1: 0, Bit 0: 0 = Inch-mm conversion available Bit 1: 0, Bit 0: 1 = Inch only Bit 1: 1, Bit 0: 0 = Not used Bit 1: 1, Bit 0: 1 = Disabled	If "inch only" is selected on the machine uses inch-based resolutions for scanning, the printed copy may be slightly distorted at the other end if that machine uses mm-based resolutions. If the setting is "Inch-mm conversion available ", Inch-mm conversion become effective to the special senders. If the setting is "Disabled", the bit switch setting is used.
2-3	DIS/NSF detection method Bit 3: 0, Bit 2: 0 = First DIS or NSF Bit 3: 0, Bit 2: 1 = Second DIS or NSF Bit 3: 1, Bit 2: 0 = Not used Bit 3: 1, Bit 2: 1 = Disabled	(0, 1): Use this setting if echoes on the line are interfering with the set-up protocol at the start of transmission. The machine will then wait for the second DIS or NSF before sending DCS or NSS. If the setting is "Disabled", the bit switch setting is used.
4	V.8 protocol 0: Off 1: Disabled	If transmissions to a specific destination always end at a lower modem rate (14,400 bps or lower), disable V.8 protocol so as not to use V.34 protocol. 0: V.34 communication will not be possible. If the setting is "Disabled", the bit switch setting is used.
5	Compression modes available in transmit mode 0: MH only 1: Disabled	This bit determines the capabilities that are informed to the other terminal during transmission. If the setting is "Disabled", the bit switch setting is used.

Dedicated Transmission Parameters

- ECM during transmission
Bit 7: 0, Bit 6: 0 = Off
6-7 Bit 7: 0, Bit 6: 1 = On
Bit 7: 1, Bit 6: 0 = Not used
Bit 7: 1, Bit 6: 1 = Disabled

For example, if ECM is switched on but is not wanted when sending to a particular terminal, use the (0, 0) setting.

Note

- V.8/V.34 protocol and JBIG compression are automatically disabled if ECM is disabled.
- If the setting is "Disabled", the bit switch setting is used.

Switch 04 - Not used (do not change the settings)

Switch 05 - Not used (do not change the settings)

Switch 06 - Not used (do not change the settings)

Switch 07 - Not used (do not change the settings)

Switch 08 - Not used (do not change the settings)

Switch 09 - Not used (do not change the settings)

E-mail Parameters

The initial settings of the following e-mail parameters are all "0" (all parameters disabled).

Switch 00

No	FUNCTION	COMMENTS
0	MH Compression mode for e-mail attachments 0: Off 1: On	Switches MH compression on and off for files attached to e-mails for sending.
1	MR Compression mode for e-mail attachments 0: Off 1: On	Switches MR compression on and off for files attached to e-mails for sending.
2	MMR Compression mode for e-mail attachments 0: Off 1: On	Switches MMR compression on and off for files attached to e-mails for sending.
3-6	Not used	Do not change these settings.

7 Designates the bits to reference for compression method of e-mail attachments
0: Registered (Bit 0 to 6)
1: No registration.

The "0" selection (default) references the settings for Bits 00, 01, 02 above. The "1" selection ignores the selections of Bits 00, 01, 02.

Switch 01

No	FUNCTION	COMMENTS
0	Original width of e-mail attachment: A4 0: Off 1: On	Sets the original width of the e-mail attachment as A4.
1	Original width of e-mail attachment: B4 0: Off 1: On	Sets the original width of the e-mail attachment as B4.
2	Original width of e-mail attachment: A3 0: Off 1: On	Sets the original width of the e-mail attachment as A3.
3-6	Not used	Do not change these settings.
7	Designates the bits to reference for original size of e-mail attachments 0: Registered (Bit 0 to 6) 1: No registration.	The "0" selection (default) references the settings for Bits 00, 01, 02 above. The "1" selection ignores the selections of Bits 00, 01, 02.

Dedicated Transmission Parameters

Switch 02

No	FUNCTION	COMMENTS
0	Line resolution of e-mail attachment: 200 x 100 0: Off 1: On	Sets the line resolution of the e-mail attachment as 200 x100.
1	Line resolution of e-mail attachment: 200 x 200 0: Off 1: On	Sets the line resolution of the e-mail attachment as 200 x 200.
2	Line resolution of e-mail attachment: 200 x 400 0: Off 1: On	Sets the line resolution of the e-mail attachment as 200 x 400.
3	Not used	Do not change these settings.
4	Line resolution of e-mail attachment: 400 x 400 0: Off 1: On	Sets the line resolution of the e-mail attachment as 400 x 400.
5-6	Not used	Do not change these settings.
7	Designates the bits to reference for original size of e-mail attachments 0: Registered (Bit 0 to 6) 1: No registration.	The "0" selection (default) references the settings for Bits 00, 01, 02, 04 above. The "1" selection ignores the selections of Bits 00, 01, 02, 04.

Switch 03 - Not used (do not change the settings)

Switch 04

No	FUNCTION	COMMENTS
0	Full mode address selection 0: Full mode address 1: No full mode (simple mode)	If the other ends have the addresses, which have the full mode function flag ("0"), this machine determines them as full mode standard machines. <ul style="list-style-type: none"> ▪ This machine attaches the "demand of reception confirmation" to a message when transmitting. ▪ This machine updates the reception capability to the address book when receiving.
1-7	Not used	Do not change these settings.

Switch 05

No	FUNCTION	COMMENTS
0	Directr transmission selection to SMTP server 0: ON 1: OFF	Allows or does not allow the direct transmission to SMTP server.
1-7	Not used	Do not change these settings.

Switch 06 - Not used (do not change the settings)

Switch 07 - Not used (do not change the settings)

Switch 08 - Not used (do not change the settings)

Switch 09 - Not used (do not change the settings)

5. SPECIFICATIONS

5.1 GENERAL SPECIFICATIONS

5.1.1 FCU

Type:	Desktop type transceiver
Circuit:	PSTN PABX
Connection:	Direct couple Book (Face down) Maximum Length: 432 mm [17 ins] Maximum Width: 297 mm [11.7 ins] ARDF (Face up) (Single-sided document)
Original Size:	Length: 128 - 1200 mm [5.0 - 47.2 ins] Width: 128 - 297 mm [5.0 - 11.7 inch] (Double-sided document) Length: 128 - 432 mm [5.0 - 17 inch] Width: 128 - 297 mm [5.0 - 11.7 inch]
Scanning Method:	Flat bed, with CCD G3 8 x 3.85 lines/mm (Standard)
Resolution:	8 x 7.7 lines/mm (Detail) 200 x 100 dpi (Standard) 200 x 200 dpi (Detail) G3: 3 s at 28800 bps; Measured with G3 ECM using memory
Transmission Time:	for an ITU-T #1 test document (Slerexe letter) at standard resolution
Data Compression:	MH, MR, MMR, JBIG
Protocol:	Group 3 with ECM
Modulation:	V.34, V.17 (TCM), V.29 (QAM), V.27ter (PHM), V.8, V.21 (FSK)

Data Rate:	G3: 33600/31200/28800/26400/24000/21600/ 19200/16800/14400/12000/9600/7200/4800/2400 bps Automatic fallback
I/O Rate:	With ECM: 0 ms/line Without ECM: 5, 10, 20, or 40 ms/line SAF
Memory Capacity:	Standard: 4 MB With optional Expansion Memory: 28 MB (4 MB+ 24 MB) Page Memory Standard: 4 MB With optional Expansion Memory: 8 MB

FAX OPTION
TYPE M1
(D702)

5.1.2 CAPABILITIES OF PROGRAMMABLE ITEMS

The following table shows the capabilities of each programmable items.

Item	Standard	With Optional HDD
Quick Dial (*without HDD)	1000	2000
Groups	10	100
Destination per Group	500	500
Destinations dialed from the ten-key pad overall	500	500
Programs	100	100
Communication records for Journal stored in the memory	200	200
Specific Senders	250	250


The following table shows how the capabilities of the document memory will change after the Expansion Memory are installed.

	Without the Expansion Memory	With the Expansion Memory
Memory Transmission file	800	800
Maximum number of page for memory transmission	1000	1000
Memory capacity for memory transmission (Note1)	320	2240

Note

- Measured using an ITU-T #1 test document (Slerexe letter) at the standard resolution, the auto image density mode and the Text mode.

5.2 IFAX SPECIFICATIONS

	Local area network
Connectivity:	Ethernet 100base-Tx/10base-T Gigabit Ethernet 1000 Base-T IEEE802.11a/g, g (wireless LAN),
Resolution:	200 × 100 dpi (Standard resolution), 200 × 200 dpi (Detail resolution) 1 s (through a LAN to the server) Condition: ITU-T #1 test document (Selerexe Letter) MTF correction: OFF
Transmission	TTI: None
Time:	Resolution: 200 x 100 dpi Communication speed: 10 Mbps Correspondent device: E-mail server Line conditions: No terminal access Maximum Original Size: A3/DLT.
Document Size:	<div style="border: 1px solid blue; border-radius: 10px; padding: 2px; display: inline-block;">  Note </div> <ul style="list-style-type: none"> ▪ To use B4 and A3 width, IFAX SW00 Bit 1 (B4) and/or Bit 2 (A3) must be set to “1”.
E-mail File	Single/multi-part
Format:	MIME conversion Image: TIFF-F (MH, MR, MMR)
Protocol:	Transmission: SMTP, TCP/IP Reception: POP3, SMTP, IMAP4, TCP/IP
Data Rate:	1000 Mbps (1000 Base-T) 100 Mbps (100 base-Tx) 10 Mbps (10 base-T)
Authentication	SMTP-AUTH
Method:	POP before SMTP A-POP
Remark:	The machine must be set up as an e-mail client before installation. Any client PCs connected to the machine through a LAN must also be e-mail clients, or some features will not work (e.g. Autorouting).

5.3 IP-FAX SPECIFICATIONS

	Local Area Network
Network:	Ethernet/10base-T, 100 base-TX Gigabit Ethernet/1000 Base-T IEEE802.11a/g, g (wireless LAN)
Scan line density:	8 x 3.85 lines/mm, 200 x 100 dpi (standard character), 8 x 7.7 lines/mm, 200 x 200 dpi (detail character),
Maximum Original size:	A3 or 11" x 17" (DLT) Custom: 297 mm x 1200 mm (11.7" x 47.3")
Maximum scanning size:	297 mm x 1200 mm (11.7" x 47.3")
Transmission protocol:	Recommended: T.38 Annex protocol, TCP, UDP/IP communication, SIP (RFC 3261 compliant), H.323 v2
Compatible machines:	IP-Fax compatible machines
IP-Fax transmission function:	Specify IP address and send faxes to an IP-Fax compatible fax through a network. Also capable of sending faxes from a G3 fax connected to a telephone line via a VoIP gateway.
IP-Fax reception function:	Receive faxes sent from an IP-Fax compatible fax through a network. Also capable of receiving faxes from a G3 fax connected to a telephone line via a VoIP gateway.